
8656A SIGNAL GENERATOR 0.1—990 MHz



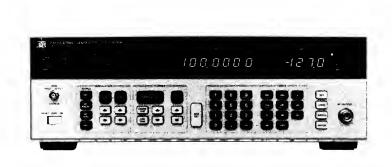

8656A SIGNAL GENERATOR 0.1 — 990 MHz

(Including Options 001 and 002)

SERIAL NUMBERS

This manual applies directly to instruments with serial numbers prefixed 2035A.

With changes described in Section VII, this manual also applies to instruments with serial numbers prefixed 2032A, 2027A, 2026A, 2025A, 2024A, 2023A, 2022A, 2018A, 2014A, and 2009A.

For additional important information about serial numbers, see INSTRUMENTS COVERED BY MANUAL in Section I.



© Copyright HEWLETT-PACKARD COMPANY 1980, 1981 1501 PAGE MILL ROAD, PALO ALTO, CALIFORNIA, U.S.A.

OPERATING AND SERVICE MANUAL PART NUMBER 08656-90107
Operating Manual Part No. 08656-90108
Microfiche Operating and Service Manual Part No. 08656-90109

Printed: May 1981

Model 8656A Contents

CONTENTS

Page		Page
Section I	Local Operation	
GENERAL INFORMATION	Simplified Front Panel Features	3-1
Introduction	Simplified Operation	3-1
Specifications1-1	General Operating Instructions	3-1
Safety Considerations1-1	Detailed Panel Features	3-1
	Detailed Operating Instructions	3-1
Instruments Covered by this Manual	Remote Operation	
Description	Operator's Checks	
Carrier Frequency1-2	Basic Functional Checks	
Output Amplitude1-2	HP-IB Functional Checks	
Modulation Capabilities1-2	Operator's Maintenance	
Options	General Operating Instructions	
Electrical Options1-3	Power-On Procedure	
Mechanical Options1-3	Power-On Sequence	
Rear Panel Inputs and Outputs Option 002 1-3	Keystroke Sequences	
Front Handle Kit Option 9071-3	Carrier Keystroke Sequence	
Rack Flange Kit Option 9081-3	Modulation Keystroke Sequence	
Rack Flange and Front Handle Combination	Store-Recall-Display Keystroke Sequence.	
Kit Option 9091-3	Time Base Selection	
Hewlett-Packard Interface Bus 1-3	Operator's Maintenance	
Compatibility1-3	Detailed Panel Features	
Selecting the HP-IB Address1-3	Operator's Checks	
Accessories Supplied1-3	Basic Functional Checks	
Recommended Test Equipment1-3	HP-IB Functional Checks	
	Remote Operation, Hewlett-	
Section II	Packard Interface Bus	2 02
INSTALLATION	HP-IB Compatibility	
Introduction	Remote Operation	
Initial Inspection	Remote Capability	
Preparation for Use2-1	Local-to-Remote Change	
Power Requirements	Local Operation	
Line Voltage and Fuse Selection2-1	Local Capability	
Power Cables	Remote-to-Local Change	
Time Base Selection2-2	Local Lockout	
HP-IB Address Selection	Addressing	
Interconnection2-4	Data Messages	
Mating Connectors		
Coaxial Connectors2-4	Receiving the Data Message	
Interface Connector2-4	Data Message Input Format	
Operating Environment2-4	Keyboard-to-Program Code Correlation	
Bench Operation2-4	Value-Selectable Parameters	
Rack Mounting	Data	
Storage and Shipment	Sending the Data Message	
Environment	Receiving the Trigger Message	
Packaging2-7	Receiving the Clear Message	
Original Packaging2-7	Receiving the Remote Message	
Other Packaging2-7	Receiving the Local Message	
	Receiving the Local Lockout Message	3-27
Ocalics III	Receiving the Clear Lockout/Set	0.00
Section III	Local Message	
OPERATION	Receiving the Pass Control Message	
Introduction	Sending the Require Service Message	
Operating Characteristics3-1	Sending the Status Byte Message	3-28

CONTENTS (Cont'd)

Page	Page
Sending the Status Bit Message	Reference Voltage Adjustment5-4
Receiving the Abort Message3-28	Audio Oscillator Level Adjustment 5-5
Switching Characteristics3-28	AM Offset Adjustment5-6
Frequency Switching3-29	715 MHz Sideband Adjustment5-7
Amplitude Switching3-31	Notch Filter Adjustments 5-8
Modulation Switching3-31	High Frequency Loop Offset Adjustment5-11
Detailed Operating Instructions3-32	50 MHz Reference Oscillator Frequency
Amplitude3-32	Adjustment5-13
Amplitude Conversion	50 MHz Reference Oscillator Level
Amplitude, Up/Down3-36	Adjustment5-14
Display3-37	60 to 110 MHz Oscillator Flatness
Display Sequence3-38	Adjustment5-15
Frequency	690 to 740 MHz IF Compensation
Frequency, Coarse and Fine Tune	Adjustment5-16
Frequency, Up/Down3-43	400 MHz Bandpass Filter Adjustment5-17
HP-IB Address Display3-44	Level and ALC Loop Detector Adjustments 5-18
Increment Value Change3-46	Heterodyne Band Accuracy and Flatness
Increment Value Display3-48	Adjustments
Modulation, AM	AM% and ALC Loop AM Adjustment
Modulation, AM Up/Down3-50	FM Deviation Adjustment
Modulation, External Source	FM Frequency Response Adjustment
Modulation, FM	Attenuator Adjustments
Modulation, FM Up/Down3-54	Option 001 10 MHz Reference Oscillator
Modulation, Mixed	Frequency Adjustment
Modulation, OFF	Trequency radiustification
Recall	Section VI
Sequence	REPLACEABLE PARTS
Store	Introduction
5.616	Abbreviations 6-1
Section IV	Replaceable Parts List6-1
PERFORMANCE TESTS	Factory Selected Parts (*) 6-1
Introduction	Parts List Backdating (†)6-1
Equipment Required	Parts List Updating (Change Sheet)6-1
Performance Test Record	Illustrated Parts Breakdowns 6-1
Calibration Cycle	Ordering Information6-1
Abbreviated Performance Testing4-1	Recommended Spares List6-2
Test Procedures	
	Section VII
Spectral Purity Tests	MANUAL CHANGES
High Level Accuracy and Flatness Tests	Introduction
Low Level Accuracy Tests 4-11 Modulation Tests 4-13	Manual Changes7-1
= =	Manual Change Instructions7-3
Output Leakage Tests4-21	Instrument Improvement Modifications7-10
Ocalles V	Improving Power Supply Reliability7-10
Section V	Decreasing Spurious Signal Output7-10
ADJUSTMENTS	Improving Low Level Accuracy7-10
Introduction	Improving RF Frequency Response7-11
Safety Considerations	Loss of Signal Generator Control by the
Equipment Required	Keyboard7-11
Factory-Selected Components	
Post-Repair Adjustments5-2	Section VIII
Related Adjustments5-2	SERVICE
Power Supply Voltage Adjustment5-3	Introduction

CONTENTS (Cont'd)

Service Sheets 8-1 Fan Shroud Removal 8-1 Replacement of Key Cap and Pushbutton Switches 8-1 Switches 8-1 Switches 8-1 Switches 8-1 Switches 8-1 Switches 8-1 Switch Replacement 8-1 Manual Backdating (†) 8-1 Manual Backdating (†) 8-1 Manual Updating (Manual Changes Service Tools, Aids and Information 8-2 Supplement) 8-1 Etched Circuits (Printed Circuit Boards) 8-1 Etched Circuit Boards 8-1 Etched Circuits (Printed Circuit Boards) 8-1 Etched Circuit Boards 8-1 Etched
Switches Switches Safety Considerations Safety Cap Replacement Safe
Safety Considerations
Service Applying Power 8-1 Switch Replacement 8-1 Recommended Test Equipment and Accessories 8-2 Manual Backdating (†) 8-1 Accessories 8-2 Service Tools, Aids and Information 8-2 Service Tools 8-2 Etched Circuits (Manual Changes Supplement) 8-1 Service Tools 8-2 Etched Circuits (Printed Circuit Boards 8-1 Pozidriv Screwdrivers 8-2 MOS and CMOS Integrated Circuit Touling Tools 8-2 Replacement 8-1 Repair Accessories 8-2 MOS and CMOS Integrated Circuit Boards 8-1 Retrofitting Option 001 8-1 Service Aids on Printed Circuit Boards 8-3 Schematic Symbology and Operating Principles 8-1 Service Aids on Printed Circuit Boards 8-3 Schematic Diagram Notes 8-1 Service Aids on Printed Circuit Boards 8-3 Gates and Qualifiers 8-1 Toubleshooting 8-3 Gates and Qualifiers 8-1 Instrument Out of Specification 8-4 Contiguous Blocks 8-1 Complex Device Symbology 8-1 Complex Device Symb
Switch Replacement 8-1
Recommended Test Equipment and Accessories Service Tools, Aids and Information Service Tools
Manual Backdating (†) 8-1
Accessories
Service Tools, Aids and Information 8-2 Supplement) 8-1 Service Tools 8-2 Etched Circuits (Printed Circuit Boards) 8-1 Pozidriv Screwdrivers 8-2 MOS and CMOS Integrated Circuit Tuning Tools 8-2 Replacement 8-1 Heat Staking Tool 8-2 Retrofitting Option 001 8-1 Assembly Locations 8-3 Schematic Symbology and Operating Parts and Cable Locations 8-3 Schematic Diagram Notes 8-1 Test Points and Adjustment Locations 8-3 Schematic Diagram Notes 8-1 Service Aids on Printed Circuit 8-3 Schematic Symbology and Operating 8-1 Other Service Documents 8-3 Gates and Qualifiers 8-1 Troubleshooting 8-3 Gates and Qualifiers 8-1 General 8-3 Contiguous Blocks 8-1 Operator Error 8-3 Contiguous Blocks 8-1 Instrument Out of Specification 8-4 Complex Device Symbology 8-1 Strategy 8-4 Complex Logic Symbology and
Service Tools
Pozidriv Screwdrivers
Heat Staking Tool
Heat Staking Tool
Assembly Locations 8-3 Schematic Symbology and Operating Parts and Cable Locations 8-3 Test Points and Adjustment Locations 8-3 Schematic Diagram Notes 8-1 Service Aids on Printed Circuit Boards 8-3 Basic Logic Symbology 8-1 Gates and Qualifiers 8-1 Indicator Symbols 8-1 Indicator Symbols 8-1 Contiguous Blocks 8-1 Indicator Symbols 8-1 Indicator Symbols 8-1 Instrument Out of Specification 8-4 Contiguous Blocks 8-1 Catastrophic Failures 8-4 Complex Device Symbology 8-1 Strategy 8-4 Shift Register 8-1 Overall Troubleshooting (Service Sheets BD2-BD4) 8-4 Circuit Troubleshooting (Service Sheets BD2-BD4) 8-4 Circuit Troubleshooting (Service Sheets 1-22) 8-4 Signature Analysis 8-4 Additional Information 8-5 Random Access Memory 8-1 Repair 8-5 Boasic Logic Symbology and Operating Principles 8-1 Read Only Memory 8-1 Read Onl
Parts and Cable Locations 8-3 Test Points and Adjustment Locations 8-3 Service Aids on Printed Circuit Boards 8-3 Other Service Documents 8-3 Other Service Documents 8-3 General 8-3 Contiguous Blocks 8-1 Indicator Symbols 8-1 Coperator Error 8-3 Instrument Out of Specification 8-4 Catastrophic Failures 8-4 Strategy 8-4 Overall Troubleshooting (Service Sheet BD1) 8-4 Functional Section Troubleshooting (Service Sheet BD1) 8-4 Circuit Troubleshooting (Service Sheet BD1) 8-4 Complex Logic Symbology and Operating Principles 8-16 Complex Logic Symbology and Operating Principles 8-17 Complex Logic Symbology 8
Test Points and Adjustment Locations 8-3 Service Aids on Printed Circuit Boards 8-3 Other Service Documents 8-3 Gates and Qualifiers 8-1 Troubleshooting 8-3 General 8-3 Contiguous Blocks 8-1 Operator Error 8-3 Instrument Out of Specification 8-4 Catastrophic Failures 8-4 Complex Device Symbology 8-1 Strategy 8-4 Shift Register 8-1 Overall Troubleshooting (Service Sheet BD1) 8-4 Functional Section Troubleshooting (Service Sheet BD2-BD4) 8-4 Circuit Troubleshooting (Service Sheets B-1-22) 8-4 Signature Analysis 8-4 Additional Information 8-5 Repair 8-5 Disassembly Procedures 8-1 Schematic Diagram Notes 8-1 Basic Logic Symbology 8-1 Basic Logic Symbology 8-1 Basic Logic Symbology 8-1 Cates and Qualifiers 8-1 Contiguous Blocks 8-1 Adualitiers 8-1 Basic Logic Symbology 8-1 Basic Logic Symbology 8-1 Complex Device Symbology 8-1 AND-OR Selector 8-1 Complex Logic Symbology and 8-1 Operating Principles 8-1 Microprocessor 8-1 Random Access Memory 8-1 Read Only Memory 8-1 Read Only Memory 8-1 Basic Logic Symbology 8-1
Service Aids on Printed Circuit Boards 8-3 Basic Logic Symbology 8-1 Other Service Documents 8-3 Gates and Qualifiers 8-1 Troubleshooting 8-3 Indicator Symbols 8-1 General 8-3 Contiguous Blocks 8-1 Operator Error 8-3 Dependency Notation 8-1 Instrument Out of Specification 8-4 Common Control Block 8-1 Catastrophic Failures 8-4 Complex Device Symbology 8-1 Strategy 8-4 Shift Register 8-1 Overall Troubleshooting (Service Sheet BD1) 8-4 AND-OR Selector 8-1 (Service Sheets BD2-BD4) 8-4 Quad D-Type Latch 8-1 Circuit Troubleshooting Complex Logic Symbology and Operating Principles 8-1 Signature Analysis 8-4 Microprocessor 8-1 Additional Information 8-5 Random Access Memory 8-1 Repair 8-5 Multiple Bus Transceivers 8-16
Other Service Documents8-3Gates and Qualifiers8-1Troubleshooting8-3Indicator Symbols8-1General8-3Contiguous Blocks8-1Operator Error8-3Dependency Notation8-1Instrument Out of Specification8-4Common Control Block8-1Catastrophic Failures8-4Complex Device Symbology8-1Strategy8-4Shift Register8-1Overall Troubleshooting (Service Sheet BD1)8-4AND-OR Selector8-1(Service Sheets BD2-BD4)8-4Quad D-Type Latch8-1Circuit TroubleshootingComplex Logic Symbology and(Service Sheets 1-22)8-4Operating Principles8-1Signature Analysis8-4Microprocessor8-1Additional Information8-5Random Access Memory8-1Repair8-5Read Only Memory8-1Disassembly Procedures8-5Multiple Bus Transceivers8-1
Troubleshooting 8-3 Indicator Symbols 8-1 General 8-3 Contiguous Blocks 8-1 Operator Error 8-3 Dependency Notation 8-1 Instrument Out of Specification 8-4 Common Control Block 8-1 Catastrophic Failures 8-4 Complex Device Symbology 8-1 Strategy 8-4 Shift Register 8-1 Overall Troubleshooting (Service Sheet BD1) 8-4 AND-OR Selector 8-1 Functional Section Troubleshooting Up/Down Counter 8-1 (Service Sheets BD2-BD4) 8-4 Quad D-Type Latch 8-1 Circuit Troubleshooting Complex Logic Symbology and 9-1 (Service Sheets 1-22) 8-4 Microprocessor 8-1 Signature Analysis 8-4 Microprocessor 8-1 Additional Information 8-5 Random Access Memory 8-1 Repair 8-5 Multiple Bus Transceivers 8-16
General 8-3 Contiguous Blocks 8-1 Operator Error 8-3 Dependency Notation 8-1 Instrument Out of Specification 8-4 Common Control Block 8-1 Catastrophic Failures 8-4 Complex Device Symbology 8-1 Strategy 8-4 Shift Register 8-1 Overall Troubleshooting (Service Sheet BD1) 8-4 AND-OR Selector 8-1 (Service Sheets BD2-BD4) 8-4 Quad D-Type Latch 8-1 Circuit Troubleshooting Complex Logic Symbology and 8-1 (Service Sheets 1-22) 8-4 Operating Principles 8-1 Signature Analysis 8-4 Microprocessor 8-1 Additional Information 8-5 Random Access Memory 8-1 Repair 8-5 Read Only Memory 8-1 Disassembly Procedures 8-5 Multiple Bus Transceivers 8-18
Operator Error8-3Dependency Notation8-1Instrument Out of Specification8-4Common Control Block8-1Catastrophic Failures8-4Complex Device Symbology8-1Strategy8-4Shift Register8-1Overall Troubleshooting (Service Sheet BD1)8-4AND-OR Selector8-1Functional Section TroubleshootingUp/Down Counter8-1(Service Sheets BD2-BD4)8-4Quad D-Type Latch8-1Circuit TroubleshootingComplex Logic Symbology and(Service Sheets 1-22)8-4Operating Principles8-1Signature Analysis8-4Microprocessor8-1Additional Information8-5Random Access Memory8-1Repair8-5Read Only Memory8-1Disassembly Procedures8-5Multiple Bus Transceivers8-18
Instrument Out of Specification 8-4 Common Control Block 8-15 Catastrophic Failures 8-4 Complex Device Symbology 8-16 Strategy 8-4 Shift Register 8-16 Overall Troubleshooting (Service Sheet BD1) 8-4 AND-OR Selector 8-16 Functional Section Troubleshooting Up/Down Counter 8-16 (Service Sheets BD2-BD4) 8-4 Quad D-Type Latch 8-16 Circuit Troubleshooting Complex Logic Symbology and Operating Principles 8-16 Signature Analysis 8-4 Microprocessor 8-17 Additional Information 8-5 Random Access Memory 8-17 Repair 8-5 Read Only Memory 8-17 Disassembly Procedures 8-18
Catastrophic Failures 8-4 Complex Device Symbology 8-16 Strategy 8-4 Shift Register 8-16 Overall Troubleshooting (Service Sheet BD1) 8-4 AND-OR Selector 8-16 Functional Section Troubleshooting Up/Down Counter 8-16 (Service Sheets BD2-BD4) 8-4 Quad D-Type Latch 8-16 Circuit Troubleshooting Complex Logic Symbology and (Service Sheets 1-22) 8-4 Operating Principles 8-16 Signature Analysis 8-4 Microprocessor 8-17 Additional Information 8-5 Random Access Memory 8-17 Repair 8-5 Read Only Memory 8-17 Disassembly Procedures 8-18
Strategy 8-4 Shift Register 8-10 Overall Troubleshooting (Service Sheet BD1) 8-4 Functional Section Troubleshooting Up/Down Counter 8-10 (Service Sheets BD2-BD4) 8-4 Quad D-Type Latch 8-10 Circuit Troubleshooting Complex Logic Symbology and (Service Sheets 1-22) 8-4 Operating Principles 8-11 Signature Analysis 8-4 Microprocessor 8-12 Additional Information 8-5 Random Access Memory 8-13 Repair 8-5 Read Only Memory 8-13 Disassembly Procedures 8-16
Overall Troubleshooting (Service Sheet BD1) 8-4 Functional Section Troubleshooting Up/Down Counter 8-16 (Service Sheets BD2-BD4) 8-4 Quad D-Type Latch 8-16 (Service Sheets 1-22) 8-4 Operating Principles 8-17 Signature Analysis 8-4 Microprocessor 8-17 Additional Information 8-5 Random Access Memory 8-17 Repair 8-5 Read Only Memory 8-18 Multiple Bus Transceivers 8-18
Functional Section Troubleshooting (Service Sheets BD2-BD4) Circuit Troubleshooting (Service Sheets 1-22) Signature Analysis Additional Information Repair Disassembly Procedures Up/Down Counter 8-10 Quad D-Type Latch Complex Logic Symbology and Operating Principles 8-11 Read Only Memory 8-12 Multiple Bus Transceivers 8-16
(Service Sheets BD2-BD4)8-4Quad D-Type Latch8-16Circuit TroubleshootingComplex Logic Symbology and(Service Sheets 1-22)8-4Operating Principles8-17Signature Analysis8-4Microprocessor8-17Additional Information8-5Random Access Memory8-17Repair8-5Read Only Memory8-17Disassembly Procedures8-5Multiple Bus Transceivers8-18
Circuit TroubleshootingComplex Logic Symbology and(Service Sheets 1-22)8-4Operating Principles8-1'Signature Analysis8-4Microprocessor8-1'Additional Information8-5Random Access Memory8-1'Repair8-5Read Only Memory8-1'Disassembly Procedures8-5Multiple Bus Transceivers8-18
(Service Sheets 1-22)8-4Operating Principles8-1°Signature Analysis8-4Microprocessor8-1°Additional Information8-5Random Access Memory8-1°Repair8-5Read Only Memory8-1°Disassembly Procedures8-5Multiple Bus Transceivers8-18°
Signature Analysis8-4Microprocessor8-1'Additional Information8-5Random Access Memory8-1'Repair8-5Read Only Memory8-1'Disassembly Procedures8-5Multiple Bus Transceivers8-18'
Additional Information 8-5 Random Access Memory 8-17 Repair 8-5 Read Only Memory 8-17 Disassembly Procedures 8-5 Multiple Bus Transceivers 8-18
Repair8-5Read Only Memory8-17Disassembly Procedures8-5Multiple Bus Transceivers8-18
Disassembly Procedures
Front Panel Removal8-5 General Purpose Interface
A1 Keyboard and A2 Display Assembly Adapter (GPIA)8-18
Removal
Cover Removal, Top and Bottom (Levels Digital-to-Analog Converter (DAC) 8-19
1 and 4 Access)
A3 Assembly Service Position 8-6 BCD-to-Seven-Segment
Level 2 Access
A10/A11 Assemblies Service Position8-7 Linear Device Operating Principles8-21
Level 3 Access
Rear Panel Removal8-7 Comparators8-22

LIST OF ILLUSTRATIONS

Figur	re Page	Figu	re Page	9
1-1.	HP Model 8656A Signal Generator with		Level and ALC Loop Detector	
	Option 001 and Accessories Supplied1-0		Adjustment Setup5-18	3
	•	5-15.	Heterodyne Band Accuracy and Flatness	
	Line Voltage and Fuse Selection2-2		Adjustment Setup5-20)
	Power Cable and Mains Plug Part Numbers 2-3	5-16.	AM% and ALC Loop AM Adjustments	
2-3. ′	Time Base Jumper Location2-5		Setup5-22	2
	HP-IB Address Switch Location and	5-17.	FM Deviation Adjustment Setup5-24	4
:	Settings	5-18.	FM Frequency Response Setup5-25	5
2-5. 1	Hewlett-Packard Interface Bus Connections 2-6		Attenuator Adjustment Setup5-26	
01 (Simplified Front Panel Features		Attenuator Adjustment Locations 5-28	
	=		10 MHz Reference Oscillator	
	Display and Remote Features		Frequency Adjustment Setup5-29	9
	Modulation Features	6-1.	Cabinet, Parts Identification 6-38	5
	Data and Units Entry Features3-9		Front Panel, Parts Identification6-36	
	Miscellaneous Features		Rear Panel, Parts Identification6-3'	
	Rear Panel Features		Top Internal View; Top	
	Test Setup for Basic Functional Checks3-13	0 1.	Cover Removal	R
	FM Functional Check Waveform3-16	6-5	Top Internal View; A3 Assembly in	,
	Data Message Examples	0-0.	Service Position	9
3-11.	Frequency Switching Characteristics3-31	6-6	Bottom Internal View; A10/A11	
4-1.	Spurious Signals Test Setup4-4	0-0.	Assemblies in Service Position6-40	ሰ
	Modulation Analyzer Residual AM	6.7	Bottom Internal View; Bottom Cover	J
	Verification Test Setup4-5	0-7.	Removed6-4	1
	Residual AM Test Setup4-6		Low Frequency Loop Assembly — A3,	1
	Residual FM Test Setup4-7	0-0.	Parts Identification	າ
	High Level Accuracy and Flatness Test	0.0		_
	Setup4-8	6-9.	Attenuator Assembly — A9, Parts Identification	ว
	Low Level Accuracy Test Setup4-12		Parts Identification0-4	J
	Modulation Test Setup4-14			
	Modulation Analyzer Incidental AM	7-1.	Address Buffering and Decoding, Serial I/O	
	Verification Test Setup4-19		and Control Schematic Diagram	_
	Output Leakage Test Setup4-21		(P/O Change C)	5
4-9.	Output Leakage Test Setup 21			
5-1.	+5.4 Vdc Power Supply Adjustment Setup 5-3	8-1.	Recommended Position for Maintenance	
	+2 Vdc Reference Adjustment Setup 5-4		and Servicing8-	2
	Audio Oscillator Level Adjustment Setup 5-5		Rear-Panel and Fan Shroud Removal8-	7
	AM Offset Adjustment Setup5-6		Front-Panel Pushbutton Switch Assembly 8-	8
	715 MHz Sideband Adjustment Setup5-7		Pushbutton Switch Support Anvil8-	9
	Notch Filters Adjustment Setup 5-8		Heat Staking Tip8-	9
	High Frequency Loop Offset Adjustment		Typical Assembly for Heat Staking	
	Setup		Operation8-	.9
5-8.	Tune Voltage Waveform5-12		Basic Logic Symbols and Qualifiers8-1	2
	50 MHz Reference Oscillator Frequency		Indicator Symbols8-1	
00.	Adjustment Setup5-13		Contiguous Blocks	
5-10	50 MHz Reference Oscillator Level		AND Dependency Notation8-1	
0 10.	Adjustment Setup5-14	8-11	. Address Dependency Notation: Coder	
5-11	60 to 110 MHz Oscillator Flatness		Example Using Alpha Characters	
0.11.	Adjustment Setup5-15		(Letters)	5
5.19	690 to 740 MHz IF Compensation	8-12	OR and Free Dependency Notation	
<i>U</i> 14.	Adjustment Setup5-16		8. Common Control Block8-1	
5-19	400 MHz Bandpass Filter		. Quad D-Type Latch (Individual)8-1	
υ-10 .	Adjustment Setup5-17		6. Quad D-Type Latch (Combined)	
	ALMINDULLULU NOVAP		•	

Model 8656A Contents

LIST OF ILLUSTRATIONS (Cont'd)

Figure	Page	Figure	age
8-16. Shift Register	8-16	8-50. Output Section Schematic Diagram	8-57
8-17. AND-OR Selector		8-51. Heterodyne and Output Control (A7 Assembly)	
8-18. Up/Down Counter		Component Locations	8-58
8-19. Quad D-Type Latch		8-52. Heterodyne and Output Control (A6 Assembly)	
8-20. Random Access Memory		Component Locations	
		8-53. Heterodyne and Output Control	
8-21. Read Only Memory		Block Diagrams	8-61
8-22. Multiple Bus Transceiver With 3		8-54. Heterodyne and Output Control	
Output		Schematic Diagrams	8-61
8-23. General Purpose Interface Adap		8-55. Modulation and RF Amplitude Control	
(GPIA)		Component Locations	8-65
8-24. Successive Approximation Regis		8-56. Modulation and RF Amplitude Control	
(SAR)		Block Diagrams	8-67
8-25. Digital-to-Analog Converter (8-b		8-57. Modulation and RF Amplitude Control	
8-26. Programmable Interval Timer.	8-21	Schematic Diagram	8-67
8-27. BCD-to-Seven-Segment	0.01	8-58. Attenuator Component Locations	
Latch/Decoder/Driver		(Top View)	8-68
8-28. Non-Inverting Amplifer (Gain =	1)8-22	8-59. Attenuator Component Locations	0 00
8-29. Non-Inverting Amplifier	0.00	(Bottom View)	8-68
$(Gain = 1 + R_1/R_2) \dots \dots$		8-60. Attenuator Control	0 00
8-30. Inverting Amplifier (Gain = $-R_1$		Component Locations	8-69
8-31. Non-Inverting Comparator		8-61. Reverse Power Protection	0 00
8-32. Inverting Comparator		Component Locations	8-70
8-33. Overall Block Diagram		8-62. Attenuator, Attenuator Control and Reverse	0.0
8-34. High Frequency and Output Sec		Power Protection Block Diagrams	8 .71
Block Diagram		8-63. Attenuator, Attenuator Control and Reverse	0 71
8-35. Low Frequency and FM Section		Power Protection Schematic Diagram	8-71
Block Diagram		8-64. LF Loop VCO Component Locations	
8-36. Microprocessor, Keyboard & Dis		8-65. LF Loop VCO Block Diagrams	
Block Diagram	8-41	8-66. LF Loop VCO Schematic Diagrams	
8-37. High Frequency Oscillator		8-67. LF Loop Data and Timing Control	0 10
Component Locations	8-44	Component Locations	8.81
8-38. IF Section (A4 Assembly)		8-68. LF Loop Data and Timing Control	0-Ö1
Component Locations		Block Diagrams	8.83
8-39. High Frequency Oscillator and		8-69. LF Loop Data and Timing Control	0-00
Block Diagrams		Schematic Diagrams	8-83
8-40. High Frequency Oscillator and		8-70. LF Loop Phase Lock Circuit Component	0-00
Schematic Diagram		Locations	8-86
8-41. High Frequency Loop Amplifier		8-71. LF Loop Phase Lock Circuit	0-00
Control Component Locations		Block Diagrams	8-87
8-42. High Frequency Loop Amplifier		8-72. LF Loop Phase Lock Circuit	001
Block Diagrams		Schematic Diagram	8-87
8-43. High Frequency Loop Amplifier		8-73. LF Loop FM Calibrator	001
Schematic Diagram	8-51	Component Locations	8 _Q1
8-44. Frequency Multiplier		8-74. LF Loop FM Calibrator	0-51
Component Locations		Block Diagrams	8.09
8-45. Frequency Multiplier Block Dia		8-75. LF Loop FM Calibrator	∪-∂ €
8-46. Frequency Multiplier Schematic	Diagrams8-53	Schematic Diagrams	8.09
8-47. Output Section (A7 Assembly)		8-76. LF Loop FM System Control	<i>- 0</i> -0
Component Locations	8-55	Component Locations	8_QF
8-48. Output Section (A6 Assembly)	_	8-77. LF Loop FM System Control and Calibrator	
Component Locations		Component Locations	8.00
8-49. Output Section Block Diagrams	8-57	Component Locations	, o-ət

LIST OF ILLUSTRATIONS (Cont'd)

Figu	re Page	Fig	ure Page
8-78.	LF Loop FM System Control and Calibrator	8-94	4. HP-IB Interface Component Locations 8-112
	Block Diagrams 8-97		5. HP-IB Interface Block Diagrams 8-113
8-79.	LF Loop FM System Control and Calibrator		3. HP-IB Interface Schematic Diagram 8-113
0.0.	Schematic Diagram 8-97		7. Keyboard Component Locations 8-114
8-80	Reference Oscillator and Phase Lock Loop		3. Keyboard Encoder
0 00.	Component Locations 8-98		Component Locations 8-114
8-81	Reference Oscillator and Phase Lock Loop		9. Keyboard and Encoder Block Diagrams 8-115
0 01.	Block Diagrams 8-99		00. Keyboard and Encoder
8-82	Reference Oscillator and Phase Lock Loop		Schematic Diagram 8-115
0 02.	Schematic Diagram 8-99	8-10	1. Display Control Component Locations 8-117
8-83.	A7 Assembly Interrupt Input		2. Display Control Block Diagrams 8-119
0 00.	Component Locations 8-102		3. Display Control Schematic Diagram 8-119
8-84.	Microprocessor, Interrupt Processing and		94. Frequency Displays
0 0	Restart Component Locations 8-103		Component Locations 8-120
8-85.	Microprocessor, Interrupt Processing and		5. Frequency Displays Block Diagrams 8-121
0 00.	Restart Block Diagrams 8-105		06. Frequency Displays Schematic Diagram 8-121
8-86	Microprocessor, Interrupt Processing and		77. Amplitude, Modulation and Annunciator
0 00.	Restart Schematic Diagram 8-105		Displays Component Locations 8-123
8-87.	Address Buffering and Decoding, Serial I/O		08. Amplitude, Modulation and Annunciator
	and Control Component Locations 8-106		Displays Block Diagrams 8-125
8-88.	Address Buffering and Decoding, Serial I/O		9. Amplitude, Modulation and Annunciator
	and Control Block Diagrams 8-107		Displays Schematic Diagram 8-125
8-89.	Address Buffering and Decoding, Serial I/O		0. Voltage Regulator
	and Control Schematic Diagram 8-107	,	Component Locations 8-126
8-90.	Memory Component Locations 8-110		1. Filter Bank Component Locations 8-126
	Memory Block Diagrams 8-111		2. Power Supply (A10 Assembly)
	Memory Schematic Diagram 8-111		Component Locations 8-127
	HP-IB Connector Component Locations 8-112		3. Power Supply Schematic Diagram 8-127
	TA	ABLES	
Tabl	e Page	e Tal	ole Page
1-1.	Specifications 1-4	4-1.	Abbreviated Performance Tests 4-2
	Supplemental Characteristics		Performance Test Record4-23
	Recommended Test Equipment		
	Alternate Test Equipment1-10	1	
		5-1.	Factory Selected Components5-1
	Line Fuse Ratings and Part Numbers		Post-Repair Adjustments
2-2.	Allowable HP-IB Address Codes 2-4	5-3.	Attenuator Pad Adjustment Information 5-27
3-1.	Initialized Conditions	l	
3-2.	Operating Characteristics	6-1.	Reference Designations 6-3
	Index of Detailed Operating Instructions 3-3		Abbreviations 6-3
3-4.	HP-IB Message Reference Table	6-3.	Replaceable Parts6-5
3-5.	Valid Decimal Values vs. Equivalent	6-4.	Code List of Manufacturers6-34
	ASCII Characters 3-25	5	
3-6.	Input Data Restrictions	3 71	Manual Changes by Sovial Number 7.1
3-7.	Response to Clear Message3-27	/	Manual Changes by Serial Number
	HP-IB Program Codes	<i>t</i> -2.	Summary of Changes by Component 7-2
	(Alphabetical Order)3-28	3	
3-9.	HP-IB Program Codes		Assembly Access Information 8-6
	(Functional Order) 3-2		Etched Circuit Soldering Equipment 8-11
3-10	. Commonly Used Code Conversions	8-3.	Schematic Diagram Notes8-23

Model 8656A Contents

SERVICE SHEETS

Section or Assembly	Schematic	Block Diagram	Section or Assembly	Schematic	Block Diagram
Overall Troubleshooting	_	BD1	A6 Output Assembly		
High Frequency and Output			Output Section	4	BD2
Section	_	BD2	Heterodyne and Output Control	5	BD2
Low Frequency and FM Section		BD3	Reverse Power Protection	7	BD2
Microprocessor, Keyboard, and			A7 RFI Assembly	4, 5, 14	_
Display Section	_	BD4	A8 Frequency Multiplier Assembly	3	BD2
			A9 Attenuator Assembly	7	BD2
			A10 Audio/Power Supply Assembly		
A1 Keyboard Assembly	18	BD4	Modulation and RF Amplitude		
A2 Display Assembly			Control	6	BD2
Keyboard and Encoding	18	BD4	Attenuator Control	7	BD2
Display Control	19	BD4	Frequency Modulation Control	12	BD3
Frequency Display	20	BD4	Power Supply	22	BD1
Amplitude, Modulation, and			All Microprocessor/Memory/		
Annunciator Displays	21	BD4	HP-IB Assembly		
A3 Low Frequency Loop Assembly			Microprocessor, Interrupt Process-		
Voltage Controlled Oscillator			ing and Restart	14	BD4
(VCO)	8	BD3	Address Buffering and Decoding,		
Data and Timing Control	9	BD3	· Serial I/O and Control	15	BD4
Phase Locked Circuits	10	BD3	Memory	16	BD4
Frequency Modulation Calibrator	11	BD3	HP-IB Interface	17	BD4
Frequency Modulation System	12	BD3	A12 Voltage Regulator Assembly	22	BD1
50 MHz Reference Oscillator and			A13 HP-IB Connector Assembly	17	BD4
Phase Lock Loop	13	BD3	A14 Filter Bank Assembly	14, 22	_
A4 High Frequency Loop Assembly			A15 Line Power Module	22	BD1
IF Section	1	BD2	A16 10 MHz Reference Oscillator		
HF Loop Amplifier and Control	2	BD2	Assembly (Option 001)	13, 22	BD3
A5 High Frequency Oscillator			A17 Front Feedthrough Assembly	6,18	
Assembly	1	BD2		19, 22	_

General Information Model 8656A

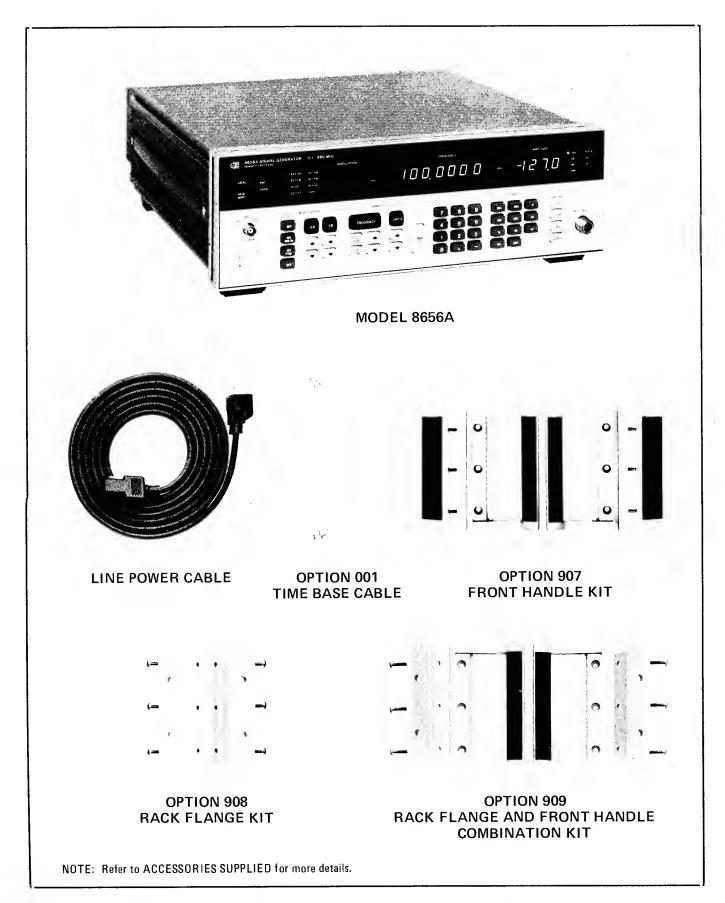


Figure 1-1. HP Model 8656A Signal Generator with Option 001 and Accessories Supplied

Model 8656A General Information

SECTION I GENERAL INFORMATION

1-1. INTRODUCTION

This manual contains information required to install, operate, test, adjust, and service the Hewlett-Packard Model 8656A Signal Generator. The Model 8656A will generally be referred to as the Signal Generator throughout this manual. Figure 1-1 shows the Signal Generator with all of its externally supplied accessories. This manual also documents Signal Generators supplied with the high stability time base, Option 001 and rear panel connectors, Option 002.

This section of the manual describes the instruments documented by this manual and covers instrument description, options, accessories, specifications, and other basic information. The other sections contain the following information:

Section II, Installation: provides information about initial inspection, preparation for use (including time base selection and HP-IB address selection for remote operation), and storage and shipment.

Section III, Operation: provides information about panel features and includes operator's checks, operating instructions for both local and remote operation, and operator's maintenance information.

Section IV, Performance Tests: provides the information required to check performance of the instrument against the critical specifications listed in Table 1-1.

Section V, Adjustments: provides the information required to properly adjust the instrument.

Section VI, Replaceable Parts: provides ordering information for all replaceable parts and assemblies.

Section VII, Manual Changes: with the backdating information, this manual applies to all instruments as indicated on the title page.

Section VIII, Service: provides the information required to repair the instrument.

Two copies of the operating information are supplied with the Signal Generator. One copy is in the

form of an Operating Manual. The Operating Manual is simply a copy of the first three sections of the Operating and Service Manual. The Operating Manual should stay with the instrument for use by the operator. Additional copies of the Operating Manual may be ordered separately through your nearest Hewlett-Packard office. Its part number is listed on the title page of this manual.

Also listed on the title page of this manual, below the manual part number, is a "Microfiche" part number. This number may be used to order 100 x 150 millimetre (4- x 6-inch) microfilm transparencies of this manual. Each microfiche contains up to 96 photo-duplicates of the manual's pages. The microfiche package also includes the latest MANUAL CHANGES supplement, as well as all pertinent Service Notes.

1-2. SPECIFICATIONS

Instrument specifications are listed in Table 1-1. These specifications are the performance standards or limits against which the instrument may be tested. Supplemental characteristics are listed in Table 1-2. Supplemental characteristics are not warranted specifications, but are typical characteristics included as additional information for the user.

1-3. SAFETY CONSIDERATIONS

This product is a Safety Class I instrument, that is, one provided with a protective earth terminal. The Signal Generator and all related documentation must be reviewed for familiarization with safety markings and instructions before operation. Refer to the Safety Considerations page found at the beginning of this manual for a summary of the safety information. Safety information pertinent to the task at hand, that is, installation, operation, performance testing, adjustment, or service is found throughout this manual.

1-4. INSTRUMENTS COVERED BY THIS MANUAL

This instrument has a two-part serial number in the form 0000A00000 which is stamped on the serial number plate attached to the rear of the instrument. The first four digits and the letter conGeneral Information Model 8656A

INSTRUMENTS COVERED BY THIS MANUAL (Cont'd)

stitute the serial number prefix and the last five digits form the suffix. The prefix is the same for all identical instruments. It changes only when a change is made to the instrument. The suffix, however, is assigned sequentially and is different for each instrument. The contents of this manual apply directly to instruments having the same serial number prefix(es) as listed under SERIAL NUMBERS on the title page.

An instrument manufactured after the printing of this manual may have a serial number prefix that is not listed on the title page. This unlisted serial number prefix indicates that the instrument is different from those documented in this manual. The manual for this newer instrument is accompanied by a yellow MANUAL CHANGES supplement. This supplement contains "change information" that explains how to adapt the manual to the newer instrument.

In addition to change information, the supplement may contain information for correcting errors in the manual. To keep this manual as current and accurate as possible, Hewlett-Packard recommends that you periodically request the latest MANUAL CHANGES supplement. The supplement for this manual is identified with the manual print date and part number, both of which appear on the manual title page. Complimentary copies of the supplement are available from Hewlett-Packard

For information concerning a serial number prefix that is not listed on the title page or in the MAN-UAL CHANGES supplement, contact your nearest Hewlett-Packard office.

1-5. DESCRIPTION

The Hewlett-Packard Model 8656A is a synthesized signal generator with a carrier frequency range of 100 kHz to 990 MHz. Its output amplitude is leveled and calibrated from +13 to -127 dBm. AM and/or FM functions can be individually selected. The carrier frequency, output amplitude, and modulation functions can be remotely programmed via the Hewlett-Packard Interface Bus. The unique modular design and incorporated service features permit rapid and easy calibration and service.

1-6. Carrier Frequency

The Signal Generator covers a carrier frequency range of 100 kHz to 990 MHz (10 kHz to 990 MHz with underrange) which can be extended to 1.8 GHz with an external doubler. Frequency resolution is 100 Hz or 250 Hz depending on the carrier frequency selected. An 8-digit LED display of the carrier frequency in MHz is provided. Pushbutton keys permit coarse tuning, fine tuning, and incrementing of the carrier frequency.

Frequency accuracy and stability are dependent on the reference source being used, either the internal 50 MHz reference oscillator or an external source that operates at 1,5, or 10 MHz. An optional 10 MHz crystal reference is available for increased accuracy and stability.

1-7. Output Amplitude

The Signal Generator has precise power levels from +13 to -127 dBm (+1.00V to +0.100 $\mu V)$ with overrange at decreased accuracy. The output amplitude from +13 to -127 dBm is accurate to less than or equal to ± 1.5 dB from 100 kHz to 990 MHz. Level flatness is less than or equal to ± 1.0 dB with an output amplitude setting of 0.0 dBm. Output amplitude resolution is 0.1 dB. A 3-1/2-digit LED display of output amplitude is provided with 7 LED annunciators used to display unit information. Easy conversion of units between dBm, μV , EMF, and so forth is possible.

1-8. Modulation Capabilities

The Signal Generator features a versatile internal and external modulation capability for AM and FM. This includes internal 400 Hz or 1 kHz tones; mixed modulation, such as AM/FM, AM/AM, or FM/FM; and the capability to accept low frequency digital unsquelching signals. A 2-digit display of AM depth or FM peak deviation frequencies is provided with 10 LED annunciators used to display internal or external modulation source information. Simple keyboard entries of AM depth up to 99% with a resolution of 1% and FM peak deviation frequencies up to 99 kHz with resolutions of 100 Hz (for deviations less than 10 kHz) or 1 kHz (for deviations greater than or equal to 10 kHz) are possible.

1-9. OPTIONS

The following options are available and may have been ordered and received with the Signal Generator. If they were not received with the original shipment and are now desired, except for option Model 8656A General Information

OPTIONS (Cont'd)

002, they may be ordered from your nearest Hewlett-Packard office using the part number included in each of the following paragraphs.

1-10. Electrical Options

Option 001 provides a 10 MHz crystal reference for increased frequency accuracy and stability. Order HP part number 08656-60079.

1-11. Mechanical Options

The mechanical options except Option 002 are shown in Figure 1-1.

Rear Panel Inputs and Outputs Option 002. RF Output and Modulation Input/Output Connectors are located on the rear panel. The SEQ (sequencing) input is eliminated.

Front Handie Kit Option 907. Ease of handling is increased with the front panel handles. Order HP part number 5061-0089.

Rack Fiange Kit Option 908. This kit contains all necessary hardware and installation instructions for mounting the Signal Generator in a rack with 482.5 millimeter (standard 19-inch) spacing. Order HP part number 5061-0077.

Rack Flange and Front Handie Combination Kit Option 909. This kit is not simply a front handle kit and rack flange kit packaged together. The combination is made up of unique parts which include both functions. Order HP part number 5061-0083.

1-12. HEWLETT-PACKARD INTERFACE BUS

1-13. Compatibility

*

The Signal Generator has an HP-IB interface and can be used with any HP-IB computing controller or computer for automatic system applications. The Signal Generator is fully programmable via the HP Interface Bus. The Signal Generator's complete compatibility with HP-IB is defined by the following list of interface functions: SH0, AH1, T0, L2, SR0, RL1, PP0, DC1, DT0, and C0. The Signal Generator interfaces with the bus via open-collector TTL circuitry. An explanation of the compatibility codes can be found in the IEEE Standard 488 and the identical ANSI Standard MC1.1.

For more detailed information relating to programmable control of the Signal Generator, refer

Not just IEEE-488, but the hardware, documentation and support that delivers the shortest path to a measurement system.

to Remote Operation, Hewlett-Packard Interface Bus in Section III of this manual.

1-14 Selecting the HP-IB Address

Five miniature HP-IB address switches are located inside the Signal Generator. These switches represent a five-bit binary number (00 through 31 in decimal). HP-IB addresses greater than 30 (decimal) are invalid. When the instrument is shipped from the factory, the HP-IB address is preset to 07 (decimal). To determine the Signal Generator's HP-IB address, refer to HP-IB Address Display in Section III of this manual. To change the HP-IB address, refer to paragraph 2-8, HP-IB Address Selection.

1-15. ACCESSORIES SUPPLIED

The accessories supplied with the Signal Generator are shown in Figure 1-1. The power cable and fuse supplied are selected at the factory according to the Mains voltage available in the country of destination. For the part numbers of the power cables and Mains plugs available, refer to paragraph 2-6, Power Cables. For the part numbers and ratings of the fuses available, refer to paragraph 2-5, Line Voltage and Fuse Selection. If the Signal Generator is equipped with Option 001, a coaxial time base cable is supplied. This cable must be connected between the rear panel TIME BASE HIGH STABILITY OPTION connector and the TIME BASE INPUT connector.

1-16 RECOMMENDED TEST EQUIPMENT

Table 1-3 lists the test equipment required for testing, adjusting, and servicing the Signal Generator. The Critical Specifications column describes the essential requirements for each piece of test equipment. Other equipment can be substituted if it meets or exceeds these critical specifications.

The Recommended Model column may suggest more than one model. The first model listed is usually the least expensive, single-purpose model. Alternate models are suggested for additional features that would make them a better choice in some applications. For example, reasons for recommending an alternate model might be:

- HP-IB programmablility or —
- Multi-function capability (that is, one model can replace two or more singlepurpose models)

Table 1-4 presents the advantages of the alternate suggestions.

Table 1-1. Specifications (1 of 3)

Electrical Characteristics	Performance Limits	Conditions
FREQUENCY Range Resolution	100 kHz to 990 MHz 100 Hz 250 Hz	
SPECTRAL PURITY Spurious Signals: Harmonics Non-harmonics Sub-harmonics	<-30 dBc <-60 dBc None	≤+7 dBm output levels >5 kHz from carrier in CW mode
Residual Modulation CW Mode: AM (0.05 to 15 kHz Post Detection Noise Bandwidth)	<-70 dBc	0.1 to 990 MHz
FM (0.3 to 3 kHz Post Detection Noise Bandwidth)	<15 Hz rms <3 Hz rms <6 Hz rms <15 Hz rms	0.1 to 123.5 MHz 123.5 to 247 MHz 247 to 494 MHz 494 to 990 MHz
FM (0.05 to 15 kHz Post Detection Noise Bandwidth)	<30 Hz <8 Hz <16 Hz <30 Hz	0.1 to 123.5 MHz 123.5 to 247 MHz 247 to 494 MHz 494 to 990 MHz
OUTPUT Level Range Resolution Absolute Level Accuracy Level Electronse	+13 dBm to −127 dBm 0.1 dB ≤±1.5 dB	Into 50 ohms Output levels of +13 dBm to -127 dBm; frequencies from 100 kHz to 990 MHz Output level setting of 0.0 dBm; frequen-
Level Flatness	≤±1.0 dB	cies from 100 kHz to 990 MHz
AMPLITUDE MODULATION Depth ²	0 to 99%	Output levels of +7 dBm and below; frequencies from 100 kHz to 990 MHz
	0 to 30%	Output levels of +10 dBm and below; frequencies from 100 kHz to 990 MHz
Resolution	1%	
Incidental Phase Modulation	<0.3 radian peak	30% AM depth and internal rates

¹Absolute level accuracy includes allowances for detector linearity, temperature, flatness, attenuator accuracy, and measurement error.

 $^{^2}$ AM depth is further limited by the Indicator Accuracy specification.

Table 1-1. Specifications (2 of 3)

Electrical Characteristics	Performance Limits	Conditions	
MPLITUOE MOOULATION			
Cont'd)			
Indicator Accuracy ²	±2% (±4% of reading)	Depths <90% and internal rates	
AM Rates:			
Internal	400 and 1 kHz, $\pm 3\%$		
External	25 Hz to 25 kHz	1 dB bandwidth, ac coupled	
AM Distortion	<1.5%	0 to 30% AM	
(internal rates)	<3%	31 to 70% AM	
	<5%	71 to 90% AM	
M MOOULATION			
Maximum Peak Deviation (Δfpk): ³			
Rates ≥60 Hz	99 kHz	0.1 to 123.5 MHz (fc)	
	25 kHz	123.5 to 247 MHz (fc)	
	50 kHz	247 to 494 MHz (fc)	
	99 kHz	494 to 990 MHz (fc)	
Rates <60 Hz	1600 x Rate	0.1 to 123.5 MHz (fc)	
	400 x Rate	123.5 to 247 MHz (fc)	
	800 x Rate	247 to 494 MHz (fc)	
	1600 x Rate	494 to 990 MHz (fc)	
		(FM not specified for fc — Δfpk <100 kHz)	
Resolution	0.1 kHz	Deviations <10 kHz	
	1 kHz	Deviations ≥10 kHz	
Incidental AM	<0.1%	<20 kHz peak deviation and internal rates	
	•	and carrier frequency ≥500 kHz.	
Indicator Accuracy ³	±5% of reading	At internal rates. Add $\pm 5\%$, if 250 Hz frequency increments are used.	
FM Distortion (Total Harmonic Distortion)	<0.5%	100 Hz to 99 kHz peak deviations and internal rates.	
FM Rates:			
Internal	400 and 1 kHz, $\pm 3\%$		
External	25 Hz to 25 kHz	1 dB bandwidth, ac coupled	
GENERAL			
Operating Temperature Range	0 to 55°C		
Power Requirements		40	
Line Voltage	100, 120, 220, or 240 Vac, +5%, -10%		

 $^{^3\}mathrm{FM}$ deviation is further limited by the Indicator Accuracy specification.

General Information Model 8656A

Table 1-1. Specifications (3 of 3)

Electrical Characteristics	Performance Limits	Conditions	
GENERAL (Cont'd) Line Frequency	48 to 66 Hz		
Power Dissipation	125VA maximum		
Conducted and Radiated Electromagnetic Interference	MIL STD 461A, VDE 0871 Conducted and radiated interference is wi in the requirements of methods CE03 and RE02 of MIL STD 461A, VDE 0871, and CISPR Publication 11.		
	<1.0 μ V Induced in a two-turn 2.5 cm (1 inch) diameter loop held 2.5 cm (1 inch) away from the front surface.		
Net Weight	18.1 kg (40 lb)		
Dimensions (Full Envelope): Height Width Depth	133 mm (5.25 in.) nominal 425 mm (16.75 in.) nominal 520 mm (20.5 in.) nominal. NOTE: For ordering cabinet accessories, to module sizes are 5-1/4H, 1MW, 17D.		
Electricai Characteristics	Features		
REMOTE OPERATION HP-IB (IEEE 488) Capability:			
Interface	Hewlett-Packard Interface Bus (HP-IB). HP-IB is Hewlett-Packard's implementation of IEEE Standard 488 (and the identical ANSI Standard MC1.1). The Signal Generator's compatibility with HP-IB is defined by the following list of interface functions: SH0, AH1, T0, L2, SR0, RL1, PP0, DC1, DT0, and C0.		
Functions Controlled	All functions controlled from the front panel with the exception of DIS-PLAY, DISPLAY in conjunction with SEQ, Backspace, COARSE TUNE, FINE TUNE, and display HP-IB ADRS are programmable with the same accuracy and resolution as in local operation.		

Table 1-2. Supplemental Characteristics

Supplemental characteristics are intended to provide information useful in applying the instrument by giving typical, but non-warranted performance parameters.

FREQUENCY

Accuracy and Stability: same as internal time base.
Time Base Characteristics:


Characteristic	Standard Time Base	Option 001 Time Base		
Aging Rate	$\pm 2 \text{ ppm/year}$ $1 \times 10^{-9}/\text{day}$			
Temperature	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$			
Line Voltage	- 2×10-9 (+5 to -10%)			
Frequency	50 MHz 10 MHz			
Time Base Reference Signal (Rear Panel)	Available at a level of >0.15 Vrms into 50 ohms (output of 10, 5 or 1 MHz is selectable via internal jumper). If the Option 001 or another external reference is used, only that reference frequency is available as an output.			
External Reference Input (Rear Panel)	Accepts any 10, 5 or 1 MHz (±0.002%) frequency standard at a level >0.15 Vrms into 50 ohms.			

Frequency Switching Speed: <2 seconds to be within 100 Hz of selected frequency.

SPECTRAL PURITY

SSB ϕ Noise (CW only):

Offset from Carrier	0.1 to 123.5 MHz (dBc/Hz)	123.5 to 247 MHz (dBc/Hz)	247 to 494 MHz (dBc/Hz)	494 to 990 MHz (dBc/Hz)
20 kHz	<-115	<-127	<-121	<-115
500 kHz	<-125	<-135	<-131	<-125

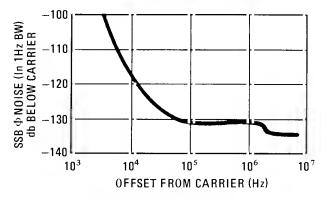


Typical SSB ϕ Noise, $f_c = 450$ MHz.

OUTPUT

SWR: <2, 0.1 to 990 MHz and <+13 dBm; < 1.5, 1.0 to 990 MHz and <-5 dBm.

Impedance: 50 ohms nominal.

Reverse Power Protection: protects Signal Generator from application of up to 50 watts of RF power to 990 MHz into RF OUTPUT connector; dc voltage cannot exceed 25V.

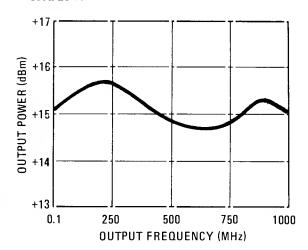

Typical maximum power output versus frequency (output set to +17 dBm).

MODULATION

(Amplitude and Frequency Modulation)

External Sensitivity: 1V peak for indicated accuracy. Front-panel annunciators indicate application of 1V peak signal $\pm 5\%$.

External Modulation Input: front-panel BNC; ac-coupled, 600 ohms.

Modulating Signal Output: internal modulating signal is provided at the front-panel BNC connector at 1V peak, ±5% into 600-ohm resistive load.

Digital FM Modulation: will accept digital unsquelching signals. Sag of resultant demodulated signal is less than 8% at 1 kHz deviation for a 10 Hz square-wave modulating signal.

Simultaneous Modulation: internal and external AM and FM. Internal/external AM/FM, FM/AM, AM/AM, and FM/FM.

AM Incidental to FM: <1% for 200 kHz \le f_c<500 kHz and <5% for 100 kHz \le f_c<200 kHz.

General Information Model 8656A

Table 1-3. Recommended Test Equipment (1 of 3)

Instrument	Critical Specifications	Recommended Model	Use ¹
AM/FM Test Source (required for modulation analyzer verification)	Range: 10 to 400 MHz Residual AM ² FM Flatness: ±1% (dc to 250 kHz) Peak Deviation: to 100 kHz)	HP 11715A	P
Attenuator, Fixed	Attenuation: 20 dB Frequency Range: 10 MHz to 990 MHz SWR: <1.2	HP 8491A Option 020	A
Attenuator, Fixed	Attenuation: 60 dB Frequency Range: 100 kHz to 990 MHz Accuracy: ±2 dB ±0.16 dB at Standards Calibra- tion Lab, Frequencies of 10, 100, 201, 801, 901, and 990 MHz. SWR: <1.3	HP 8491A Option H56	P
Controller, HP-IB HP-IB compatibility as defined by IEEE Standard 488 and the identical ANSI Standard MC1.1: SH0, AH1, T4, TE0, L0, LE0, SR0, RL0, PP0, DC0 DT0, and C1, 2, 3, 28.		HP 9825A/98034A/ 98213A or HP 9835A/ 98332A/98034A (see Table 1-4)	A, T
Digital Multimeter	Accuracy: 4-1/2 digit, ±0.02% of reading ±1 digit Ranges: 20 mV to 30 Vdc and 2 Vac Sensitivity: 100 μV	HP 3465A or HP 3455A (see Table 1-4)	P, A, T
Distortion Analyzer	Distortion Range: <0.1% Range: 25 Hz to 25 kHz	HP 339A or HP 8903A (see Table 1-4)	P, T
Frequency Counter	Frequency Counter Range: 10 MHz Resolution: 1 Hz		A
Frequency Counter	Range: 990 MHz Resolution: 10 Hz	HP 5328A Option 031	Т
Loop Antenna 2.5 cm (1 in.)	To ensure measurement accuracy, no substitution is possible. Fabrication depends upon machining and assembling to close tolerances.	HP 008640-60501	P
Modulation Analyzer	Frequency Range: 150 kHz to 990 MHz Input Level: -20 to +13 dBm Amplitude Modulation: Rates ³ : 25 Hz to 25 kHz Depth: to 99% Accuracy: ±2% at 1 kHz Flatness: ±0.5% Demodulated Output Distortion: (0.3% for 50% depth; <0.6% for 90% depth Incidental ΦM: <0.05 radians for 50% depth at 1 kHz rate (50 Hz to 3 kHz bandwidth) Residual AM ²	HP 8901A	P, A

Table 1-3. Recommended Test Equipment (2 of 3)

Instrument		Critical Specifications	Recommended Model	Use ¹
Modulation Analyzer (Cont'd)	Rates: 25 Deviation Accuracy Demodul Incidenta Residual linearly	Modulation: 5 Hz to 25 kHz n: to 99 kHz 7: ±2% at 1 kHz ated Output Distortion: <0.3% al AM ³ : FM: <8 Hz rms at 1300 decreasing with frequency to <1 Hz rms for z and below (50 Hz to 3 kHz bandwidth).		
Oscilloscope	Vertical Se Bandwidth	nsitivity: 10 mV/div : 50 MHz	HP 1222A or HP 1801A/1820C/181A (see Table 1-4)	A, T
Power Meter and Sensor	Power Range Frequency	Range: 100 kHz to 990 MHz ge: +17 to -25 dBm with HP 8482A Range: 10 to 990 MHz ge: -20 to -60 dBm with HP 8484A :0.2 dB	HP 436A or HP 436A Option 022 with HP 8484A and HP 8484A (see Table 1-4)	P, A, T
Signal Source	Frequency: Level: -20 d	50 to 300 MHz Bm	HP 8640B	A, T
Signature Analyzer	Provides po	erferred method for troubleshooting	HP 5004A	Т
Spectrum Analyzer, RF		Range: 0.1 to 990 MHz Bandwidth: <1 kHz to 3 kHz	HP 8568A or HP 8558B/P/181T or (see Table 1-4)	P, A, T
Spectrum Analyzer, RF	Resolution	10 to 990 MHz Bandwidth: <100 kHz age: 25 Sweeps	Model 8568A	P, A, T
Test Oscillator	1	o 1 Vpk into 50 and 600 ohms 25 Hz to 25 MHz	HP 651B	Р, Т
Wideband Amplifier	Gain: 20 or Frequency Impedance: Connector:	Range: 10 MHz to 990 MHz 50 ohms	HP 8447D Option 010	P
Adapter	Qty.	Туре	Recommended Model	Use ¹
Coaxial	1	BNC(f) to BNC(f)	HP 1250-0080	A, T
Coaxial	1	N(f) to BNC(m)	HP 1250-0077	A
Coaxial	3	N(m) to $BNC(f)$	HP 1250-0780	P, A, T
Probe	2	SMC(f) to RF Test Point	HP 1250-1598	A, T

General Information Model 8656A

Table 1-3.	Recommended	Test Equi	pment	(3 of	3)	
------------	-------------	-----------	-------	-------	----	--

Cable	Qty.	Туре	Recommended Model	Use¹
RF	2	BNC(f) to BNC(f)	HP 08662-60080	Р
RF	1	Connector: UG-210/U Type N(m)	HP 11500A	P, A, T
RF	2	Connector: UG-210/U Type N(m)	HP 11500B	P, A, T

¹A = Adjustments; P = Performance Tests; T = Troubleshooting.

Table 1-4. Alternate Test Equipment

Instrument	Recommended Model	Suggested Alternative	Advantages of Alternative
Controller, HP-IB	HP 9825A/98213A/ 98034A	HP 9835A/98332A/ 98034A	CRT Display HP Enhanced BASIC Larger Memory
Digital Voltmeter (DVM)	HP 3465A	HP 3455A	HP-IB* Compatible
Distortion Analyzer	HP 339A	HP 8903A	HP-IB* Compatible
Frequency Counter	HP 5328A Option 031	HP 5328A Options 001 and 031	HP-IB* Compatible
Power Meter	HP 436A	HP 436A Option 022	HP-IB* Compatible
Oscilloscope	HP 1222A	HP 1801A/1820C/ 181A	Satisfies all requirements for testing the Signal Generator. Also has increased vertical sensitivity (0.05 mV/div) and a Persistance Display that makes it possible to troubleshoot the Low Frequency Loop circuits.
Spectrum Analyzer, RF	HP 8568A	HP 8558B/P/181T or HP 8554B/8552B/ 141T	Satisfies most of the requirements for testing the Signal Generator. The exception is the Low Level Accuracy test. In this case, the spectrum analyzer's noise level is high enough that the measurements are meaningless.

^{*}HP-IB is Hewlett-Packard's implementation of IEEE Standard 488 and the identical ANSI Standard MC1.1.

²The residual AM specification of both the HP 8901A Modulation Analyzer and HP 11715A AM/FM Test Source are stated in a 50 Hz to 3 kHz bandwidth. In order to assure the validity of the residual AM measurement in the bandwidths stated for the HP 8656A Signal Generator (namely, 50 Hz to 15 kHz) the combined performance of both the HP 8901A and HP 11715A must be verified to be better than 0.022% rms for the 50 Hz to 15 kHz bandwidth. See paragraph 4-7, step 4, for the verification procedure.

³The incidental AM specification of the Signal Generator is not equivalent to the published specification of the Model 8901A Modulation Analyzer. In order to assure the validity of the incidental AM measurement, the incidental AM of the modulation analyzer must be verified to be less than 0.02% for the 300 Hz to 3 kHz bandwidth and 20 kHz peak deviation at internal rates. Refer to paragraph 4-10, step 18, for the verification procedures.

Model 8656A Installation

SECTION II INSTALLATION

2-1. INTRODUCTION

This section provides the information needed to install the Signal Generator. Included is information pertinent to initial inspection, power requirements, line voltage and fuse selection, power cables, time base selection, HP-IB address selection, interconnection, mating connectors, operating environment, instrument mounting, storage, and shipment.

2-2. INITIAL INSPECTION

WARNING

To avoid hazardous electrical shock, do not perform electrical tests when there are signs of shipping damage to any portion of the outer enclosure (covers and panels).

Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the instrument has been checked mechanically and electrically. The contents of the shipment should be as shown in Figure 1-1. Procedures for checking electrical performance are given in Section IV. If the contents are incomplete, if there is mechanical damage or defect, or if the instrument does not pass the electrical performance test, notify the nearest Hewlett-Packard office. If the shipping container is damaged, or the cushioning material shows signs of stress, notify the carrier as well as the Hewlett-Packard office. Keep the shipping materials for the carrier's inspection.

2-3. PREPARATION FOR USE

2-4. Power Requirements

WARNING

To avoid the possibility of hazardous electrical shock, do not operate this instrument at line voltages greater than 126.5 Vac with line frequencies greater than 66 Hz. Leakage currents at these settings may exceed 3.5 mA.

The Signal Generator requires a power source of 115 (90 to 126) Vac or 230 (198 to 252) Vac, 48 to 66 Hz single phase. Power consumption is 125 VA maximum.

WARNINGS

This is a Safety Class I product (i.e., provided with a protective earth terminal). An uninterruptible safety earth ground must be provided from the Mains power source to the product input wiring terminals, power cord, or supplied power cord set. Whenever it is likely that the protection has been impaired, the instrument must be made inoperative and be secured against any unintended operation.

If this instrument is to be energized via an external autotransformer for voltage reduction, make sure that the common terminal is connected to the earthed pole of the power source.

2-5. Line Voltage and Fuse Selection

CAUTION


BEFORE PLUGGING THIS INSTRU-MENT into the Mains (line) voltage, be sure the correct voltage and fuse have been selected.

A rear panel, line power module permits operation from 100, 120, 220, or 240 Vac. The number visible in the window (located on the module) indicates the nominal line voltage to which the instrument must be connected. Verify that the line voltage selection card and the fuse are matched to the power source. Refer to Figure 2-1, Line Voltage and Fuse Selection. Table 2-1 lists the ratings and HP part numbers for the replaceable fuses.

WARNING

For protection against fire hazard, the line fuse should only be a 250V slow blow fuse with the correct current rating.

Installation Model 8656A

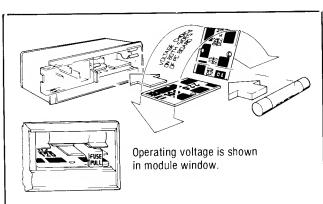

SELECTION OF OPERATING VOLTAGE

- Open cover door, pull the FUSE PULL lever and rotate to left. Remove the fuse.
- Remove the Line Voltage Selection Card. Position the card so the line voltage appears at top-left corner. Push the card firmly into the slot.
- Rotate the FUSE PULL lever to its normal position. Insert a fuse of the correct value in the holder. Close the cover door.

WARNING

To avoid the possibility of hazardous electrical shock, do not operate this instrument at line voltages greater than 126.5 Vac with line frequencies greater than 66 Hz (leakage currents at these line settings may exceed 3.5 mA).

Figure 2-1. Line Voltage and Fuse Selection

Table 2-1. Line Fuse Ratings and Part Numbers

Line Voltage	Rating	Part Number
100/120V	1.25A, 250V, SLO-BLO	HP 2110-0305
220/240V	0.6A, 250V, SLO-BLO	HP 2110-0016

2-6. Power Cables

WARNING

BEFORE CONNECTING THIS INSTRU-MENT, the protective earth terminal of the instrument must be connected to the protective conductor of the (Mains) power cord. The Mains plug shall only be inserted in a socket outlet provided with a protective earth contact. The protective action must not be negated by the use of an extension cord (power cable) without a protective conductor (grounding). Grounding one conductor of a two-conductor outlet is not sufficient protection.

This instrument is equipped with a three-wire power cable. When connected to an appropriate ac power receptacle, this cable grounds the instrument cabinet. The type of power cable plug shipped with each instrument depends on the country of destination. Refer to Figure 2-2 for the part numbers of the power cables and Mains plugs available.

2-7. Time Base Selection

One of three time base output signals (1, 5, or 10 MHz at a level greater than 0.15 Vrms into 50 ohms) is accessible at the rear panel TIME BASE OUTPUT connector. This output signal is derived from the internal reference oscillator frequency and is jumper-selectable through an inductor located inside the Signal Generator on the Low Frequency Loop Assembly - A3. When the instrument is shipped from the factory, the inductivejumper is hard-wired to provide a 10 MHz time base output signal. If the Option 001 or another external 10 MHz reference is applied to the rear panel TIME BASE INPUT connector, only that reference frequency will be available as an output signal. Also, if either a 1 or 5 MHz output signal is desired, the internal inductive-jumper will have to be repositioned. Similarly, if an external 1 or 5 MHz reference input is to be applied to the rear panel TIME BASE INPUT connector, the inductivejumper will have to be repositioned to the position that corresponds to the frequency of the external reference input. The top cover of the Signal Generator will have to be removed to gain access to the time base jumper. The following procedure describes how to change the location of the inductivejumper.

- a. Remove the top cover from the Signal Generator by first removing the two screws used to secure the strap handle to each side of the instrument. Next, remove the front and rear caps, slide the side cover in the direction of the arrow, then lift the side cover away from the frame. Finally, lift the top cover away from the frame.
- b. Locate the time base jumper on the Low Frequency Loop Assembly A3 (see Figure 2-3).
- c. Unsolder one end of the inductive-jumper and resolder it in the position that corresponds to the desired time base output or to the external reference input.

Model 8656A Installation

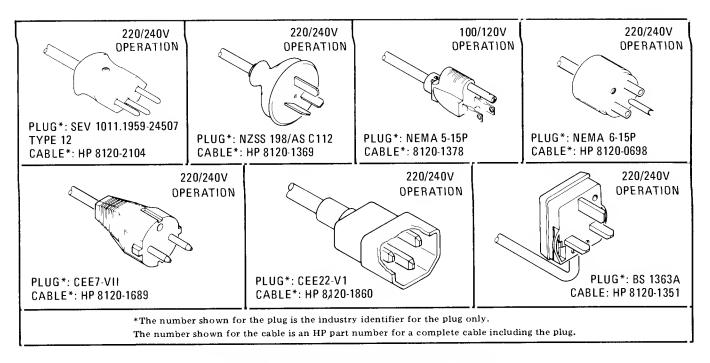


Figure 2-2. Power Cable and Mains Plug Part Numbers

Time Base Selection (Cont'd)

- d. Reinstall the top cover by reversing the procedure given in step a.
- e. If the Signal Generator is equipped with Option 001, ensure that the coaxial time base cable (A16W2) is connected between the rear panel TIME BASE HIGH STABILITY OPTION connector and the TIME BASE INPUT connector.

2-8. HP-IB Address Selection

The Signal Generator is strictly a listener, never a talker, and therefore only its HP-IB (listen) address can be selected. This HP-IB address is switch-selectable through five miniature rockerswitches located inside the Signal Generator on the Microprocessor/Memory/HP-IB Assembly — A11. These switches provide the means to select one of 31 valid HP-IB addresses (00 through 30). HP-IB addresses greater than 30 (decimal) are invalid. Refer to Table 2-2 for the allowable HP-IB address codes. Listed are the valid address switch settings and the equivalent ASCII character and decimal value. When the instrument is shipped from the factory, the HP-IB address is preset to 07 (decimal). (In binary, this is 00111; the ASCII equivalent character is an apostrophe.) This preset address is shown shaded in Table 2-2. The bottom cover of the Signal Generator will have to be removed to gain access to the HP-IB switches.

The following procedure describes how to change the settings of the HP-IB address switches.

NOTE

The HP-IB address stored in memory will only change when the instrument is powered up or reset. Therefore, the instrument must be unplugged or reset once the settings of the HP-IB address switches have been changed, otherwise, the stored HP-IB address will remain unchanged.

- a. Remove the bottom cover from the Signal Generator by first removing the two screws used to secure the strap handle to each side of the instrument. Next, remove the front and rear caps, slide the cover in the direction of the arrow, then lift the side cover away from the frame. Finally, lift the bottom cover away from the frame.
- b. Locate the HP-IB address switches S3 and S4 on the Microprocessor/Memory/ HP-IB Assembly A11 (see Figure 2-4).
- c. Use a pencil to set the switches to the desired HP-IB address in binary (see Figure 2-4). The five switches are labeled A1 through A5, where A1 is the least significant address bit and A5 is the most

Installation Model 8656A

Table 2-2. Allowable HP-IB Address Codes

Address Switch					Address Switch Equivalent Address Switch ASCII Character		
A 5	A4	A3	A2	A 1	(LISTEN)	Value (LISTEN)	
0	0	0	0	0	SP	00	
0	0	0	0	1	!	01	
0	0	0	1	0	"	02	
0	0	0	1	1	#	03	
0	0	1	0	0	\$	04	
0	0	1	0	1	%	05	
0	0	1	1	0	&	06	
0	0	1	1	1	•	07	
0	1	0	0	0	(08	
0	1	0	0	1)	09	
0	1	0	1	0	*	10	
0	1	0	1	1	+	11	
0	1	1	0	0	,	12	
0	1	1	0	1	-	13	
0	1	1	1	0		14	
0	1	1	1	1	/	15	
1	0	0	0	0	0	16	
1	0	0	0	1	1	17	
1	0	0	1	0	2	18	
1	0	0	1	1	3	19	
1	0	1	0	0	4	20	
1	0	1	0	1	5	21	
1	0	1	1	0	6	22	
1	0	1	1	1	7	23	
1	1	0	0	0	8	24	
1	1	0	0	1	9	25	
1	1	0	1	0	: ^	26	
1	1	0	1	1	;	27	
1	1	1	0	0	<	28	
1	1	1	0	1	=	29	
1	1	1	1	0	>	30	

Indicates factory-set address.

HP-IB Address Selection (Cont'd)

significant address bit. Pressing the right-hand side of the switch (as viewed from the front of the instrument) "sets" the corresponding address bit (bit=1), while pressing the left-hand side "clears" the bit (bit=0). Setting all of the address bits to "1" will result in an invalid HP-IB address (31 decimal). In this case, an HP-IB address of 30 (decimal) will be stored in memory once the instrument is powered up or reset.

- d. Reinstall the bottom cover by reversing the procedure given in step a.
- e. To confirm the HP-IB address, simply press and hold the front panel HP-IB ADRS key. The internally-set, decimal HP-IB address will be displayed in the MODULATION Display as long as the HP-IB ADRS key remains pressed.

2-9. Interconnection

Interconnection data for the Hewlett-Packard Interface Bus is provided in Figure 2-5.

2-10. Mating Connectors

Coaxial Connectors. Coaxial mating connectors used with the Signal Generator should be either 50-ohm BNC male connectors or 50-ohm Type N male connectors that are compatible with those specified in US MIL-C-39012.

Interface Connector. HP-IB mating connector is shown in Figure 2-5. Note that the two securing screws are metric.

2-11. Operating Environment

The operating environment should be within the following limitations:

Temperature	0°C to +55°C
Humidity	\dots <95% relative at 40°C
Altitude	$. < 4570 \text{ metres} (15\ 000\ \text{feet})$

2-12. Bench Operation

The instrument cabinet has plastic feet and foldaway tilt stands for convenience in bench operation. (The plastic feet are shaped to ensure selfalignment of instruments when they are stacked.) The tilt stands raise the front of the Signal Generator for easier viewing of the front panel.

2-13. Rack Mounting

WARNING

The Signal Generator weighs 18.1 kg (40 lb); therefore, care must be exercised when lifting to avoid personal injury. Use equipment slides when rack mounting.

Model 8656A Installation

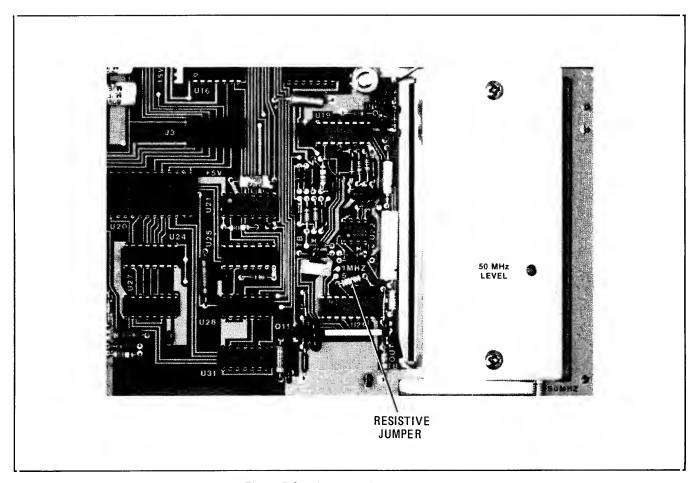


Figure 2-3. Time Base Jumper Location


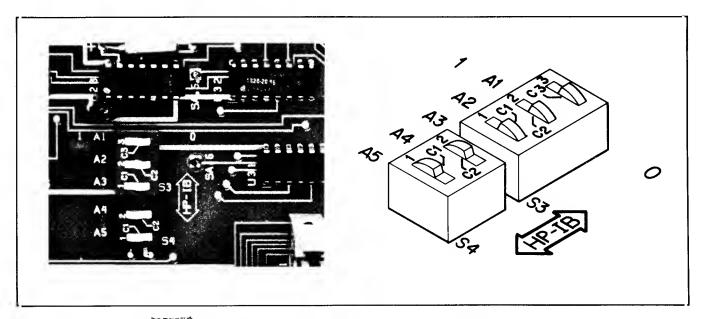


Figure 2-4. HP-IB Address Switch Location and Settings



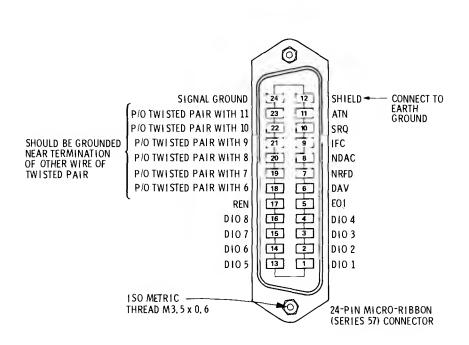

Logic Levels

The Hewlett-Packard Interface Bus Logic Levels are TTL compatible, i.e., the true (1) state is 0.0 Vdc to ± 0.4 Vdc and the false (0) state is ± 2.5 Vdc to ± 5.0 Vdc.

Programming and Output Data Format

Refer to Section III, Operation.

Mating Connector

HP 1251-0293; Amphenol 57-30240.

Mating Cables Available

HP 10833A, 1 metre (3.3 ft), HP 10833B, 2 metres (6.6 ft) HP 10833C 4 metres (13.2 ft), HP 10833D, 0.5 metres (1.6 ft)

Cabling Restrictions

- 1. A Hewlett-Packard Interface Bus system may contain no more than 2 metres $(6.6\ {\rm ft})$ of connecting cable per instrument.
- 2. The maximum accumulative length of connecting cable for any Hewlett-Packard Interface Bus system is 20.0 metres (65.6 ft).

Figure 2-5. Hewlett-Packard Interface Bus Connections

Model 8656A Installation

Rack Mounting (Cont'd)

Rack mounting information is provided with the rack mounting kits. If a kit was not ordered with the Signal Generator as an option, it may be ordered through the nearest Hewlett-Packard office. Slide rack mount kits are discussed in the following paragraphs; refer to paragraph 1-11, Mechanical Options, in Section I for information and part numbers pertaining to other rack mount kits.

Slide rack mount kits allow the convenience of rack mounting with the flexibility of easy access. The slide kits for the Signal Generator are listed below.

2-14. STORAGE AND SHIPMENT

2-15. Environment

The instrument should be stored in a clean, dry environment. The following environmental limitations apply to both storage and shipment.

Temperature	55	°C to +75°C
Humidity	<	95% relative
Altitude	15 300 metres	(50 000 feet)

2-16. Packaging

Original Packaging. Containers and materials identical to those used in factory packaging are

available through Hewlett-Packard offices. If the instrument is being returned to Hewlett-Packard for servicing, attach a tag indicating the type of service required, return address, model number, and full serial number. Also, mark the container FRAGILE to assure careful handling. In any correspondence, refer to the instrument by model number and full serial number.

Other Packaging. The following general instructions should be used for repackaging with commercially available materials.

- a. Wrap the instrument in heavy paper or plastic. (If shipping to a Hewlett-Packard office or service center, attach a tag indicating the type of service required, return address, model number, and full serial number).
- b. Use a strong shipping container. A double-wall carton made of 2.4 MPa (350 psi) test material is adequate.
- c. Use enough shock-absorbing material (75 to 100 millimetre layer; 3 to 4 inches) around all sides of the instrument to provide a firm cushion and to prevent movement in the container. Protect the front panel with cardboard.
 - d. Seal the shipping container securely.
- e. Mark the shipping container FRAGILE to assure careful handling.

SECTION III OPERATION

3-1. INTRODUCTION

This section provides complete operating information for the Signal Generator. Included are both general and detailed operating instructions; detailed descriptions of each front and rear panel key, connector, switch, and display; information on remote operation; operator's checks; and operator's maintenance procedures.

3-2. Operating Characteristics

Table 3-2 briefly summarizes the major operating characteristics of the Signal Generator. This table is not intended to be an in-depth listing of all characteristics. For more detailed information on the Signal Generator's characteristics, refer to Table 1-1, Specifications and Table 1-2, Supplemental Characteristics. For information on the instrument's HP-IB capabilities, refer to the summary contained in Table 3-4, HP-IB Message Reference Table.

3-3. Local Operation

Information covering front panel operation of the Signal Generator is presented in five areas of this section, namely Simplified Front Panel Features, Simplified Operation, General Operating Instructions, Detailed Panel Features, and Detailed Operating Instructions.

Simplified Front Panel Features. Figure 3-1 on the backside of this foldout illustrates the front panel of the Signal Generator and provides simplified descriptions of each key, connector, switch, and display. In addition, references are provided to the more detailed descriptions.

Simplified Operation. The instructions on the backside of this foldout provide a quick introduction to front panel operation of the Signal Generator. These instructions are designed to rapidly acquaint the novice user with the basic operation of the instrument. Included are instructions for setting carrier functions, setting modulation functions, and changing parameter values. This is a good starting point for the first-time user. Table 3-3 provides an index (in functional order) to the detailed operating instructions. This index is intended to direct the user to the more complete oper-


ating instructions which are arranged alphabetically at the end of this section.

General Operating Instructions. Instructions relating to the Signal Generator's power-on procedure, power-on sequence, various keystroke sequences, and time base selection are presented to acquaint the user with the general operation of the instrument.

Detailed Panel Features. Front and rear panel features are described in detail in Figures 3-2 through 3-7.

Detailed Operating Instructions. The detailed operating instructions present the most comprehensive information about all of the Signal Generator's functions. These instructions are arranged alphabetically by subject and are included at the end of this section for easy reference. They are indexed in functional order in Table 3-3.

3-4. Remote Operation

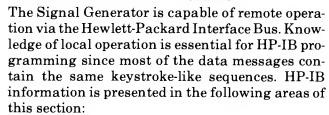

- a. General HP-IB information begins with paragraph 3-17.
- b. A summary of HP-IB capabilities is provided in Table 3-4.
- c. A summary of program codes is provided in Tables 3-8 and 3-9.
- d. Detailed information relating to the Signal Generator's HP-IB programmable features together with tables and examples of associated program codes are presented in the detailed operating instructions which are arranged alphabetically at the end of this section.

3-5. Operator's Checks

Operator's checks are simple procedures designed to verify that the main functions of the Signal Generator operate properly. Two procedures are provided, one for basic (front panel) functional checks and the other for HP-IB functional checks.

Basic Functional Checks. This procedure requires only a frequency counter, a spectrum analyzer, and the interconnecting cables and adapters. It provides assurance that most of the front panel controlled functions are being properly executed by the Signal Generator.

HP-IB Functional Checks. This series of procedures requires only an HP-IB compatible computing controller and an HP-IB interface with its interconnecting cable. These procedures assume that front panel operation has been previously verified, that is, that the basic functional checks have been previously performed. The procedures check all of the applicable bus messages summarized in Table 3-4.

3-6. Operator's Maintenance

The only maintenance that the operator should normally perform is the replacement of the primary power fuse. All other maintenance should be referred to qualified service personnel.

3-7. GENERAL OPERATING INSTRUCTIONS

WARNINGS

Before the Signal Generator is switched on, all protective earth terminals, extension cords, autotransformers, and devices connected to it should be connected to a protective earth grounded socket. Any interruption of the protective earth grounding will cause a potential shock hazard that could result in personal injury.

For continued protection against fire hazard, replace the line fuse, with only a 250V slo-blo fuse of the same rating. Do not use repaired fuses or short circuited fuseholders.

CAUTIONS

Before the Signal Generator is switched on, it must be set to the same line voltage as the power source or damage to the instrument may result.

The Signal Generator is protected against reverse power applications up to 50 watts; however, for greatest protection of expensive internal components be careful not to apply any reverse power to the RF OUTPUT connector.

3-8. Power-On Procedure

The Signal Generator has a standby state and an on state. Whenever the power cable is plugged in, the internal power supply is activated. If the instrument is equipped with the high stability reference (Option 001), the oven will be energized to keep the reference oscillator stable. If the Signal Generator is already plugged in, set the RESET/STBY/ON switch to ON. If the power cable is not plugged in, follow these instructions:

- 1. Check that the line voltage setting matches the power source. Refer to paragraph 2-5.
- 2. Check that the fuse rating is appropriate for the line voltage being used. Refer to paragraph 2-5.
 - 3. Plug in the power cable.
 - 4. Set the RESET/STBY/ON switch to ON.

3-9. Power-On Sequence

When the RESET/STBY/ON switch is set to ON after the instrument is first connected to Mains power or after it is reset, an internal memory check is initiated. This check tests for a failure in ROM (read-only memory) and in RAM (read-write memory). During this check, all front panel indicators will light for approximately 1.5 seconds to provide a quick visual inspection of each front panel annunciator and display segment. If a memory failure is detected, all front panel annunciators and display segments will remain lit until any front panel key is pressed. If the memory check was successful, the front panel indicators will display a carrier frequency of 100.0000 MHz, an output amplitude of -127.0 dBm, and no modulation. All annunciators (except dBm) will remain off. Table 3-1 lists the conditions of the Signal Generator as a result of a successful initialization sequence.

Table 3-1. Initialized Conditions

Parameter	Initialized Condition	
Carrier Frequency	100.0000 MHz	
Output Amplitude	-127.0 dBm	
AM Depth	0%	
FM Peak Deviation Frequency	$0.0 \; \mathrm{kHz}$	
Carrier Frequency Increment	10.0000 MHz	
Output Amplitude Increment	10.0 dB	
AM Depth Increment	1%	
FM Peak Deviation Frequency Increment	$1.0 \mathrm{\ kHz}$	
Coarse and Fine Tune Pointer	10.0000 MHz	
Sequence Counter	0	
All 10 Internal Storage Registers	100.0000 MHz and -127.0 dBm with no modulation	

3-10. Keystroke Sequences

The Signal Generator's functions can be selected in any order; however, each function selection requires a prescribed sequence of keystrokes. A keystroke sequence might contain only a single keystroke, such as, to read the internally-set, decimal HP-IB address or to return to local operation. More often though, the sequence will contain several keystrokes which must be entered in a specific order. This is true whenever one of the four main functions (Frequency, Amplitude, AM, or FM) is selected. Once one of these functions has been selected, the instrument will remain in that function until one of the following events occurs:

- a. One of the three remaining functions is selected.
- b. One of the STORE-RECALL-DISPLAY keys is pressed.
- c. The instrument is reset or unplugged.

As long as a function remains in effect, it is not necessary to re-select that function before entering new data. The following paragraphs discuss multiple-entry keystroke sequences.

Carrier Keystroke Sequence. The parameters used to set the carrier's frequency and amplitude are entered in a Function-Data-Units format. Data entered following a function selection will be interpreted for that function. Data previously entered remains unaffected until the new data entry is terminated by pressing a valid unit key. If any other function key is pressed before the data entry is terminated, that entry will be rejected and the last valid display will be restored so that it agrees with the actual output of the Signal Generator.

Table 3-2. Operating Characteristics

Frequency Range: 100 kHz to 990 MHz

Resolution: 100 Hz

250 Hz

Amplitude Range: $+13 \text{ dBm to } -127 \text{ dBm } (+1.00 \text{V to } +.100 \ \mu\text{V})$

Resolution: 0.1 dB

Absolute Level Accuracy: ≤±1.5 dB

Level Flatness: ≤±1.0 dB (100 kHz to 990 MHz with output level

setting of 0.0 dBm)

Modulation AM

Depth: 0% to 99% to +7 dBm

0% to 30% to +10 dBm

Resolution: 1%

FM

Peak Deviation:

Carrier Frequency		imum eviation
(MHz)	Rates ≥60 Hz	Rates < 60 Hz
0.1 - 123.5 $123.5 - 247$ $247 - 494$ $494 - 990$	99 kHz 25 kHz 50 kHz 99 kHz	1600 imes Rate $400 imes Rate$ $800 imes Rate$ $1600 imes Rate$

 $\begin{aligned} Resolution: 0.1 \ kHz \ (deviations \leq & 10 \ kHz) \\ 1 \ kHz \ (deviations \geq & 10 \ kHz) \end{aligned}$

Rates: 400 Hz or 1 kHz ±3%, internal

25 Hz to 25 kHz, external (ac coupled, 1 dB bandwidth)

External Modulation Source: 600 ohms nominal, ac coupled

Mixed Modulation: Any combination of internal AM, internal FM, external AM, or external FM is possible.

CHANGING PARAMETERS VALUES (Cont'd)

The increment value for the four main functions can be modified as follows:

FREQUENCY

INCR SET

The maximum allowable increment value for each of the four main functions is as follows:

 $\begin{array}{ll} \text{Carrier Frequency} & \leq 989.99 \text{ MHz} \\ \text{Output Amplitude} & \leq 144 \text{ dB} \\ \text{AM Depth} & \leq 99\% \\ \text{FM Peak Deviation Frequency} & \leq 99 \text{ kHz} \\ \end{array}$

NOTE

The carrier frequency increment is rejected if it is not a multiple of 100 Hz or 250 Hz.





In addition, value-selectable carrier frequency parameters can be changed using the COARSE TUNE or FINE TUNE keys in conjunction with the step up or step down keys associated with the carrier frequency function. The COARSE TUNE key causes the carrier frequency tuning value to be increased by a factor of 10 each time it is pressed, while the FINE TUNE key causes the carrier frequency tuning value to be decreased by a factor of 10. Pressing the INCR SET key disables the affect of these keys and enables the original carrier frequency increment value.


STORE-RECALL-DISPLAY-SEQUENCE

Up to ten complete front panel settings (exclusive of increment values) can be stored for either selectable or sequential recall at a later time. The output of the Signal Generator will be changed so that it agrees with the recalled parameter values. Stored front panel settings can also be displayed without actually changing the output signal.

SETTING CARRIER FUNCTIONS

Carrier Frequency:	FREQUENCY	1 2 . 3	UNITS
Output Amplitude:	AMPTO	7 . 2	dBm
parameters	. These parame	r's carrier functions have value eters are selected in the Func he examples above.	

SETTING MODULATION FUNCTIONS

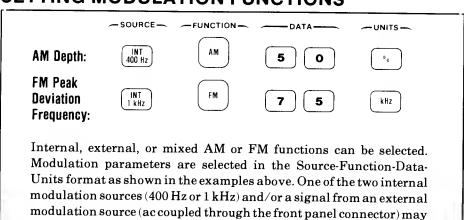

CHANGING PARAMETERS VALUES

be used to modulate the carrier.

Value-selectable parameters can be changed by making new Function-Data-Units entries, or by using the step up or down keys associated with each of the four main functions. These keys are used in conjunction with the INCR SET key.

Step Up and

Down Keys


The step up and down keys are always enabled to change the value of the associated main function. The initialized value of each increment is listed as follows:



Carrier Frequency 10 MHz
Output Amplitude 10 dB
AM Depth 1%
FM Peak Deviation Frequency 1 kHz



The value of each increment can be displayed or modified by using the INCR SET key. The stored increment value will be displayed as long as the INCR SET key remains pressed.

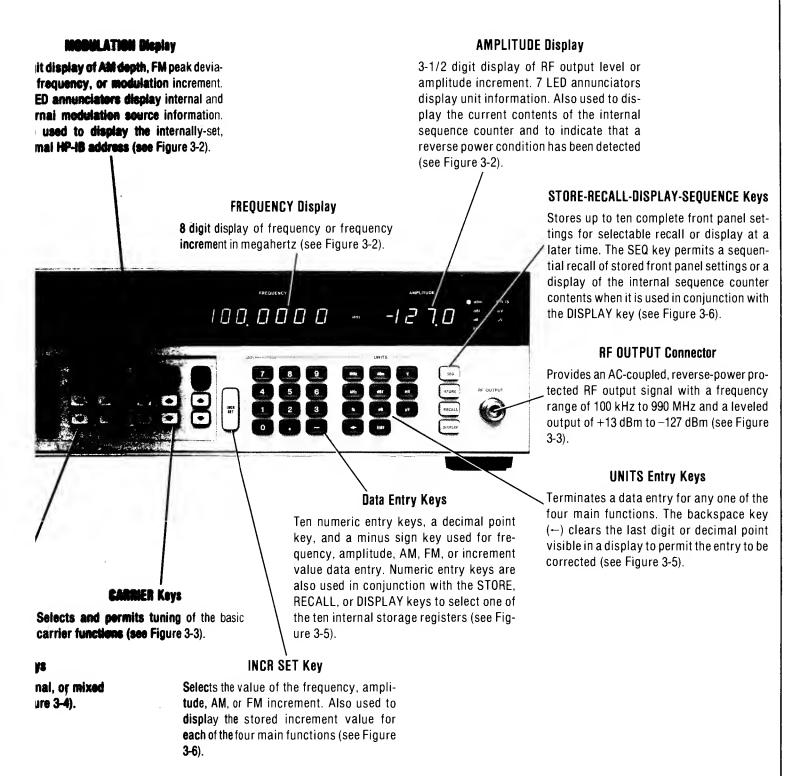

SIMPLIFIED FRONT PANEL FEATURES AND OPERATION

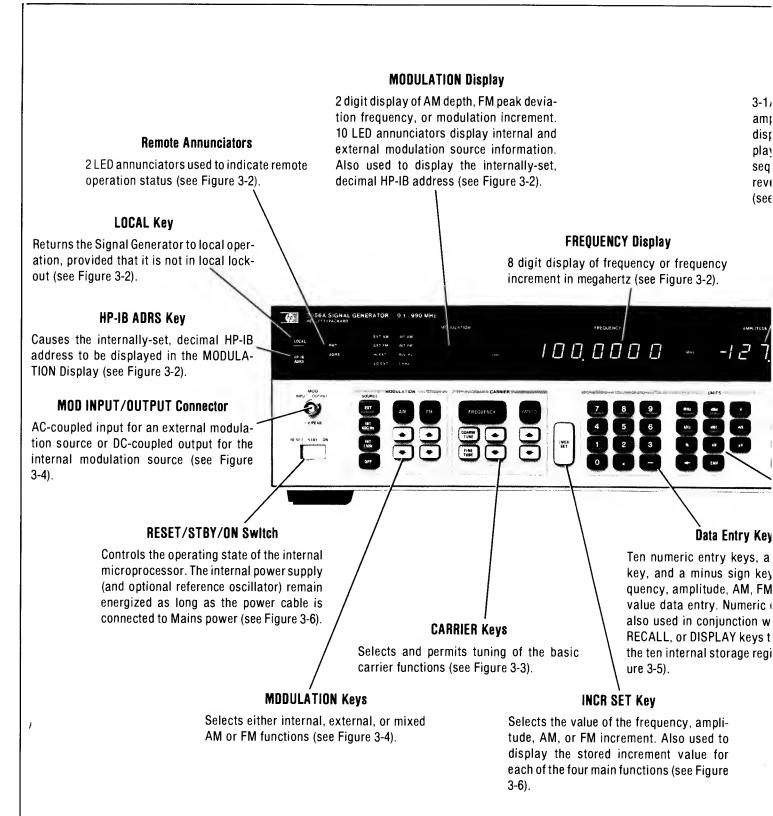


Figure 3-1. Simplified Front Panel Features

Table 3-3. Index of Detailed Operating Instructions

Instruction	Page	Instruction	Page
Frequency	3-39	Modulation, Mixed	3-55
Frequency, Coarse and Fine Tune		Modulation, Off	3-59
Frequency, Up/Down	3-43		
		Increment Value Change	3-46
Amplitude	3-32	Increment Value Display	3-48
Amplitude Conversion	3-34		
Amplitude, Up/Down	3-36	Display	3-37
		Display Sequence	3-38
Modulation, AM	3-49	Recall	3-61
Modulation, AM Up/Down	3-50	Sequence	3-62
Modulation, External Source	3-51	Store	3-63
Modulation, FM	3-52		
Modulation, FM Up/Down	3-54	HP-IB Address Display	3-44

The actual detailed operating instructions are arranged in alphabetical order at the end of this section.

Operation Model 8656A

Modulation Keystroke Sequence. Internal, external, or mixed AM or FM functions can be selected. Modulation parameters are selected in a Source-Function-Data-Units format. The modulation source, either one of the two internal modulation signals (400 Hz or 1 kHz) and/or a signal from an external modulation source (ac coupled through the front panel connector), may be selected before or after the AM depth or FM peak deviation frequency parameters are selected. The internal 400 Hz or 1 kHz modulation source will be common to both AM and FM functions whenever they are simultaneously selected.

Store-Recall-Display Keystroke Sequence. Up to ten complete front panel settings (exclusive of increment values) can be stored for either selectable or sequential recall at a later time. Stored front panel settings can also be displayed without actually changing the output signal. A two keystroke sequence is necessary to store, recall, or display front panel settings. First, the desired function is entered followed by a numeric entry (0—9). This numeric entry represents the location of the internal storage register.

3-11. Time Base Selection

The Signal Generator is shipped from the factory with an inductive-jumper hard-wired to provide a 10 MHz time base output signal at the rear panel TIME BASE OUTPUT connector. If either a 1 or 5 MHz output signal is desired, this internal inductive-jumper will have to be repositioned. Also, if an external 1 or 5 MHz reference input is to be applied at the rear panel TIME BASE INPUT connector, this internal inductive-jumper will have to be repositioned. In either case, this internal inductive-jumper has to be installed in the position that corresponds to the frequency of the time base input or output signal being used. Refer to paragraph 2-7 for the time base selection procedure.

3-12. OPERATOR'S MAINTENANCE

WARNING

For continued protection against fire hazard, replace the line fuse with only a 250V slo-blo fuse of the same rating. Do not use repaired fuses or short circuited fuseholders.

The only maintenance that the operator should normally perform is the replacement of the primary power fuse located within the Line Power Module — A15. For instructions on how to change the fuse, see Figure 2-1, steps 1 and 3.


Fuses may be ordered under HP Part Numbers 2110-0305~(1.25A,~250V,~slo-blo) for 100/120~Vac operation and 2110-0016~(0.6A,~250V,~slo-blo) for 220/240~Vac operation.

3-13. DETAILED PANEL FEATURES

The Signal Generator is designed to be simple and easy to operate through the front panel. The front panel primarily consists of 48 pushbutton keys. three digital displays, and 19 LED annunciators. Each key has a single purpose and only one key should ever be pressed at any given time. In most cases, keys are pressed, then released, with the action occurring as the key is pressed. In some cases, a key must be pressed and held for the action to occur. The four main functions of the Signal Generator are selected by the four dark gray colored keys labeled FREQUENCY, AMPTD, AM, and FM. The 27 medium gray colored keys are used to control the modulation source, enter numeric data, and select the unit(s) which terminates the data entry. The 15 light gray colored keys are used to set an increment value for each of the four main functions, change main function parameters by the set increment values, and store up to ten complete front panel settings (exclusive of increment values) for either selectable or sequential recall or display at a later time. The two remaining dark gray colored keys (located in the upper left-hand corner of the front panel) select local operation and display the internally-set, decimal HP-IB address.

The three digital displays show the frequency of the carrier in megahertz (the least significant or eighth digit will either be blanked or a numeral 5 depending on the frequency selected), the output amplitude of the carrier in one of fourteen possible units, and the percentage of AM depth or frequency of FM peak deviation used to modulate the carrier. In addition, the FREQUENCY Display can show the value of the carrier frequency increment; the AMPLITUDE Display can show the value of the output amplitude increment or current contents of the internal sequence counter; and the MODULATION Display can show the value of the modulation increment or internally-set, decimal HP-IB address.

The 19 LED annunciators are used to indicate remote operation status, internal or external modulation source and unit information, and amplitude unit information. All of the front and rear panel features are described in detail in Figures 3-2 through 3-7.

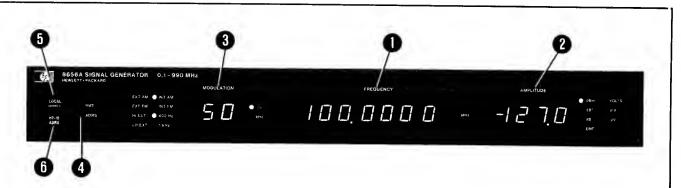

FREQUENCY Display

The FREQUENCY Display provides an 8 digit display of carrier frequency from 10 kHz to 990 MHz with a resolution of 100 Hz or 250 Hz. Carrier frequencies are always displayed in megahertz. Any selected frequency between 10 kHz and 100 kHz will result in an uncalibrated output amplitude. When the selected carrier frequency is a multiple of 100 Hz, the resolution will be 100 Hz and the least significant (eighth) digit will be blanked. In cases where the selected carrier frequency is a multiple of 250 Hz, the resolution will be 250 Hz and the least significant digit will be a 5. Digits selected beyond the specified resolution will be truncated and leading zeros will be blanked.

The FREQUENCY Display is also used to display the value stored in the internal carrier frequency increment register. This stored value is used in conjunction with the step up and step down keys associated with the frequency function to change the carrier frequency.

2 AMPLITUDE Display

The AMPLITUDE Display provides a 3-1/2 digit display of output amplitude from +17 to -127 dBm with a resolution of 0.1 dB. Amplitude levels are displayed in dBm, dBf, V, mV, and μ V, while relative levels are displayed in dB and EMF. Calibrated levels from +13 to -127 dBm are possible with overrange to the maximum available power (amplitude set to +17 dBm). Digits selected beyond the specified resolution will be truncated and leading zeros will be blanked.

The AMPLITUDE Display is also used to display the value stored in the internal output amplitude increment register. This stored value is used in conjunction with the step up and step down keys associated with the amplitude function to change the output amplitude.

Further, the least significant digit of the AMPLITUDE Display is used to display the stored contents of the internal sequence counter.


Also, whenever a reverse power condition is detected, all segments and all seven LED annunciators associated with the AMPLITUDE Display will flash until the source of reverse power is removed and the AMPTD key is pressed.

Seven LED annunciators are used to display output amplitude unit information. Fourteen unit combinations are possible which will cause one or more LED's to light. The valid output amplitude units are listed as follows:

dBm	$\mathbf{d}\mathbf{B}_{\mu}\mathbf{V}$	V	EMF mV
dBf	dB EMF V	mV	EMF µV
dB V	dB EMF mV	μV	-1:11 m 1
dB mV	$dB EMF \mu V$	EMFV	

3 MODULATION Display

The MODULATION Display provides a 2 digit display of AM depth from 0 to 99% with a resolution of 1% or FM peak deviation frequency from 0 to 99 kHz with a resolution of 0.1 kHz (for deviations <10 kHz) or 1 kHz (for deviations ≥10 kHz). AM depth is always displayed in percent,

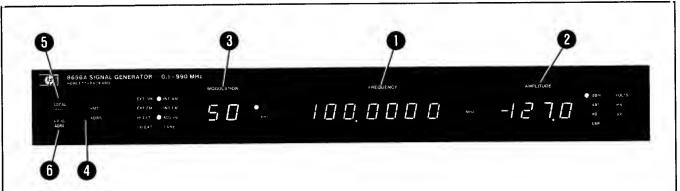

3 MODULATION Display (Cont'd)

and FM peak deviation frequency is always displayed in kHz. Digits selected beyond the specified resolution will be truncated and leading zeros will be blanked.

If one modulation parameter is being displayed when the other modulation function is selected, the MODULATION Display will be updated to display the newly selected parameter. Selecting the other function will restore the original display.

If a change in carrier frequency causes the FM peak deviation frequency allowed for that frequency band to be exceeded, the MODULATION Display will flash until a carrier frequency within the correct band is selected or the FM, FM step up, or FM step down key is pressed. In this later case, the maximum FM peak deviation frequency permitted for the currently selected carrier frequency will automatically be selected.

The MODULATION Display is also used to display the values stored in the internal AM depth and FM peak deviation frequency increment registers. These stored values are used in conjunction with the step up and step down keys associated with the modulation functions to change the percentage of AM depth or FM peak deviation frequency.

Further, the MODULATION Display is used to display the internally-set, decimal HP-IB address. HP-IB addresses from 0 to 30 (decimal) are valid, all others will be interpreted as 30. (Refer to Section II, Installation when changing the HP-IB address.)

Ten LED annunciators are used to display internal and external modulation source information. The HI EXT and LO EXT annunciators serve as an aid in adjusting the level of the external modulation source. They indicate that the input level is too high or too low for a calibrated display of AM depth or FM peak deviation frequency. The HI EXT annunciator will light if the external modulation signal is greater than 1.02 Vpk (0.721 Vrms), and the LO EXT annunciator light if the signal is less than 0.98 Vpk (0.693 Vrms). Both annunciators will be off when the input level is 1.00 ± 0.02 Vpk (0.707 ± 0.014 Vrms).

4 Remote Annunciators

Two LED annunciators are used to display remote operation status. The RMT annunciator lights when the instrument is in remote operation. The ADRS annunciator lights when the instrument has been addressed to listen via the bus (regardless of whether or not the instrument is in remote operation).

5 LOCAL Key

The LOCAL key returns the instrument to local operation (full front panel control) from remote operation provided that it is not in Local Lockout.

6 HP-IB ADRS Key

The HP-IB ADRS key is used to display the internally-set, decimal HP-IB address in the MODULATION Display.



CARRIER Keys

The FREQUENCY key is one of the four main function keys. It is used in conjunction with the numeric entry keys, decimal point key, and UNITS entry keys to enter carrier frequency parameters. In addition, it is used in conjunction with the INCR SET key to enter carrier frequency increment values.

The step up and step down keys associated with the frequency function permit the carrier frequency to be changed by the value stored in the internal carrier frequency increment register. The value of the carrier frequency increment initially stored is 10.0000 MHz. Its minimum value is 100 Hz, and its maximum value is ≤989.99 MHz. The carrier frequency will be changed once for each keystroke or repeatedly if either key remains pressed.

The COARSE TUNE and FINE TUNE keys are used in conjunction with the frequency step up and step down keys to tune the carrier frequency. They are used to increase (COARSE TUNE) or decrease (FINE TUNE) the carrier frequency tuning value by a factor of 10. The affect of these keys is disabled and the original carrier frequency increment value is enabled when the INCR SET key is pressed.

If a change in carrier frequency causes the FM peak deviation frequency allowed for that frequency band to be exceeded, the MODULATION Display will flash until a carrier frequency within the correct band is selected or the FM, FM step up, or FM step down key is pressed. In this later case, the maximum FM peak deviation frequency permitted for the currently selected carrier frequency will automatically be selected.



The AMPTD key is one of the four main function keys. It is used in conjunction with all of the Data and UNITS entry keys to enter output amplitude parameters. In addition, it is used in conjunction with the INCR SET key to enter output amplitude increment values. Further, it is used to reset the internal reverse power protection feature once the source of reverse power has been removed.

The step up and step down keys associated with the amplitude function permit the output amplitude to be changed by the value stored in the internal output amplitude increment register. The value of the output amplitude increment initially stored is 10.0 dB. Its minimum value is 0.1 dB (0.001 μV or 0.001 EMF V), and its maximum value is ≤ 144.0 dB ($\leq 1.57V$ or ≤ 3.15 EMF V). The output amplitude will be changed once for each keystroke or repeatedly if either key remains pressed.





Female type-N connector (J2) provides access to the RF output signal. Specified output levels are +13 to -127 dBm (+1.00V to +.100 $\mu V)$ with a minimum resolution of 0.1 dBm. Nominal impedance is 50 ohms. Reverse power protection is provided up to 50W and 25 Vdc. Pressing the AMPTD key restores RF output signal once the source of reverse power has been removed.

MODULATION Keys





The AM key is one of the four main function keys. It is used in conjunction with the SOURCE keys, numeric entry keys, and UNITS entry keys to enter amplitude modulation parameters. In addition, it is used in conjunction with the INCR SET key to enter AM depth increment values. If the FM peak deviation frequency is being displayed when the AM key is pressed, the MODULATION Display will be updated to show the percentage of AM depth. The default modulation source (internal 1 kHz) will automatically be selected when the AM key is pressed, if no other source has been selected.

The step up and step down keys associated with the AM function permit the percentage of AM depth to be changed by the value stored in the internal AM depth increment register. The value of the AM depth increment initially stored is 1%. This is its minimum value. Its maximum value is \leq 99%. The percentage of AM depth will be changed once for each keystroke or repeatedly if either key remains pressed.





The FM key is one of the four main function keys. It is used in conjunction with the $SOURCE\ keys, numeric\ entry\ keys, and\ UNITS\ entry\ keys\ to\ enter\ frequency\ modulation$ $parameters. \ In \ addition, it is \ used in \ conjunction \ with \ the \ INCR \ SET \ key \ to \ enter \ FM \ peak \ addition.$ deviation frequency increment values. If the percentage of AM depth is being displayed when the FM key is pressed, the MODULATION Display will be updated to show the FM peak deviation frequency. The default modulation source (internal 1 kHz) will automatically be selected when the FM key is pressed, if no other source has been selected.


The step up and step down keys associated with the FM function permit the FM peak deviation frequency to be changed by the value stored in the internal FM peak deviation frequency increment register. The value of the FM peak deviation frequency increment initially stored is 1.0 kHz. Its minimum value is 0.1 kHz, and its maximum value is ≤99 kHz. The FM peak deviation frequency will be changed once for each keystroke or repeatedly if either key remains pressed.

 $If an out of range condition\ exists\ (MODULATION\ Display\ flashing), pressing\ either\ the$ step up, step down, or FM key will automatically select the maximum FM peak deviation frequency permitted for the currently selected carrier frequency.







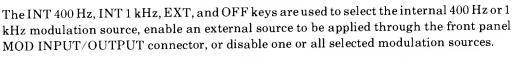

The internal modulation signal is available at the MOD INPUT/OUTPUT connector when either the 400 Hz or 1 kHz modulation source is selected and the external source is not selected.

MOD INPUT/OUTPUT Connector



Female BNC connector (J1) accepts either an external modulation signal or a digital unsquelching signal. In addition, it provides access to the 400 Hz or 1 kHz modulation signal from the internal audio oscillator. Source selection is provided by the four MODU-LATION SOURCE keys. Nominal input impedance is 600 ohms. External input rates are ac coupled with 1 dB of bandwidth. The input signal should be $25~\mathrm{Hz}$ to $25~\mathrm{kHz}$ at 1 Vpk $(0.707\,\mathrm{Vrms})\pm5\%$ minimum into a $600\,\mathrm{ohm}$ resistive load to produce calibrated AM depths or FM peak deviations. The HI EXT and LO EXT annunciators provide an indication of the input level available for calibrated modulation. If greater accuracy is required, the signal level should be measured externally.

Figure 3-4. Modulation Features

Data Entry Keys



The Data entry keys consist of ten numeric entry keys (0-9), a decimal point key, and a minus sign key.

The ten numeric entry keys are used in conjunction with the four main function keys to enter value-selectable parameters, with the INCR SET key to enter increment values, and with the STORE-RECALL-DISPLAY keys to select one of the ten internal storage registers.

The decimal point key is used to add a decimal point to the numeric entry. A leading zero will be displayed, if the decimal point is added before the numeric entry for carrier frequencies less than 1 MHz and output amplitudes less than ± 1 dBm.

The minus sign key is only used when making amplitude Data entries and it can be used at any time before the final UNITS terminator entry is made.

UNITS Entry Keys



The UNITS entry keys consist of ten terminator keys and a backspace (-) key.

The ten terminator keys are used in conjunction with the four main function keys to terminate Data entries. They are also used in conjunction with the INCR SET key to terminate increment value entries.

Frequency entries are always adjusted so that they are displayed in megahertz, even though kHz is a valid terminator.

Fourteen amplitude terminator combinations are possible. They are listed as follows:

dBm dBf dB V dB mV dB μ V dB EMF μ V dB EMF μ V μ V μ V EMF μ V EMF μ V

AM entries are always terminated in %, and FM entries are always terminated in kHz.

The backspace key is used to clear the last digit or decimal point visible in a display to permit the entry to be corrected.

Operation Model 8656A



STORE-RECALL-DISPLAY-SEQUENCE Keys

Four keys used to store up to ten complete front panel setups (exclusive of increment values) for either selectable or sequential recall or display at a later time. When the Signal Generator is powered up or reset, the initialized conditions of the instrument are stored in each of the ten internal storage registers. That is, the parameter values for a carrier frequency of 100 MHz with an output amplitude of -127 dBm and no modulation will be stored in each location.

When the STORE key is used in conjunction with a numeric entry key (a single digit register number 0—9), the current front panel settings (exclusive of increment values) will be stored in an internal storage register.

When the RECALL key is used in conjunction with a numeric entry key (a single digit register number 0-9), the stored contents will be recalled and the output of the Signal Generator will be changed so that it agrees with the recalled parameter values.

When the DISPLAY key is used in conjunction with a numeric entry key (a single digit register number 0-9), the stored contents will be displayed, but the actual output of the Signal Generator will not be affected.

The SEQ key is used to sequence the Signal Generator through each of its ten internal storage registers. As the stored contents are sequentially recalled, the output will be changed so that it agrees with the recalled parameter values.

When the DISPLAY key is used in conjunction with the SEQ key, the stored contents of the internal sequence counter will be displayed in the least significant digit of the AMPLITUDE Display.





A single key used in conjunction with any one of the four main function keys to store an increment value for that function. The initialized value of each stored increment is listed as follows:

Carrier Frequency	10.0000 MHz
Output Amplitude	10.0 dB
AM Depth	1%
FM Peak Deviation Frequency	$1.0 \; \mathrm{kHz}$

The minimum allowable increment value for each of the four main functions is listed as follows:

Carrier Frequency	0.1 kHz
Output Amplitude	0.1 dB
AM Depth	1%
FM Peak Deviation Frequency	$0.1~\mathrm{kHz}$

Figure 3-6. Miscellaneous Features (1 of 2)

INCR SET Key (Cont'd)

The maximum allowable increment value for each of the four main functions is listed as follows:

 $\begin{array}{ll} \text{Carrier Frequency} & \leq 989.99 \text{ MHz} \\ \text{Output Amplitude} & \leq 144.0 \text{ dB} \\ \text{AM Depth} & \leq 99\% \\ \text{FM Peak Deviation Frequency} & \leq 99 \text{ kHz} \end{array}$

The stored value of the increment will be displayed in the display associated with the selected function as long as the INCR SET key remains pressed.

The frequency coarse tune and fine tune feature will be disabled and the original carrier frequency increment value will be restored when the INCR SET key is pressed.

RESET/STBY/ON Switch




Three position rocker switch used to control the operating state of the internal microprocessor. The Signal Generator (and its optional reference oscillator) will remain energized and the fan will continue to operate as long as the power cord is connected to Mains power.

When momentarily set to RESET, the microprocessor will be halted. Upon release, the microprocessor will initiate its restart operation.

When set to STBY, the microprocessor will initiate an RF quieting operation in which all displays are blanked, the high frequency section is turned off, all attenuator sections (120 dB) are switched in, the internal audio oscillator is turned off, and the instrument will not respond to any HP-IB commands.

When set to ON (return from STBY), the operating state of the instrument (prior to entering the standby state) will be restored. Refer to paragraph 3-9 for information regarding the power-on sequence.

Operation Model 8656A

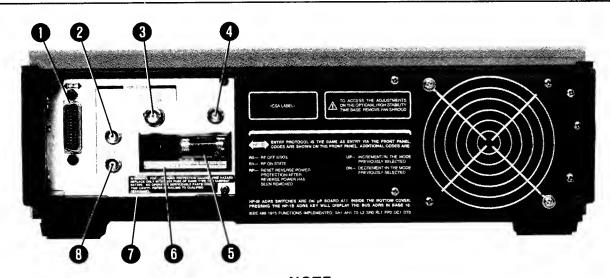

NOTE

For Option 002 instruments, the RF OUTPUT and MOD INPUT/OUTPUT connectors are located on the rear panel. The RF OUTPUT connector is above 2 Time Base Input while the MOD INPUT/OUTPUT connector replaces 4 SEQ. Refer to Figures 3-3 and 3-4 for detailed information concerning the signals found at these ports.

HP-IB Connector

24-pin female connector used to connect the Signal Generator to the Hewlett-Packard Interface Bus for remote operation. Connection information is presented in Section II, Installation.

TIME BASE INPUT

Female BNC connector (J3) accepts an external 1, 5, or 10 MHz ($\pm 0.005\%$) time base reference input at a level of 0.2 to 0.4 Vrms into 50 ohms. Internal jumper must be installed in the position that corresponds to the external time base reference input used (refer to paragraph 2-7).

1 TIME BASE HIGH STABILITY OPTION

Female BNC connector (A16J1) provides access to the optional 10 MHz time base reference output. With Option 001 installed and its output connected to the TIME BASE INPUT connector through the supplied cable (not shown), the frequency accuracy and stability of the Signal Generator will be increased. The optional reference oscillator is kept at operating temperature in the STBY mode as long as the Signal Generator remains connected to Mains power.

4 SEQ

Female BNC connector (J5) accepts external contact closure (from foot pedal, pushbutton switch, etc.) which causes the Signal Generator to sequentially

recall the stored contents (exclusive of increment settings) from each of its ten internal storage registers.

5 Fuse

1.25A, 250V, Slo-Blo for 100/120 Vac operation. 0.6A, 250V, Slo-Blo for 220/240 Vac operation. Ordering information is presented in Section II, Installation.

6 Line Power Module

Permits operation from 100, 120, 220, or 240 Vac. The number visible in the window indicates nominal line voltage to which the instrument must be connected (see Figure 2-1). Center conductor is safety earth ground.

Serial Number Plate

First four digits and letter constitute the prefix which defines the instrument configuration. The last five digits form a sequential suffix that is unique to each instrument. The plate also indicates any options supplied with the instrument.

8 TIME BASE OUTPUT

Female BNC connector (J4) provides access to an internal 10 MHz time base reference output at a level greater than 0.2 Vrms into 50 ohms which is derived from the internal reference oscillator. An internal jumper may be repositioned to select either a 1 or 5 MHz reference output (refer to paragraph 2-7).

OPERATOR'S CHECKS

3-14. OPERATOR'S CHECKS

Operator's checks are simple procedures designed to verify that the main functions of the Signal Generator operate properly. Two procedures are provided, one for basic (front panel) functional checks and the other for HP-IB functional checks.

3-15. Basic Functional Checks

DESCRIPTION: This procedure requires only a frequency counter, a spectrum analyzer, and the interconnecting cables and adapters. It provides assurance that most of the front panel controlled functions are being executed by the Signal Generator.

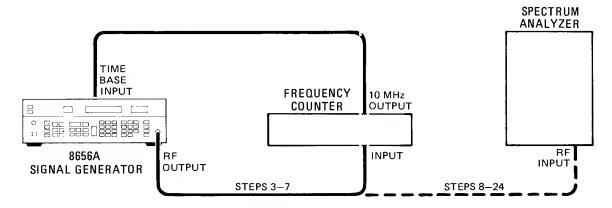


Figure 3-8. Test Setup for Basic Functional Checks

PROCEDURE: Preliminary Checks

- 1. Ensure that the power cable is plugged into a suitable source of Mains power (refer to paragraph 2-4).
- 2. Momentarily press and release the left-hand side of the RESET/STBY/ON switch to initialize the Signal Generator, then set the switch back to ON.

An internal memory check will be initiated to test for a failure in ROM (read-only memory) and in RAM (read-write memory). All front panel indicators will light for approximately 1.5 seconds to provide a quick visual inspection of each front panel annunciator and display segment.

If a memory failure is detected, all front panel annunciators and display segments will remain lit until any front panel key is pressed. If the memory check was successful, the front panel indicators will display a carrier frequency of 100.0000 MHz, an output amplitude of -127.0 dBm, and no modulation. Only the dBm annunciator will be lit, all of the others be off.

3. Connect the RF OUTPUT of the Signal Generator to the input of the frequency counter and the 10 MHz reference output from the frequency counter to the TIME BASE INPUT located at the rear of the Signal Generator as shown in Figure 3-8.

3-15. Basic Functional Checks (Cont'd)

Connecting the 10 MHz reference output of the frequency counter to the TIME BASE INPUT of the Signal Generator will phase lock the two instruments to the same time base reference.

NOTE

If the Signal Generator is equipped with the high stability time base (Option 001), disconnect its cable from the TIME BASE INPUT before performing this step.

Frequency Check

4. Set the output amplitude of the Signal Generator to -10.0 dBm and the carrier frequency to the values listed in the following table:

Carrier Frequency (MHz)
100.0000
140.0000
200.0000
300.0000
400.0000
600.0000
800.0000
990.0000

Verify that the FREQUENCY Display on the Signal Generator agrees with the frequency displayed on the frequency counter (except for the resolution of the frequency counter being used).

5. Set the carrier frequency of the Signal Generator to 111.1111 MHz and the frequency increment value to 111.1111 MHz. Leave the output amplitude set at -10.0 dBm.

Verify that the FREQUENCY Display on the Signal Generator agrees with the frequency displayed on the frequency counter.

6. Quickly press and release the frequency step up key to increase the carrier frequency.

Verify that the FREQUENCY Display on the Signal Generator agrees with the frequency displayed on the frequency counter.

3-15. Basic Functional Checks (Cont'd)

Continue to increase the carrier frequency to the maximum value listed in the following table:

Carrier Frequency (MHz)
111.1111
222.2222
333.3333
444.4444
555.5555
666.6666
777.7777
888.8888

Verify that the FREQUENCY Display on the Signal Generator agrees with the frequency displayed on the frequency counter each time the carrier frequency is increased.

7. Quickly press and release the frequency step down key to decrease the carrier frequency.

Verify that the FREQUENCY Display on the Signal Generator agrees with the frequency displayed on the frequency counter.

Continue to decrease the carrier frequency to the minimum value listed in the previous table.

Verify that the FREQUENCY Display on the Signal Generator agrees with the frequency displayed on the frequency counter each time the carrier frequency is decreased.

Output Level Checks

- 8. Connect the RF OUTPUT of the Signal Generator to the input of the spectrum analyzer as shown in Figure 3-8.
- 9. Set the output amplitude of the Signal Generator to 0.0 dBm, carrier frequency to 0.1 MHz, and frequency increment value to 10 MHz.
- 10. Set the amplitude scale of the spectrum analyzer to display 1 dB/division and make the necessary adjustments to properly display the output signal from the Signal Generator.

NOTE

This check only verifies level flatness, it does not verify absolute level accuracy.

11. Slowly increase the carrier frequency through its entire frequency range (0.1 to 990.0000 MHz) and observe the level displayed on the spectrum analyzer. The level should not vary more than a total of 3 dB (±1.5 dB from 0.0 dBm).

3-15. Basic Functional Checks (Cont'd)

- 12. Set the carrier frequency of the Signal Generator to 600 MHz, output amplitude to +13 dBm, and output amplitude increment value to 1.0 dB.
- 13. Adjust the spectrum analyzer as necessary to display the output signal from the Signal Generator. The displayed carrier should be positioned in the center of the graticule with its maximum level positioned near the top of the graticule.
- 14. Slowly decrease the output amplitude down to −4.0 dBm and observe the level displayed on the spectrum analyzer. The level should decrease in relatively uniform 1 dB steps.
- 15. Set the output amplitude of the Signal Generator to -10.0 dBm and the output amplitude increment value to 5 dB. Leave the carrier frequency set to 600 MHz.
- 16. Set the amplitude scale of the spectrum analyzer to display 10 dB/division and make the necessary adjustments to properly display the output signal from the Signal Generator. The displayed carrier should be positioned in the center of the graticule with its maximum level positioned near the top of the graticule.
- 17. Slowly decrease the output amplitude down to -80 dBm and observe the level displayed on the spectrum analyzer. The level should decrease in relatively uniform 5 dB steps.

FM Check

- 18. Set the output amplitude of the Signal Generator to 0.0 dBm. Leave the carrier frequency set to 600 MHz. Select FM with a peak deviation frequency of 99 kHz using the internal 1 kHz source. Set the FM peak deviation frequency increment value to 1 kHz.
- 19. Set the spectrum analyzer for a 50 kHz frequency span/division, a resolution bandwidth of 3 kHz, and a reference level of 0 dBm. The waveform displayed should be similar to that shown in Figure 3-9.
- 20. Slowly decrease the FM peak deviation frequency to zero. The deviation displayed on the spectrum analyzer should decrease in relatively uniform steps.
- 21. Press FM, then OFF to turn off the FM function.

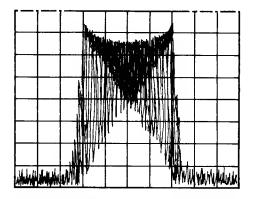


Figure 3-9. FM Functional Check Waveform

3-15. Basic Functional Checks (Cont'd)

AM Check

- 22. Leave the carrier frequency set to 600 MHz and the output amplitude set to 0.0 dBm. Select AM with a depth of 50% using the internal 400 Hz source.
- 23. Set the spectrum analyzer to the linear amplitude mode. Set a frequency span/division of zero. Increase the resolution bandwidth, then fine tune for the maximum level of the demodulated signal. The displayed demodulated signal should be a sine wave with a period of 2.5 ms (400 Hz).
- 24. Press the INT 1 kHz key to change the frequency of the internal modulation source from 400 Hz to 1 kHz. The displayed demodulated signal should be a sine wave with a period of 1 ms (1 kHz).

3-16. HP-IB Functional Checks

DESCRIPTION: The following procedures check the Signal Generator's ability to recognize its own HP-IB (listen) address, properly make remote/local transitions, and process all of the applicable HP-IB messages described in Table 3-4. During the process, all of the Signal Generator's HP-IB data input/output bus, control, and handshake lines are checked, except for DIO8 (the most significant data input/output bus line which is not used by the Signal Generator). Only the Signal Generator, a bus controller, and an HP-IB interface with appropriate cabling are required to perform these procedures. These checks are intended to be as independent of one another as possible, since each begins with the instrument being reset to its initialized condition. Nevertheless, it is suggested that the first four checks be performed in order before any other check. Any special initialization steps or requirements for a given check are provided the beginning of the check.

The validity of these checks is based on the following assumptions:

- The Signal Generator performs properly when operated via the front panel keys (that is, in local operation). This can be verified by performing the basic functional checks as outlined in paragraph 3-15.
- The bus controller properly executes HP-IB operations.
- The bus controller's HP-IB interface properly transfers the controller's instructions.
- The select code of the bus controller's interface is set to 7.
- The HP-IB address of the Signal Generator is set to 07 (the factory-set address).
- The select code address combination (that is, 707) is not necessary for these checks to be valid; however, the program lines presented in the following procedures would have to be modified for any other combination.

If the Signal Generator appears to fail any of the remote functional checks, the validity of the preceding assumptions should be confirmed before attempting to service the instrument.

3-16. HP-IB Functional Checks (Cont'd)

If all of these checks are performed successfully, the Signal Generator's HP-IB capability can be considered to be operating properly. These procedures do not check whether or not all of the Signal Generator's program codes are being properly interpreted and executed by the instrument, however, if the front panel operation is confirmed to be working properly and its HP-IB capability operates correctly, then there is a high probability that the Signal Generator will respond properly to all of its program codes.

INITIAL SETUP:

The test setup is the same for all of the checks. That is, the Signal Generator is connected to the bus controller through the bus controller's HP-IB interface via the appropriate cable.

Extended I/O ROM's)

-or-

HP 9835A/98332A (I/O ROM)

-or-

HP 9845A (I/O ROM)

with HP 9835A and HP 9845A)

Address Recognition

NOTE

This check determines whether or not the Signal Generator recognizes when it is being addressed and when it is not. It is assumed that the Signal Generator is in local operation and that it can properly handshake on the bus. Before beginning this check, set the RESET/STBY/ON switch to RESET, then back to ON to initialize the instrument.

Description	HP 9825A (HPL)	HP 9835A and HP 9845A (BASIC)
Set the Remote Enable (REN) bus control line false.	lel 7	LOCAL 7
Send the listen address to the Signal Generator.	wrt 707	OUTPUT 707

OPERATOR'S RESPONSE

Verify that the Signal Generator's RMT annunciator remains off and that its ADRS annunciator lights.

Unaddress the Signal Generator by	wrt 715	OUTPUT 715
sending a different address.		

OPERATOR'S RESPONSE

Verify that the Signal Generator's RMT and ADRS annunciators are both off.

3-16. HP-IB Functional Checks (Cont'd)

Remote and Local Messages and the LOCAL Key

NOTE

This check determines whether the Signal Generator properly switches from local to remote operation, switches from remote to local operation, and whether the LOCAL key can return the instrument to local operation. It is assumed that the Signal Generator is able to both handshake and recognize its own address. Before beginning this check, set the RESET/STBY/ON switch to RESET, then back to ON to initialize the instrument.

Description	HP 9825A (HPL)	HP 9835A and HP 9845A (BASIC)
Send the Remote message which sets the Remote Enable (REN) bus control line true and addresses the Signal Generator to listen.	rem 707	REMOTE 707

RESPONSE

OPERATOR'S Verify that the Signal Generator's RMT and ADRS annunciators both light.

Signal Generator.	Send the Local message to the Signal Generator.	lcl 707	LOCAL 707
-------------------	---	---------	-----------

OPERATOR'S RESPONSE

Verify that the Signal Generator's RMT annunciator turns off and that its ADRS annunciator remains on.

Send the Remote message to the	rem 707	REMOTE 707
Signal Generator.		

OPERATOR'S RESPONSE

Verify that the Signal Generator's RMT and ADRS annunciators are both on. Press the LOCAL key on the front panel of the Signal Generator and verify that the RMT annunciator turns off and that the ADRS annunciator remains on.

Data Message

NOTE

This check determines whether or not the Signal Generator properly receives Data messages. Because the Signal Generator is only a listener, it can only receive Data messages, but never send them. It is assumed that the Signal Generator is able to handshake, recognize its own address, and properly make remote/local transitions. The Data message that is sent will cause the 7 least significant HP-IB data lines to be placed in both their true and false states. Before beginning this check, set the RESET/ST-BY/ON switch to RESET, then back to ON to initialize the instrument.

3-16. HP-IB Functional Checks (Cont'd)

Description	HP 9825A (HPL)	HP 9835A and HP 9845A (8ASIC)
Send the first part of the Remote message (which enables the Signal Generator to remote).	rem 707	REMOTE 707
Address the Signal Generator to listen (which completes the Remote message) and send the Data message (which tunes the Signal Generator to 990 MHz).	wrt 707, "fr990mz"	OUTPUT 707; "FR990MZ"

OPERATOR'S RESPONSE

Verify that the Signal Generator's RMT and ADRS annunciators both light and that the FREQUENCY Display shows a carrier frequency of 990.0000 MHz.

Local Lockout and Clear Lockout/Set Local Messages

NOTE

This check determines whether or not the Signal Generator properly receives the Local Lockout message which disables all of the front panel keys. In addition, this check determines whether or not the Clear Lockout/Set Local message is properly received and executed by the Signal Generator. It is assumed that the Signal Generator is able to handshake, recognize its own address, and properly make remote/local transitions. Before beginning this check, set the RESET/STBY/ON switch to RESET, then back to ON to initialize the instrument.

Description	HP 9825A (HPL)	HP 9835A and HP 9845A (BASIC)
Send the first part of the Remote message (which enables the Signal Generator to remote).	rem 707	REMOTE 707
Send the Local Lockout message.	llo 7	LOCAL LOCKOUT 7
Address the Signal Generator to listen (which completes the Remote message).	wrt 707	OUTPUT 707

OPERATOR'S RESPONSE

Verify that the Signal Generator's RMT and ADRS annunciators both light. Press the LOCAL key on the front panel of the Signal Generator and verify that its RMT and ADRS annunciators both remain on.

Send the Clear Lockout/Set	lel 7	LOCAL 7
Local message.		
Book Mossage.		<u></u>

3-16. HP-IB Functional Checks (Cont'd)

OPERATOR'S RESPONSE

Verify that the Signal Generator's RMT annunciator is turned off and that its ADRS annunciator remains on.

Clear Message

NOTE

This check determines whether or not the Signal Generator properly responds to the Clear message. It is assumed that the Signal Generator is able to handshake, recognize its own address, properly make remote/local transitions, and receive Data messages. Before beginning this check, set the RESET/STBY/ON switch to RESET, then back to ON to initialize the instrument.

Description	HP 9825A (HPL)	HP 9835A and HP 9845A (BASIC)
Send the first part of the Remote message (which enables the Signal Generator to remote).	rem 7	REMOTE 7
Address the Signal Generator to listen (which completes the Remote message) and send the Data message (which sets the output amplitude of the Signal Generator to 3.0 dB mV).	wrt 707, "ap3dbmv"	OUTPUT 707; "AP3DBMV"

OPERATOR'S RESPONSE

Verify that the Signal Generator's RMT, ADRS, dB, and mV annunciators all light and that the AMPLITUDE Display shows an output amplitude of 3.0 dB mV.

Send the Clear message. clr 707 RESET 707

OPERATOR'S RESPONSE

Verify that the Signal Generator's RMT and ADRS annunciators remain on and that the AMPLITUDE Display now shows the initialized output amplitude of -127.0 dBm. The dB and mV annunciators will now be off and the dBm annunciator will be on.

Abort Message

NOTE

This check determines whether or not the Signal Generator becomes unaddressed when it receives the Abort message. It is assumed that the Signal Generator is able to handshake, recognize its own address, and properly make remote/local transitions. Before beginning this check, set the RESET/STBY/ON switch to RESET, then back to ON to initialize the instrument.

Description	HP 9825A (HPL)	HP 9835A and HP 9845A (BASIC)
Send the complete Remote message.	rem 707	REMOTE 707

3-16. HP-IB Functional Checks (Cont'd)

OPERATOR'S Verify that the Signal Generator's RMT and ADRS annunciators both light. RESPONSE

Send the Abort message (which	cli 7	ABORTIO 7
unaddresses the Signal Generator to		
listen).		

RESPONSE

OPERATOR'S Verify that the ADRS annunciator turns off.

NOTE

The remote annunciator may also turn off when using the 9835A or 9845A.

3-17. REMOTE OPERATION, HEWLETT-PACKARD INTERFACE BUS

The Signal Generator can be operated through the Hewlett-Packard Interface Bus (HP-IB). Bus compatibility, programming, and data formats are described in the following paragraphs.

All front panel functions (except for DISPLAY, DISPLAY in conjunction with SEQ, Backspace, COARSE TUNE, FINE TUNE, and display HP-IB ADRS are programmable through HP-IB.

A quick check of the Signal Generator's HP-IB input/output capability is described in paragraph 3-16, HP-IB Functional Checks. These checks are used to verify that the Signal Generator can respond to each of the applicable HP-IB messages described in Table 3-4.

3-18. HP-IB Compatibility

The Signal Generator has an open-collector, TTL, HP-IB interface which can be used with any HP-IB computing controller or computer for automatic system applications. The Signal Generator is fully programmable via the HP Interface Bus. Its programming capability is described by the twelve HP-IB messages listed in Table 3-4. Foremost among these messages is the Data message. Data messages contain the program codes that control the Signal Generator's output signal. The Signal Generator's complete compatibility with HP-IB is further defined by the following list of interface functions: SH1, AH1, T0, L2, SR0, RL1, PP0, DC1, DT0, and C0. A more detailed explanation of these compatibility codes can be found in the IEEE Standard 488 (and the identical ANSI Standard MC1.1). For more information about HP-IB, refer to the Hewlett-Packard Electronic Instruments and Systems catalog and the booklet titled "Improving Measurements in Engineering and Manufacturing" (HP part number 5952-0058).

3-19. Remote Operation

Remote Capability. In remote operation, the front panel keys are disabled (except for the RESET/STBY/ON switch and the LOCAL key). The Signal Generator can only be addressed to listen. When addressed to listen, the Signal Generator

will respond to the following messages: Data, Clear, Remote, Local, Local Lockout, Clear Lockout/Set Local, and Abort. Each is discussed in detail further on in this section.

Local-to-Remote Change. The Signal Generator switches to remote operation upon receipt of the Remote message. The Remote message is comprised of two parts. They are:

- Remote Enable bus control line (REN) set true.
- Device listen address received once (while REN is true).

The Signal Generator's RMT and ADRS annunciators will both light and its output signal and all preselected functions will remain unchanged when the local-to-remote transition occurs.

3-20. Local Operation

Local Capability. In local operation, the Signal Generator's front panel is fully operational and the instrument will respond to the Remote message. Whether addressed or not, the Signal Generator will also respond to the Clear, Local Lockout, Clear Lockout/Set Local, and Abort messages. It will not; however, respond to the Data message unless it has been previously addressed.

Remote-to-Local Change. The Signal Generator returns to local operation upon receipt of the Local message (GTL) or Clear Lockout/Set Local message. The Clear Lockout/Set Local message sets the Remote Enable bus control line (REN) false. The instrument can always be set to local operation by pressing the front panel LOCAL key provided that local lockout is not in effect. The output signal will remain unchanged and all preselected functions will remain unchanged when the remote-to-local transition occurs.

Local Lockout. When a data transmission is interrupted, which can happen by returning the Signal Generator to local operation with the LOCAL key, the data could be lost. This would leave the Signal Generator in an unknown state. To prevent this, a local lockout is recommended. Local lockout disables the LOCAL key and allows return-to-local

Table 3-4. HP-IB Message Reference Table

HP-IB Message	Applicable	Response	Related Commands Controls*	Interface Functions*
Data	Yes	All front panel functions, except for DISPLAY, DISPLAY in conjunction with SEQ, Backspace, COARSE TUNE, FINE TUNE, and display HP-IB ADRS are programmable. The front panel ADRS annunciator lights when the Signal Generator is addressed to listen.		T0, L2 AH1, SH0
Trigger	No	The Signal Generator does not have a Device Trigger (DT0) capability.	GET	DT0
Clear	Yes	Resets the Signal Generator to a carrier frequency of 100 MHz, an output amplitude of -127 dBm, and no modulation. Responds equally to Device Clear (DCL) and Selected Device Clear (SDC) bus commands.	DCL, SDC	DC1
Remote	Yes	Remote operation is entered when the Remote Enable (REN) bus control line is true and the Signal Generator is first addressed to listen. The front panel RMT and ADRS annunciators will both light when remote operation is entered, all front panel keys will be disabled (except for the LOCAL key and the RESET/STBY/ON switch), and the output signal will remain unchanged.	REN	RL1
Local	Yes	The Signal Generator will return to local operation (full front panel control) when either the Go to Local (GTL) bus command is received or the front panel LOCAL key is pressed. The output signal will remain unchanged.	GTL	RL1
Local Lockout	Yes	Disables the front panel LOCAL key so that only the controller can return the Signal Generator to local operation.	LLO	RL1
Clear Lockout/ Set Local	Yes	The Signal Generator will return to local operation and local lockout will be cleared when the REN bus control line goes false.	REN	RL1
Pass Control/ Take Control	No	The Signal Generator has no control capability.		C0
Require Service	No	The Signal Generator does not have the capability to request service.		SR0
Status Byte	No	The Signal Generator does not have the capability to respond to a serial poll.		Т0
Status Bit	No	The Signal Generator does not have the capability to respond to a parallel poll.		PP0
Abort	Yes	The Signal Generator stops listening.	IFC	T0, L2

^{*}Commands, control lines, and interface functions are defined in IEEE Standard 488 (and the identical ANSI Standard MC1.1). Knowledge of these might not be necessary if your controller's manual describes programming in terms of the twelve HP-IB Messages shown in the left-hand column above.

 $Complete \ HP-IB \ compatibility \ as \ defined \ in \ IEEE \ Standard \ 488 \ (and \ the \ identical \ ANSI \ Standard \ MC1.1) \ is: SH0, AH1, T0, L2, SR0, RL1, PP0, DC1, DT0, and C0.$

Local Operation (Cont'd)

ables the LOCAL key and allows return-to-local only under program control.

NOTE

Return-to-local can also be accomplished by setting the RESET/STBY/ON switch first to RESET, then back to ON. This technique, however, has some potential disadvantages.

- It defeats the purpose and advantage of local lockout, that is, the system controller will loose control of the Signal Generator.
- Some HP-IB conditions are reset to their default state during turn on.

3-21. Addressing

The Signal Generator interprets the byte of information on its eight data input/output bus lines as either an address or a bus command whenever the bus is in the command entry mode, that is, when the Attention bus control line (ATN) is true and the Interface Clear bus control line (IFC) is false. Whenever the Signal Generator is being addressed (whether in local or remote operation), the front panel ADRS annunciator will light.

The Signal Generator's listen address is established by five miniature rocker switches located inside the instrument. The address selection procedure is described in Section II, Installation. The decimal equivalent of the listen address can be displayed in the MODULATION Display by pressing the HP-IB ADRS key. Refer to Table 3-5 for a list of the valid decimal (listen address) values and their equivalent ASCII characters.

3-22. Data Messages

The Signal Generator communicates on the interface bus with Data messages. Each Data message consists of one or more bytes of information sent over the Signal Generator's eight data input/output bus lines DIO1 through DIO8 during the data entry mode. The data entry mode is established when the Attention bus control line (ATN) is false. Data messages include the program codes listed in Tables 3-8 and 3-9. These program codes contain the necessary information to program virtually all of the instrument functions available in local operation. The only exceptions are DISPLAY, DISPLAY in conjunction with SEQ, Backspace, COARSE TUNE, FINE TUNE, and display HP-IB ADRS.

Table 3-5. Valid Decimal Values vs. Equivalent ASCII Characters

EQUIVALENT DECIMAL Value (Listen)	EQUIVALENT ASCII Character (Listen)
00	SP
01	!
02	,,
03	#
04	* *
05	%
06	&
07	•
08	(
09)
10	*
11	+
12	
13	,
14	•
15	· /
16	0
17	1
18	2
19	3
20	4
21	5
22	6
23	7
24	8
25	9
26	:
27	;
28	<
29	=
30	>

3-23. Receiving the Data Message

The Signal Generator must be in remote operation and addressed to listen before it can respond to Data messages. The instrument will remain addressed to listen until it receives an Abort message or a universal unlisten command from the controller.

The paragraph entitled Switching Characteristics shows how the Signal Generator responds to Data Messages. Timing considerations and other characteristics pertinent to operation are included.

Data Message Input Format. Data messages contain the controller's talk address, the Signal Gen-



Receiving the Data Message (Cont'd)

erator's listen address, a string of program codes, and an End of String message (EOS). The string of program codes follows the same protocol as a front panel keystroke sequence in local operation. The EOS message can be a Line Feed (LF), a bus END message (EOI and ATN bus control lines both set true), or an internally produced EOS.

The following paragraphs explain other key elements of the program code strings. Figure 3-10 provides some examples of Data messages.

Keyboard-to-Program Code Correlation. There is a program code that corresponds to nearly every front panel key. The exceptions are DISPLAY, DISPLAY in conjunction with SEQ, Backspace, COARSE TUNE, FINE TUNE, and display HP-IB ADRS. In addition, the program code HZ is available for carrier frequency entries, RP is available to reset the reverse power protection circuitry after the source of reverse power has been removed, and R0 and R1 are available to programmatically place the instrument in the STBY and ON states, respectively.

Value-Selectable Parameters. Carrier parameters are set using a Function-Data-Units sequence of program codes, while modulation parameters are set using a Source-Function-Data-Units sequence of program codes. Single-value parameters; such as, INT 400 Hz, INT 1 kHz, and so forth, are set with a single program code sequence.

Data. The term "Data" in each program sequence refers to the numeric value and not to the entire Data message. Data can be any number of arbitrary length in fixed point notation. Digits that exceed the maximum data length for the particular function will be truncated. This maximum limit includes any embedded decimal point. In the case of the Amplitude function, this maximum limit also includes the minus sign. The minus sign is only applicable during Amplitude Data entries. Table 3-6 summarizes these input data restrictions.

Table 3-6. Input Data Restrictions

Function	Maximum	Decimal	Minus	
	Data	Point	Sign	
	Length	Allowed	Allowed	
Frequency Amplitude AM FM Increment Set	9 Digits 9 Digits (1) 2 Digits 2 Digits Same as for selected function	Yes Yes Yes Yes Yes	No Yes No No No	

NOTES:

- 1. In the Amplitude function, leading zeros are not counted.
- 2. Unused or unidentifiable characters are ignored.
- 3. Either upper or lower case letters can be used in Data messages.
- 4. Only the following ASCII characters are recognized by the Signal Generator:

All other characters, including spaces, are ignored.

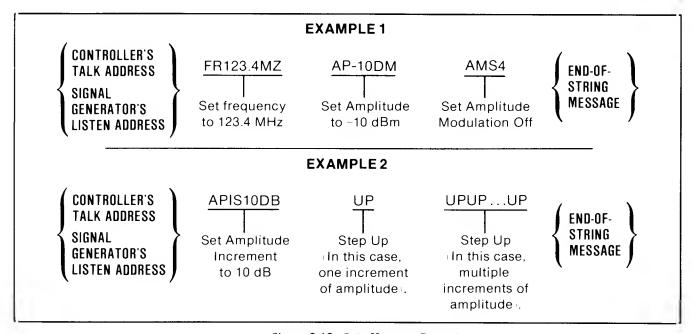


Figure 3-10. Data Message Examples

Receiving the Data Message (Cont'd)

A complete list of ASCII characters with conversions to binary, octal, decimal, and hexadecimal is provided in Table 3-10.

3-24. Sending the Data Message

The Signal Generator does not have the capability to talk; therefore, it cannot send Data messages.

3-25. Receiving the Trigger Message

The Signal Generator does not have the capability to respond to the trigger message.

3-26. Receiving the Clear Message

The Signal Generator will respond to a Clear message by setting each function parameter to the value listed in Table 3-7. The Signal Generator will respond equally to the Selected Device Clear (SDC) bus command when addressed to listen, and to the Device Clear (DCL) bus command whether addressed or not.

Table 3-7. Response to Clear Message

Parameter	Value
Carrier Frequency Output Amplitude AM Depth FM Peak Deviation Frequency Carrier Frequency Increment Output Amplitude Increment AM Depth Increment FM Peak Deviation Frequency Increment Coarse and Fine Tune Pointer Sequence Counter All 10 Internal Storage Registers	100.0000 MHz -127.0 dBm 0% 0.0 kHz 10.0000 MHz 10.0 dB 1% 1.0 kHz 10.0000 MHz 0 Remain unchanged.

3-27. Receiving the Remote Message

The Remote message is comprised of two parts. First, the Remote Enable bus control line (REN) is held true, then the device listen address is sent by the controller. These two actions combine to place the Signal Generator into remote operation. Therefore, the instrument is enabled to go into remote operation when the controller begins the Remote message, but it does not actually make the transition until it is addressed to listen for the first time. All instrument settings remain unchanged when the transition from local-to-remote operation occurs.

The front panel RMT and ADRS annunciators will both light once the Signal Generator has received the Remote message and is addressed to listen.

3-28. Receiving the Local Message

The Local message is the means by which the controller sends the Go to Local (GTL) bus command. If addressed to listen, the Signal Generator will return to local operation (full front panel control) when it receives the Local message. If the instrument is in local lockout when the Local message is received, full front panel control will be returned, but local lockout will remain in effect. Unless the Signal Generator receives the Clear Lockout/Set Local message, it will return to local lockout the next time it receives a Remote message. All instrument settings remain unchanged when the transition from remote-to-local operation occurs.

The front panel RMT annunciator will be turned off when the Signal Generator switches to local operation. However, the front panel ADRS annunciator will remain lit if the Signal Generator is still being addressed to listen (whether in remote or local operation).

The front panel LOCAL key can also be used to return the Signal Generator to local operation. However, pressing the LOCAL key (when the instrument is not in local lockout) might interrupt a Data message being sent to the Signal Generator. This would leave the Signal Generator in a state unknown to the controller. This situation is undesirable and can be avoided by sending the Local Lockout message to disable the LOCAL key.

3-29. Receiving the Local Lockout Message

The Local Lockout message is the means by which the controller sends the Local Lockout (LLO) bus command. If the Signal Generator is in remote operation, it will respond to the Local Lockout message by disabling the front panel LOCAL key. Local lockout prevents the loss of data or system control due to someone accidentally pressing any of the front panel keys. If the Signal Generator is in local operation when it is enabled to remote operation (that is, REN is set true) and it receives the Local Lockout message, it will switch to remote with local lockout operation the first time it is addressed to listen. Once in local lockout, the Signal Generator can only be returned to local operation by the controller or by unplugging or resetting the instrument.



3-30. Receiving the Clear Lockout/Set Local Message

The Clear Lockout/Set Local message is the means by which the controller sets the Remote Enable bus control line (REN) false. The Signal Generator will return to local operation (full front panel control) when it receives the Clear Lockout/Set Local message. All instrument settings remain unchanged when the transition from remote with lockout to local operation occurs.

The front panel RMT annunciator will be turned off when the Signal Generator switches to local operation.

3-31. Receiving the Pass Control Message

The Signal Generator does not respond to the Pass Control message because it does not have a control capability.

3-32. Sending the Require Service Message

The Signal Generator does not have the capability to require service by setting the Service Request bus control line (SRQ) true.

3-33. Sending the Status Byte Message

The Signal Generator does not have the capability to respond to a Serial Poll Enable (SPE) bus command; therefore, it cannot send the Status Byte message.

3-34. Sending the Status Bit Message

The Signal Generator does not have the capability to respond to a Parallel Poll Enable (PPE) bus command; therefore, it cannot send the Status Bit message.

3-35. Receiving the Abort Message

The Abort message is the means by which the controller sets the Interface Clear bus control line (IFC) true. When the Abort message is received, the Signal Generator becomes unaddressed and stops listening.

3-36. Switching Characteristics

The Signal Generator's switching characteristics are an important consideration in applications involving a computer controller. For most functions, the Signal Generator has the ability to accept new Data Messages before the hardware can settle to the required output. If the timing requirements are not taken into account in the controller's pro-

gram, it will be impossible in many situations to make meaningful measurements on a device driven by the Signal Generator.

Switching times for frequency, modulation and amplitude have several characteristics in com-

Table 3-8. HP-IB Program Codes (Alphabetical Order)

Program Code ¹	Parameter	Comments	
AM	Amplitude Modulation	Function Entry	
AP	Amplitude (carrier)	Function Entry	
DB	dB	Units Entry	
DF	dBf	Units Entry	
DM	dBm	Units Entry	
DN	Step Down (1)	Function Feature	
EM	EMF	Units Entry	
FM	Frequency Modulation	Function Entry	
FR	Frequency (carrier)	Function Entry	
HZ	Hz	Units Entry	
IS	Increment Set	Function	
		Qualifier	
KZ	kHz	Units Entry	
MV	mV	Units Entry	
MZ	MHz	Units Entry	
PC	Percent ²	Units Entry	
RC	Recall	Feature	
RP	Reverse Power Protec- tion Reset ³	Feature	
$\mathbf{R}0$	Standby ⁴	Feature	
R1	On ⁴	Feature	
$\mathbf{S}\mathbf{Q}$	Sequence	Feature	
ST	Store	Feature	
S1	External Modulation Source	Source Qualifier	
S2	Internal 400 Hz Modu- lation Source	Source Qualifier	
S 3	Internal 1 kHz Modula- tion Source	Source Qualifier	
S4	Modulation Source Off	Source Qualifier	
UP	Step Up (†)	Function Feature	
UV	μV	Units Entry	
VL	Volts	Units Entry	
0-9	Numerals $0-9$	Data Entries	
-	Minus Sign	Data Entry	
	Decimal Point	Data Entry	
%	Percent ²	Units Entry	

¹ Program codes can be either upper or lower case.

² Either PC or % can be used.

³ The source of reverse power must be removed.

⁴ The RESET/STBY/ON switch must be set to the ON position.

Switching Characteristics (Cont'd)

mon. In each case a finite amount of time passes from the command (manual or computer generated) until the required output occurs. Software execution time is required for the microprocessor and related digital circuits to process the data. This begins with a valid final terminator (keystroke or data entry) and ends with the execution in the hardware. The software time may vary considerably depending on the function. Examples are internal instructions to more than one hardware location, (may be serial, parallel or both) and differing amounts of control data and calculations.

Hardware execution time will also vary considerably. This depends on the number of circuits affected, the length of time each takes to change and whether the changes occur one at a time or concurrently.

Frequency Switching. The Signal Generator will typically be within 100 Hz of the final frequency within 2 seconds after receiving the valid units data (terminator). Figure 3-11 shows the sequence of events and the typical error frequency relative to time. Area I shows the software execution time. Areas II through IV make up the hardware execution time.

At times certain events in the frequency switching cycle may be bypassed. For example, small frequency changes will often eliminate event II, the fast slew rate mode or event IV, the FM calibration mode. However, the frequency change that allows these events to be bypassed depends on an involved algorithm that is a function of frequency band and the state of the successive approximation register of the Low Frequency Loop. Therefore, it is best to assume that the entire sequence of

Table 3-9. HP-IB Program Codes (Functional Order)

Parameter	Program Code¹	Parameter	Program Code ¹
FREQUENCY		UNITS (Cont'd)	
Frequency (carrier)	FR	dBm	DM
		EMF	EM
AMPLITUDE		Volts	VL
Amplitude (carrier)	AP	mV	MV
•		μV	UV
MODULATION		Hz	HZ
Amplitude Modulation	AM	kHz	KZ
Frequency Modulation	FM	MHz	MZ
External Modulation Source	S1	Percent ²	PC
Internal 400 Hz Modulation Source	S2	Percent ²	%
Internal 1 kHz Modulation Source	S 3		
Modulation Source Off	S4	OTHER	
		Step Up (†)	UP
DATA		Step Down (1)	DN
Numerals $0-9$	0 — 9	Increment Set	IS
Minus Sign	_	Standby ³	R 0
Decimal Point		On ³	R1
		Store	ST
UNITS		Recall	RC
dB	DB	Sequence	SQ
dBf	DF	Reverse Power Protection Reset (4)	RP

¹Program codes can be either upper or lower case.

²Either PC or % can be used.

³The RESET/STBY/ON switch must be in the ON position.

⁴The source of reverse power must be removed.



Table 3-10. Commonly Used Code Conversions

ASCII	Binary	Octal	Decimal	Hexa- decimal
NUL	00 000 000	000	0	00
SOH	00 000 001	001	1	01
STX	00 000 010	002	2	02
ETX	00 000 0	003	3	03
EOT	00 000 100	004	4	04
ENQ	00 000 101	005	5	05
ACK	00 000 110	006	6	06
BEL	00 000 111	007	7	07
BS	00 001 000	010	8	08
HT	00 001 001	011	9	09
LF	00 001 010	012	10	0A
VT	00 001 011	013	11	0B
FF	00 001 100	014	12	0C
CR	00 001 101	015	13	0D
SO	00 001 110	016	14	0E
SI	00 001 111	017	15	0F
DLE	00 010 000	020	16	10
DC1	00 010 001	021	17	11
0C2	00 010 010	022	18	12
0C3	00 010 01	023	19	13
OC4	00 010 100	024	20	14
NAK	00 010 101	025	21	15
SYN	00 010 110	026	22	16
ETB	00 010 111	027	23	17
CAN	00 011 000	030	24	18
EM	00 011 001	031	25	19
SUB	00 011 010	032	26	1A
ESC	00 011 011	033	27	1B
FS	00 011 100	034	28	1C
GS	00 011 101	035	29	1D
RS	00 011 110	036	30	1E
US	00 011 111	037	31	1F
SP ! "	00 100 000 00 100 001 00 100 010 00 100 011	040 041 042 043	32 33 34 35	20 21 22 23
\$ &	00 100 100 00 100 101 00 100 110 00 100 1	044 045 046 047	36 37 38 39	24 25 26 27
(00 101 000	050	40	28
)	00 101 001	051	41	29
*	00 101 010	052	42	2A
+	00 101 011	053	43	2B
<u>'</u>	00 101 100	054	44	2C
	00 101 101	055	45	2D
	00 101 110	056	46	2E
	00 101 111	057	47	2F
0	00 110 000	060	48	30
1	00 110 001	061	49	31
2	00 110 010	062	50	32
3	00 110 011	063	51	33
4	00 110 100	064	52	34
5	00 110 101	065	53	35
6	00 110 110	066	54	36
7	00 110 11	067	55	37
8 9 -	00 111 000 00 111 001 00 111 010 00 111 011	070 071 072 073	56 57 58 59	38 39 3A 3B
< > 7	00 111 100 00 111 101 00 111 110 00 111 111	074 075 076 077	60 61 62 63	3C 3D 3E 3F

ASCII	Binary	Octal	Decimal	Hexa- decimal
@ A B C	01 000 000	100	64	40
	01 000 001	101	65	41
	01 000 010	102	66	42
	01 000 011	103	67	43
0	01 000 100	104	68	44
E	01 000 101	105	69	45
F	01 000 110	106	70	46
G	01 000 111	107	71	47
H J K	01 001 000	110	72	48
	01 001 001	111	73	49
	01 001 010	112	74	4A
	01 001 0	113	75	4B
M N 0	01 001 100 01 001 101 01 001 110 01 001 111	114 115 116 117	76 77 78 79	4C 40 4E 4F
P	01 010 000	120	80	50
Q	01 010 001	121	81	51
R	01 010 010	122	82	52
S	01 010 011	123	83	53
U V W	01 010 100 01 010 101 01 010 110 01 010 111	124 125 126 127	84 85 86 87	54 55 56 57
X Y Z	01 011 000 01 011 001 01 011 010 01 011 01	130 131 132 133	88 89 90 91	58 59 5A 5B
()	01 011 100	134	92	5C
	01 011 101	135	93	5D
	01 011 110	136	94	5E
	01 011 111	137	95	5F
a b c	01 100 000 01 100 001 01 100 010 01 100 011	140 141 142 143	96 97 98 99	60 61 62 63
d	01 100 100	144	100	64
e	01 100 101	145	101	65
f	01 100 110	146	102	66
g	01 100 111	147	103	67
h	01 101 000	150	104	68
i	01 101 001	151	105	69
j	01 101 010	152	106	6A
k	01 101 011	153	107	6B
I	01 101 100	154	108	6C
m	01 101 101	155	109	60
n	01 101 110	156	110	6E
o	01 101 1	157	111	6F
p	01 110 000	160	112	70
q	01 110 001	161	113	71
r	01 110 010	162	114	72
s	01 110 011	163	115	73
t	01 110 100	164	116	7 4
u	01 110 101	165	117	75
v	01 110 110	166	118	76
w	01 110 111	167	119	77
х	01 111 000	170	120	78
У	01 111 001	171	121	79
Z	01 111 010	172	122	7A
{	01 111 011	173	123	7B
)) OEL	01 111 100 01 111 101 01 111 110 01 111 11	174 175 176 177	124 125 126 127	7C 70 7E 7F

Switching Characteristics (Cont'd)

events shown in Figure 3-11 occurs every time a frequency change is made.

To minimize the effects of frequency hysteresis (especially near the frequency band edges), switch to the desired frequency from the same direction each time, that is, from either above or below the desired frequency. Ideally, the frequency change should be made from the same preset frequency. The main band frequency hysteresis is 100 kHz at the main band edges, that is, 123.5, 247 and 494 MHz.

During a frequency change, all modulation is turned off if the FM mode has been enabled. This applies to FM only or mixed modulation such as FM from two sources or simultaneous AM and FM. After the frequency change and FM calibration is completed, the modulation is turned on.

Amplitude Switching. During an RF amplitude change, the final level is always approached from a lower level. This means that a critical amplitude level will never be exceeded in the course of normal Signal Generator operation.

Software correction of amplitude with respect to frequency may cause the amplitude to be uncalibrated while a frequency change occurs. The software correction is implemented after the final frequency is reached.

Software execution time for an amplitude change varies considerably. The basic unit for amplitude in the Signal Generator is dBm. An input in other

units requires calculations. This tends to increase the software execution time considerably. For example, an input in dBm generally will take about 160 ms from the terminator to the end of software execution. A change (increment or decrement) in dB will take a little less time, typically 130 ms. Examples of a change with calculations involved are: a preset level in mV with a change in dB, 200 ms; a level and change in mV, 340 ms; a level in dBm and a change in mV, 460 ms.

A 10 dB change without modulation (narrowband Automatic Level Control—ALC) may take up to 110 ms in the vernier hardware circuits. With modulation (wideband ALC) the switching time is typically 1 to 25 ms. The step attenuator switching time is on the order of 12 ms.

Total time requirements for simple amplitude inputs or changes, that is, minimal software and hardware execution time is 150 ms. A more complex change may take up to 560 ms.

Modulation Switching. There are applications where it is necessary to turn modulation on or off or to change to another modulation level. It takes about 400 ms for the modulation accuracy (AM or FM) to be within tolerance from the time the modulation (audio oscillator) is initially turned on. An FM deviation change typically occurs 60 ms after the final terminator (Units key) triggers the change. Turning the FM off will take about 20 ms. Amplitude modulation normally takes about 120 ms to turn off or to change to a new depth. Software execution time in the modulation mode is insignificant.

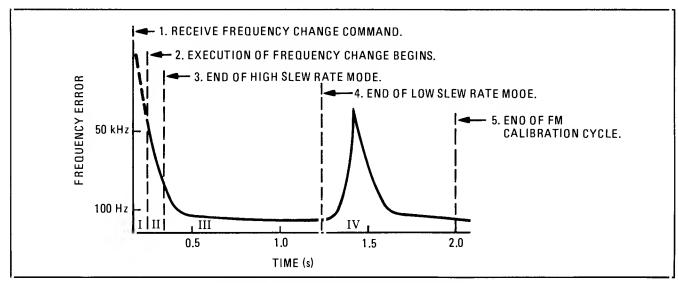


Figure 3-11. Frequency Switching Characteristics

Amplitude

Description

This instruction details how to set the output amplitude.

Operating Characteristics:


Range: $+13 \text{ dBm to } -127 \text{ dBm } (+1.00 \text{V to } +0.100 \mu\text{V})$

Resolution: 0.1 dB

Keystroke Sequence

Press and release the AMPTD Function key, the desired Data keys, and a valid Units key or combination of valid Units keys.

Examples

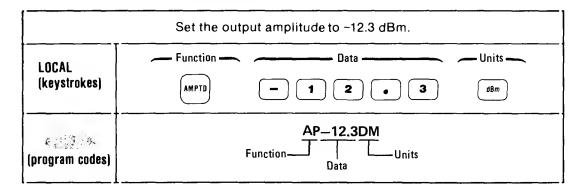

Set the output amplitude to -2.0 dB EMF μV.		
LOCAL (keystrokes)	Function Data Units —	
(program codes)	AP-2.0DBEMUV Function-Units Data	

Keys and Program Codes

Keys	Program Codes
AMPTD	AP
dBm	$\mathrm{D}\mathbf{M}$
dBf	\mathbf{DF}
dB	DB
EMF	EM
V	m VL
mV	MV
μV	UV

Indications

The selected output amplitude (with sign and units) will be displayed in the AMPLITUDE Display.

Comments

Digits selected beyond the specified resolution of the AMPLITUDE Display will be ignored.

Amplitude (Cont'd)

Comments (Cont'd)

Leading zeros will be blanked.

Calibrated level is from -127 dBm to +13 dBm with overrange to the maximum power of the instrument.

Minus sign may be entered at any time before the final terminator.

Amplitude Data entries that would cause the peak envelope power of the instrument to exceed +17 dBm are rejected.

Amplitude function will remain selected until:

- a. One of the three remaining functions is selected.
- b. One of the STORE-RECALL-DISPLAY keys is pressed.
- c. The instrument is reset or unplugged.

Fourteen valid units entries are possible. They are as follows:

dBm	$\mathrm{dB}~\mu\mathrm{V}$	V	$\mathbf{EMF}\ \mathbf{mV}$
dBf	dB EMF V	mV	EMF μV
dB V	dBAMFmV	$\mu m V$	
dB mV	$\mathrm{dB}~\mathrm{EMF}~\mu\mathrm{V}$	$\mathbf{EMF}\ \mathbf{V}$	

Related Instructions

Amplitude Conversion Amplitude, Up/Down

Amplitude Conversion


Description

This instruction details how to change the AMPLITUDE Display from power units in dBm to any one of thirteen other valid unit configurations. This feature does not affect the actual output amplitude of the Signal Generator.

Keystroke Sequence

Press any valid Units key or combination of valid Units keys with the amplitude function selected.

Example

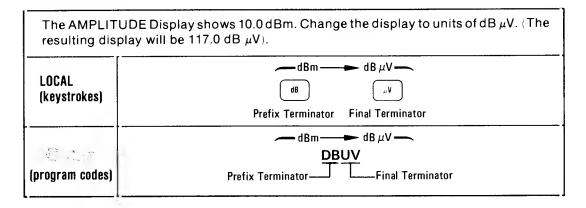

Keys and Program Codes

Keys	Program Codes	
dBm ¹	DM ¹	
${ m dBf^1}$	DF^1	
$dB^{2,3}$	$DB^{2,3}$	
EMF^2	EM ²	
V^1	VL^1	
mV^1	MV^1	
$\mu m V^1$	UV ¹	
¹ Final Terminator.		
² Prefix Terminator.		
³ Final Terminator for Increment Set Mode.		

Indications

The AMPLITUDE Display will change to reflect the newly selected units and the corresponding annunciator(s) will light.

Comments

The amplitude function must be selected before the conversion entry or entries are made.

Logarithmic Data entries (dBm or dBf) will be displayed in the AMPLITUDE Display with 0.1 dB resolution.

The dBm or dBf Units terminator overrides a dB or EMF terminator.

If a dB or EMF Units terminator is selected, the AMPLITUDE Display will be blanked, the corresponding annunciator will light, and the Signal Generator will wait for a final terminator to be entered.

Amplitude Conversion (Cont'd)

Comments (Cont'd)

Linear Data entries $(V, mV, or \mu V)$ will be displayed in the three most significant digits of the AMPLITUDE Display and the linear terminator will be autoranged (or adjusted) to comply with this condition.

Conversion formulas used are as follows:

```
\begin{array}{rll} dBm & \stackrel{!}{=} dBm \\ dBf & = dBm + 120.0 \\ dB \ V & = dBm - 13.0 \\ dB \ mV & = dBm + 47.0 \\ dB \ mV & = dBm + 107.0 \\ dB \ EMF \ V & = dBm + 7.0 \\ dB \ EMF \ mV & = dBm + 53.0 \\ dB \ EMF \ mV & = dBm + 113.0 \\ V & = 10^{(dBm - 13.0)/20} \\ mV & = 10^{(dBm + 47.0)/20} \\ \mu V & = 10^{(dBm + 107.0)/20} \\ EMF \ V & = 10^{(dBm + 53.0)/20} \\ EMF \ mV & = 10^{(dBm + 53.0)/20} \\ EMF \ mV & = 10^{(dBm + 113.0)/20} \\ EMF \ \mu V & = 10^{(dBm + 113.0)/20} \\ \end{array}
```

Related Instructions

Amplitude

Amplitude, Up/Down

Amplitude, Up/Down

Description

This instruction details how to change the output amplitude by the value stored in the internal output amplitude increment register.

Keystroke Sequence

Press and release the step up or step down keys associated with the output amplitude function.

Keys and Program Codes

Keys	Program Codes
AMPTD	AP UP DN

NOTE

During remote operation, repeated UP or DN codes can be sent over the bus once the frequency function has been selected.

Indications

The output amplitude shown in the AMPLITUDE Display and the output of the Signal Generator will change by the value stored in the internal output amplitude increment register.

Comments

Step up and step down keys associated with the output amplitude function are used to change the output amplitude by the value stored in the internal output amplitude increment register.

Places the instrument in the Amplitude Data entry mode and clears any previously selected function.

Continues to change the output amplitude by the value stored in the internal output amplitude increment register if either key remains pressed.

Initialized value and limits of the output amplitude increment are as follows:

Initialized Value	Minimum Value	Maximum Value
10.0 dB	0.1 dB	≤144.0 dB
	$0.001~\mu\mathrm{V}$	≤1.57V
	$0.001~\mathrm{EMF}~\mu\mathrm{V}$	≤3.15 EMF V

Related Instructions

Increment Value Change Increment Value Display

Display

Description

This instruction details how to selectively display the stored contents of an internal storage register.

Keystroke Sequence

Press and release the DISPLAY key, then press and hold the Data key (a single digit register number 0—9).

Example

Display the stored contents from register 2.		
LOCAL (keystrokes)	Display Contents of Register 2— DISPLAY 2	
(program codes)	This feature is not accessible via HP-IB.	

Keys and Program Codes

Keys	Program Codes
DISPLAY	None

Indications

The stored contents from the selected register will be displayed as long as the Data key remains pressed.

Comments

Ten internal registers are available (0—9). Each is capable of storing complete front panel setups (exclusive of increment settings).

Does not affect the actual output of the Signal Generator.

Does not change the contents of the internal sequence counter.

Does not affect the current increment settings.

Clears any previously selected function.

Feature is not accessible via HP-IB.

All displays are restored to reflect the actual Signal Generator output when the Data key is released.

Related Instructions

Display Sequence

Recall

Sequence

Display Sequence

Description

This instruction details how to display the contents of the internal sequence counter.

Keystroke Sequence Press and release the DISPLAY key, then press and hold the SEQ key.

Example

Display the contents of the internal sequence counter.		
LOCAL (keystrokes)	Display Sequence Counter Contents — SEQ	
(program codes)	This feature is not accessible via HP-IB.	

Keys and Program Codes

Keys	Program Codes	
DISLPAY	None	
SEQ	None	

Indications

The stored contents from the sequence counter will be displayed in the least significant digit of the AMPLITUDE Display as long as the SEQ key remains pressed.

Comments

Does not affect the actual output of the Signal Generator.

Does not change the contents of the internal sequence counter.

Clears any previously selected function.

Feature is not accessible via HP-IB.

The AMPLITUDE Display is restored to reflect the actual Signal Generator output when the SEQ key is released.

Related Instructions

Display Sequence

Frequency

Description

This instruction details how to set the carrier frequency.

Operating Characteristics:


Range: 100 kHz to 990 MHz (990.0000 MHz)

Resolutions: 100 Hz and 250 Hz, depending on the carrier frequency selected.

Keystroke Sequence

Press and release the FREQUENCY Function key, the desired Data keys, and a valid Units key.

Example

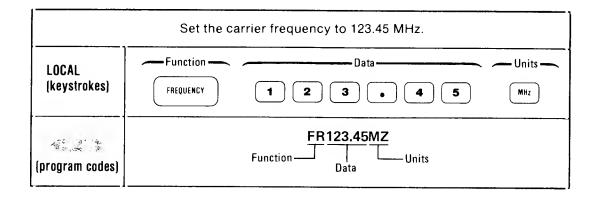

Keys and Program Codes

B ...

Keys	Program Codes
FREQUENCY	FR
MHz	MZ
kHz	KZ
No key	HZ

Indications

The selected carrier frequency will be displayed in megahertz in the FREQUENCY Display.

Comments

Least significant (eighth) digit will be blanked when the selected carrier frequency is a multiple of 100 Hz.

In cases where the selected carrier frequency is a multiple of 250 Hz, the least significant digit will be a 5.

Digits selected beyond the specified resolution of the FREQUENCY Display will be truncated.

Leading zeros will be blanked.

Carrier frequencies below 100 kHz will result in an uncalibrated output amplitude.

The MODULATION Display will flash if a change in carrier frequency would cause the FM peak deviation frequency allowed for that frequency band to be exceeded. Entering a carrier frequency that would set the instrument in the correct band for the selected deviation frequency will clear the error condition, or pressing one of the following keys will automatically adjust the FM peak deviation frequency to the maximum frequency possible for that frequency band.

Frequency (Cont'd)

Comments (Cont'd)

Band	Carrier Frequency (MHz)
1	0.1 - 123.5
2	123.5 - 247
3	247 - 494
4	494 — 990



The carrier frequency increment is rejected if it is not a multiple of 100 Hz or 250 Hz.

Frequency function will remain selected until:

- a. One of the three remaining functions is selected.
- b. One of the STORE-RECALL-DISPLAY keys is pressed.
- c. The instrument is reset or unplugged.

Related Instructions

Frequency, Coarse and Fine Tune Frequency, Up/Down

Frequency, Coarse and Fine Tune

Description

This instruction details how to quickly tune the carrier frequency in decade steps using the step up and step down keys associated with the carrier frequency function.

Keystroke Sequence

This feature is enabled by pressing either the COARSE TUNE or FINE TUNE key.

Pressing either key will increase (COARSE TUNE) or decrease (FINE TUNE) the carrier frequency tuning value by a factor of 10.

Pressing the step up key will then increase the carrier frequency by the newly selected carrier frequency tuning value, while pressing the step down key will decrease the carrier ferquency.

This feature is disabled and the original carrier frequency increment value is enabled by pressing the INCR SET key (with the frequency function selected).

Example

Enable a carrier frequent 10 MHz).	uency tuning value of 10 kHz (assuming a starting value of
LOCAL (keystrokes)	Decrease Tuning Value FINE TUNE TUNE TUNE FINE TUNE FINE TUNE FINE TUNE TUNE TO ÷10 ÷10
program codes)	This feature is not accessible via HP-IB.

Keys and Program Codes

Keys	Program Codes	
FREQUENCY	None	
COARSE TUNE	None	
FINE TUNE	None	
	None	
-	None	
INCR SET	None	

Indications

Whenever the COARSE TUNE or FINE TUNE key is pressed and held, the frequency digit that corresponds to the carrier frequency tuning value will flash.

When the ${\it COARSE}$ TUNE key is pressed again, the next digit to the left will flash to indicate the new tuning value.

When the FINE TUNE key is pressed again, the next digit to the right will flash to indicate the new tuning value.

Comments

Feature only applies to the carrier frequency function.

Feature is not accessible via HP-IB.

Operation Model 8656A

Frequency, Coarse and Fine Tune (Cont'd)

Comments (Cont'd)

COARSE TUNE and FINE TUNE keys are always available to change the carrier frequency tuning value by a factor of 10.

Places the instrument into the frequency Data entry mode and clears any previously selected function, once either the step up or step down key is pressed.

Enables the last valid carrier frequency increment value when the INCR SET key is pressed.

Related Instructions Frequency

Frequency, Up/Down Increment Value Change

Frequency, Up/Down

Description

This instruction details how to change the carrier frequency by the value stored in the internal carrier frequency increment register.

Keystroke Sequence

Press and release the step up or step down keys associated with the carrier frequency function.

Keys and Program Codes



Keys	Program Codes	
FREQUENCY	FR	
	UP	
-	DN	

NOTE

During remote operation, repeated UP or DN codes can be sent over the bus once the frequency function has been selected.

Indications

The carrier frequency shown in the FREQUENCY Display and the output of the Signal Generator will change by the value stored in the internal carrier frequency increment register.

Comments

Step up and step down keys associated with the carrier frequency function are used to change the carrier frequency by the value stored in the internal carrier frequency increment register.

Places the instrument in the Frequency Data entry mode and clears any previously selected function.

Continues to change the carrier frequency by the value stored in the internal carrier frequency increment register if either key remains pressed.

The MODULATION Display will flash if a change in carrier frequency would cause the FM peak deviation frequency allowed for that frequency band to be exceeded. Entering a carrier frequency that would set the instrument in the correct band for the selected deviation frequency will clear the error condition, or pressing one of the following keys will automatically adjust the FM peak deviation frequency to the maximum frequency possible for that frequency band.

Band	Carrier Frequency (MHz)	
1	0.1-123.5	
2	123.5 - 247	
3	247—494	
4	494—990	



Initialized value and limits of the carrier frequency increment are as follows:

Initialized	Minimum	Maximum	
Value	Value	Value	
10.0000 MHz	0.1 kHz	≤989.99 MHz	

Related Instructions

Frequency, Coarse and Fine Tune Increment Value Change Increment Value Display



HP-IB Address Display

Description

This instruction details how to display the internally-set, decimal HP-IB address.

Keystroke Sequence Press and hold the HP-IB ADRS key.

Example

Display the internally-set, decimal HP-IB address.		
LOCAL (keystrokes)	Display HP-IB Address — (HP IB ADRS)	
(program codes)	This feature is not accessible via HP-IB.	

Keys and Program Codes



Keys	Program Codes	
HP-IB ADRS	None	

Indications

The internally-set, decimal HP-IB address will be displayed in the MODULATION Display as long as the HP-IB ADRS key remains pressed.

Comments

HP-IB addresses greater than 30 (decimal) are interpreted as 30.

HP-IB address is factory-set to 07 decimal. (In binary, this is 00111, the equivalent ASCII character is an apostrophe).

HP-IB address is updated only when the instrument is powered up or reset.

To change the HP-IB address, refer to paragraph 2-8, HP-IB Address Selection.

Feature is not accessible via HP-IB.

The MODULATION Display is restored to reflect the actual Signal Generator output when the HP-IB ADRS key is released.

HP-IB Address Display (Cont'd)

Comments (Cont'd)

Allowable HP-IB Address Codes

	ADDRESS SWITCH				EQUIVALENT ASCII	EQUIVALENT DECIMAL
A 5	A4	А3	A2	A1	CHARACTER (LISTEN)	VALUE (LISTEN)
0	0	0	0	0	SP	00
0	0	0	0	1	!!	01
0	0	0	1	0	"	02
0	0	0	1	1	#	03
0	0	1	0	0	\$	04
0	0	1	0	1	%	05
0	0	1	1	0	&	06
0	0	1	1	1	,	07
0	1	0	0	0	(08
0	1	0	0	1)	09
0	1	0	1	0	*	10
0	1	0	1	1	+	11
0	1	1	0	0	,	12
0	1	1	0	1	_	13
0	1	1	1	0		14
0	1	1	1	1	/	15
1	0	0	0	0	0	16
1	0	0	0	1	1	17
1	0	0	1	0	2	18
1	0	0	1	1	3	19
1	0	1	0	0	4	20
1	0	1	0	1	5	21
1	0	1	1	0	6	22
1	0	1	1	1	7	23
1	1	0	0	0	8	24
1	1	0	0	1	9	25
1	1	0	1	0	:	26
1	1	0	1	1	;	27
1	1	1	0	0	<	28
1	1	1	0	1	=	29
1	1	1	1	0	>	30
I	Indicates factory-set address.					

Related Instructions

None



Increment Value Change

Description


This instruction details how to change the value of the stored increments which are controlled by the step up and step down keys associated with each of the four main functions. Increment values for the carrier frequency, output amplitude, AM depth, and FM peak deviation frequency can be stored. The initialized value of each stored increment is listed as follows:

Carrier Frequency 10.0000 MHz
Output Amplitude 10.0 dB
AM Depth 1%
FM Peak Deviation Frequency 1.0 kHz

Keystroke Sequence

Press and release a Function key, the INCR SET key, the desired Data keys, and a valid Units key.

Example

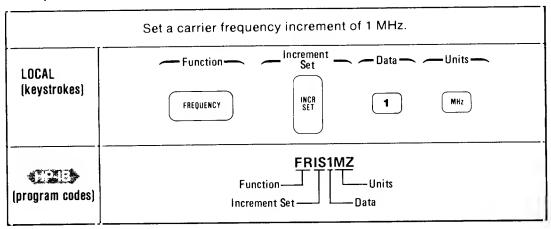

Keys and Program Codes

Keys	Program Codes	Keys	Program Codes
INCR SET	IS	%	PC or %
FREQUENCY	${ m FR}$	dBm	DM
AMPTD	AP	dBf	DF
AM	AM	dB	DB
FM	FM	EMF	EM
MHz	MZ	V	VL
kHz	KZ	mV	MV
No Key	HZ	μV	UV

Indications

The value of the increment will appear in the display associated with the selected function as the data is entered.

Comments

The frequency increment is rejected if it is not a multiple of 100 Hz or 250 Hz.

FM peak deviation frequency increments must be selected in units of kHz only.

Increment Value Change (Cont'd)

Comments (Cont'd)

The minimum allowable increment value for each of the four main functions is listed as follows:

Carrier Frequency 0.1 kHzOutput Amplitude 0.1 dB $0.01 \mu\text{V}$

 $0.001 \,\mu\text{V}$ $0.001 \,\text{EMF} \,\mu\text{V}$

AM Depth 1%

FM Peak Deviation Frequency 0.1 kHz

The maximum allowable increment value for each of the four main functions is listed as follows:

Carrier Frequency ≤989.99 MHz Output Amplitude ≤144.0 dB

≤1.44.0 ub

≤3.15 EMFV

 $\begin{array}{ll} \text{AM Depth} & \leq 99\% \\ \text{FM Peak Deviation Frequency} & \leq 99 \, \text{kHz} \\ \end{array}$

All displays will be restored to reflect the actual Signal Generator output as soon as a valid increment terminator is selected.

Related Instructions

Amplitude, Up/Down

Frequency, Coarse and Fine Tune

Frequency, Up/Down
Modulation, AM Up/Down
Modulation, FM Up/Down
Increment Value Display

Operation Model 8656A

Increment Value Display


Description

This instruction details how to display the stored value of the increments which are controlled by the step up and step down keys associated with each of the four main functions. Increment values for the carrier frequency, output amplitude, AM depth, and FM peak deviation frequency can be displayed.

Keystroke Sequence

Press and release a Function key, then press and hold the INCR SET key.

Example

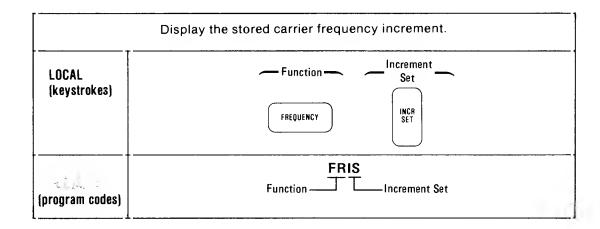

Keys and Program Codes

Keys	Program Codes	
INCR SET	IS	
FREQUENCY	\mathbf{FR}	
AMPTD	AP	
AM	AM	
FM	FM	

Indications

The stored value of the increment will be displayed in the display associated with the selected function as long as the INCR SET key remains pressed.

Comments

The initialized value of each stored increment is listed as follows:

Carrier Frequency 10.0000 MHz
Output Amplitude 10.0 dB
AM Depth 1%
FM Peak Deviation Frequency 1.0 kHz

The display will be restored to reflect the actual Signal Generator output when the INCR SET key is released.

Related Instructions

Increment Value Change

Modulation, AM

Description

This instruction details how to select amplitude modulation using the internal modulation source.

Operating Characteristics:

Depth: 0 - 99% to +7 dBm 0 - 30% to +10 dBm


Resolution: 1%

Rate (internal): 400 Hz and 1 kHz, ±3%

Keystroke Sequence

Press and release an Internal Source key, the AM Function key, the desired Data keys, and a valid Units key.

Example

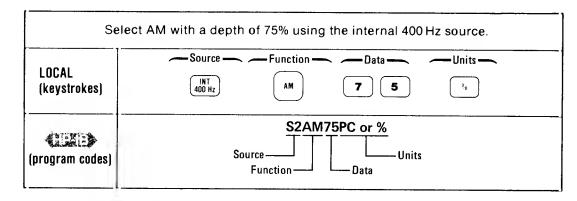

Keys and Program Codes



Keys	Program Codes
INT 400 Hz	S2
INT 1 kHz	S 3
AM	AM
%	PC or %

Indications

Selected AM depth will be displayed in the MODULATION Display and the source annunciators (INT AM, 400 Hz, and %) will light.

Comments

Digits selected beyond the specified resolution for AM depth will be truncated.

Leading zeros will be blanked.

AM depth Data entries that would cause the peak envelope power of the instrument to exceed +17 dBm are rejected.

AM function will remain selected until:

- a. One of the three remaining functions is selected.
- b. One of the STORE-RECALL-DISPLAY keys is pressed.
- c. The instrument is reset or unplugged.
- d. The External Source key may be selected in place of the Internal Source key.

Related Instructions

Modulation, AM Up/Down Modulation, External Source

Modulation, Mixed Modulation, Off

Modulation, AM Up/Down

Description

This instruction details how to change the percentage of AM depth by the value stored in the internal AM depth increment register.

Keystroke Sequence

Press and release the step up or step down keys associated with the amplitude modulation function.

Keys and Program Codes

Keys	Program Codes
AM	AM
•	UP
-	DN
	1

NOTE

During remote operation, repeated UP or DN codes can be sent over the bus once the AM function has been selected.

Indications

The percentage of AM depth shown in the MODULATION Display and the output of the Signal Generator will change by the value stored in the internal AM depth increment register.

Comments

Step up and step down keys associated with the amplitude modulation function are used to change the percentage of AM depth by the value stored in the internal AM depth increment register.

Places the instrument in the AM Data entry mode and clears any previously selected function.

Selects default modulation source (internal 1 kHz) if no other source is selected.

Continues to change the percentage of AM depth by the value stored in the internal AM depth increment register if either key remains pressed.

Will automatically stop incrementing when the maximum percentage of AM depth permitted for a selected output amplitude is reached.

Initialized value and limits of the AM depth increment are as follows:

Initialized Value	-Minimum Value	Maximum Value	
			
1%	1%	≤99%	

Related Instructions

Increment Value Change Increment Value Display

Modulation, External Source

Description

This instruction details how to apply an external modulation signal via the front panel MOD INPUT/OUTPUT connector.

Operating Characteristics:

Rate (for AM or FM): 25 Hz to 25 kHz; 1 dB bandwidth; ac coupled

Input Impedance: 600 ohms (resistive) Input Level: 1 Vpk (0.707 Vrms)

Keystroke Sequence

Press and release the EXT key to enable the front panel MOD INPUT/OUTPUT connector, then set the signal level of the external modulation source to 1 Vpk (0.707Vrms) for calibrated internal control of the AM depth or FM peak deviation frequency.

Keys and **Program Codes**



Keys	Program Codes
EXT	S1
AM	AM
%	PC or %
FM	FM
kHz	KZ

Indications

The HI EXT annunciator will light if the external modulation signal is greater than $1.02\,\mathrm{Vpk}\,(0.721\,\mathrm{Vrms})$ and the LO EXT annunciator will light if the signal is less than $0.98\ Vpk\ (0.693\ Vrms).$

NOTE

If greater accuracy is required, use a calibrated voltmeter to measure the external modulation signal.

Comments

In addition to being able to accept an external modulation signal, the MOD INPUT/ OUTPUT connector provides access to the internally generated 400 Hz or 1 kHz signal whenever either is selected and the external modulation source is not selected. Its signal level is 1 Vpk (0.707 Vrms) and it cannot be adjusted by the operator.

Related **Instructions**

Modulation, AM Modulation, FM Modulation, Mixed Modulation, Off

Modulation, FM

Description

This instruction details how to select frequency modulation using the internal modulation source.

Operating Characteristics:

Peak Deviation:

Carrier	Maximum Po	eak Deviation
Frequency (MHz)	Rates ≥60 Hz	Rates < 60 Hz
0.1 - 123.5	99 kHz	1600 x Rate
123.5 - 247	25 kHz	400 x Rate
247 - 494	50 kHz	800 x Rate
494 — 990	99 kHz	1600 x Rate

Resolution:

0.1 kHz for peak deviations <10 kHz

1 kHz for peak deviations ≥10 kHz


Rate (internal):

400 Hz or 1 kHz, $\pm 3\%$

Keystroke Sequence

Press and release an Internal Source key, the FM Function key, the desired Data keys, and a valid Units key.

Example

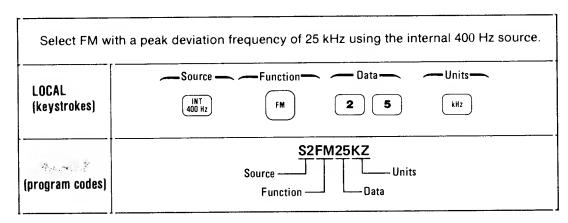

Keys and Program Codes

Keys	Program Codes
INT 400 Hz	S2
INT 1 kHz	S 3
FM	FM
kHz	KZ

Indications

Selected FM peak deviation frequency will be displayed in the MODULATION Display and the source annunciators (INT FM, 400 Hz, and 1 kHz) will light.

Comments

Digits selected beyond the specified resolution for FM peak deviation will be truncated.

Leading zeros will be blanked.

Model 8656A Operation

Modulation, FM (Cont'd)

Comments (Cont'd)

FM peak deviation Data entries that would be out of range for the selected carrier frequency are rejected.

The MODULATION Display will flash if a change in carrier frequency would cause the FM peak deviation frequency allowed for that frequency band to be exceeded. Entering a carrier frequency that would set the instrument in the correct band for the selected deviation frequency will clear the error condition, or pressing one of the following keys will automatically adjust the FM peak deviation frequency to the maximum frequency possible for that frequency band.

Band	rier Frequency MHz
1 2 3 4	0.1 - 123.5 $123.5 - 247$ $247 - 494$ $494 - 990$

FM function will remain selected until:

- a. One of the three remaining functions is selected.
- b. One of the STORE-RECALL-DISPLAY keys is pressed.
- c. The instrument is reset or unplugged.
- d. The External Source key may be selected in place of the Internal Source key.

Related Instructions

Modulation, FM Up/Down Modulation, External Source Modulation, Mixed Modulation, Off Operation Model 8656A

Modulation, FM Up/Down

Description

This instruction details how to change the FM peak deviation frequency by the value stored in the internal FM peak deviation frequency increment register.

Keystroke Sequence

Press and release the step up or step down keys associated with the frequency modulation function.

Keys and **Program Codes**

Keys	Program Codes
FM	FM
•	UP
-	DN

NOTE

During remote operation, repeated UP or DN codes can be sent over the bus once the FM function has been selected.

Indications

The FM peak deviation frequency shown in the MODULATION Display and the output of the Signal Generator will change by the value stored in the internal FM peak deviation frequency increment register.

Comments

Step up and step down keys associated with the frequency modulation function are used to change the FM peak deviation frequency by the value stored in the internal FM peak deviation frequency increment register.

Places the instrument in the FM Data entry mode and clears any previously selected function.

Selects default modulation source (internal 1 kHz) if no other source is selected.

Continues to change the FM peak deviation frequency by the value stored in the internal FM peak deviation frequency increment register if either key remains pressed.

Will automatically stop incrementing when the maximum FM peak deviation frequency permitted for a selected carrier frequency is reached.

If an out of range condition exists (MODULATION Display flashing), pressing either the step up or step down (or FM) key will automatically select the maximum FM peak deviation frequency permitted for the currently selected carrier frequency.

Initialized value and limits of the FM peak deviation frequency are as follows:

Initialized	Minimum	Maximum
Value	Value	Value
1.0 kHz	0.1 kHz	≤99 kHz

Related Instructions

Increment Value Change Increment Value Display

Modulation, Mixed

Description


These instructions detail the selection of mixed modulation. Modulation can be selected in one of four ways.

- 1. Simultaneous AM and FM may be selected using common or separate modulation sources (rate).
- 2. Simultaneous AM or FM at two rates may be selected by using internal and external modulation sources. Only one AM depth or one FM deviation can be selected.
- 3. Three simultaneous modulation signals, AM and FM using a common source (rate) and either AM or FM from a separate source, may be selected.
- 4. Four simultaneous modulation signals, two AM and two FM, may be selected. Each AM/FM pair must have a common modulation source (rate). Only one AM depth and one FM deviation can be selected.

Keystroke Sequence 1

To select simultaneous AM and FM, press and release the Source key to provide the desired AM rate, the AM Function key, the desired Data keys and the % Units key. Then press and release the Source key to provide the desired FM rate, the FM Function key, the desired Data keys and the kHz Units key. (The Source key need not be pressed for FM if the AM and FM rate is the same.)

Example 1

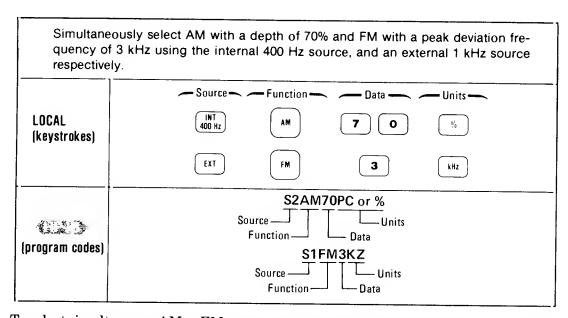


Keystroke Sequence 2

To select simultaneous AM or FM, press and release the desired Source key, the desired Function key, the desired Data keys and a valid Units key. Then press and release the other Source key and the same Function key that was selected previously.

Modulation, Mixed (Cont'd)


Example 2

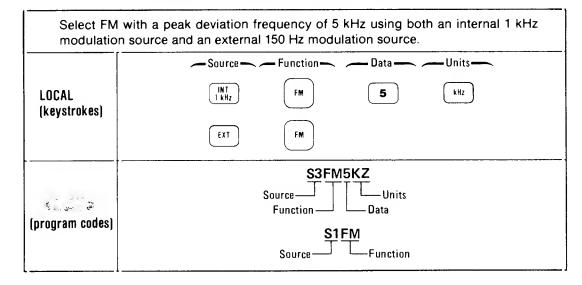

Keystroke Sequence 3

To select three simultaneous modulation signals, AM and FM using a common source (rate) and AM or FM from a separate source, press and release the Source key to provide the common AM and FM rate. Then press a Function key, the desired Data keys and the valid Units key. Press the other Function key, the desired Data keys and the valid Units key. Press and release the other Source key, the appropriate Function key, the desired Data keys and the valid Units key.

Example 3

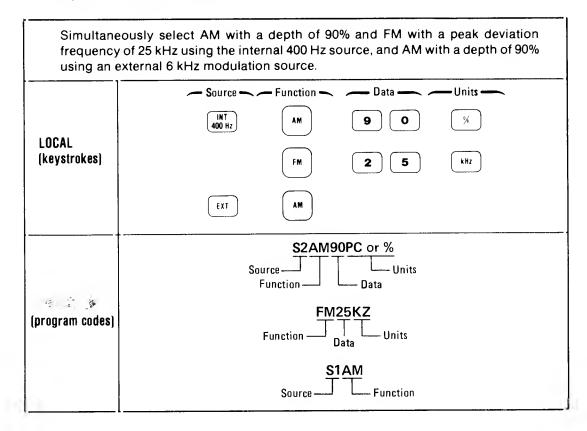


Modulation, Mixed (Cont'd)

Keystroke Sequence 4


To select four simultaneous modulation signals, press and release the appropriate Source key, a Function key, the desired Data keys and the valid Units key. Press and release the other Function key, the desired Data keys and valid Units key. Press and release the other Source key, and then both Function keys.

Example 4

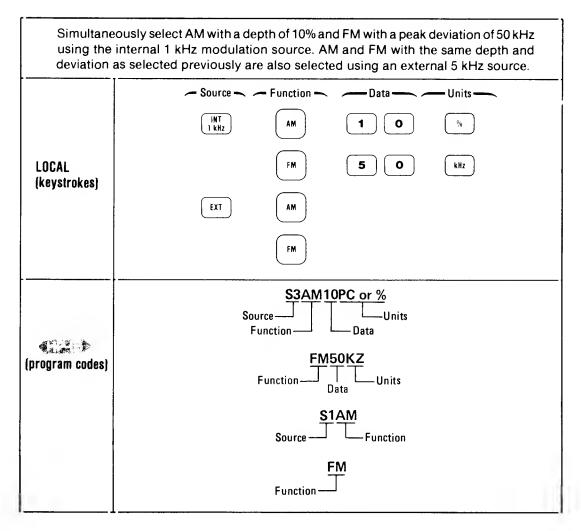

Modulation, Mixed (Cont'd)

Keys and Program Codes

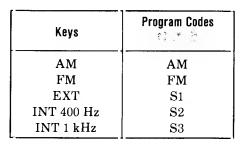

Indications

The last selected AM depth or FM peak deviation frequency will be displayed in the MODULATION Display and the source annunciators will light. In the case where an external modulation source is used, the HI EXT and LO EXT annunciators will also light until the signal level of the external source has been adjusted to 1 Vpk $(0.707 \text{ Vrms}) \pm 5\%$.

Comments

Digits selected beyond the specified resolution for AM depth or FM peak deviation will be truncated.

Leading zeros will be blanked.

AM depth Data entries that would cause the peak envelope power of the instrument to exceed ± 17 dBm are rejected.

FM peak deviation Data entries that would be out of range for the selected carrier frequency are rejected.

The MODULATION Display will flash if a change in carrier frequency would cause the FM peak deviation frequency allowed for that frequency band to be exceeded. Entering a carrier frequency that would set the instrument in the correct band for the selected deviation frequency will clear the error condition, or pressing one of the following keys will automatically adjust the FM peak deviation frequency to the maximum frequency possible for that frequency band.

Band	Carrier Frequency MHz
1	0.1 - 123.5
2	123.5 - 247
3	247 - 494
4	494 - 990



AM or FM function will remain selected until:

- a. One of the three remaining functions is selected.
- b. One of the STORE-RECALL-DISPLAY keys is pressed.
- c. The instrument is reset or unplugged.

Setting the level of the external modulation source is described under Modulation, External Source.

Related Instructions

Modulation, AM

Modulation, AM Up/Down Modulation, External Source

Modulation, FM

Modulation, FM Up/Down

Modulation, OFF

Modulation, OFF

Description


This instruction details how to selectively turn off the AM or FM function. In addition, it details how to selectively turn off a modulation source.


Keystroke Sequences

To turn off a modulation function (AM or FM), press and release the associated Function key, then the OFF key.

To turn off a modulation source, press and release the associated Function key, Source key, then the OFF key.

Examples

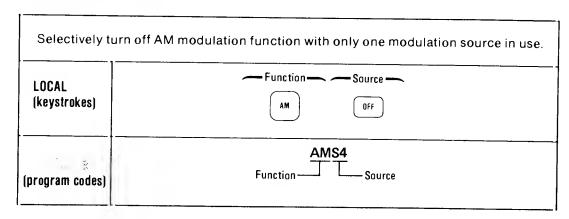

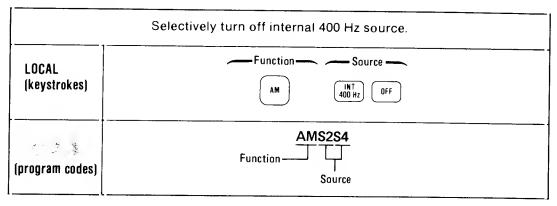

Keys and Program Codes

Keys	Program Codes
AM	AM
FM	FM
EXT	S1
INT 400 Hz	S2
INT 1 kHz	S3
OFF	S4

Indications

The current MODULATION Display will be blanked or the modulation source (including its annunciator) will be turned off when the OFF key is pressed.

Operation Model 8656A

Modulation, OFF (Cont'd)

Comments

Currently selected modulation function (AM or FM) will be turned off when the OFF key is pressed provided only one source (internal 400 Hz or 1 kHz or external) has been selected for use.

If more than one source has been selected, then a Source key (INT 400 Hz, INT 1 kHz, or EXT) has to be pressed before the OFF key is pressed. In this case, the currently selected modulation function will remain selected and only the chosen source (including its annunciator) will be turned off.

If both modulation functions are simultaneously selected and share the same source, then only the currently selected modulation function will be turned off when the OFF key is pressed and the MODULATION Display will be restored to show the modulation parameters of the remaining function.

Related Instructions

Modulation, AM Up/Down Modulation, FM Up/Down Modulation, External Source Modulation, Mixed Model 8656A Operation


Recall

Description

This instruction details how to selectively recall the stored contents from an internal storage register.

Keystroke Sequence Press and release the RECALL key, then a Data key (a single digit register number 0-9)

Example

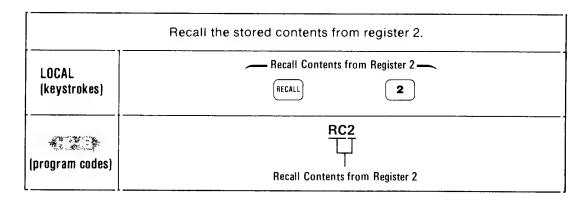

Keys and Program Codes



Keys	Program Codes
RECALL	RC

Indications

The stored contents from the selected register will be recalled and the output of the Signal Generator will be changed so that it agrees with the recalled parameter values.

Comments

Ten internal registers are available (0-9). Each is capable of storing complete front panel setups (exclusive of increment settings).

Clears any previously selected function.

Updates the contents of the internal sequence counter so that it agrees with the numerical location of the recalled register.

Does not affect the current increment settings.

Related Instructions

Display Store Sequence

Sequence


Description

This instruction details how to sequentially recall the stored contents from each of the internal storage registers.

Keystroke Sequence

Press and release the SEQ key.

Example

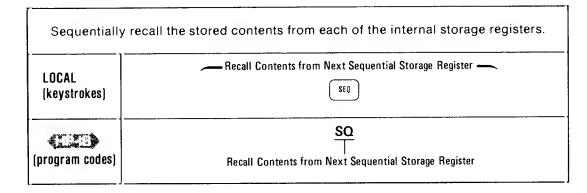

Keys and Program Codes



Keys	Program Codes
SEQ	SQ

Indications

The stored contents from each internal storage register will be recalled and the output of the Signal Generator will be changed so that it agrees with the recalled parameter values.

Comments

Ten internal registers are available (0—9). Each is capable of storing complete front panel setups (exclusive of increment settings).

Does not clear any previously selected function.

Updates the contents of the internal sequence counter so that it agrees with the numerical location of the recalled register.

Does not affect the current increment settings.

Remote sequence operation is permitted through an external switch closure connected at the rear panel SEQ connector J5.

Related Instructions

Display

Display Sequence

Recall Store

Store


Description

This instruction details how to store complete front panel setups (exclusive of increment settings) for either selectable or sequential recall or display at a later time.

Keystroke Sequence

Press and release the STORE key, then a Data key (a single digit register number 0-9).

Example

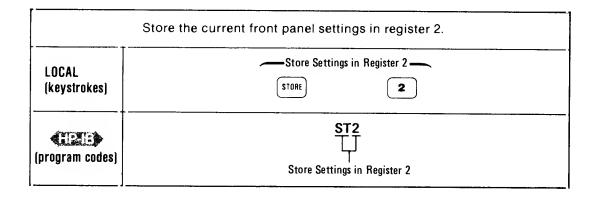

Keys and Program Codes



Keys	Program Codes
STORE	ST

Indications

No visible front panel change.

Comments

Ten internal registers are available (0-9). Each is capable of storing complete front panel setups (exclusive of increment settings).

Clears any previously selected function.

Initialized conditions of the Signal Generator are stored in each of the ten internal storage registers when the instrument is powered up or reset.

Related Instructions

Display Recall Sequence

SECTION IV PERFORMANCE TESTS

4-1. INTRODUCTION

The procedures in this section test the instrument's electrical performance using the specifications of Table 1-1 as the performance standards. All tests can be performed without access to the interior of the instrument. A simpler operational test is included in Section III under Operator's Checks.

NOTES

If the performance tests are to be considered valid, the following conditions must be met:

- a. The Signal Generator must have a 30-minute warmup.
- b. The line voltage must be within 90— 125 Vac or 198—252 Vac; 48—66 Hz. The voltage selector card must be in the proper position. Refer to Figure 2-1.
- c. The ambient temperature must be 0 to 55°C for the Level Accuracy and Flatness Test.

4-2. EQUIPMENT REQUIRED

Equipment required for the performance tests is listed in Table 1-3, Recommended Test Equipment. Any equipment that satisfies the critical specifications given in the table may be substituted for the recommended model(s).

4-3. PERFORMANCE TEST RECORD

Results of the performance tests may be tabulated on Table 4-2 which is the Performance Test Record. The Performance Test Record located at the end of this section lists all of the tested specifications and their acceptable limits. The results recorded at incoming inspection can be used for comparison in periodic maintenance and troubleshooting and after repairs or adjustments.

4-4. CALIBRATION CYCLE

This instrument requires periodic verification of performance. Depending on the use and environmental conditions, the instrument should be checked using the following performance tests at least once each year.

4-5. ABBREVIATED PERFORMANCE TESTING

In most cases, it is not necessary to perform all of the tests in this section. Table 4-1 shows which tests are recommended for various situations. The Operator's Checks in Section III should be the first step in all testing situations.

4-6. TEST PROCEDURES

It is assumed that the person performing the following tests understands how to operate the specified test equipment. Equipment settings, other than those for the Signal Generator, are stated in general terms. For example, a test might require that a spectrum analyzer's resolution bandwidth be set to 100 Hz; however, the time per division setting would not be specified and the operator would set that control so that the analyzer operates correctly.

It is also assumed that the person performing the tests will supply whatever cables, connectors, and adapters are necessary.

Table 4-1. Abbreviated Performance Tests

		DIE 4-1. ADDREV		-			
Testing Situations	Basic Functional Checks Section III	HP-IB Functional Checks Section III	Spectral Purity Para. 4-7	High Level Accuracy & Flatness Para. 4-8	Low Level Accuracy Para. 4-9	Modulation Para. 4-10	Output Leakage Para. 4-11
Incoming Inspection or Over- all Performance Verification	x	x	x	x	х	x	x
After Complete Adjustment	х		x	х	х	х	x
After Repairs to an Individual Assembly							
Reference Assembly Service Sheet No.							
A1	x x x x x x x x x x	x x	x x x x x x x x x x x x x x x x x x x	x x x	X X	FM FM AM	x

4-7. SPECTRAL PURITY TESTS

SPECIFICATION:

Electrical Characteristics	Performance Limit	Conditions
SPURIOUS SIGNALS:		
Harmonics	<-30 dBc	≤+7 dBm output levels
Non-harmonics	<-60 dBc	>5 kHz from carrier in CW mode
Sub-harmonics	None	
RESIDUAL MODULATION CW MODE:		
AM (0.05 to 15 kHz Post Detec- tion Noise Bandwidth	<-70 dBc	0.1 to 990 MHz
FM	<15 Hz rms	0.1 to 123.5 MHz
(0.3 to 3 kHz Post Detec-	<3 Hz rms	123.5 to 247 MHz
tion Noise Bandwidth)	<6 Hz rms	247 to 494 MHz
	<15 Hz rms	494 to 990 MHz
FM	<30 Hz rms	0.1 to 123.5 MHz
(0.05 to 15 kHz Post Detec-	<8 Hz rms	123.5 to 247 MHz
tion Noise Bandwidth	<16 Hz rms	247 to 494 MHz
	<30 Hz rms	494 to 990 MHz

DESCRIPTION:

Spurious signals are checked using a spectrum analyzer. Residual AM and FM Modulation are checked using a modulation analyzer.

EQUIPMENT:

Spectrum AnalyzerHP	8558B
Modulation Analyzer	8901A
Digital MultimeterHP	3465A
AM/FM Test Source (required for	
modulation analyzer verification of	
residual AM)HP	11715 A
Cable (UG-210/U type N connectors) HP	11500B
Cable (UG-88C/U BNC and dual	
banana plug connectors)HP	11001A

PROCEDURE:

Spurious Signals

1. Set the spectrum analyzer as follows:

Frequency Span/Div	200 kHz
Resolution Bandwidth	3 kHz
Optimum Input	. +10 dBm
Reference Level	. +10 dBm

4-7. SPECTRAL PURITY TESTS (Cont'd)

2. Set the Signal Generator as follows:

Frequency	100 kHz
Frequency Increment	
Amplitude	
Modulation	Off

3. Connect the RF OUTPUT of the Signal Generator to the input of the spectrum analyzer as shown in Figure 4-1. Verify that all harmonics are <-30 dBc, all non-harmonics 5 kHz from the carrier are <-60 dBc, and that there are no subharmonics as the frequency is incremented from 100 kHz to 990 MHz.

NOTES

Adjust the Frequency Span/Div and Resolution Bandwidth controls as required.

Change the frequency increment from 100 kHz to 10 MHz at 10 MHz, if desired.

0	Res	ts				
Spurious Signals	Actual	Max.				
Harmonics Non-Harmonics		<-30 dBc				
(5 kHz from carrier) Sub-Harmonics		<-60 dBc None				

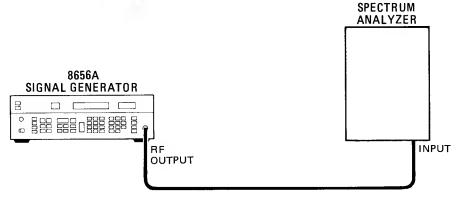


Figure 4-1. Spurious Signals Test Setup

$Residual\ AM$

NOTE

The residual AM specification of the Signal Generator is not equivalent to the published specification of the HP 8901A Modulation Analyzer. To make a valid residual AM measurement, the residual AM of the modulation analyzer should be at least 3dB better than the specification being tested. In order to verify that the residual AM of the modulation analyzer is adequate to measure the Signal Generator's

Model 8656A Performance Tests

PERFORMANCE TESTS

4-7. SPECTRAL PURITY TESTS (Cont'd)

NOTE (cont'd)

residual AM specification, the residual AM of the modulation analyzer must be verified to ensure the validity of the measurement. If the Signal Generator's residual AM is measured frequently, it is not necessary to verify the residual AM of the modulation analyzer each time; however, it is recommended that it be verified monthly to ensure an accurate measurement.

- 4. Verify the residual AM of the modulation analyzer as follows:
 - a. Connect the modulation output of the modulation analyzer to the input of the digital multimeter and the AM output of the AM/FM test source to the input of the modulation analyzer as shown in Figure 4-2. Nothing should be connected to the audio input of the AM/FM test source.

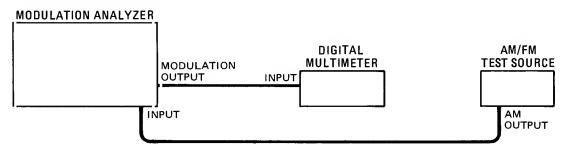


Figure 4-2. Modulation Analyzer Residual AM Verification Test Setup

b. Set the modulation analyzer as follows:

Measurement Frequency

c. Set the AM/FM test source as follows:

Test Mode..... FM

- d. Tune the carrier frequency on the AM/FM test source for a modulation analyzer reading of 12.5 ± 0.1 MHz.
- e. Set the digital multimeter as follows:

f. Set the modulation analyzer as follows:

MeasurementAMHP Filter50 HzLP Filter15 kHz

g. The digital multimeter should indicate 2.2 mV or less.

4-7. SPECTRAL PURITY TESTS (Cont'd)

NOTE

To make a valid residual AM measurement, the residual AM of the modulation analyzer should be at least 3 dB better than the specification being tested or <-73 dBc (0.022%). With an output sensitivity of 10%/V, the corresponding output level is $2.2\ mV$.

5. Set the modulation analyzer as follows:

Measurement AM
Detector Peak+
HP Filter 50 Hz
LP Filter
FM De-Emphasis Off

6. Set the Signal Generator as follows:

Frequency	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•				F	۱n	у
Amplitude																			0).) .	d	Br	n
Modulation																							Ot	ff

7. Set the digital multimeter as follows:

Function	Vac
Range	200 mV

8. Connect the RF OUTPUT of the Signal Generator to the input of the modulation analyzer and the output of the modulation analyzer to the input of the digital multimeter as shown in Figure 4-3.

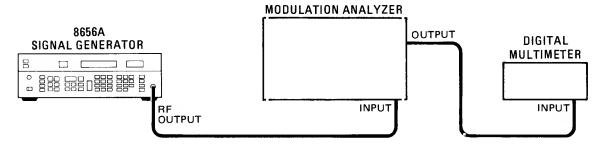


Figure 4-3. Residual AM Test Setup

9. The digital multimeter should indicate <3.16 mVrms.

Actual	Max.
	<3.16 mVrms

Model 8656A Performance Tests

PERFORMANCE TESTS

4-7. SPECTRAL PURITY TESTS (Cont'd)

Residual FM

10. Set the modulation analyzer as follows:

Measurement	FM
Detector	AVG
FM De-Emphasis	. Off
Automatic OperationSele	ected

11. Set the Signal Generator as follows:

Frequency																1	A r	ıy
Amplitude													C),(0	d	B	m
Modulation	ı																0	ff

12. Connect the RF OUTPUT of the Signal Generator to the input of the modulation analyzer as shown in Figure 4-4.

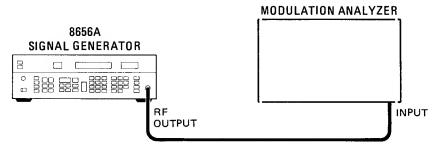


Figure 4-4. Residual FM Test Setup

13. Set the Signal Generator frequency and select the modulation analyzer high-pass and low-pass filters as indicated in the following table. Verify that the measured results do not exceed the limits specified.

	Modulation A	Results (Hz rms)			
Signal Generator Frequency	High-Pass (Hz)	Low-Pass (kHz)	Actuai	Max.	
0.1 to 123.5 MHz	300	3		<15	
123.5 to 247 MHz	300	3		<3	
247 to 494 MHz	300	3		<6	
494 to 990 MHz	300	3		<15	
0.1 to 123.5 MHz	50	15		<30	
123.5 to 247 MHz	50	15		<8	
247 to 494 MHz	50	15	<u> </u>	<16	
494 to 990 MHz	50	15		<30	

4-8. HIGH LEVEL ACCURACY AND FLATNESS TESTS

SPECIFICATION:

Electrical Characteristics	Performance Limit	Conditions
OUTPUT:		
Level Range	+13 dBm to -127 dBm	Into 50 ohms
Resolution	0.1 dB	
Absolute Level Accuracy ¹	≤±1.5 dB	Output levels of +13 dBm to -127 dBm; frequencies from 100 kHz to 990 MHz
Level Flatness	≤±1.0 dB	Output level setting of 0.0 dBm; frequencies from 100 kHz to 990 MHz

DESCRIPTION:

High level accuracy (+13 dBm to –67 dBm) and flatness are verified using a power meter and sensors.

EQUIPMENT:

PROCEDURE:

Level Flatness

- 1. Connect the $-25\,dBm$ power sensor to the power meter. Zero and adjust the power sensor to the power meter.
- 2. Connect the power sensor to the Signal Generator as shown in Figure 4-5.

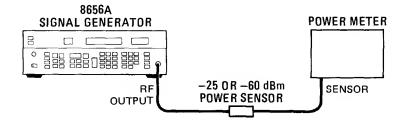


Figure 4-5. High Level Accuracy and Flatness Test Setup

3. Set the Signal Generator as follows:

Frequency	. 100 kHz
Frequency Increment	. 100 kHz
Amplitude	.0.0 dBm
Modulation	Off

4-8. HIGH LEVEL ACCURACY AND FLATNESS TESTS (Cont'd)

4.	Set power meter mode to dB (Ref).
5.	Step the Signal Generator through the frequency range of $100\mathrm{kHz}$ to $990\mathrm{MHz}$ (use $10\mathrm{MHz}$ steps above $10\mathrm{MHz}$) and record the highest and lowest readings.
	Highest reading Frequency Lowest reading Frequency
	The amplitude variation should not exceed 2.0 dB. Record the maximum variation (highest reading — lowest reading).
	≤±1.0 dF
Ab	solute Level Accuracy
6.	Set the Signal Generator as follows:
	Frequency 10 MHz Amplitude +13 dBm Amplitude Increment 5 dBm Modulation Off
7.	Power meter reading must be $+13 \pm 1.5$ dBm. Step the amplitude down to -22 dBm. At each step, the power meter reading must be within ± 1.5 dBm of the selected amplitude.
8.	Replace the -25 dBm power sensor with the -60 dBm power sensor.
	NOTE

Let the system warm up, then zero the power meter and adjust the power meter to the power sensor.

9. Connect the -60 dBm power sensor to the RF OUTPUT of the Signal Generator as shown in Figure 4-5.

4-8. HIGH LEVEL ACCURACY AND FLATNESS TESTS (Cont'd)

10. Step the amplitude down to -67 dBm. At each step, the power meter reading must be within ± 1.5 dB of the selected amplitude.

 $-27 \pm 1.5 \text{ dBm}$
 $-32\pm1.5~\mathrm{dBm}$
 $-37 \pm 1.5 \text{ dBm}$
 $-42\pm1.5~\mathrm{dBm}$
 -47 ±1.5 dBm
 -52 ±1.5 dBm
 57 ±1.5 dBm
 62 ±1.5 dBm
 -67 ±1.5 dBm

11. Repeat steps 7 through 10 for frequencies greater than 10 MHz.

4-9. LOW LEVEL ACCURACY TESTS

SPECIFICATION:

Electrical Characteristics	Performance Limit	Conditions
OUTPUT:		
Level Range	+13 dBm to -127 dBm	Into 50 ohms
Resolution	0.1 dB	
Absolute Level Accuracy ¹	≤±1.5 dB	Output levels of +13 dBm to -127 dBm; frequencies from 100 kHz to 990 MHz

Absolute level accuracy includes allowances for detector linearity, temperature, flatness, attenuator accuracy, and measurement error.

DESCRIPTION:

Low level accuracy (below -67 dBm) is verified by inserting a calibrated attenuator (pad) in series with the Signal Generator output to establish a reference on a spectrum analyzer. The attenuator is then removed and the Signal Generator level is set 60 dBm lower. The Signal Generator output is then compared to the reference level on the spectrum analyzer and the actual level is calculated.

EQUIPMENT:

Power Meter	HP 436A
Power Sensor (-25 dBm)	HP 8482A
Power Sensor (-60 dBm)	HP 8484A
Spectrum Analyzer	HP 8568A
	UD 9477D O

Cables (UG-210/U type N connectors) HP 11500B

PROCEDURE:

- 1. Set the Signal Generator RESET/STBY/ON switch to STBY to zero the power meter.
- 2. Connect the power sensor to the power meter and to the RF OUTPUT of the Signal Generator as shown in Figure 4-6. Zero the power meter and adjust the power sensor to the power meter.

NOTE

Use the -25 dBm sensor if the level being measured is greater than -20 dBm. For lower levels, use the -60 dBm sensor.

3. Set the Signal Generator as follows:

Frequency 10 MI	Ιz
Amplitude0.0 dB	m
Modulation C)ff
RESET/STBY/ONO	N

Performance Tests Model 8656A

PERFORMANCE TESTS

4-9. LOW LEVEL ACCURACY TESTS (Cont'd)

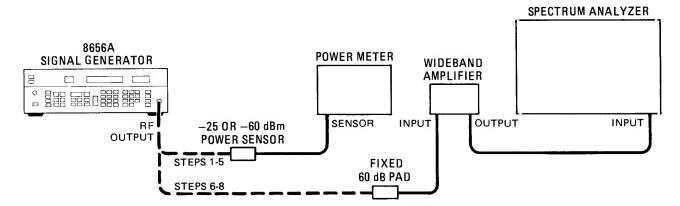


Figure 4-6. Low Level Accuracy Test Setup

4. Set the spectrum analyzer as follows:

Center Frequency	10 MHz
Reference Level	60 dBm
Frequency Span/Div	1 MHz
Resolution Bandwidth	100 kHz
Video Average	. 25 times

5. Set the Signal Generator amplitude to 60 dBm above the power level being verified. For example, if it is desired to verify a power level of -80 dBm, set the amplitude to -20 dBm. Measure the output with the power meter and record the reading.

____ dBm

- 6. Connect the 60 dB pad to the RF OUTPUT of the Signal Generator and connect the signal through the wideband amplifier as shown in Figure 4-6. View the signal on the spectrum analyzer and set the reference level of the spectrum analyzer one division above the signal in the 2 dB log amplitude mode. Use well shielded RF cables or leakage will affect the accuracy of the results.
- 7. Decrease the Signal Generator amplitude by 60 dBm and remove the pad. View the signal on the spectrum analyzer and determine the difference from the signal viewed in step 5. The actual output level is calculated as follows:
 - power meter reading in step 5.

 exact value of pad.

 difference observed in step 7.

 actual output level
- 8. Repeat steps 5 through 7 for output amplitudes to -127 dBm.
- 9. Repeat steps 1 through 8 for frequencies of 100 MHz, 201 MHz, 801 MHz, 901 MHz, and 990 MHz. These are the frequencies for which the pad is calibrated.

4-10. MODULATION TESTS

SPECIFICATION:

Electrical Characteristics	Performance Limit	Conditions
AMPLITUOE MOOULATION:		
Depth ¹	0 to 99%	Output levels of +7 dBm and below; frequencies from 100 kHz to 990 MHz.
	0 to 30%	Output levels of +10 dBm and below; frequencies from 100 kHz to 990 MHz.
Resolution	1%	
Incidental Phase Modulation	<0.3 radian peak	30% AM depth and internal rates
Indicator Accuracy ¹	$\pm 2\%$, ($\pm 4\%$ of reading)	Depths 90% and internal rates
AM Rates:		
Internal	400 and 1 kHz, ±3%	
External	25 Hz to 25 kHz	1 dB bandwidth, ac coupled
AM Distortion	<1.5%	0 to 30% AM
(internal rates)	<3%	31 to 70% AM
	<5%	71 to 90% AM
FREQUENCY MODULATION		
Maximum Peak Oeviation $(\Delta f p k)^2$:	0	
Rates ≥60 Hz	99 kHz	0.1 to 123.5 MHz (fc)
	25 kHz	123.5 to 247 MHz (fc)
	50 kHz	247 to 494 MHz (fc)
	99 kHz	494 to 990 MHz (fc)
Rates <60 Hz	1600 x Rate	0.1 to 123.5 MHz (fc)
	400 x Rate	123.5 to 247 MHz (fc)
	800 x Rate	247 to 494 MHz (fc)
	1600 x Rate	494 to 990 MHz (fc)
		(FM not specified for
		$fc - \Delta fpk < 100 \text{ kHz})$
Resolution	0.1 kHz	Deviations <10 kHz
	1 kHz	Deviations ≥10 kHz

¹AM depth is further limited by the Indicator Accuracy specification.

 $^{^2}FM$ deviation is further limited by the Indicator Accuracy specification.

4-10. MODULATION TESTS (Cont'd)

SPECIFICATION: (Cont'd)

Electrical Characteristics	Performance Limit	Conditions
REQUENCY MODULATION (Cont'd):		
Incidental AM	<0.1%	<20 kHz peak deviation, internal rates and carrier frequency ≥500 kHz.
Indicator Accuracy ²	±5% of reading	At internal rates. Add $\pm 5\%$ if 250 Hz frequency increments are used.
FM Distortion (Total Harmonic Distortion)	<0.5%	100 Hz to 99 kHz peak deviations and internal rates.
FM Rates:		
Internal	400 Hz and 1 kHz, ±3%	
External	25 Hz to 25 kHz	1 dB bandwidth, ac coupled

DESCRIPTION:

All modulation specifications are verified by measuring the specified parameters on a modulation analyzer. Distortion is verified by measuring the demodulated output from the modulation analyzer on a distortion analyzer.

EQUIPMENT:

Modulation Analyzer	
Distortion Analyzer	HP 339A
AM/FM Test Source (required for modulation	
analyzer verification of incidental AM)	HP 11715A
Test Oscillator	
Cable (UG-210/U type N connectors)	HP 11500B
Cable (UG-88C/U BNC and dual banana	
plug connectors)	HP 11001A

PROCEDURE:

AM Indicator Accuracy

- 1. Connect the RF OUTPUT of the Signal Generator to the input of the modulation analyzer as shown in Figure 4-7.
- 2. Connect the modulation output of the modulation analyzer to the input of the distortion analyzer as shown in Figure 4-7.

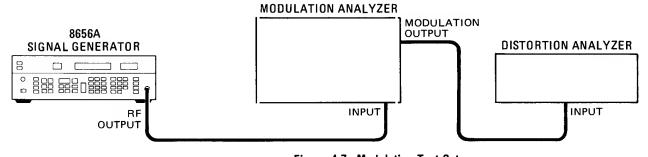


Figure 4-7. Modulation Test Setup

Model 8656A Performance Tests

PERFORMANCE TESTS

4-10. MODULATION TESTS (Cont'd)

3. Set the modulation analyzer as follows:

Measurement AM
Detector Peak+
HP Filter 300 Hz
LP Filter
FM De-Emphasis Off
Automatic OperationSelected

4. Set the Signal Generator as follows:

Frequency														100	V	ИHz
Amplitude														. +7	d	Bm
Modulation	1					1	1	k]	H	z	(I	nt	t.)	AN	1	50%

5. Set the AM depth to the values listed in the following table and verify that the measured results are within the limits specified.

AM Depth		Results	
for 100 MHz	Min.	Actual	Max.
10%	7.6%		12.4%
30%	26.8%		33.2%
70%	65.2%		74.8%
90%	84.4%		95.6%

6. Repeat step 5 with the Signal Generator set to frequencies of 240 MHz, 400 MHz, and 990 MHz.

AM Oepth		Results	
for 240 MHz	Min.	Actual	Max.
10%	7.6%		12.4%
30%	26.8%		33.2%
70%	65.2%		74.8%
90%	84.4%		95.6%

AM Depth		Results	
for 400 MHz	Min.	Actual	Max.
10%	7.6%		12.4%
30%	26.8%		33.2%
70%	65.2 %		74.8%
90%	84.4%		95.6%

4-10. MODULATION TESTS (Cont'd)

AM Depth		Results	
for 990 MHz	Min.	Actual	Max.
10% 30% 70% 90%	7.6% 26.8% 65.2% 84.4%		12.4% 33.2% 74.8% 95.6%

7. Select the modulation analyzer's 50 Hz HP filter. Verify the AM accuracy with the Signal Generator frequency at 100 MHz and internal 400 Hz AM modulation.

AM Depth		Results	
for 100 MHz	Min.	Actual	Max.
10%	7.6%		12.4%
30%	26.8%		33.2%
70%	65.2%		74.8%
90%	84.4%		95.6%

Incidental Phase Modulation

8. Set the modulation analyzer as follows:

Measurement	Phase Mo	odulation
HP Filter		300 Hz
LP Filter		15 kHz
Detector		Peak+

9. Set the Signal Generator as follows:

Frequency 100 kl	Hz
Frequency Increment100 kl	Hz
Amplitude+7 dB	3m
Modulation 1 kHz (Int.) AM 30	0%

10. Step the Signal Generator through the frequency range of $100\,\mathrm{kHz}$ to $990\,\mathrm{MHz}$ (use $10\,\mathrm{MHz}$ steps above $10\,\mathrm{MHz}$) and record the highest reading. The highest reading should not exceed the limit specified.

Signal Generator Frequency		Res	sult
Min.	Max.	Actual	Max.
100 kHz	990 MHz		<0.3 radian peak

Model 8656A Performance Tests

PERFORMANCE TESTS

4-10. MODULATION TESTS (Cont'd)

AM Distortion

11. Set the modulation analyzer as follows:

Measurement	AM
HP Filter	$300~\mathrm{Hz}$
LP Filter	$15~\mathrm{kHz}$
Detector	Peak+

12. Set the distortion analyyer as follows:

Function	Distortion
Analyzer Input Select	Distortion
Frequency	1 kHz

13. Set the Signal Generator as follows:

Frequency		10 MHz
Amplitude		+7 dBm
Modulation .	1 kHz (Ir	nt.) AM 50%

14. Set the AM depth to the values listed in the following table and verify that the measured results do not exceed the limits specified.

AM Depth	Res	ults
for 100 MHz	Actual	Max.
30% 70% 90%		<1.5% <3.0% <5.0%

15. Repeat step 13 with the Signal Generator set to frequencies of 240 MHz, $400\,\mathrm{MHz}$, and $990\,\mathrm{MHz}$.

Resi	ults
Actual	Max.
	<1.5%
	<3.0%
	<5.0%

AM Depth	Res	sults
for 990 MHz	Actual	Max.
30%		<1.5%
70% 90%		<3.0% <5.0%

AM Depth	Resu	ılts
for 400 MHz	Actual	Max.
30% 70% 90%		<1.5% <3.0% <5.0%

4-10. MODULATION TESTS (Cont'd)

FM Indicator Accuracy

16. Set the modulation analyzer as follows:

Measurement	FM
Detector	Peak+
HP Filter	300 Hz
LP Filter	3 kHz

17. Set the Signal Generator as follows:

Frequency 10	00 MHz
Amplitude	-7 dBm
Modulation 1 kHz (Int.) FM	I 5 kHz

18. Set the FM deviation to the values listed in the following table and verify that the measured results are within the limits specified.

FM Deviation	Results		
for 100 MHz	Min.	Actuai	Max.
5.0 kHz 30.0 kHz 70.0 kHz 99.0 kHz	4.75 kHz 28.50 kHz 66.50 kHz 94.05 kHz		5.25 kHz 31.50 kHz 73.50 kHz 103.95 kHz

Incidental AM

NOTE

The incidental AM specification of the Signal Generator is not equivalent to the published specification of the HP 8901A Modulation Analyzer. To make a valid incidental AM measurement, the incidental AM of the modulation analyzer must be four times better than the specification being tested. In order to verify that the incidental AM of the modulation analyzer is adequate to measure the Signal Generator's incidental AM specification, the incidental AM of the modulation analyzer must be verified to ensure the validity of the measurement. If the Signal Generator's incidental AM is measured frequently, it is not necessary to verify the incidental AM of the modulation analyzer each time; however, it is recommended that it be verified monthly to ensure an accurate measurement.

- 19. Verify the incidental AM of the modulation analyzer as follows:
 - a. Connect the FM $\div 4$ output of the AM/FM test source to the input of the modulation analyzer and the 50Ω output of the test oscillator to the audio input of the AM/FM test source, as shown in Figure 4-8.
 - b. Set the modulation analyzer as follows:

Measurement Frequency

4-10. MODULATION TESTS (Cont'd)

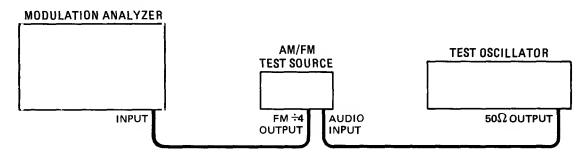


Figure 4-8. Modulation Analyzer Incidental AM Verification Test Setup

c. Set the AM/FM test source as follows:

Test Mode FM

- d. Tune the carrier frequency on the AM/FM test source for a modulation analyzer reading of 100 ± 0.1 MHz.
- e. Set the test oscillator as follows:

f. Set the modulation analyzer as follows:

MeasurementFMDetectorPeak+HP Filter300 HzLP Filter3 kHz

- g. Increase the output of the test oscillator by rotating the Amplitude Coarse control clockwise until the modulation analyzer indicates 20.0 ±0.1 kHz peak deviation.
- h. Set the modulation analyzer as follows:

- i. The modulation must be <0.02% AM to test the incidental AM of the Signal Generator.
- 20. Set the modulation analyzer as follows:

MeasurementAMDetectorPeak+HP Filter300 HzLP Filter3 kHz

21. Set the Signal Generator as follows:

22. Connect the equipment as shown in Figure 4-7, Modulation Test Setup.

4-10. MODULATION TESTS (Cont'd)

23. Set the Signal Generator frequency to a value within the range specified in the following table and verify that the measured result does not exceed the limit specified.

Signal Generator		Res	sult
Min.	Max.	Actual	Max.
500 kHz	990 MHz		<0.1%

FM Distortion

24. Set the modulation analyzer as follows:

Measurement	. FM
Detector I	Peak+
HP Filter 3	00 Hz
LP Filter	3 kHz

25. Set the distortion analyzer as follows:

Function	.Distortion
Analyzer Input Select	. Distortion
Frequency	1 kHz

26. Set the Signal Generator as follows:

Frequency	100.0 MHz
Amplitude	+7 dBm
Modulation 1 l	kHz (Int.) FM

- 27. Connect the equipment as shown in Figure 4-7, Modulation Test Setup.
- 28. Verify that the measured Total Harmonic Distortion does not exceed 0.5%.
- 29. Set the Signal Generator FM deviation to a value within the range specified in the following table and verify that the measured result does not exceed the limit specified.

FM De	viation	Res	ult
Min.	Max.	Actual	Max.
100 Hz	99 kHz		<0.5%

NOTE

At peak deviations less than 3 kHz, residual FM and other types of FM distortion become a greater portion of the distortion reading. If the distortion falls within tolerance at or above 3 kHz, it may be safely assumed that the Signal Generator meets the test requirements.

4-11. OUTPUT LEAKAGE TESTS

SPECIFICATION: Leakage: Leakage limits are within those specified in MILSTD 461A, VDE 0871, and

CISPR Publication 11. Furthermore, less than 1.0 μ V is induced in a two-turn, 2.5 cm (1-inch) diameter loop held 2.5 cm (1 inch) away from the front surface and measured

into a 50-ohm receiver.

DESCRIPTION

Output leakage is verified by holding a loop antenna 2.5 cm (1 inch) from the front surface of the Signal Generator and measuring the resulting signal with a spectrum analyzer.

The loop antenna is suspended in a molding so that when the molding is in contact with a surface, the loop antenna is one inch from the surface.

NOTE

The use of a screen room may be necessary to reduce external radiated interference.

EQUIPMENT

 One-Inch Loop Antenna
 HP 08640-60501

 26 dB Amplifier
 HP 8447D

 Spectrum Analyzer
 HP 8558A

 50-ohm Termination (3 required)
 HP 11593A

PROCEDURE:

1. Connect equipment as shown in Figure 4-9.

NOTE

To avoid disturbing the antenna's field and causing measurement error, grasp the antenna at the end that has the BNC connector.

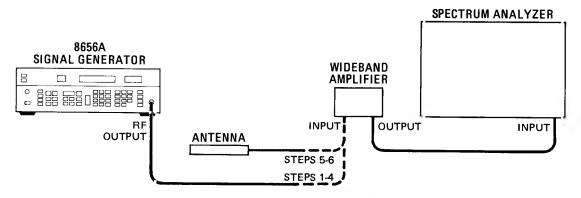


Figure 4-9. Output Leakage Test Setup

2. Set the Signal Generator as follows:

Frequency 100 MHz
Amplitude107 dBm
Modulation Off
RESET/STBY/ONON

4-11. OUTPUT LEAKAGE TESTS (Cont'd)

3. Set the spectrum analyzer as follows:

Center Frequency	100 MHz
Input Attenuation	40 dB
Reference Level	20 dBm
Frequency Span/Div	20 MHz
Resolution Bandwidth	

- 4. View the signal on the spectrum analyzer and adjust the reference level controls of the spectrum analyzer to set the -107 dBm signal from the Signal Generator to a reference graticule line on the spectrum analyzer display. Set the video filter to further separate the signal from the noise. Disconnect the Signal Generator from the spectrum analyzer and connect 50-ohm terminations to the Signal Generator RF OUTPUT connector.
- 5. Connect the one-inch loop antenna to the analyzer through the 26 dB amplifier as shown in Figure 4-9. Hold the end of the loop antenna cylinder in contact with the front surfaces of the Signal Generator. All signals and noise should be below the reference graticule line (i.e., below -107 dBm).

	<-107 dBm (<1.0 μ V) at 100 MHz
6.	Repeat step 5 for frequencies of 300, 500, 700, 900, and 990 MHz.

Table 4-2. Performance Test Record (1 of 4)

	tt-Packard Company 8656 A				
Signal Generator Serial Number Date					
Para.	T	Results			
No.	Test	Min.	Actual	Max.	
4-7.	SPURIOUS SIGNALS:				
	Harmonics Non-Harmonics (>5 kHz from carrier) Sub-Harmonics			-30 dBc -60 dBc None	
	RESIDUAL MODULATION CW MODE:				
	AM (0.05 to 15 kHz Post Detection Noise Bandwidth) 0.1 to 990 MHz			3.16 mVrms (-70 dBc)	
	FM (0.3 to 3 kHz Post Detection Noise Bandwidth) 0.1 to 123.5 MHz 123.5 to 247 MHz 247 to 494 MHz 494 to 990 MHz			15 Hz rms 3 Hz rms 6 Hz rms 15 Hz rms	
	FM (0.05 to 15 kHz Post Detection Noise Bandwidth) 0.1 to 123.5 MHz 123.5 to 247 MHz 247 to 494 MHz 494 to 990 MHz			30 Hz rms 8 Hz rms 16 Hz rms 30 Hz rms	
4-8.	HIGH LEVEL ACCURACY AND FLATNESS				
	Absolute Level Accuracy (+13 dBm to -67 dBm; 100 kHz to 990 MHz)	+11.5 +6.5 +1.5 -3.5 -8.5 -13.5 -18.5 -23.5 -28.5 -33.5 -38.5 -48.5 -53.5		+14.5 dBm +9.5 dBm +4.5 dBm -0.5 dBm -5.5 dBm -10.5 dBm -15.5 dBm -20.5 dBm -30.5 dBm -30.5 dBm -40.5 dBm -45.5 dBm -50.5 dBm	

Table 4-2. Performance Test Record (2 of 4)

Para.		Results			
No.	Test	Min.	Actual	Max.	
4-8.	HIGH LEVEL ACCURACY AND FLATNESS:				
Cont'd	Absolute Level Accuracy (+13 to -67 dBm;	-58.5		-55.5 dBm	
	100 kHz to 990 MHz)	-63.5		$-60.5~\mathrm{dBm}$	
		-68.5		$-65.5~\mathrm{dBm}$	
	Level Flatness (0.0 dBm)	-1.0		+1.0 dB	
4-9.	LOW LEVEL ACCURACY				
	Absolute Level Accuracy (-67 dBm to -127 dBm; 100 kHz to 990 MHz)				
	-67 dBm to -127 dBm 10 MHz	-1.5		+1.5 dB	
	100 MH z	-1.5		+1.5 dB	
	201 MHz	-1.5		+1.5 dB	
	801 MHz	-1.5		+1.5 dB	
	901 MHz	-1.5		+1.5 d B	
4-10.	AMPLITUDE MODULATION				
	Indicator Accuracy				
	(Internal 1 kHz source)			10.4%	
	100 MHz 10%	7.6		12.4%	
	30%	26.8		33.2% 74.8%	
	70%	65.2 84.4		95.6%	
	90% 240 MHz 10%	7.6		12.4%	
	30%	26.8		33.2%	
	70%	65.2		74.8%	
	90%	84.4		95.6%	
	400 MHz 10%	7.6		12.4%	
	30%	26.8		33.2%	
	70%	65.2		74.8%	
	90%	84.4		95.6%	
	990 MHz 10%	7.6		12.4%	
	30%	26.8		33.2%	
	70%	65.2		74.8%	
	90%	84.4		95.6%	
	(Internal 400 Hz source)				
	100 MHz 10%	7.6		12.4%	
	30%	26.8		33.2%	
	70%	65.2		74.8%	
	90%	84.4		95.6%	
	Incidental Phase Modulation				
	(30% AM Internal Rates)		Ì	0.0 1	
	100 kHz to 990 MHz			0.3 radia	
				peak	
			1		

Model 8656A Performance Tests

Table 4-2. Performance Test Record (3 of 4)

Para.	Tool	Results			
No.	Test	Min.	Actual	Max.	
4-10.	AMPLITUDE MOOULATION:				
Cont'd)	AM Distortion				
	(Internal 1 kHz Source)				
	100 MHz 30%			1.5%	
	70%			3.0%	
	90%			5.0%	
	240 MHz 30%			1.5%	
	70%			3.0%	
	90%			5.0%	
	400 MHz 30%			1.5%	
	70%			3.0%	
	90%			5.0%	
	990 MHz 30%			1.5%	
	70%			3.0%	
	90%			5.0%	
	FREQUENCY MODULATION				
	Indicator, Accuracy				
	(Internal 1 kHz Source)				
	100 MHz 5.0 kHz	4.75 kHz		5.25 kHz	
	30.0 kHz	28.50 kHz		31.50 kHz	
	70.0 kHz	66.50 kHz		73.50 kHz	
	99.0 kHz	94.05 kHz		103.95 kHz	
	Incidental AM				
	(<20 kHz Peak Deviation, Internal Rates and Carrier Frequency 500 kHz to 990 MHz).			0.1%	
	FM Distortion				
	(Internal 1 kHz Source)			2	
	100 Hz to 99 kHz Deviation			0.5%	
				1	

Table 4-2. Performance Test Record (4 of 4)

Para.	Test	Results			
No.	1691	Min.	Actual	Max.	
4-11.	OUTPUT LEAKAGE	•			
4-11.	Leakage (Two-turn 2.5 cm diameter loop held 2.5 cm away from front surface)			-107 dBm (1.0 μV) at 100 mHz -107 dBm (1.0 μV) at 300 mHz -107 dBm (1.0 μV) at 500 mHz -107 dBm (1.0 μV) at 700 mHz -107 dBm (1.0 μV) at 990 mHz -107 dBm (1.0 μV)	

SECTION V ADJUSTMENTS

5-1. INTRODUCTION

This section contains adjustments and checks that assure peak performance of the Signal Generator. The instrument should be readjusted after repair or failure to pass a performance test. Allow a 30-minute warm-up prior to performing the adjustments. Removal of the instrument top and bottom covers is required for most adjustments. Included in this section are test setups and illustrations that show the location of each assembly. Removal and disassembly procedures are given in Section VIII. To determine which performance tests and adjustments to perform after a repair, refer to paragraph 5-5, Post-Repair Adjustments.

5-2. SAFETY CONSIDERATIONS

Refer to the Safety Considerations page found at the beginning of this manual for a summary of the safety information.

5-3. EQUIPMENT REQUIRED

Most adjustment procedures contain a list of required test equipment. The test equipment is also identified by callouts in the test setup diagrams, where included. If substitutions must be made for the specified test equipment, refer to the Recommended Test Equipment table in Section I of this manual for the minimum specifications. It is important that the test equipment meet the critical specifications listed in the table if the Signal Generator is to meet its performance requirements.

5-4. FACTORY-SELECTED COMPONENTS

Factory-selected components are identified on the schematics and parts lists by an asterisk (*) which follows the reference designator. The nominal value or range of the components is shown. Manual change sheets will provide updated information pertaining to selected components. Table 5-1 lists

Table 5-1. Factory Selected Components

Reference Designator Service Sheet A4R6,10 1		Range of Values	Selection Attenuator pad selected for – 8 dBm input to mixer A4U1. .9Ω Measure power level at RF Test Point A4TP3 with A4R6 and A4R7 disconnected. Select pad values for –8 dBm to mixer. Level must be checked whenever the A3, A4, A8, or FL1 assemblies are replaced.			
	1	110Ω to 287Ω				
A4R7	1	17.8Ω to 61.9Ω				
				R6, 10	R7	Attenuation (db)
				110	61.9	9
				121	51.1	8
				133	46.4	7
				147	38.3	6
				178	31.6	5
				215	23.7	4
		<u> </u>		287	17.8	3
A4C22	1	0 or 1 pF	Removed to el	imi n ate spi	urs at 690 to	o 740 MHz.
A6R4	4	75Ω to 147Ω	Selected to bias U1 so noise and harmonics are as low as possible in both the divide-by-2 and divide-by-4 bands. Refer to Specific tions and Supplemental Characteristics tables in Section I.			

Adjustments Model 8656A

FACTORY-SELECTED COMPONENTS (Cont'd)

the reference designator, the basis used for selecting a particular value, the nominal value range, and the service sheet where the component part is shown.

5-5. POST-REPAIR ADJUSTMENTS

Table 5-2 lists the adjustments related to repairs or replacement of any of the assemblies.

5-6. RELATED ADJUSTMENTS

The procedures in this section can be done in any order; however, it is suggested that the power supply voltage, reference voltage, and audio oscillator adjustments be performed first. Changes in these adjustments can affect other adjustments, especially level and modulation accuracies.

WARNING

Maintenance described herein is performed with power supplied to the instrument, and protective covers removed. Such maintenance should be performed only by service-trained personnel who are aware of the hazards involved (for example, fire and electrical shock). Where maintenance can be performed without power applied, the power should be removed.

Table 5-2. Post-Repair Adjustments

Assembly Repaired or Replaced	Reference Service Sheet No.	Related Adjustments (Paragraph)
A1	18	None
A2	18 thru 21	None
A 3	8	5-16
A 3	9	None
A 3	10	5-23
A 3	11	None
A 3	12	5-22
A 3	13	5-14, 5-15
A 4	1	5-12
A 4	2	5-11, 5-13
A 5	1	None
A 6	4 and 6	5-19, 5-21
A 6	5	5-20
A 7	14 thru 17	None
A 8	$1\ { m and}\ 3$	5-17, 5-18
A 9	7	5-24
A 10	6	5-8, 5-9, 5-10, 5-19 and 5-21
A10	12	5-12
A 10	22	5-7
A11 thru A15	13 thru 17, and 22	None
A16	22	5-25

5-7. POWER SUPPLY VOLTAGE ADJUSTMENT

REFERENCE:

Service Sheets 8 and 22.

DESCRIPTION: The +5.4 Vdc power supply is adjusted for +5.25 Vdc ± 0.02 Vdc at Test Point A3TP10

using a digital multimeter.


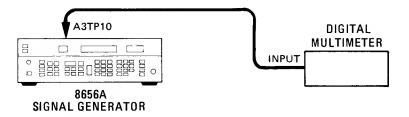



Figure 5-1. +5.4 Vdc Power Supply Adjustment Setup

 $\begin{tabular}{lllll} Frequency & ... &$

3. Connect the digital multimeter to Test Point A3TP10 (+5V). Adjust A10R79 (+5.4V ADJ) for a reading of +5.25 Vdc ± 0.02 Vdc on the digital multimeter.

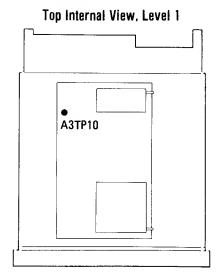

Bottom Internal View, Level 4

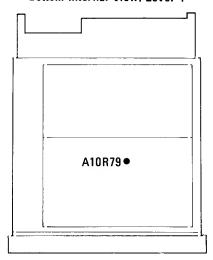

5-8. REFERENCE VOLTAGE ADJUSTMENT

REFERENCE: Service Sheet 6.

DESCRIPTION: The +2 Vdc reference is adjusted for +2.000 Vdc ± 0.004 Vdc at Test Point A10J6 pin 4

using a digital multimeter.


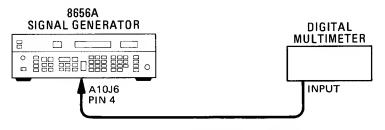


Figure 5-2. +2 Vdc Reference Adjustment Setup

EQUIPMENT:	Digital Multimeter HP 3465A
PROCEDURE:	1. Set the digital multimeter as follows: Function
	2. Set the Signal Generator as follows: Frequency

3.	Connect the digital multimeter to Test Point
	A10J6 pin 4 (\pm 2V (R)) and adjust A10R3 (\pm 2V
	REF ADJ) for a reading of 2.000 Vdc ± 0.004
	Vdc on the digital multimater

Bottom Internal View, Level 4

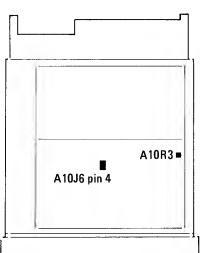

5-9. AUDIO OSCILLATOR LEVEL ADJUSTMENT

REFERENCE: Service Sheet 6.

DESCRIPTION: The internal 1 kHz modulation source is adjusted to $0.707 \, \text{Vrms} \pm 0.007 \, \text{Vrms}$ at Test


Point A10J6 pin 6. Then, the internal 400 Hz modulation source is checked to ensure that it is within the same limits.



Figure 5-3. Audio Oscillator Level Adjustment Setup

- 3. Connect the digital multimeter to Test Point A10J6 pin 6.
- 4. Adjust A10R16 (OSC ADJ) for a 0.707 Vrms ±0.007 Vrms reading on the digital multimeter.
- 5. Select the internal 400 Hz modulation source. Check that the 400 Hz oscillator level is within 0.707 Vrms ±0.007 Vrms. If it is not, repeat step 4 until both readings are within the specified limits.

Bottom Internal View, Level 4

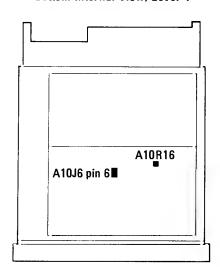

5-10. AM OFFSET ADJUSTMENT

REFERENCE:

Service Sheet 6.

DESCRIPTION: The dc offset of the AM Offset Buffer is adjusted for 0.000 Vdc ±0.001 Vdc at Test Point A10J6 pin 12 with the reference inputs to the Level DAC and AM% DAC grounded and the digital input to each programmaticaly set to zero.

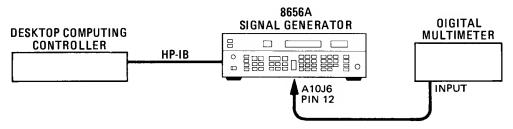


Figure 5-4. AM Offset Adjustment Setup

L'()	11	IDI	иш	NT:
1.00			עיו נע	1 7 1 .


General I/O & Extended I/O ROM..........HP 98213A HP-IB Interface HP 98034A

PROCEDURE:

1. Set the digital multimeter as follows:

Function	\dots Vdc
Range	. 200 mV

- 2. Set the Signal Generator modulation off.
- 3. Short INPUT 1 and INPUT 2 Test Points to ground.
- 4. Connect the Desktop Computing Controller using the HP-IB Interface to the HP-IB connector on the rear panel of the Signal Generator.
- 5. Connect the digital multimeter to A10J6 pin

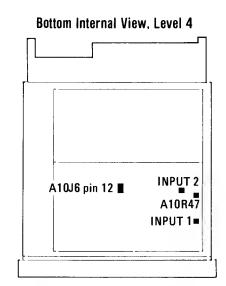

6. Program the Desktop Computing Controller to set the digital inputs to the Level DAC and AM% DAC to zero as follows:

[Controller talk and Signal Generator listen] "variable name" rem 7; wrt 707, "D0"

NOTE

To determine the HP-IB address of the Signal Generator, press the HP-IB ADRS key and read the internally-set, decimal address in the MODULATION Display. The factory set address is 07.

- 7. Adjust A10R47 (OFFSET ADJ) for $0.000 \text{ Vdc} \pm 0.001 \text{ Vdc}$.
- 8. Remove the two shorts installed in step 3.

5-11. 715 MHz SIDEBAND ADJUSTMENT

REFERENCE: Service Sheet 2.

DESCRIPTION: The 715 MHz Sideband adjustment is made so that both inputs to the Sideband Comparator are equal with the Signal Generator frequency set to 715 MHz. The dc voltage between Test Points A4TP10 and A4TP11 (which are the inputs to the Sideband Comparator) is adjusted to be less than 0.007 Vdc as the frequency is returned to 715 MHz from both 690 and 740 MHz in 5 MHz steps.

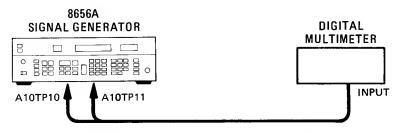


Figure 5-5. 715 MHz Sideband Adjustment Setup

EQUIPMENT:

PROCEDURE:

- 1. Set the digital multimeter as follows: FunctionVdc Range 200 mV
- 2. Set the Signal Generator as follows: Frequency Increment 50 MHz Amplitude Any Modulation Off

CAUTION

DO NOT CONNECT TP13 to TP16 when the test points are not grounded.

- 3. Connect the digital multimeter input between Test Points A4TP10 and A4TP11. Short Test Points A4TP13 and A4TP16 to ground.
- A4TP11 A4R52-A4TP10: A4TP16 A4TP13

Top Internal View, Level 2

- 4. Increment the frequency up to 765 and back to 715 MHz.
- 5. Adjust A4R52 (715 MHz ADJ) for 0 Vdc ± 0.007 Vdc.
- 6. Remove the two shorts installed in step 3.

5-12. NOTCH FILTER ADJUSTMENTS

REFERENCE:

Service Sheet 1.

DESCRIPTION: Each one of the Notch Filters is adjusted using a signal source set to 50, 100, 150, 200, 250, and $300\,\mathrm{MHz}$. The $50\,\mathrm{to}\,250\,\mathrm{MHz}$ Notch Filters are de-selected one at a time to pass that frequency. With each filter de-selected and its output centered on a spectrum analyzer display, the Notch Filter is then re-selected and adjusted for a minimum signal output on the spectrum analyzer.

> The two 300 MHz Notch Filters are in the circuit all of the time. A 300 MHz signal source is applied to the input of each filter and its output is connected to a spectrum analyzer. Each filter is then adjusted for a minimum signal output.

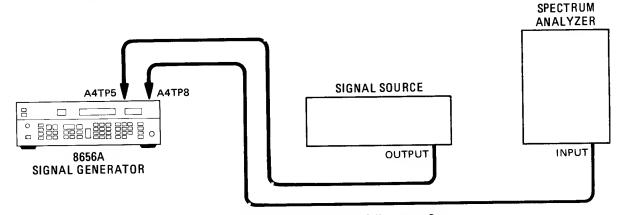



Figure 5-6. Notch Filters Adjustment Setup

EQUIPMENT:	Signal Source
	Adapters (2) N(m) to BNC(f)
PROCEDURE:	1. Set the signal source as follows:
	Frequency 250.000 MHz Counter Mode Expand X10 Level -20 dBm Modulation Off
	2. Set the spectrum analyzer as follows:
	Optimum Input10 dBm Reference Level0 dBm Frequency Span/Div500 kHz Resolution Bandwidth30 kHz
	3. Set the Signal Generator as follows:
	Frequency


5-12. NOTCH FILTER ADJUSTMENTS (Cont'd)

PROCEDURE: (Cont'd)

- 4. Connect the signal source to the Signal Generator at RF Test Point A4TP5 using an adapter (HP part no. 1250-1598).
- 5. Connect the spectrum analyzer to the Signal Generator at RF Test Point A4TP8 using an adapter (HP part no. 1250-1598).
- 6. Adjust the spectrum analyzer to center the 250 MHz signal on the spectrum analyzer display.
- 7. Step the frequency down 50 MHz to 900 MHz.
- 8. Adjust A4C53 (250 MHz IF ADJ) for a minimum signal output on the spectrum analyzer display.
- 9. Tune the signal source to 200.000 MHz and center the 200 MHz signal on the spectrum analyzer display.
- 10. Step the frequency down 50 MHz to 850 MHz.
- 11. Adjust A4L36 (200 MHz IF ADJ) for a minimum signal output on the spectrum analyzer display.
- 12. Tune the signal source to 150.000 MHz and center the 150 MHz signal on the spectrum analyzer display.
- 13. Step the frequency down 50 MHz to 800 MHz.
- 14. Adjust A4L37 (150 MHz IF ADJ) for a minimum signal output on the spectrum analyzer display.
- 15. Tune the signal source to 100.000 MHz and center the 100 MHz signal on the spectrum analyzer display.
- 16. Step the frequency down 50 MHz to 750 MHz.
- 17. Adjust A4L38 (100 MHz IF ADJ) for a minimum signal output on the spectrum analyzer display.
- 18. Tune the signal source to 50.000 MHz and center the 50 MHz signal on the spectrum analyzer display.

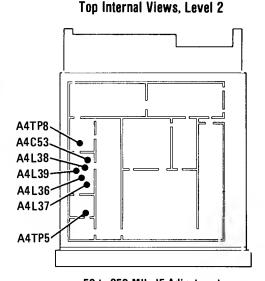

50 to 250 MHz IF Adjustments (Steps 4—20)

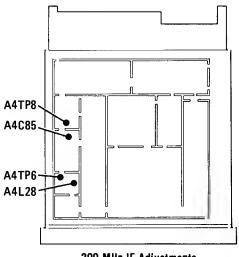

300 MHz IF Adjustments (Steps 21—26)

5-12. NOTCH FILTER ADJUSTMENTS (Cont'd)

PROCEDURE: (Cont'd)

- 19. Step the frequency up 50 MHz to 800 MHz.
- 20. Adjust A4L39 (50 MHz IF ADJ) for a minimum signal output on the spectrum analyzer display.
- 21. Connect the spectrum analyzer to the Signal Generator at RF Test Point A4TP6 using an adapter (HP part no. 1250-1598).
- 22. Tune the signal source to 300.000 MHz and center the 300 MHz signal on the spectrum analyzer display.
- 23. Adjust A4L28 (300 MHz IN IF ADJ) for a minimum signal output on the spectrum analyzer display.
- 24. Connect the spectrum analyzer to the Signal Generator at RF Test Point A4TP8 using an adapter (HP part no. 1250-1598).
- 25. Connect the signal source to the Signal Generator at RF Test Point A4TP6 using an adapter (HP part no. 1250-1598) and bypass A4L28 by placing a jumper across it.
- 26. Adjust A4C85 (300 MHz IF ADJ) for a minimum signal output on the spectrum analyzer display. Remove the jumper across A4L28.

5-13. HIGH FREQUENCY LOOP OFFSET ADJUSTMENT

REFERENCE: Service Sheet 2.

DESCRIPTION: The tune voltage ramp from the Loop Amplifier is disconnected from the High Frequency Oscillator Assembly—A5 and then it is adjusted for a symmetrical ramp using

an oscilloscope.

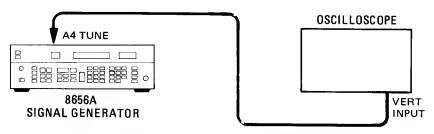


Figure 5-7. High Frequency Loop Offset Adjustment Setup

EQUIPMENT:	Oscilloscope	HP 1222A
EQUITMENT:	Oscinoscope	


PROCEDURE:

1. Set the oscilloscope as follows:

2. Set the Signal Generator as follows:

- 3. Disconnect the TUNE voltage wire (white-black-orange) from the High Frequency Oscillator Assembly—A5.
- 4. Connect oscilloscope to TUNE voltage wire (white-black-orange).
- 5. Short Test Point A4TP13 to ground.

Top Internal View, Level 2

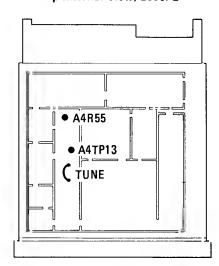

- 6. Adjust A4R55 (OFFSET ADJ) for the most symmetrical ramp as analyzed on the oscilloscope (equal rise and fall times) as shown in Figure 5-8.
- 7. Remove the oscilloscope and reconnect the TUNE voltage wire to the High Frequency Oscillator Assembly—A5.
- 8. Remove the short installed in step 5.

5-13. HIGH FREQUENCY LOOP OFFSET ADJUSTMENT (Cont'd)

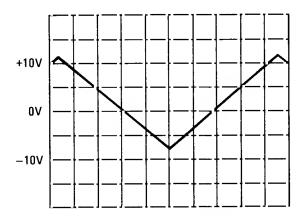


Figure 5-8. Tune Voltage Waveform

5-14. 50 MHz REFERENCE OSCILLATOR FREQUENCY ADJUSTMENT

REFERENCE: Service Sheet 13.

DESCRIPTION: The internal 50 MHz Reference Oscillator frequency is adjusted to $50.0000 \, \text{MHz} \pm 100$

Hz at A3J5 using a frequency counter.

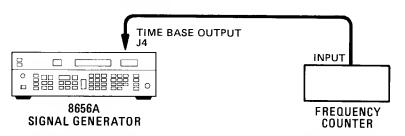


Figure 5-9. 50 MHz Reference Oscillator Frequency Adjustment Setup


NOTE

If the Signal Generator has Option 001 installed disconnect coaxial cable A16W2 from the rear panel TIME BASE INPUT connector J3.

PROCEDURE:

- 1. Disconnect coaxial cable W5 from A3J5 (50 MHz Reference Oscillator output). Connect the frequency counter to A3J5 using the appropriate cable and adapters.
- 2. Adjust A3R110 (TB ADJ) for a frequency counter reading of 10.0000 MHz ±20 Hz.
- 3. Reconnect A16W2 to J3 if the Signal Generator has Option 001 installed.

Top Internal View, Level 1

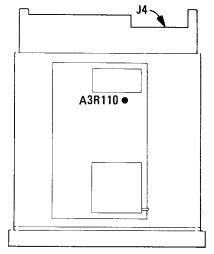

5-15. 50 MHz REFERENCE OSCILLATOR LEVEL ADJUSTMENT

REFERENCE: Service Sheet 13.

DESCRIPTION: The output power level of the 50 MHz Reference Oscillator is adjusted for maximum power at A3J5 using a power meter.

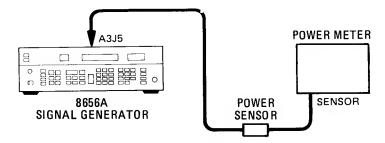


Figure 5-10. 50 MHz Reference Oscillator Level Adjustment Setup

EQUIPMENT:	Power Meter	HP 436A
	Power Sensor	
	Cable BNC(m) to SMC(f)	
	Adapter $N(f)$ to $BNC(f)$	
	Adapter BNC(f) to BNC(f)	

PROCEDURE:

- 1. Set the power meter with the power meter sensor connected as follows:
 - Mode dBm
- 2. Disconnect coaxial cable W5 from A3J5 (50 MHz Reference Oscillator output). Connect the power sensor to A3J5 using the appropriate cable and adapters.
- 3. Adjust A3C86 (50 MHZ LEVEL ADJ) for a maximum power meter reading. The reading should be +16 dBm or greater.

NOTE

Do not remove the 50 MHz Section covers for this adjustment.

4. Disconnect the power meter and reconnect W5 to A3J5.

Top Internal View, Level 1 A3C86 • A3J5

5-16. 60 TO 110 MHz OSCILLATOR FLATNESS ADJUSTMENT

REFERENCE: Service Sheet 8.

DESCRIPTION: The 60 to 110 MHz Low Frequency Oscillator is adjusted so that its output is \leq 0.3 dB at

100 and 110 MHz at A3J4 using a power meter.

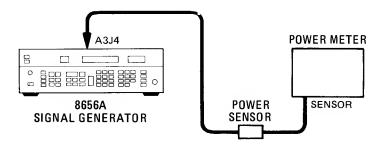


Figure 5-11. 60 to 110 MHz Oscillator Flatness Adjustment Setup


EQUIPMENT:	Power Meter	.HP	436A
	Power Sensor	.HP	8482A
	Adapter $N(f)$ to $BNC(m)$.HP	1250-0077
	Adapter $BNC(f)$ to $BNC(f)$.HP	1250-0080
	Cable BNC(m) to SMC(f)	.HP	08662-60080

PROCEDURE:

1. Set the power meter with the power sensor connnected as follows:

2. Set the Signal Generator as follows:

- 3. Disconnect coaxial cable W3 from A3J4 (60 to 110 MHz Oscillator output). Connect the power sensor to A3J4 using the appropriate cable and adapters.
- 4. Allow the reading on power meter to stabilize, then set the mode to dB (ref).

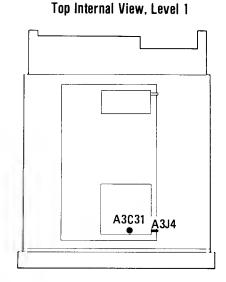

- 5. Adjust A3C31 (60 110 MHz FLATNESS ADJ) for a power meter difference of ≤1.3 dB as the frequency is stepped between 40 and 90 MHz in 10 MHz steps. The 60 to 110 MHz oscillator frequency will vary from 60 to 110 MHz.
- 6. Disconnect the power meter and reconnect W3 to A3J4.

5-17. 690 TO 740 MHz IF COMPENSATION ADJUSTMENT

REFERENCE: Service Sheets 1 and 3

DESCRIPTION: The power levels of the IF frequencies 690 to 740 MHz are measured at RF Test Point A4TP3 and adjusted for flatness within ±1.5 dB using a power meter.

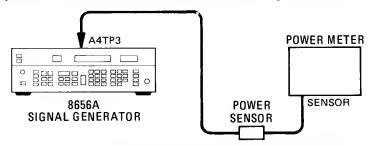


Figure 5-12. 690 to 740 MHz IF Compensation Adjustment Setup

EQUIPMENT:	Power Meter	
•	Power Sensor	HP 8482A
	Adapter Probe	
	Adapter $N(f)$ to $BNC(m)$	HP 1250-0077
	Adapter $BNC(f)$ to $BNC(f)$	HP 1250-0080
	Cable BNC (m) to SMC (f)	HP 08662-60080


PROCEDURE:

- 1. Set the power meter with the power sensor connected as follows:
- 2. Set the Signal Generator as follows:

Frequency 40	MHz
Frequency Increment	MHz
Amplitude	Any
Modulation	. Off

- 3. Zero the power meter and wait for zero LED to go out.
- 4. Connect the power sensor to the Signal Generator at RF Test Point A4TP3 using an adapter (HP part no. 1250-1598).

Top Internal View, Level 2

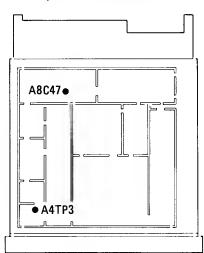

- 5. Step the Signal Generator frequency up in 10 MHz steps to 90 MHz recording the power meter reading at each frequency.
- 6. Step the Signal Generator to the frequency with the lowest reading and select the power meter dB (ref) mode.
- 7. Step the frequency up and down between 40 and 90 MHz and adjust A8C47 (COMP ADJ) until the maximum and minimum power meter readings are within 3 dB. The 690 to 740 MHz IF will then be flat to within ± 1.5 dB.

5-18. 400 MHz BANDPASS FILTER ADJUSTMENT

REFERENCE: Service Sheet 3.

 $DESCRIPTION: \ \ The 400\,MHz \ Bandpass \ Filter is \ adjusted \ for \ maximum \ power \ at \ RF \ Test \ Point \ A8TP3$

using a power meter.

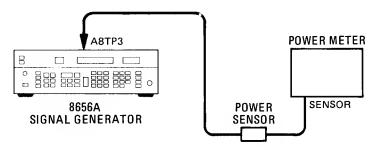


Figure 5-13. 400 MHz Bandpass Filter Adjustment Setup

PROCEDURE:


1. Set the power meter with the power sensor connected as follows:

2. Set the Signal Generator as follows:

Frequency Any
Amplitude-10 dBm
Modulation Off

- 3. Zero the power meter and wait for the zero LED to go out.
- 4. Connect the power sensor to the Signal Generator at RF Test Point A8TP3 using an adapter (HP part no. 1250-1598).
- 5. Adjust A8C31 (PEAK ADJ) for a maximum power meter reading.

Top Internal View, Level 2

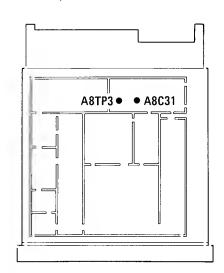

5-19. LEVEL AND ALC LOOP DETECTOR ADJUSTMENTS

REFERENCE: Service Sheets 4 and 6.

DESCRIPTION: First, the reference level to the Level Digital to Analog Converter (DAC) is adjusted to +7.00 dBm ± 0.02 dB. Then the detector bias reference level to the ALC Amplifier is

adjusted to -4.00 dBm ±0.02 dB.

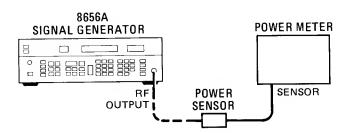


Figure 5-14. Level and ALC Loop Detector Adjustment Setup

PROCEDURE:


. Set the power meter with power sensor connected as follows:

2. Set the Signal Generator as follows:

NOTE

Before making the adjustment, all internal RF covers must be installed and the instrument must be warmed up for a minimum of 2 hours. (The internal RF top cover is removed to permit access).

Bottom Internal View, Level 4

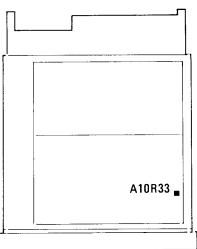


- 3. Connect the power sensor to the RF OUTPUT connector on the Signal Generator.
- 4. Set the Signal Generator RESET/STBY/ON switch to STBY and zero the power meter.
- 5. Wait for the power meter zero LED to go out, then set the RESET/STBY/ON switch to the ON position.
- 6. Adjust A10R33 (LEVEL ADJ) for a reading of +7.00 dBm ± 0.02 dB on the power meter.

5-19. LEVEL AND ALC LOOP DETECTOR ADJUSTMENTS (Cont'd)

PROCEDURE: (Cont'd)

- 7. Step the Signal Generator amplitude down to -4 dBm.
- 8. Adjust A6R35 (DET ADJ) for a reading of -4.00 dBm ± 0.02 dB on the power meter.
- 9. Repeat steps 6, 7 and 8 until both readings are within the required tolerances.

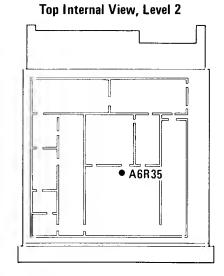

5-20. HETERODYNE BAND ACCURACY AND FLATNESS ADJUSTMENTS

REFERENCE: Service Sheet 5.

DESCRIPTION: The accuracy and flatness of the heterodyne band are adjusted for an equal power difference from 0 dBm at 10 MHz and 123 MHz and power variation not greater than ± 0.5 dB for frequencies between 3 MHz and 123 MHz.

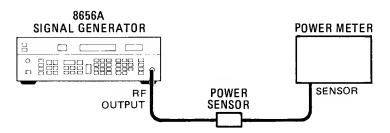


Figure 5-15. Heterodyne Band Accuracy and Flatness Adjustment Setup

PROCEDURE:


- 1. Set the power meter with the power sensor connected as follows:
 - ModedBm
- 2. Set the Signal Generator as follows:

Frequency 10 MH	\mathbf{z}
Frequency Increment 5 MH	[z]
Amplitude 0 dBr	m
Modulation Or	ff

- 3. Connect the power sensor to RF OUTPUT connector on the Signal Generator.
- 4. Set the Signal Generator RESET/STBY/ON switch to STBY and zero the power meter.
- 5. Wait for the power meter zero LED to go out, then set the RESET/STBY/ON switch to the ON position.
- 6. Adjust A6C56 (ACC ADJ) for a 0 dBm ±0.5 dB reading on the power meter.
- 7. Change the frequency to $123\,\mathrm{MHz}$ and adjust A6C57 (FLAT ADJ) for a $0\,\mathrm{dBm}\pm0.5$ dB reading on the power meter.

NOTES

1. If A6C57 does not have the range to adjust the amplitude at 123 MHz to 0.0 dBm ± 0.5 dB, repeat step 6 adjusting A6C56 to increase or decrease the amplitude until both adjustments are within the specified limits. A6C56 is used to shift the amplitude level of the heterodyne band.

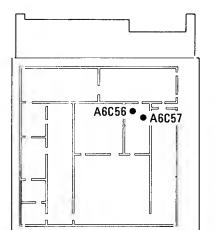

Top Internal View, Level 2

5-20. HETERODYNE BAND ACCURACY AND FLATNESS ADJUSTMENTS (Cont'd)

PROCEDURE: (Cont'd)

NOTES (Cont'd)

- 2. This note applies to instruments with serial prefixes 2032A and below. If A6C56 cannot be adjusted so A6C57 (note 1) will meet the specification, change to the capacitor listed in Table 6-3 (2.5—5.5 pF) and repeat this procedure.
- 8. Step the frequency between 3 MHz and 123 MHz. The amplitude variation from maximum to minimum should not exceed 1 dB. If amplitude variation is greater than 1 dB repeat steps 6 and 7 to compensate the flatness so that amplitude remains within 0.0 dBm ± 0.5 dB.

5-21. AM% AND ALC LOOP AM ADJUSTMENTS

REFERENCE: Service Sheets 4 and 6.

DESCRIPTION: The reference level to the AM% Digital to Analog Converter (DAC) is adjusted for an average amplitude modulation of 21.4%. The AM reference to the ALC Amplifier is adjusted for minimum distortion of the modulation.

NOTE

The AM Offset, Level, and Heterodyne Flatness adjustments must be performed before performing these adjustments. Refer to paragraphs 5-10, 5-19 and 5-20.

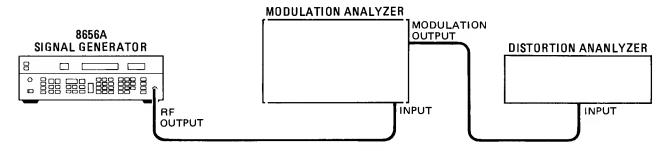


Figure 5-16. AM% and ALC Loop AM Adjustments Setup

EQUIPMENT	Modulation Analyzer	.HP	8901A
	Distortion Analyzer	.HP	339 A
	AM/FM Test Source (required modulation		
	analyzer verification of incidental AM)	.HP	11715 A
	Test Oscillator	.HP	651B
	Cable (UG-210/U type N connectors)	.HP	11500B
	Cable (UG-88C/U BNC and dual banana plug		
	connectors)	.HP	11001 A

PROCEDURE:

1. Set the modulation analyzer as follows:

	DetectionAVG
	HP Filter 50 Hz
	LP Filter
2.	Set the Signal Generator as follows:
	Frequency
	Amplitude+4 dBm
	Modulation 1 kHz (Int.) AM 30%
	Amplitude Increment 8 dB
	-

Measurement AM

3. Adjust A10R32 (AM% ADJ) for a reading of 21.40% on the modulation analyzer.

NOTE

Do not remove any of the internal RF covers for this adjustment.

A10R32 =


Bottom Internal View, Level 4

5-21. AM% AND ALC LOOP AM ADJUSTMENTS (Cont'd)

4. Set the Signal Generator as follows:

Frequency				 					 . 1	123	M	Hz	Z
Amplitude				 					 	-4	dl	Вm	1
Modulation				 					 	AM	[7	0%	ó

5. Adjust A6R30 (AM ADJ) for a minimum reading on the Distortion Analyzer. Typically the distortion is less than 3%.

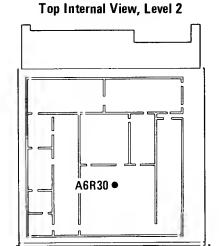

5-22. FM DEVIATION ADJUSTMENT

REFERENCE: Service Sheet 12.

DESCRIPTION: The FM deviation is adjusted with a maximum FM peak deviation frequency of 99 kHz entered into the Signal Generator. The carrier frequency is stepped down in 10 MHz steps from 990 to 940 MHz and A10R64 is adjusted for an equal error around 99 kHz

deviation.

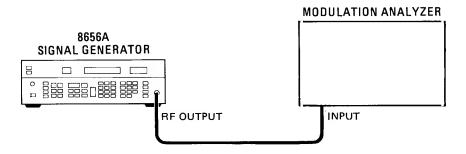


Figure 5-17. FM Deviation Adjustment Setup

EQUIPMENT:	Modulation Analyzer	HP 8901A
•	Cable UG-210/U (Type N)	HP 11500A

PROCEDURE: 1. Set the m

1. Set the modulation analyzer as follows:


Measurement	FM
Detector	+Peak
HP Filter	300 Hz
LP Filter	$\dots 3 \text{ kHz}$

2. Set the Signal Generator as follows:

Frequency	990 MHz
Frequency Increme	ent10 MHz
Amplitude	+4 dBm
Modulation	. 1 kHz (Int.) FM 99 kHz

3. Connect the modulation analyzer input to the RF OUTPUT connector on the Signal Generator.

Bottom Internal View, Level 4

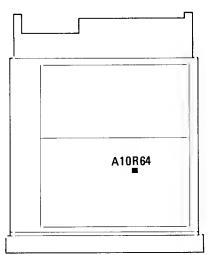

- 4. Adjust A10R64 (FM ADJ) for a 99.0 kHz deviation reading on the modulation analyzer.
- 5. Step the frequency down from 990 to 940 MHz and record the deviation at each of the 10 MHz steps.
- 6. Adjust A10R64 for equal error ± 2 kHz from 99 kHz at the frequencies of maximum and minimum peak kHz deviation.

5-23. FM FREQUENCY RESPONSE ADJUSTMENT

REFERENCE: Service Sheet 10.

DESCRIPTION: The FM frequency response is adjusted with a peak deviation frequency of 99 kHz as an

external modulation source is tuned between 50 Hz and 1 kHz.

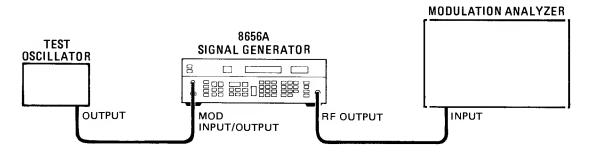


Figure 5-18. FM Frequency Response Setup

PROCEDURE: 1. Set the Signal Generator as follows:

Frequency 90 MHz

2. Set the test oscillator as follows:

3. Set the modulation analyzer as follows:

Measurer	ne	en	t								 FM
Detector											
LP Filter					٠.						 15 kHz

4. Connect the equipment as shown in Figure 5-18.

A3R57

Top Internal View, Level 1

- 5. Rotate the test oscillator output level CW until the LO EXT LED on the front panel of the Signal Generator goes out. Both the HI EXT and LO EXT LEDs must be out.
- 6. Record the deviation reading on the modulation analyzer.
- 7. Tune the test oscillator frequency to 50 Hz.
- 8. Adjust A3R57 (FM ADJ) for a difference of ±1.0 kHz as the external modulation signal is tuned between 50 Hz and 1 kHz.

5-24. ATTENUATOR ADJUSTMENTS

Service Sheet 7. REFERENCE:

DESCRIPTION: Each of the five attenuator sections is actuated separately via HP-IB using a Desktop Computing Controller so that they can be individually adjusted. The wire adjustment loops form capacitors C1-3, 6 and 8. Each is adjusted in relation to the associated series resistor. A reference power level with all attenuator pads out is taken with the power meter and each attenuator pad is adjusted relative to that reference.

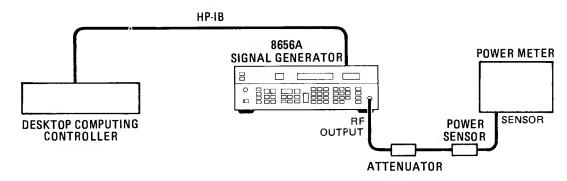


Figure 5-19. Attenuator Adjustment Setup

n ^	 		3 70	-
$\mathbf{E}\mathbf{\Omega}$	P	VI P	N	٠.

Power MeterHP 436A

General I/O & Extended I/O ROM HP 98213A

PROCEDURE:

1. Set the power meter with the power sensor connected as follows:

ModedBm

2. Set the Signal Generator as follows:

Frequency 990 MHz Amplitude 0 dBm Modulation Off

- 3. Connect the Desktop Computing Controller using the HP-IB Interface to the HP-IB connector on the rear panel of the Signal Generator.
- 4. Connect the power sensor to the attenuator and the attenuator to the RF OUTPUT connector on the Signal Generator.
- 5. Set the Signal Generator RESET/STBY/ON switch to STBY and zero the Power Meter.
- 6. Wait for the power meter zero LED to go out, then set the RESET/STBY/ON switch to the ON position.

5-24. ATTENUATOR ADJUSTMENTS (Cont'd)

C1

None

30 dB C

None

- 7. Wait for the power meter reading to stabilize, then select the dB(ref) mode.
- 8. Program the Desktop Computer to select the desired pad. When the HP 9825A Desktop Computing Controller is used as the controller, the pad is selected by entering the statement shown in Table 5-3. (Controller talk and Signal Generator listen) "variable name"

NOTE

To determine the address of the Signal Generator, press the HPIB ADRS key and read the decimal equivalent of the address in the MODULATION display. The factory set address is 07.

- 9. Only remove the internal RF cover from the pad being adjusted. See Figure 5-20.
- 10. Adjust the wire loop capacitor for the power meter reading specified for the pad being adjusted. See Table 5-3.

NOTE

Cover must be tight.

- 11. Replace the internal RF cover and observe the power meter reading. If it has changed, remove the cover and readjust the wire loop to give the correct power meter reading with the cover in place.
- 12. Place the power meter in dBm mode, select 0 dBm by entering the statement shown in Table 5-3 and repeat steps 5, 6, 7, 8, 10, and 11 until the limits in step 10 are met without further adjustment of the wire loop capacitors.
- 13. Repeat steps 5 through 12 to adjust the other attenuator pads.
- 14. After the adjustments have been completed, replace the internal RF bottom cover, then place the attenuator plate clamp into position and press down to firmly position the cover flush with the casting. Activate each pad and verify that the power meter reading is still within the specified limits. Readjust the wire loop capacitor, if necessary.

rem 7; wrt 707, "A3"

rem 7; wrt 707, "A1"

rem 7; wrt 707, "A0"

	Table 5-3. Atten	uator Pad Adjustme	ent Information
Loop citor	Pad	Power Meter Reading	Statement to Select with 9825A Contr

Wire Loop Capacitor	Pad	Power Meter Reading	Statement to Select Pad with 9825A Controller
C2	10 dB	$10 \pm 0.1 \text{ dB}$	rem 7; wrt 707, "A4"
C6	20 dB	$20 \pm 0.1 \text{ dB}$	rem 7; wrt 707, "A2"
C8	30 dB A	$30 \pm 0.05 dB$	rem 7; wrt 707, "A5"
C3	30 dB B	$30 \pm 0.05 dB$	rem 7; wrt 707, "A3"

 $30 \pm 0.05 \, dB$

 $0 \pm 0.5 \, dB$

Adjustments

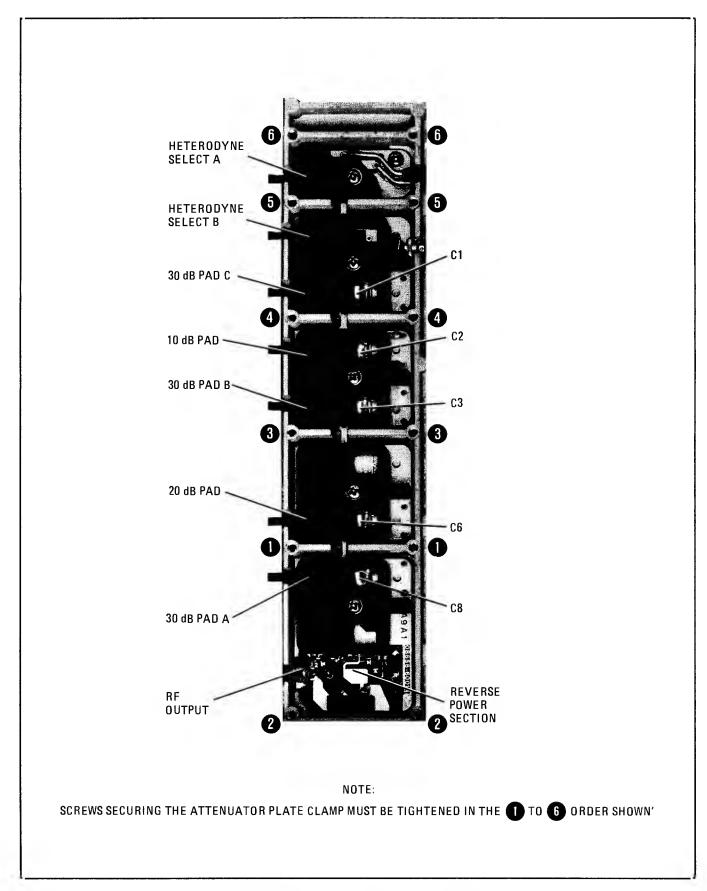


Figure 5-20. Attenuator Adjustment Locations



5-25. OPTION 001 10 MHz REFERENCE OSCILLATOR FREQUENCY ADJUSTMENT

REFERENCE: Service Sheet 22.

DESCRIPTION: The Option 001 10 MHz Reference Oscillator frequency is adjusted to 10.000 MHz

±10.0 Hz using a frequency counter.

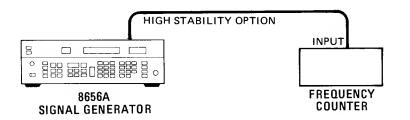


Figure 5-21. 10 MHz Reference Oscillator Frequency Adjustment Setup

PROCEDURE:

WARNING

To avoid the possibility of hazardous electrical shock, disconnect the power cable from Main power before disconnecting the fan. Electrical power is connected to the fan whenever the power cable is connected to Mains power.



Use caution when removing the fan shroud from the casting. A ground wire is connected between the fan and the casting.

- 1. Remove the fan shroud from the rear of instrument. (Refer to Disassembly Procedures in Section VIII.)
- 2. Remove the COARSE and FINE screw-on adjustment covers.
- 3. Connect the frequency counter to the TIME BASE HIGH STABILITY OPTION connector (A16J1) on the rear panel of the Signal Generator.
- 4. Adjust the COARSE and FINE adjustments for a reading of $10.000\,\mathrm{MHz}\,\pm10.0\,\mathrm{Hz}$ on the frequency counter.
- 5. Replace adjustment covers, fan shroud and series regulator cover.

Model 8656A Replaceable Parts

SECTION VI REPLACEABLE PARTS

6-1. INTRODUCTION

This section contains information for ordering parts. Table 6-2 lists abbreviations used in the parts list and throughout the manual. Table 6-3 lists all replaceable parts in reference designator order. Table 6-4 contains the names and addresses that correspond to the manufacturer's code numbers.

6-2. ABBREVIATIONS

Table 6-2 lists abbreviations used in the parts list, schematics, and throughout the manual. In some cases, two forms of the abbreviation are used, one all in capitals letters, and one partial or no capitals. This occurs because the abbreviations in the parts list are always all capitals. However, in the schematics and other parts of the manual, other abbreviation forms are used with both lower case and upper case letters.

6-3. REPLACEABLE PARTS LIST

Table 6-3 is the list of replaceable parts and is organized as follows:

- a. Electrical assemblies and their components in alphanumeric order by reference designation.
- b. Chassis-mounted parts in alphanumeric order by reference designation.
 - c. Mechanical parts.

The information given for each part consists of the following:

- a. The Hewlett-Packard part number.
- b. Part number check digit (CD).
- c. The total quantity (Qty) for the entire instrument except for option assemblies.
 - d. The description of the part.
- e. A typical manufacturer of the part in a fivedigit code.
 - f. The manufacturer's number for the part.

NOTE

The total quantity for each part is given only once, that is, at the first occurrence of the part number in the list. The total quantities for optional assemblies are totalled by assembly and not integrated into the standard list.

6-4. FACTORY SELECTED PARTS (*)

Parts marked with an asterisk (*) are factory selected parts. The value listed in the parts list is the nominal value. Refer to Sections V and VIII of this manual for information on determining what value to use for replacement.

6-5. PARTS LIST BACKDATING (†)

Parts marked with a dagger (†) are different in Signal Generators with serial number prefixes lower than the one that this manual applies to directly. Table 7-1 lists the backdating changes by serial number prefix. Table 7-2 lists components affected by each change.

6-6. PARTS LIST UPDATING (Change Sheet)

Production changes to Signal Generators made after the publication date of this manual are accompanied by a change in the serial number prefix. Changes to the parts list are recorded by serial number prefix on a MANUAL CHANGES supplement. Also, parts list errors are noted in the ERRATA portion of the MANUAL CHANGES supplement.

6-7. ILLUSTRATED PARTS BREAKDOWNS

Most mechanical parts are identified in Figures 6-1 through 6-9. These figures are located at the end of the replaceable parts table.

6-8. ORDERING INFORMATION

To order a part listed in the replaceable parts table, include the Hewlett-Packard part number (with the check digit) and the quantity required. Address the order to the nearest Hewlett-Packard office. The check digit will ensure accurate and timely processing of your order.

To order a part that is not listed in the replaceable parts table, include the instrument model number,

Replaceable Parts Model 8656A

ORDERING INFORMATION (Cont'd)

instrument serial number, description and function of the part, and the quantity of parts required. Address the order to the nearest Hewlett-Packard office.

NOTE

Within the USA, it is better to order directly from the HP Parts Center in Mountain View, California. Ask your nearest HP office for information and forms for the "Direct Mail Order System".

6-9. RECOMMENDED SPARES LIST

Stocking spare parts for an instrument is often done to ensure quick return to service after a malfunction occurs. Hewlett-Packard has prepared a "Recommended Spares" list for this instrument. The contents of the list are based on failure reports and repair data. Quantities given are for one year of parts support. A complimentary copy of the "Recommended Spares" list may be requested from your nearest Hewlett-Packard office.

When stocking parts to support more than one Signal Generator or to support a variety of Hewlett-Packard instruments, it may be more economical to work from one consolidated list rather than simply adding together stocking quantities from the individual instrument lists. Hewlett-Packard will prepare consolidated "Recommended Spares" lists for any number or combination of instruments. Contact your nearest Hewlett-Packard office for details.

Model 8656A Replaceable Parts

Table 6-1. Reference Designations

REFERENCE DESIGNATIONS $\begin{array}{ccccc} A & \dots & \dots & \dots & assembly \\ AT & \dots & attenuator; isolator; \end{array}$ $E\ \dots\ \ miscellaneous$ P . . . electrical connector U integrated circuit; electrical part (movable portion); $\begin{array}{ccc} & microcircuit \\ V & \dots & electron \ tube \\ VR & \dots & voltage \ regulator; \end{array}$ F fuse FL . . . filter plug Q transistor: SCR; termination B fan; motor BT ... battery C ... capacitor H hardware HY circulator triode thyristor breakdown diode R resistor W cable; transmission CP ... coupler CR ... diode; diode thyristor; varactor J ... electrical connector $R\,T$ thermistor path: wire (stationary portion); X socket Y . . . crystal unit (piezo-S switch T transformer TB terminal board jack DC . . . directional coupler electric or quartz) DL ... delay line DS ... annunciator; signaling device (audible or visual); К relay ${\tt TC}$ thermocouple Z tuned cavity: tuned L coil; inductor TP test point circuit M meter $MP \ \dots \ miscellaneous$ lamp; LED mechanical part

Table 6-2. Abbreviations (1 of 2)

		IATIONS	
A ampere	COEF coefficient	EDP electronic data	INT internal
ac alternating current	COM common	processing	kg kilogram
ACCESS accessory	COMP composition	ELECT electrolytic	kHz kilohertz
ADJ adjustment	COMPL complete	ENCAP encapsulated	k Ω kilohm
A/D analog-to-digital	CONN connector	EXT external	kV kilovolt
AF audio frequency	CP cadmium plate	F farad	lb pound
AFC automatic	CRT cathode-ray tube	FET field-effect	LC inductance-
frequency control	CTL complementary	transistor	capacitance
AGC automatic gain	transistor logic	F/F flip-flop	LED light-emitting diode
control	CW continuous wave	FH flat head	LF low frequency
AL aluminum	cw clockwise	FIL H fillister head	LGlong
ALC automatic level	cm centimeter	FM. frequency modulation	LH left hand
control	D/A digital-to-analog	FP front panel	LlM limit
AM amplitude modula-	dB decibel	FREQ frequency	LlN lincar taper (used
tion	dBm decibel referred	FXD fixed	in parts list)
AMPL amplifier	to 1 mW	g gram	lin linear
APC automatic phase	dc direct current	GE germanium	LK WASH lock washer
control	deg degree (temperature	GHz gigahertz	LO low; local oscillator
ASSY assembly	interval or differ-	GL glass	LOG logarithmic taper
AUX auxiliary	o ence)	GRD ground(ed)	(used in parts list)
avg average	degree (plane	H henry	log logrithm(ic)
AWG American wire	o angle)	h hour	LPF low pass filter
gauge	C degree Celsius	HET heterodyne	LV low voltage
BAL balance	(centigrade)	HEX hexagonal	m meter (distance)
BCD binary coded	F degree Fahrenheit	HD head	mA milliampere
decimal	K degree Kelvin	HDW hardware	MAX maximum
BD board	DEPC deposited carbon	HF high frequency	M Ω megohm
BE CU beryllium	DET detector	HG mercury	MEG meg (10 ⁶) (used
copper	diam diameter	Hlhigh	in parts list)
BFO beat frequency	DIA diameter (used in	HP Hewlett-Packard	MET FLM metal film
oscillator	parts list)	HPF high pass filter	MET OX metallic oxide
BH binder head	DIFF AMPL differential	HR hour (used in	MF medium frequency;
BKDN breakdown	amplifier	parts list)	microfarad (used in
BP bandpass	div division	HV high voltage	parts list)
BPF bandpass filter	DPDT double-pole,	Hz Hertz	MFR manufacturer
BRS bandpass inter	double-throw	IC integrated circuit	mg manufacturer
BWO backward-wave	DR drive	1D inside diameter	MHz megahertz
oscillator	DSB double sideband	lF intermediate	mH millihenry
CAL calibrate	DTL diode transistor	frequency	mho milinenry
	logic		
ccw counter-clockwise CER ceramic	DVM digital voltmeter	IMPG impregnated	M1N minimum
	-	in inch	min minute (time)
CHAN channel	ECL emitter coupled	INCD incandescent	' minute (plane
cm centimeter	logic	INCL include(s)	angle)
CMO cabinet mount only COAX coaxial	EMF electromotive force	INP input	MINAT miniature
COAX coaxiai		INS insulation	mm millimeter

Table 6-2. Abbreviations (2 of 2)

tion	PWM pulse-width modulation	TC temperature compensating	•
OBD order by descrip-	modulation	TA tantalum	impedance
nW nanowatt	PTM point	T timed (slow-blow fuse)	Z _O characteristi
ns nanosecond	PT picosecond	SWR standing-wave ratio SYNC synchronize	W/O withou
NSR not separately replaceable	rate ps picosecond	SQ square	WW wirewoun
ment	PRR pulse repetition	STL steel	voltage
for field replace-	frequency	SST stainless steel	WIV working invers
NRFR not recommended	PRF pulse-repetition	SSB single sideband	W/ wit
ture coefficient)	PREAMPL preamplifier	single-throw	W wa
zero (zero tempera-	modulation	SPST single-pole,	V(X) volts, switche
NPO negative-positive	PPM pulse-position	SR split ring	voltmeter
negative	in parts list)	SPG spring	VTVM vacuum-tub
NPN negative-positive-	PP peak-to-peak (used	double-throw	oscillator
NORM normal	p-p peak-to-peak	SPDT single-pole,	VTO voltage-tune
NOM nominal	POT potentiometer	SNR signal-to-noise ratio	wave ratio
N/O normally open	POSN position	SL slide	VSWR voltage standir
NIPL nickel plate	(used in parts list)	S1L silver	Vrms volts, rn
nF nanofarad	POS positive; position(s)	SI silicon	Vp-p volts, peak-to-pea
NEG negative	PORC porcelain	quency	Vpk volts, pea
NE neon	POLY polystyrene	SHF superhigh fre-	quency
N/C normally closed	P/O part of	ductor	VHF very-high fr
NC no connection	positive	SEMICON semicon-	oscillator
nA nanoampere	PNP positive-negative-	SECT sections	VFO variable-frequence
UW microwatt	PM phase modulation	SE selenium	V(F) volts, filtere
UVrms microvolt, rms	oscillator	rectifier; screw	(used in parts lis
to-peak	PLO phase lock	SCR silicon controlled	VDCW. volts, dc, working
UVp-p microvolt, peak-	PL phase lock	(used in parts list)	Vdc volts, o
UVpk microvolt, peak	pk peak	S-B slow-blow (fuse)	oscillator
UVdc microvolt, dc	voltage	" . second (plane angle)	VCO voltage-controlle
UVac microvolt, ac	PIV peak inverse	s second (time)	VAR variab
UV microvolt	negative	S scattering parameter	Vac volts.
Us microsecond	PlN positive-intrinsic-	voltage	VA voltampe
Umho micromho	PHL Phillips	RWV reverse working	V vo
UH microhenry	PH BRZ phosphor bronze	R&P rack and panel	UNREG unregulate
UF microfarad	pF picofarad	ROM read-only memory	UHF ultrahigh frequence
UA microampere	modulation	RND round	parts list)
MY mylar	PDM pulse-duration	rms root-mean-square	UF microfarad (used
MUX multiplex	modulation	RMO rack mount only	in parts list)
mW milliwatt	tion; pulse-count	capacitance	U micro (10 ⁻⁶) (use
mVrms millivolt, rms	PCM pulse-code modula-	inductance-	TWT traveling wave tul
to-peak	PC printed circuit	RLC resistance-	TVI television interference
mVp-p millivolt, peak-	modulation	hand	TV television
mVpk millivolt, peak	PAM pulse-amplitude	RH round head; right	logic
mVdc millivolt, de	list)	interference	TTL transistor-transist
mVac millivolt, ac	P peak (used in parts	RFI radio frequency	TSTR transist
mV millivolt	Ω ohm	RF radio frequency	TRIM trimm
device)	oz ounce	REPL replaceable	TOL toleran
MTR meter (indicating	OX oxide	REG regulated	TI titaniu
MTG mounting	OSC oscillator	REF reference	THRU through
ms millisecond	OPT option	RECT rectifier	THD thre
semiconductor	amplifier	capacitance	TGL togg
MOS metal-oxide	OP AMPL operational	RC resistance-	TFT thin-film transist
MOM momentary	OH oval head	voltage	TERM termin
MOD modulator	OD outside diameter	PWV peak working	TD time dela

NOTE

All abbreviations in the parts list will be in upper-case.

MULTIPLIERS

Abbreviation	Prefix	Multiple
T	tera	10^{12}
G	giga	10^{9}
M	mega	10^{6}
k	kilo	10^{3}
da	deka	10
d	deci	10^{-1}
c	centi	10^{-2}
m	milli	10-3
μ	micro	10^{-6}
n	nano	10-9
р	pico	$_{10}$ -12
f	femto	10-15
a	atto	10-18

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1	08656-60065	7	1	KEYBOARD ASSEMBLY	28480	08656-60065
A1J1	1251-5923	0	1	CONNECTOR 14-PIN M POST TYPE	28480	1251-5923
A1S1	5060-9436	7	48	PUSHBUTTON SWITCH P.C. MOUNT	28480	5060-9436
A1S2	5041-1805 5060-9436	8 7	1	KEY CAP, HALF 'V' PUSHBUTTON SWITCH P.C. MOUNT	28480 28480	5041-1805 5060-9436
A1S3	5041-1793 5060-9436	3	1	KEY CAP, HALF 'SEQ' PUSHBUTTON SWITCH P.C. MOUNT	28480 28480	5041-1793 5060-9436
	5041-1806	9	1	KEY CAP, HALF 'MV'	28480	5041-1806
A1S4	5060-9436 5041-1789	7 7	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'STORE'	28480 28480	5060-9436
A1S5	5060-9436	7		PUSHBUTTON SWITCH P.C. MOUNT	28480	5041-1789 5060-9436
A156	5041-1807 5060-9436	7	1	KEY CAP, HALF 'UV' PUSHBUTTON SWITCH P.C. MOUNT	28480 28480	5041-1807 5060-9436
	5041-1790	0	1	KEY CAP, HALF 'RECALL'	28480	5041-1790
A1S7	5060-9436 5041-1792	7 2	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'LOCAL'	28480 28480	5060-9436
A158	5060-9436	7		PUSHBUTTON SWITCH P.C. MOUNT	28480	5041-1792 5060-9436
A1S9	5041-1791 5060-9436	1 7	1	KEY CAP, HALF 'DISPLAY' PUSHBUTTON SWITCH P.C. MOUNT	28480 28480	5041-1791 5060-9436
	5041-1796	6	1	KEY CAP, HALF 'MHZ'	28480	5041-1796
A1S10	5060-9436 5041-1802	7 5	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'DBM'	28480 28480	5060-9436 50411803
A1S11	5060-9436	7		PUSHBUTTON SWITCH P.C. MOUNT	28480	5041-1802 5060-9436
A1S12	5041-1795 5060-9436	5 7	1	KEY CAP, HALF 'KHZ' PUSHBUTTON SWITCH P.C. MOUNT	28480 28480	5041-1795 5060-9436
	5041-1803	6	1	KEY CAP, HALF 'DBF'	28480	5041-1803
A1S13	5060-9436 5041-1800	7 3	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF '%'	28480 28480	5060-9436 5041-1800
A1514	5060-9436	7		PUSHBUTTON SWITCH P.C. MOUNT	28480	5060-9436
A1S15	5041-1801 5060-9436	7	1	KEY CAP, HALF 'DB' PUSHBUTTON SWITCH P.C. MOUNT	28480 28480	5041-1801 5060-9436
	5041-1813	8	1	KEY CAP, HALF 'BACKSPACE'	28480	5041-1813
A1S16	5060-9436 5041-1804	7	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'EMF'	28480 28480	5060-9436 5041-1804
A1S17	5060-9436	7		PUSHBUTTON SWITCH P.C. MOUNT	28480	5060-9436
A1518	5041-1786 5060-9436	4 7	1	KEY CAP, HALF 'NUMBER B' PUSHBUTTON SWITCH P.C. MOUNT	28480 28480	5041-1786 5060-9436
	5041-1784	2	2	KEY CAP, HALF 'NUMBER 9'	28480	5041-1784
A1519	5060-9436 5041-1783	7	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'NUMBER 5'	28480 28480	5060-9436 5041-1783
A1520	5060-9436	7	-	PUSHBUTTON SWITCH P.C. MOUNT	28480	5060-9436
A1521	5041-1784 5060-9436	2		KEY CAP, HALF 'NUMBER 6' PUSHBUTTON SWITCH P.C. HOUNT	28480 28480	5041-1784 5060-9436
	5041-1780	8	1	KEY CAP, HALF 'NUMBER 2'	28480	5041-1780
A1522	5060-9436 5041-1781	7 9	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'NUMBER 3'	28480 28480	5060-9436 5041-1781
A1523	5060-9436 5041-1787	7	1	PUSHBUTTON SWITCH P.C. MOUNT	28480	5060-9436
A1524	5060-9436	7		KEY CAP, HALF 'DECIMAL POINT' PUSHBUTTON SWITCH P.C. MOUNT	28480 28480	5041-1787 5060-9436
	5041-1788	6	1	KEY CAP, HALF 'MINUS'	28480	5041-1788
A1S25	5060-9436 5041-1814	7 9	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, FULL 'AMPTD'	28480 28480	5060-9436 5041-1814
A1\$26	5060-9436 5041-1785	7 3	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'NUMBER 7'	28480	5060-9436
11527	5060-9436	7		PUSHBUTTON SWITCH P.C. MOUNT	28480 28480	5041-1785 5060-9436
4.000	5041-1799	9	8	KEY CAP, HALF 'INCREMENT AMPTD'	28480	5841-1799
11528	5060-9436 5041-1782	7	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'NUMBER 4'	28480 28480	5860-9436 5841-1782
A1529	5060-9436 5041-1799	7	ļ	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'DECREMENT AMPTD'	28480 28480	5060-9436 5041-1799
A1S30	5060-9436 5041-1779	7 5	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'NUMBER 1'	28480 28480	5060-9436 5041-1779
11071		- 1	1			
41531	5060-9436 5041-1815	0	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP,SMALL DOUBLE FULL 'INCR SET'	28480 28480	5060-9436 5041-1815
A1832	5060-9436 5041-1778	7	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'NUMBER O'	28480 28480	5060-9436 5041-1778
11533	5060-9436 5041-1627	7 2	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, FULL 'FM'	28480 28480	5060-9436 5041-1627
A1534	5060-9436	7	.		28480	
	5041-1630	7	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, DOUBLE FULL 'FREQUENCY'	28480	5060-9436 5041-1630
A1 S35	5060-9436 5041-1799	7 9]	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'INCREMENT FM'	28480 28480	5060-9436 5041-1799
41536	5060-9436 5041-1808	7	,	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'COARSE TUNE'	28480 28480	5060-9436 5041-1808
	2011 1000	.	•	car set) trial durings fure	20400	0041-1000
i		- [l			
		— r			ا ــــــــــــــــــــــــــــــــــــ	

See introduction to this section for ordering information *Indicates factory selected value

Table 6-3. Replaceable Parts

D-1	LID D.	ודן	, —— ı	Table 0-3. Replaceable ratis	NAS-	
Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1937	5060-9436	7		PUSHBUTTON SWITCH P.C. MOUNT	28480 28480	5060-9436 5041-1799
A1S38	5041-1799 5060-9436	9 7		KEY CAP, HALF 'INCREMENT FREQ' PUSHBUTTON SWITCH P.C. MOUNT	28480	5060-9436
A1539	5041-1799 5060-9436 5041-1809	9 7 2	1	KEY CAP, HALF 'DECREMENT FREQ' PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'FINE TUNE'	28480 28480 28480	5041-1799 5060-9436 5041-1809
A1540	5060-9436 5041-1799	7 9		PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'DECREMENT FM'	28480 28480	5060-9436 5041-1799
A1541	5060-9436 5041-1794	7 4	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'EXT'	28480 28480	5060-9436 50411794
A1S42	5060-9436 5041-1628	7 3	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, FULL 'AM'	28480 28480	5060-9436 5041-1628
A1S43	5060-9436 5041-1810	7	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'INT 400 HZ'	28480 28480	5060~9436 5041~1810
A1544	5060-9436 5041-1799	7 9		PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'INCREMENT AM'	28480 28480	5060-9436 5041-1799
A1 S45	5060-9436 5041-1811	7 6	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'INT 1 KHZ'	28480 28480	5060-9436 5041-1811
A1S46	5060-9436 5041-1812	7	1	PUSHBUTTON SWITCH P.C. MOUNT KEY CAP, HALF 'HP-IB ADRS'	28480 28480	5060-9436 5041-1812
A1547	5060-9436	7	1	PUSHBUTTON SWITCH P.C. MOUNT	28480 28480	5060-9436 5041-1797
A1S48	5041-1797 5060-9436	7	1	KEY CAP, HALF 'OFF' PUSHBUTTON SWITCH P.C. MOUNT	28480	5060-9436
A1549	5041-1799 3101-2382	9	1	KEY CAP, HALF 'DECREMENT AM' SWITCH, TOGGLE SPDT	28480 28480	5041-1799 3101-2382
H1347	0520-0155	0	5	SCREW-MACH 2-56 .125-IN-LG PAN-HD-POZI	00000 28480	ORDER BY DESCRIPTION 2190-0890
	2190-0890 2420-0001 08656-20025	5	2 2 2	WASHER-LK HLCL NO. 2 .088-IN-ID NUT-HEX-W/LKWR 6-32-THD .109-IN-THK STANDOFF-SWITCH	00000 28480	ORDER BY DESCRIPTION 08656-20025
A2	08656-60009	9	1	DISPLAY ASSEMBLY	28480	08 456~6 0009
A2C1	0180-0100	3	5	CAPACITOR-FXD 4.7UF+-10% 35VDC TA	56289	150D475X9035B2
A2C2 A2C3	0160-3879 0160-3879	7	20	CAPACITOR-FXD .01UF +-20% 100VDC CER CAPACITOR-FXD .01UF +-20% 100VDC CER	28480 28480	0160-3879 0160-3879
A2C4 A2C5	0160-3879 0160-3879	7		CAPACITOR-FXD .01UF +-20% 100VDC CER CAPACITOR-FXD .01UF +-20% 100VDC CER	28480 28480	0160-3879 0160-3879
A2C6 A2C7	0160-3879 0160-3879	7		CAPACITOR-FXD .01UF +-20% 100VDC CER CAPACITOR-FXD .01UF +-20% 100VDC CER	28480 28480	0160-3879 0160-3879
A208	0160-3879	7		CAPACITOR-FXD .01UF +-20% 100VDC CER	28480	0160-3879
A2C9 A2C10	0160-3879 0160-3879	7		CAPACITOR-FXD .01UF +-20% 100VDC CER CAPACITOR-FXD .01UF +-20% 100VDC CER	28480 28480	0160-3879 0160-3879
A2C11 A2C12	0160-3879 0160-0573	7 2	1	CAPACITOR-FXD .01UF +-20% 100VDC CER CAPACITOR-FXD 4700PF +-20% 100VDC CER	28480 28480	0160-3879 0160-0573
A2C13	0160-3878	6	82	CAPACITOR-FXD 1000PF +-20% 100VDC CER	28480	0160-3878
A2DS1	1990-0486 1400-1008	6	19 19	LED-LAMP LUM-INT=1MCD IF=20MA-MAX BVR=5V STANDOFF-LED	28480 28480	5082-4684 1400-1008
A2DS2	1990-0486 1400-1008	6		LED-LAMP LUM-INT=1MCD IF=20MA-MAX 8VR=5V STANDOFF-LED	28480 28480	5082-4684 1400-1008
A2D53	1990-0486 1400-1008	6		LED-LAMP LUM-INT=1MCD IF=20MA-MAX 8VR=5V STANDOFF-LED	28480 28480	5082-4684 1400-1008
A2D54	1990-0486 1400-1008	6		LED-LAMP LUM-INT=1MCD IF=20MA-MAX BVR=5V STANDOFF-LED	28480 28480	5082-4684 1400-1008
A2D55	1990-0486 1400-1008	6		LED-LAMP LUM-INT=1MCD IF=20MA-MAX BVR=5V STANDOFF-LED	28480 28480	5082-4684 1400-1008
A2DS6	1990-0486 1400-1008	6		LED-LAMP LUM-INT=1MCD IF=20MA-MAX 8VR=5V STANDOFF-LED	28480 28480	5082-4684 1400-1008
A2DS7	1990-0486 1400-1008	6		LED-LAMP LUM-INT=1MCD IF=20MA-MAX BVR=5V STANDOFF-LED	28480 28480	5082-4684 1400-1008
A2DS8	1990-0486	6		LED-LAMP LUM-INT=1MCD IF=20MA-MAX 8VR=5V	28480	5082~4684
A2DS9	1400-1008 1990-0486 1400-1008	6		STANDOFF-LED LED-LAMP LUM-INT=1MCD IF=20MA-MAX BVR=5V STANDOFF-LED	28480 28480 28480	1400-1008 5082-4684 1400-1008
A2D510	1990-0486 1400-1008	6		LED-LAMP LUM-INT=1MCD IF=20MA-MAX BVR=5V STANDOFF-LED	28480 28480	5082-4684 1400-1008
A2D511	1990-0486	6		LED-LAMP LUM-INT=1MCD IF=20MA-MAX BVR=5V	28480 28480	5082-4684 1400-1008
A2D512	1400-1008 1990-0486 1400-1008	6		STANDOFF-LED LED-LAMP LUM-INT=1MCD IF=20MA-MAX BVR=5V STANDOFF-LED	28480 28480 28480	5082-4684 1400-1008
A2D513	1990-0486 1400-1008	6		LED-LAMP LUM-INT=1MCD IF=20MA-MAX BVR=5V STANDOFF-LED	28480 28480	5082-4684 1400-1008
A2D S14	1990-0486	6		LED-LAMP LUM-INT=1MCD IF=20MA-MAX BVR=5V	28480	5082-4684
A2DS15	1400-1008 1990-0486 1400-1008	6		STANDOFF-LED LED-LAMP LUM-INT=1MCD IF=20MA-MAX BVR=5V STANDOFF-LED	28480 28480 28480	1400-1008 5082-4684 1400-1008
A2D816	1990-0486	6		LED-LAMP LUM-INT=1MCD IF=20MA-MAX BVR=5V STANDOFF-LED	28480 28480	5082-4684 1400-1008
A2DS17	1400-1008 1990-0486	6		LED-LAMP LUM-INT=1MCD IF=20MA-MAX 8VR=5V	28480	5082-4684
A2DS18	1400-1008 1990-0486	6		STANDOFF-LED LED-LAMP LUM-INT=1MCD IF=20MA-MAX BVR=5V	28480 28480	1400-1008 5082-4684
	1400-1908	1.	J	STANDOFF-LED	28480	1400-1008

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A2DS19	1990-0486 1400-1008	6		LED-LAMP LUM-INT=1MCD IF=20MA-MAX BUR=5V STANDOFF-LED	28480 28480	5082-4684 1400-1008
A2J1 A2J2	1251-5343 1251-5922	8 9	1 1	CONNECTOR 12-PIN M POST TYPE CONNECTOR 14-PIN M POST TYPE	28480 28480	1251-53 4 3 1251-5922
A2MP1	08656-00008 2360-0113	2	4 29	FRONT PANEL, REAR BRACKET SCREW-MACH 6-32 .25-IN-LG PAN-HD-POZI	28480 00000	08656-00008 ORDER BY DESCRIPTION
A2R 1 A2R2 A2R3 A2R4 A2R5	1810-0275 1810-0206 0757-0279 0698-3161 0757-0443	1 8 0 9	1 1 5 2 1	NETWORK, RES 1K 10-PIN-SIP .1-PIN-SPCG NETWORK, RES 10K 8-PIN-SIP .1PIN-SPCG RESISTOR 3.16K 1% .125W F TC=0+-100 RESISTOR 38.3K 1% .125W F TC=0+-100 RESISTOR 11K 1% .125W F TC=0+-100	01121 01121 24546 24546 24546	210A102 208A103 C4-1/8-T0-3161-F C4-1/8-T0-3832-F C4-1/8-T0-1102-F
A2R6 A2R7 A2R8 A2R9 A2R10	1810-0402 1810-0402 1810-0402 1810-0402 1810-0402	66666	12	NETWORK, RES 330 16-PIN-DIP .1-PIN-SPCG NETWORK, RES 330 16-PIN-DIP .1-PIN-SPCG NETWORK, RES 330 16-PIN-DIP .1-PIN-SPCG NETWORK, RES 330 16-PIN-DIP .1-PIN-SPCG NETWORK, RES 330 16-PIN-DIP .1-PIN-SPCG	01121 01121 01121 01121 01121	316B331 316B331 316B331 316B331 316B331
A2R11 A2R12 A2R13 A2R14 A2R15	1810-0402 1810-0402 0757-0797 1810-0402 1810-0403	6 6 7 6 7	1 2	NETWORK, RES 330 16-PIN-DIP .1-PIN-SPCG NETWORK, RES 330 16-PIN-DIP .1-PIN-SPCG RESISTOR 90.9 12 .5W F TC=0+-100 NETWORK, RES 330 16-PIN-DIP .1-PIN-SPCG NETWORK-RESISTOR R1-R15: 330 0HM+-2%	01121 01121 28480 01121 01121	316B331 316B331 0757-0797 316B331 316A331
A2R16 A2R17 A2R18 A2R19 A2R20	1810-0402 1810-0402 1810-0402 0698-3446 0698-3441	6 6 6 3 B	5 12	NETWORK, RES 330 16-PIN-DIP .1-PIN-SPCG NETWORK, RES 330 16-PIN-DIP .1-PIN-SPCG NETWORK, RES 330 16-PIN-DIP .1-PIN-SPCG RESISTOR 383 1% .125W F TC=0+-100 RESISTOR 215 1% .125W F TC=0+-100	01121 01121 01121 24546 24546	316B331 316B331 316B331 C4-1/8-T0-3B3R-F C4-1/8-T0-215R-F
A2R21 A2R22 A2R23 A2R24 A2R25	0698-3441 1810-0403 1810-0402 0698-3441 0757-0280	8 7 6 8 3		RESISTOR 215 1% .125W F TC=0+-100 NETWORK-RESISTOR R1-R15: 330 OHM+-2% NETWORK, RES 330 16-PIN-DIP .1-PIN-SPCG RESISTOR 215 1% .125W F TC=0+-100 RESISTOR 1K 1% .125W F TC=0+-100	24546 01121 01121 24546 24546	C4-1/8-T0-215R-F 316A331 316B331 C4-1/8-T0-215R-F C4-1/8-T0-1001-F
A2TP1 A2TP2 A2TP3 A2TP4 A2TP5	0360-0077 0360-0077 0360-0077 0360-0077 0360-0077	សសសសស	9	TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480 28480 28480 28480 28480	0360-0077 0360-0077 0360-0077 0360-0077 0360-0077
A2TP6 A2TP7 A2TP8 A2TP9 A2TP10	0360-0077 1251-0600 1251-0600 1251-0600 1251-0600	50000	53	TERMINAL-STUD SGL-TUR SWGFRM-MTG CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	28480 28480 28480 28480 28480	0360-0077 1251-0600 1251-0600 1251-0600 1251-0600
A2TP11 A2TP12 A2TP13 A2TP14 A2TP15	1251-0600 1251-0600 0360-0077 0360-0077 0360-0077	00555		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ TERMINAL-STUD SGL-TUR SWGFRM-MTG TERMINAL-STUD SGL-TUR SWGFRM-MTG TERMINAL-STUD SGL-TUR SWGFRM-MTG	28480 28480 28480 28480 28480	1251-0600 1251-0600 0360-0077 0360-0077 0360-0077
A2U1 A2U2 A2U3 A2U4	1820-2056 1820-1858 1820-1560 1990-0592 1200-0859	1 9 0 5 4	4 2 2 13 14	IC FF TTL LS D-TYPE POS-EDGE-TRIG COM IC FF TTL LS D-TYPE OCTL IC SHF-RGTR CMOS D-TYPE SERIAL-IN DISPLAY-NUM-SEG 1-CHAR .43-H SOCKET-IC 14-CONT DIP DIP-SLDR	01295 01295 27014 28480 28480	SN74LS378N SN74LS377N MM74C165N 5082-7653 1200-0859
A2U5	1990-0592 1200-0859	5 4		DISPLAY-NUM-SEG 1-CHAR .43-H SOCKET-IC 14-CONT DIP DIP-SLDR	28480 28480	5082-7653 1200-0859
A2U6 A2U7	1990-0592 1200-0859 1990-0592 1200-0859	5 4 5 4		DISPLAY-NUM-SEG 1-CHAR .43-H SOCKET-IC 14-CONT DIP DIP-SLDR DISPLAY-NUM-SEG 1-CHAR .43-H SOCKET-IC 14-CONT DIP DIP-SLDR	28480 28480 28480 28480	5082-7653 1200-0859 5082-7653 1200-0859
A2U8 A2U9 A2U10	1990-0859 1990-0859 1990-0592 1200-0859 1990-0592	* 54545		DISPLAY-NUM-SEG 1-CHAR .43-H SOCKET-IC 14-CONT DIP DIP-SLDR DISPLAY-NUM-SEG 1-CHAR .43-H SOCKET-IC 14-CONT DIP DIP-SLDR DISPLAY-NUM-SEG 1-CHAR .43-H	28480 28480 28480 28480 28480	1200-0857 5082-7653 1200-0859 5082-7653 1200-0859 5082-7653
	1200-0859	4		SOCKET-IC 14-CONT DIP 0IP-SLDR	28480	1200-0859
A2U11 A2U12	1990-0592 1200-0859 1990-0592	5 4 5		DISPLAY-NUM-SEG 1-CHAR .43-H SOCKET-IC 14-CONT DIP DIP-SLDR DISPLAY-NUM-SEG 1-CHAR .43-H	28480 28480 28480	5082-7653 1200-0859 5082-7653
A2U13	1200-0859 1990-0592 1200-0859	4 5 4		SOCKET-IC 14-CONT DIP DIP-SLDR DISPLAY-NUM-SEG 1-CHAR .43-H SOCKET-IC 14-CONT DIP DIP-SLDR	28480 28480 28480	1200-0859 5082-7653 1200-0859
A2U14	1990-0681 1200-0859	3	1	DISPLAY-AN-SEG 1-CHAR .408-H RED SOCKET-IC 14-CONT DIP DIP-SLDR	28480 28480	5082-7656 1200-0859
A2U15	1990-0592 1200-0859	5		DISPLAY-NUM-SEG 1-CHAR .43-H SOCKET-IC 14-CONT DIP DIP-SLDR	28480 28480	5082-7653 1200-0859
A2U16	1990-0592 1200-0859	5		DISPLAY-NUM-SEG 1-CHAR .43-H SOCKET-IC 14-CONT DIP DIP-SLDR	28480 28480	5082-7653 1200-0859

Table 6-3. Replaceable Parts

		. – -		Table 0-3. Deplaceable rai G		
Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A2U17 A2U18 A2U19 A2U20	1990-0592 1200-0859 1820-1560 1820-1316 1820-0618	5 4 0 4 7	1 3	DISPLAY-NUM-SEG 1-CHAR .43-H SOCKET-IC 14-CONT DIP DIP-SLDR IC SHF-RGTR CMOS D-TYPE SERIAL-IN IC GATE CMOS B-TNP IC BFR TTL NON-INV HEX	28480 28480 27014 01928 01295	5082-7653 1200-0859 MM74C165N CD4048AE SN7417N
A2U21 A2U22 A2U23 A2U24 A2U25	1820-2186 1820-2186 1820-1433 1820-1433 1820-1216	88663	2 2 4	IC DRVR TTL LED DRVR 7-INP IC DRVR TTL LED DRVR 7-INP IC SHF-RGTR TTL LS R-S SERIAL-IN PRL-OUT IC SHF-RGTR TTL LS R-S SERIAL-IN PRL-OUT IC DCDR TTL LS 3-TO-8-LINE 3-INP	01295 01295 01295 01295 01295 01295	SN75497N SN75497N SN74LS164N SN74LS164N SN74LS138N
A2U26 A2U27 A2U28 A2U29 A2U30	1820-1216 1820-1413 1820-1423 1820-1413 1820-2056	3 2 4 2 1	12 6	IC DCDR TTL LS 3-TO-8-LINE 3-INP IC DCDR CMOS BCD-TO-7-SEG 4-TO-7-LINE IC MV TTL LS MONOSTBL RETRIG DUAL IC DCDR CMOS BCD-TO-7-SEG 4-TO-7-LINE IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295 01928 01295 01928 01295	SN74LS138N CD4511BE SN74LS123N CD4511BE SN74LS378N
A2U31 A2U32 A2U33 A2U34 A2U35	1820-1413 1820-1413 1820-1413 1820-1413 1820-1413	พพพพพ		IC DCDR CMOS BCD-TO-7-SEG 4-TO-7-LINE	0192B 0192B 0192B 0192B 0192B	CD4511BE CD4511BE CD4511BE CD4511BE CD4511BE
A2U36 A2U37 A2U38 A2U39 A2U40	1820-1413 1820-1413 1820-2056 1820-1413 1820-1413	2 1 2 2		IC DCDR CMOS BCD-TO-7-SEG 4-TO-7-LINE IC DCDR CMOS BCD-TO-7-SEG 4-TO-7-LINE IC FF TTL LS D-TYPE POS-EDGE-TRIG COM IC DCDR CMOS BCD-TO-7-SEG 4-TO-7-LINE IC DCDR CMOS BCD-TO-7-SEG 4-TO-7-LINE	0192B 0192B 01295 0192B 0192B	CD4511BE CD4511BE SN74L837BN CD4511BE CD4511BE
A2U41 A2U42	1820-1413 1820-1858	9		IC DCDR CMOS BCD-TO-7-SEG 4-TO-7-LINE IC FF TTL LS D-TYPE OCTL	01929 01295	CD4511BE SN74LS377N
A3	08656-60003	3	1	LOW FREQUENCY LOOP ASSEMBLY	28480	08656-60003
A3C1 A3C2 A3C3 A3C4 A3C5	0180-0197 0180-0197 0180-0197 0160-0575 0160-0575	8 8 8 4 4	24	CAPACITOR-FXD 2.2UF+-10% 20VDC TA CAPACITOR-FXD 2.2UF+-10% 20VDC TA CAPACITOR-FXD 2.2UF+-10% 20VDC TA CAPACITOR-FXD .047UF +-20% 50VDC CER CAPACITOR-FXD .047UF +-20% 50VDC CER	56289 56289 56289 28480 28480	150D225X9020A2 150D225X9020A2 150D225X9020A2 0160-0575 0160-0575
A3C6 A3C7 A3C8 A3C9 A3C10	0160-0575 0160-0575 0160-3878 0160-2055 0160-0575	4 6 9 4	25	CAPACITOR-FXD .047UF +-20% 50VDC CER CAPACITOR-FXD .047UF +-20% 50VDC CER CAPACITOR-FXD 1000PF +-20% 1000VDC CER CAPACITOR-FXD .01UF +80-20% 1000VDC CER CAPACITOR-FXD .047UF +-20% 50VDC CER	28480 28480 28480 28480 28480	0160-0575 0160-0575 0160-3878 0160-2055 0160-0575
A3C11 A3C12 A3C13 A3C14	0160-3878 0160-3878 0160-0575 0160-4082	6 4 6	3	CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD .047UF +-20% 50VDC CER CAPACITOR-FDTHRU 1000PF 20% 200V CER (INCLUDES MOUNTING HARDWARE)	28480 28480 28480 28480	0160-3878 0160-3878 0160-0575 0160-4082
A3C15 A3C16 A3C17 A3C18 A3C19	0160-2437 0160-4370 0160-4350 0160-4386 0160-0434	1 5 1 3 4	1 1 1 2 2	CAPACITOR-FDTHRU 5000PF +80 -20% 200V CAPACITOR-FXD 1000PF +-5% 200VDC CER CAPACITOR-FXD 6BPF +-5% 200VDC CER 0+-30 CAPACITOR-FXD 33PF +-5% 200VDC CER 0+-30 CAPACITOR-FXD 10PF +1PF 500VDC CER	28480 51642 28480 51642 28480	0160-2437 200-200-NP0-102J 0160-4350 200-200-NP0-330J 0160-0434
A3C20 A3C21 A3C22 A3C23 A3C24	0160-0700 0160-0375 0160-0434 0160-0575 0160-3022	7 2 4 4 2		CAPACITOR-FXD 150PF +-10% 100VDC CER CAPACITOR-FXD 2.2PF +1PF 300VDC CER CAPACITOR-FXD 10PF +1PF 500VDC CER CAPACITOR-FXD .047UF +-20% 50VDC CER CAPACITOR-FXD 16PF +-1% 500VDC CER 0+-30	28480 28480 28480 28480 28480	0160-0700 0160-0375 0160-0334 0160-0575 0160-3022
A3C25 A3C26 A3C27 A3C28 A3C29	0160-3878 0160-0375 0160-4521 0160-0575 0160-0575	6 2 8 4	1	CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 2.2PF +1PF 300VDC CER CAPACITOR-FXD 12PF +-5% 200VDC CER 0+-30 CAPACITOR-FXD .047UF +-20% 50VDC CER CAPACITOR-FXD .047UF +-20% 50VDC CER	28480 28480 51642 28480 28480	0160-3878 0160-0375 200-200-NP0-120J 0160-0575 0160-0575
A3C30 A3C31 A3C32 A3C33 A3C34	0160-3873 0121-0448 0160-2236 0160-3878 0160-3878	1 8 8 6	1	CAPACITOR-FXD 4.7PF +5PF 200VDC CER CAPACITOR-V TRMR-CER 2.5-5PF 63V PC-MTG CAPACITOR-FXD 1PF +25PF 500VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER	28480 28480 28480 28480 28480	0160-3873 0121-0448 0160-2236 0160-3878 0160-3878
A3C35 A3C36 A3C37 A3C38 A3C39	0160-0575 0160-0575 0160-3878 0160-0154 0160-0161	4 4 6 5 4		CAPACITOR-FXD .047UF +-20% 50VDC CER CAPACITOR-FXD .047UF +-20% 50VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 2200PF +-10% 200VDC POLYE CAPACITOR-FXD .01UF +-10% 200VDC POLYE	28480 28480 28480 28480 28480	0160-0575 0160-0575 0160-3578 0160-0154 0160-0161
A3C40 A3C41 A3C42 A3C43 A3C44	0160-0575 0160-4764 0160-0300 0170-0040 0160-0154	4 1 3 9 5	2 1 2	CAPACITOR-FXD .047UF +-20% 50VDC CER CAPACITOR-FXD 150PF +-5% 100VDC CER CAPACITOR-FXD 2700PF +-10% 200VDC POLYE CAPACITOR-FXD .047UF +-10% 200VDC POLYE CAPACITOR-FXD 2200PF +-10% 200VDC POLYE	28480 28480 28480 56289 28480	0160-0575 0160-4764 0160-0300 292P47392 0160-0154

Table 6-3. Replaceable Parts

tion M Co	1fr	MC D . N
	ode	Mfr Part Number
-10% 200VDC POLYE 28 10% 35VDC TA 56 10% 35VDC TA 56	8480 016 66289 150 66289 150	50-0194 50-0161 JD475X9035B2 JD475X9035B2 50-4231
0% 100VDC MET-POLYE 26 1% 100VDC MET-POLYE 26 0% 100VDC MET-POLYE 26	28480 01 <i>6</i> 28480 01 <i>6</i> 28480 01 <i>6</i>	00-0153 00-3072 00-3072 00-3072 COG223X2100C5
02 30 VDC TA 02 02 15 VDC TA 56 02 20 VDC TA 56	6001 69F 66289 150 6289 150	D-100-NP0-221G *2143G7 DD226X901582 DD156X9020B2 50-0154
-10% 80VDC POLYE 26 -10% 80VDC POLYE 26 35VDC TA 56	8480 016 8480 016 6289 156	0336X901082 00-2453 00-2453 00105X9035A2 00-2208
72 300 VDC MICA 28 72 100 VDC MET-POLYP 28 73 35 VDC TA 56	8480 016 8480 016 6289 150	03576016DH2 00-2307 00-4653 101105X9035A2 00-3072
-10% 200VDC POLYE 28 -10% 200VDC POLYE 28 -10% 200VDC POLYE 56	8480 016 8480 016 6289 292	0-3661 0-0153 0-0162 P47392 0-0575
5% 300VDC MICA 72 % 500VDC CER 0+-30 28 -20% 50VDC CER 28	2136 DM1 8480 016 8480 016	D606X9006B2 5F151J0300WV1CR 0-2259 0-0575 0-0575
% 100VDC MET-POLYE 28 20% 100VDC CER 20 -10% 25VDC AL 56	8480 016 0932 502 6289 30D	0-0575 0-3072 4EM100RD221M 1076025DD2 0-0575
.5-18PF 350V 52 -20% 100VDC CER 28 % 300VDC MICA 72	2763 304 8480 016 2136 DM1	5F151J0300WV1CR 322 5.5/18PF NPO 0-0574 5E620J0300WV1CR 0-4387
-10% 25VDC AL 56 -20% 50VDC CER 28 -20% 50VDC CER 28	6289 30D 8480 016 8480 016	0-0575 107G025DD2 0-0575 0-0575 0-0575
% 200VDC CER 0+-30 51	1642 200	0-0575 -200-NP0-150J 0-3878
MA 750PS DO-7 28 MA 750PS DO-7 28 0MA 2NS DO-35 28	8480 190 8480 190 8480 190	2-0065 1-0179 1-0179 1-0050 1-0050
0MA 2NS DO-35 28 0MA 2NS DO-35 28 TO-72 28	3480 190 8480 190 8480 190	1-0050 1-0050 1-0050 1-0086 1-0586 1-0586
0MA 2NS DO-35 28 0MA 2NS DO-35 28 0MA 2NS DO-35 28	8480 190 8480 190 8480 190	1-0586 1-0050 1-0050 1-0050 1-0050
0MA 2NS DO-35 28/ 0MA 2NS DO-35 28/ 0MA 2NS DO-35 28/	3480 190 3480 190 3480 190	1-0527 1-0050 1-0050 1-0050 1-0050
28- 284 28-	3480 190 3480 190 3480 190	1-0539 1-0539 1-0535 1-0535 1-0535
	## 1-5% 50VDC 20	### ### ### ### ### ### ### ### ### ##

Table 6-3. Replaceable Parts

		. – -	,	Table 0-3. Replaceable rails		
Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3CR26 A3CR27 A3CR28 A3CR29 A3CR30	1901-0535 1901-0535 1901-0376 1901-0376 1901-0050	9 9 6 6 3	3	DIODE-SM SIG SCHOTTKY DIODE-SM SIG SCHOTTKY DIODE-GEN PRP 35V 50MA DO-35 DIODE-GEN PRP 35V 50MA DO-35 DIODE-SWITCHING 80V 200MA 2NS DO-35	28480 28480 28480 28480 28480	1901-0535 1901-0535 1901-0376 1901-0376 1901-0050
A3CR31 A3CR32 A3CR33 A3CR34 A3CR35	1901-0050 1901-0050 0122-0065 1901-0179 1901-0050	3 7 7 3	:	DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-VVC 29PF 3% DIODE-SWITCHING 15V 50MA 750PS DO-7 DIODE-SWITCHING 80V 200MA 2NS DO-35	28480 28480 28480 28480 28480	1901-0050 1901-0050 0122-0065 1901-0179 1901-0050
A3E1 A3E2	9170-0847 9170-0029	3	1 1	CORE-SHIELDING BEAD CORE-SHIELDING BEAD	02114 28480	56-590-65/3B PARYLENE COATED 9170-0029
A3J1 A3J2 A3J3 A3J4	1251-5568 1200-0507 1200-0507 1250-1626 3050-0079	9 9 0 3	2 11 4 2	CONNECTOR 8-PIN M POST TYPE SOCKET-IC 16-CONT DIP-SLDR SOCKET-IC 16-CONT DIP-SLDR CONNECTOR-RF SMC M PC 50-OHM WASHER-FL NM NO. 2 .094-IN-ID .188-IN-OD	28480 28480 28480 28480 28480	1251-5568 1200-0507 1200-0507 1250-1626 3050-0079
A3J5	1250-1626 3050-0079	0		CONNECTOR-RF SMC M PC 50-OHM WASHER-FL NM NO. 2 .094-IN-ID .188-IN-OD	28480 28480	1250-1626 3050-0079
A3L 1 A3L2 A3L3 A3L4 A3L5	9100-1618 9100-1618 9100-1618 9140-0144	1 1 1 0	8 5	INDUCTOR RF-CH-MLD 5.6UH 10% INDUCTOR RF-CH-MLD 5.6UH 10% INDUCTOR RF-CH-MLD 5.6UH 10% INDUCTOR RF-CH-MLD 4.7UH 10% PART IS ETCHED TRACE ON CIRCUIT BOARD	28480 28480 28480 28480	9100-1618 9100-1618 9100-1618 9140-0144
A3L6 A3L7 A3L8 A3L9 A3L10				PART IS ETCHED TRACE ON CIRCUIT BOARD		
A3L 11 A3L12 A3L13 A3L14 A3L15	9135-0073	3	5	PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR RF-CH-HLD 51NH 6% .102DX.26LG	28480	9135-0073
A3L16 A3L17 A3L18 A3L19 A3L20	9135-0071 9100-3368 9140-0112 9100-2247 9140-0112	12242	2 1 2 20	INDUCTOR RF-CH-MLD 62NH 5% .102DX.26LG INDUCTOR RF-CH-MLD 600NH 5% .2DX.385LG INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG INDUCTOR RF-CH-MLD 100NH 10% .105DX.26LG INDUCTOR RF-CH-MLD 4.7UH 10%	28480 28480 28480 28480 28480	9135-0071 9100-3368 9140-0112 9100-2247 9140-0112
A3L21 A3L22 A3L23† A3L24 A3L25	9140-0144 9140-0141 9140-0141	0 7	4	INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG INDUCTOR RF-CH-MLD 680NH 10% .105DX.26LG NOT ASSIGNED PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR RF-CH-MLD 680NH 10% .105DX.26LG	28480 28480 28480	9140-0144 9140-0141 9140-0141
A3MP1 A3MP2 A3MP3 A3MP4 A3MP5	1251-0600 1400-0966 2190-0087 2360-0113 2580-0002	08824	17 3 1	CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CLIP-HINGE WASHER-LK HLCL NO. 8 .168-IN-ID SCREW-MACH 6-32 .25-IN-LG PAN-HD-POZI NUT-HEX-DBL-CHAM 8-32-THD .085-IN-THK	28480 91506 28480 00000	1251-0600 6015-13AT 2190-0087 ORDER BY DESCRIPTION ORDER BY DESCRIPTION
A3MP 6 A3MP7 A3MP8 A3MP9 A3MP10	3050-0063 3050-0121 4208-0277 9220-3065 7120-8855	56902	2 1 1 1 1	WASHER-FL MTLC NO. 8 .172-IN-ID WASHER-FL MTLC NO. 6 .144-IN-ID FOAM, BOTTOM, 60/110MHZ SECTION FOAM, TOP, 60/110MHZ SECTION LABEL, INFO (50MHZ LEVEL)	28480 28480 28480 28480 28480	3050-0063 3050-0121 4208-0277 9220-3065 7120-8855
A3MP11 A3MP12 A3MP13 A3MP14 A3MP15	7120-8856 08656-00029 08656-00030 08656-00031 08656-00032	3 7 0 1 2	1 1 1 1	LABEL, INFO (60-110MHZ FLATNESS) BOTTOM COVER, 60/110MHZ SECTION TOP COVER, 60/110MHZ SECTION BOTTOM COVER, 50MHZ SECTION TOP COVER, 50MHZ SECTION	28480 28480 28480 28480 28480	7120-8856 08656-00029 08656-00030 08656-00031 08656-00032
A3MP16 A3MP17	08656-00041 08656-00044	3	2 1	CLIP-CAPACITOR GROUND SHIELD, FENCE	28480 28480	08656-00041 08656-00044
A3Q1 A3Q2 A3Q3 A3Q4 A3Q5	1855-0280 1855-0414 1854-0071 1855-0288 1854-0610	2 4 7 0	1 2 4 1 1	TRANSISTOR J-FET N-CHAN D-MODE TO-92 SI TRANSISTOR J-FET 2N4393 N-CHAN D-MODE TRANSISTOR NPN SI PD=300MW FT=200MHZ TRANSISTOR J-FET 2N5556 N-CHAN D-MODE TRANSISTOR NPN SI TO-46 FT=800MHZ	17856 04713 28480 17856 28480	E107 2N4393 1854-0071 2N5556 1854-0610
A3Q6 A3Q7 A3Q8 A3Q9 A3Q10	1854-0345 1854-0696 1854-0696 1854-0247 1853-0018	8 2 9 0	2 6 3 1	TRANSISTOR NPN 2N5179 SI TO-72 PD=200MW TRANSISTOR NPN SI TO-72 PD=200MW TRANSISTOR NPN SI TO-72 PD=200MW TRANSISTOR NPN SI TO-39 PD=1W FT=800MHZ TRANSISTOR PNP SI TO-72 PD=200MW FT=1GHZ	04713 28480 28480 28480 28480	2N5179 1854-0696 1854-0696 1854-0247 1853-0018
A3Q11 A3Q12 A3Q13	1853-0015 1854-0345 1855-0414	7 8 4	1	TRANSISTOR PNP SI PD=200MW FT=500MHZ TRANSISTOR NPN 2N5179 SI TO-72 PD=200MW TRANSISTOR J-FET 2N4393 N-CHAN D-MODE	28480 04713 04713	1 853-0015 2N5179 2N4393

Table 6-3. Replaceable Parts

Reference Designation	Mfr Part Number C4-1/8-T0-2871-F C4-1/8-T0-316R-F C4-1/8-T0-215R-F C4-1/8-T0-215R-F PME55-1/8-T0-2387-F C4-1/8-T0-215R-F C4-1/8-T0-215R-F C4-1/8-T0-215R-F C4-1/8-T0-215R-F C4-1/8-T0-215R-F C4-1/8-T0-215R-F C4-1/8-T0-1472-F C4-1/8-T0-1472-F C4-1/8-T0-2871-F C4-1/8-T0-2871-F C4-1/8-T0-2871-F C3-1/8-T0-287-G C3-1/8-T0-287-G C3-1/8-T0-287-G C3-1/8-T0-287-G C3-1/8-T0-287-G C4-1/8-T0-287-G C4-1/8-T0-287-G C4-1/8-T0-287-G C4-1/8-T0-287-G C4-1/8-T0-619R-F
A3R2	C4-1/8-T0-316R-F C4-1/8-T0-215R-F C4-1/8-T0-215R-F PME55-1/8-T0-215R-F PME55-1/8-T0-23R7-F C4-1/8-T0-1472-F C4-1/8-T0-1472-F C4-1/8-T0-1472-F C4-1/8-T0-1472-F C4-1/8-T0-5251-F C4-1/8-T0-511R-F 0757-0180 C4-1/8-T0-612R-F C3-1/8-T00-28R7-G C3-1/8-T00-28R7-G C3-1/8-T00-28R7-G C3-1/8-T00-28R7-G C3-1/8-T00-28R7-G C3-1/8-T00-28R7-G C3-1/8-T00-28R7-G C3-1/8-T00-28R7-G C4-1/8-T0-619R-F C4-1/8-T0-619R-F
A3R7 A3R8 A3R9 A3R9 A3R9 A3R9 A3R9 A3R9 A3R10 A3R10 A3R11 A3R11 A3R11 A3R11 A3R11 A3R11 A3R12 A3R13 A3R13 A3R14 A3R14 A3R15 A3R15 A3R16 A3R17 A3R18 A3R17 A3R18 A3R18 A3R18 A3R18 A3R18 A3R18 A3R18 A3R18 A3R19 A3R19 A3R19 A3R19 A3R19 A3R19 A3R10 A3R11 A3R16 A3R11 A3R16 A3R17 A3R17 A3R18 A3R18 A3R18 A3R18 A3R18 A3R18 A3R19 A3R20 A3R21 A3R21 A3R21 A3R21 A3R21 A3R21 A3R21 A3R22 A3R23 A3R24 A3R26 A3R26 A3R26 A3R27 A3R26 A3R27 A3R284 A3R27 A3R284 A3R284 A3R284 A3R29 A3R23 A3R24 A3R264	C4-1/8-T0-215R-F C4-1/8-T0-1472-F C4-1/8-T0-1472-F C4-1/8-T0-2871-F C4-1/8-T0-551R-F 0757-0180 C4-1/8-T0-162R-F C3-1/8-T00-28R7-G C4-1/8-T00-28R7-G C4-1/8-T00-28R7-G C4-1/8-T00-28R7-G C4-1/8-T00-28R7-G C4-1/8-T00-28R7-G C4-1/8-T00-28R7-G C3-1/8-T00-28R7-G C3-1/8-T00-28R7-G C4-1/8-T00-28R7-G C4-1/8-T00-28R7-G C4-1/8-T00-28R7-G C4-1/8-T00-28R7-G C4-1/8-T00-28R7-G
A3R12 A3R13 A3R14 A3R15 A3R14 A3R15 A3R16 A3R16 A3R16 A3R17 A3R17 A3R17 A3R17 A3R17 A3R18 A3R18 A3R18 A3R18 A3R18 A3R19 A3R19 A3R20 A3R21 A3R21 A3R21 A3R21 A3R21 A3R21 A3R21 A3R21 A3R21 A3R22 A3R22 A3R23 A3R24 A3R264 A3R27 A3R24	C4-1/8-T0-511R-F 0757-0180 C4-1/8-T0-162R-F C3-1/8-T00-28R7-G C3-1/8-T00-28R7-G C4-1/8-T00-28R7-F C3-1/8-T00-28R7-G C3-1/8-T00-28R7-G C4-1/8-T0-619R-F C4-1/8-T0-619R-F
A3R17 0698-3443 0 2 RESISTOR 287 1% .125W F TC=0+-100 24546 A3R18 0698-7199 1 RESISTOR 28.7 1% .05W F TC=0+-100 24546 A3R20 0757-0418 9 6 RESISTOR 28.7 1% .05W F TC=0+-100 24546 A3R21 0757-0400 9 RESISTOR 619 1% .125W F TC=0+-100 24546 A3R22 0757-0159 5 1 RESISTOR 90.9 1% .125W F TC=0+-100 24546 A3R23 1810-0203 5 2 RESISTOR 1k 1% .5W F TC=0+-100 28480 A3R24 0698-3156 2 RESISTOR 14.7K 1% .125W F TC=0+-100 24546	C4-1/B-T0-287R-F C3-1/B-T00-28R7-G C3-1/B-T00-28R7-G C4-1/B-T0-619R-F C4-1/B-T0-90R9-F
A3R22 0757-0159 5 1 RESISTOR 1K 1% .5W F TC=0+-100 28480 A3R23 1810-0203 5 2 NETWORK-RES 8-SIP470.0 OHM X 7 01121 A3R24 0698-3156 2 RESISTOR 14.7K 1% .125W F TC=0+-100 24546	
	0757-0159 208A471 C4-1/8-T0-1472-F C4-1/8-T0-1001-F
A3R26	208A753 C4-1/8-T0-619R-F C4-1/8-T0-1001-F C4-1/8-T0-162R-F C4-1/8-T0-909R-F
A3R31	C4-1/8-T0-111-F C4-1/8-T0-619R-F 0698-8789 C4-1/8-T0-619R-F C4-1/8-T0-316R-F
A3R36 0757-1094 9 7 RESISTOR 1.47K 1% .125W F TC=0+-100 24546 A3R37 0757-0461 2 7 RESISTOR 68.1K 1% .125W F TC=0+-100 24546 A3R38 0757-1094 9 RESISTOR 1.47K 1% .125W F TC=0+-100 24546 A3R39 0757-0418 9 RESISTOR 619 1% .125W F TC=0+-100 24546 NETWORK-RES 8-SIP75.0K OHM X 7 01121	C4-1/8-T0-1471-F C4-1/8-T0-6812-F C4-1/8-T0-1471-F C4-1/8-T0-619R-F 208A753
A3R41 0757-0382 6 3 RESISTOR 16.2 1% .125W F TC=0+-100 19701 A3R42 0698-3444 1 RESISTOR 316 1% .125W F TC=0+-100 24546 A3R43 0698-3444 1 RESISTOR 316 1% .125W F TC=0+-100 24546 A3R44 0698-3444 1 RESISTOR 316 1% .125W F TC=0+-100 24546 A3R45 0698-3156 2 RESISTOR 14.7K 1% .125W F TC=0+-100 24546 A3R45 0698-3156 2 RESISTOR 14.7K 1% .125W F TC=0+-100 24546	MF4C1/8-T0-16R2-F C4-1/8-T0-316R-F C4-1/8-T0-1472-F C4-1/8-T0-316R-F C4-1/8-T0-1472-F
A3R46	C4-1/B-T0-4641-F C4-1/8-T0-1472-F C4-1/8-T0-1472-F CB1865 C4-1/8-T0-3162-F
A3R51 0757-0461 2 RESISTOR 68.1K 1% .125W F TC=0+-100 24546 A3R52 0683-1865 5 RESISTOR 18M 5% .25W FC TC=-900/+1200 01121 A3R53 0757-0402 1 RESISTOR 110 1% .125W F TC=0+-100 24546 A3R54 0698-3160 8 RESISTOR 31.6K 1% .125W F TC=0+-100 24546 A3R55 0757-0402 1 RESISTOR 110 1% .125W F TC=0+-100 24546	C4-1/8-T0-6812-F CB1865 C4-1/8-T0-111-F C4-1/8-T0-3162-F C4-1/8-T0-111-F
A3R56 0699-0264 9 1 RESISTOR-MATCHED SET 5.0M & 50K OHMS 28480 A3R57 2100-0569 2 1 RESISTOR-TRMR 1M 20% C TOP-ADJ 1-TRN 28480 0757-0441 8 RESISTOR 8.25K 1% .125W F TC=0+-100 24546 A3R59 0699-0264 9 PART OF R56 (5.0M) 28480 0757-0382 6 RESISTOR 16.2 1% .125W F TC=0+-100 19701	0699-0264 2100-0569 C4-1/8-T0-8251-F 0699-0264 MF4C1/8-T0-16R2-F
A3R61 0757-0424 7 9 RESISTOR 1.1K 1% .125W F TC=0+-100 24546 A3R62 0757-0439 4 2 RESISTOR 6.81K 1% .125W F TC=0+-100 24546 A3R63 0698-7188 8 2 RESISTOR 10 1% .05W F TC=0+-100 24546 A3R64 0698-3156 2 RESISTOR 14.7K 1% .125W F TC=0+-100 24546 A3R65 0757-0382 6 RESISTOR 16.2 1% .125W F TC=0+-100 19701	C4-1/8-T0-1101-F C4-1/8-T0-6811-F C3-1/8-T00-10R-G C4-1/8-T0-1472-F MF4C1/8-T0-16R2-F
A3R66 0757-0461 2 RESISTOR 68.1K 1% .125W F TC=0+-100 24546 A3R67 0757-0280 3 RESISTOR 1K 1% .125W F TC=0+-100 24546 A3R69 0757-0280 3 RESISTOR 1.47K 1% .125W F TC=0+-100 24546 A3R70 0757-0280 3 RESISTOR 1K 1% .125W F TC=0+-100 24546 A3R70 0757-0280 3 RESISTOR 1K 1% .125W F TC=0+-100 24546	C4-1/8-T0-6812-F C4-1/8-T0-1001-F C4-1/8-T0-1471-F C4-1/8-T0-1001-F C4-1/8-T0-1001-F
A3R71 0757-0461 2 RESISTOR 68.1K 1% .125W F TC=0+-100 24546 A3R72 0757-1094 9 RESISTOR 1.47K 1% .125W F TC=0+-100 24546 A3R73 0698-3153 9 10 RESISTOR 3.83K 1% .125W F TC=0+-100 24546 A3R74 0698-3155 1 RESISTOR 3.83K 1% .125W F TC=0+-100 24546 A3R75 0698-3151 7 RESISTOR 2.87K 1% .125W F TC=0+-100 24546	C4-1/8-T0-6812-F C4-1/8-T0-1471-F C4-1/8-T0-3831-F C4-1/8-T0-4641-F C4-1/8-T0-2871-F

See introduction to this section for ordering information *Indicates factory selected value

Table 6-3. Replaceable Parts

Reference	HP Part	c	Qty	Description	Mfr Code	Mfr Part Number
Designation	Number	<u>P</u>			Code	
A3R76 A3R77 A3R78 A3R79 A3R80	0698-3155 0757-0290 0757-0397 0687-5661 0698-3155	1 5 3 5	2	RESISTOR 4.64K 1% .125W F TC=0+-100 RESISTOR 6.19K 1% .125W F TC=0+-100 RESISTOR 68.1 1% .125W F TC=0+-100 RESISTOR 56M 10% .5W CC TC=0+1059 RESISTOR 4.64K 1% .125W F TC=0+-100	24546 19701 24546 01121 24546	C4-1/8-T0-4641-F MF4C1/8-T0-6191-F C4-1/8-T0-68R1-F EB5661 C4-1/8-T0-4641-F
A3R81 A3R82 A3R83 A3R84 A3R85	0 698-3155 0 757-0 458 0 757-0 461 0 683-5655 0 6 98-3157	1 7 2 9 3	2 2 5	RESISTOR 4.64K 1% .125W F TC=0+-100 RESISTOR 51.1K 1% .125W F TC=0+-100 RESISTOR 60.1K 1% .125W F TC=0+-100 RESISTOR 5.6M 5% .25W FC TC=-900/+1100 RESISTOR 19.6K 1% .125W F TC=0+-100	24546 24546 24546 01121 24546	C4-1/8-T0-4641-F C4-1/8-T0-5112-F C4-1/8-T0-6812-F C85655 C4-1/8-T0-1962-F
A3R86 A3R87 A3R88 A3R89 A3R90	0698-6866 0757-0441 0698-3150 0698-0084 0757-0418	7 8 6 9	1 1 8	RESISTOR 2.182K .25% .125W F TC=0+-50 RESISTOR 8.25K 1% .125W F TC=0+-100 RESISTOR 2.37K 1% .125W F TC=0+-100 RESISTOR 2.15K 1% .125W F TC=0+-100 RESISTOR 619 1% .125W F TC=0+-100	28480 24546 24546 24546 24546	0698-6866 C4-1/8-T0-8251-F C4-1/8-T0-2371-F C4-1/8-T0-2151-F C4-1/8-T0-619R-F
A3R91 A3R92 A3R93 A3R94 A3R95	0757-0123 0683-5655 0683-2265 0757-0398 0757-0402	3 9 1 4 1	1 1 5	RESISTOR 34.8K 1% .125W F TC=0+-100 RESISTOR 5.6M 5% .25W FC TC=-900/+1100 RESISTOR 22M 5% .25W FC TC=-900/+1200 RESISTOR 75 1% .125W F TC=0+-100 RESISTOR 110 1% .125W F TC=0+-100	28480 01121 01121 24546 24546	0757-0123 GB5655 CB2265 C4-1/8-T0-75R0-F C4-1/8-T0-111-F
A3R96 A3R97 A3R98 A3R99 A3R100	0757-0402 0757-0402 0698-3429 1810-0203 0698-3457	1 1 2 5 6	1	RESISTOR 110 1% .125W F TC=0+-100 RESISTOR 110 1% .125W F TC=0+-100 RESISTOR 19.6 1% .125W F TC=0+-100 NETWORK-RES 8-SIP470.0 OHM X 7 RESISTOR 316K 1% .125W F TC=0+-100	24546 24546 03888 01121 28480	C4-1/8-T0-111-F C4-1/8-T0-111-F PME55-1/8-T0-19R6-F 208A471 0698-3457
A3R101 A3R102 A3R103 A3R104 A3R105	0698-3457 0698-3444 0757-1094 0698-3155 0698-3437	6 1 9 1 2	1	RESISTOR 316K 1% .125W F TC=0+-100 RESISTOR 316 1% .125W F TC=0+-100 RESISTOR 1.47K 1% .125W F TC=0+-100 RESISTOR 4.64K 1% .125W F TC=0+-100 RESISTOR 133 1% .125W F TC=0+-100	28480 24546 24546 24546 24546	0698-3457 C4-1/8-T0-316R-F C4-1/8-T0-1471-F C4-1/8-T0-4641-F C4-1/8-T0-133R-F
A3R106 A3R107 A3R108 A3R109 A3R110	0698-3457 0698-3155 0698-3457 0757-0465 2100~3659	6 1 6 6 7	9 1	RESISTOR 316K 1% .125W F TC=0+-100 RESISTOR 4.64K 1% .125W F TC=0+-100 RESISTOR 316K 1% .125W F TC=0+-100 RESISTOR 100K 1% .125W F TC=0+-100 RESISTOR-TRMR 20K 10% C TOP-ADJ 17-TRN	28480 24546 28480 24546 32997	0698-3457 C4-1/8-T0-4641-F 0698-3457 C4-1/8-T0-1003-F 3292W-1-203
A3R111 A3R112 A3R113 A3R114 A3R115	0 698-7199 0 698-3445 0 698-3444 0 698-0 084 0 698-0 084	1 2 1 9	4	RESISTOR 28.7 1% .05W F TC=0+-100 RESISTOR 348 1% .125W F TC=0+-100 RESISTOR 316 1% .125W F TC=0+-100 RESISTOR 2.15K 1% .125W F TC=0+-100 RESISTOR 2.15K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C3-1/8-T00-28R7-G C4-1/8-T0-34BR-F C4-1/8-T0-316R-F C4-1/8-T0-2151-F C4-1/8-T0-2151-F
A3R116 A3R117 A3R118† A3R119	0757-0405 0698-0082 0757-0397 0757-0451	4 7 3 2	4 3	RESISTOR 162 1% .125W F TC=0+-100 RESISTOR 464 1% .125W F TC=0+-100 RESISTOR 68.1 1% .125W F TC=0+-100 RESISTOR 68.1K 1% .125W F TC=0+-100	24546 24546 24546 24546	C4-1/8-T0-162R-F C4-1/8-T0-4640-F C4-1/8-T0-68R1-F C4-1/8-T0-6812-F
A3TP1 A3TP2 A3TP3 A3TP4 A3TP5	1251-0600 1251-0600 1251-1556 1251-1556 1251-1556	0 0 7 7 7	56	CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ	28480 28480 28480 28480 28480	1251-0600 1251-0600 1251-1556 1251-1556 1251-1556
A3TP6 A3TP7 A3TP8 A3TP9 A3TP10	1251-1556 1251-1556 1251-0600 1251-0600 1251-0600	7 7 0 0		CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	28480 28480 28480 28480 28480	1251-1556 1251-1556 1251-0600 1251-0600 1251-0600
A3U1 A3U2 A3U3 A3U4 A3U5	1826-0188 1820-1722 1858-0066 1820-1272 1820-1212	8 6 8 1 9	1 3 1	IC CONV 8-B-D/A 16-DIP-C PKG IC RGTR CMOS 8-BIT TRANSISTOR ARRAY 16-PIN CER DIP IC BFR TTL LS NOR QUAD 2-INP IC FF TTL LS J-K NEG-EDGE-TRIG	0 4713 0 4713 32293 0 1295 0 1295	MC1408L-8 MC14557BCP IH401A SN74LS33N SN74LS112AN
A3U6 A3U7 A3U8 A3U9 A3U10	1826-0522 1858-0066 1826-0522 1826-0174 1820-1144	4 8 4 2 6	2	IC OP AMP QUAD 14-DIP-P PKG TRANSISTOR ARRAY 16-PIN CER DIP IC OP AMP QUAD 14-DIP-P PKG IC COMPARATOR GP QUAD 14-DIP-P PKG IC GATE TTL LS NOR QUAD 2-INP	01295 32293 01295 28480 01295	TL074CN IH401A TL074CN 1826-0174 SN74LS02N
A3U11 A3U12 A3U13 A3U14 A3U15	1820-1423 1826-0522 1820-1211 1820-0681 1820-1423	4 4 8 4 4	2	IC MV TTL LS MONOSTBL RETRIG DUAL IC OP AMP QUAD 14-DIP-P PKC IC GATE TTL LS EXCL-OR QUAD 2-INP IC GATE TTL S NAND QUAD 2-INP IC MV TTL LS MONOSTBL RETRIG DUAL	01295 01295 01295 01295 01295	SN74LS123N TL074CN SN74LS86N SN74S00N SN74LS123N
A3U16 A3U17 A3U18 A3U19 A3U20	1826-0174 1820-1112 1858-0066 1820-1882 1820-2005	2 8 9 0	1	IC COMPARATOR GP QUAD 14-DIP-P PKG IC FF TTL LS D-TYPE POS-EDGE-TRIG TRANSISTOR ARRAY 16-PIN CER DIP IC GATE ECL EXCL-OR QUAD IC TIMER NMOS	28 48 0 01 29 5 32 29 3 0 47 1 3 0 0 0 3 J	1826-0174 SM74L874AN IH401A MC10113L UPD8253D

Table 6-3. Replaceable Parts

	Table 0-5. neplaceable rails								
Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number			
A3U21 A3U22 A3U23 A3U24 A3U25	1820-1423 1826-0547 1820-1788 1820-2008 1820-2008	4 3 4 3 3	1 1 2	IC MV TTL LS MONOSTBL RETRIG DUAL IC OP AMP DUAL 8-DIP-P PKG IC CNTR ECL BIN SYNCHRO POS-EDGE-TRIG IC SHF-RGTR CMOS D-M/S SERIAL-IN PRL-OUT IC SHF-RGTR CMOS D-M/S SERIAL-IN PRL-OUT	01295 01295 07263 04713 04713	SN74LS123N TL072ACP F10016DC MC14015BCP MC14015BCP			
A3U26 A3U27 A3U28 A3U29 A3U30	1820-1225 1820-1430 1820-1112 1820-1383 1820-0802	4 3 8 5 1	1 1 2 1	IC FF ECL D-M/S DUAL IC CNTR TTL LS BIN SYNCHRO POS-EDGE-TRIG IC FF TTL LS D-TYPE POS-EDGE-TRIG IC CNTR ECL BCD POS-EDGE-TRIG IC GATE ECL NOR QUAD 2-INP	04713 01295 01295 01295 04713	MC10231P SN74LS161AN SN74LS74AN MC1013BL MC10102P			
A3U31 A3U32	1820-1112 1820-1383	8 5		IC FF TTL LS D-TYPE POS-EDGE-TRIG IC CNTR ECL BCD POS-EDGE-TRIG	01295 04713	SN74LS74AN MC10138L			
A3VR1 A3VR2 A3VR3 A3VR4 A3VR5	1902-3002 1902-0033 1902-0064 1902-3139 1902-3139	3 4 1 7 7	1 1 2 4	DIODE-ZNR 2.37V 5% DO-7 PD=.4W TC=074% DIODE-ZNR 1N823 6.2V 5% DO-7 PD=.4W DIODE-ZNR 7.5V 5% DO-35 PD=.4W TC=+.05% DIODE-ZNR 8.25V 5% DO-35 PD=.4W DIODE-ZNR 8.25V 5% DO-35 PD=.4W	28480 24046 28480 28480 28480	1902-3002 1N823 1902-0064 1902-3139 1902-3139			
A3VR6 A3VR7	1902-0041 1902-3139	4 7	1	DIODE-ZNR 5.11V 5% DO-35 PD=.4W DIODE-ZNR 8.25V 5% DO-35 PD=.4W	28480 28 4 80	1902-0041 1902-3139			
A3Y1	0410-1130 1200-0758	0 2	1 1	CRYSTAL SOCKET-XTAL 2-CONT HC-25/U DIP-SLDR	28480 28480	0410-1130 1200-0758			
A4	08656-60001	1	1	HIGH FREQUENCY LOOP ASSEMBLY	28480	08656-60001			
A4C1 A4C2 A4C3 A4C4 A4C5	0180-0197 0160-2055 0180-0197 0160-4389 0160-4082	8 9 8 6 6	6	CAPACITOR-FXD 2.2UF+-10% 20VDC TA CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD 2.2UF+-10% 20VDC TA CAPACITOR-FXD 100PF +-5PF 200VDC CER CAPACITOR-FDTHRU 1000PF 20% 200V CER	56289 28480 56289 51642 28480	150D225X9020A2 0160-2055 150D225X9020A2 200-200-NP0-101J 0160-4082			
A4C6 A4C7 A4C8 A4C9 A4C10	0160-3878 0160-3878 0160-3878 0160-3568 0160-3568	6 6 1 1	6	CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 2.7PF +-5% 200VDC CER CAPACITOR-FXD 2.7PF +-5% 200VDC CER	28480 28480 28480 51642 51642	0160-3878 0160-3878 0160-3878 100-100-NP0-279J 100-100-NP0-279J			
A4C11 A4C12 A4C13 A4C14 A4C15	0160-3568 0160-4764 0160-3878 0160-3878 0160-2055	1 1 6 6 9	9	CAPACITOR-FXD 2.7PF +-5% 200VDC CER CAPACITOR-FXD 150PF +-5% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD .01UF +80-20% 100VDC CER	51642 28480 28480 28480 28480	100-100-NP0-279J 0160-4764 0160-3878 0160-3878 0160-2055			
A4C16 A4C17 A4C18 A4C19 A4C20	0160-3456 0160-3879 0160-3878 0160-4389 0160-4103	6 7 6 6 2	5	CAPACITOR-FXD 1000PF +-10% 1KVDC CER CAPACITOR-FXD .01UF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 100PF +-5FF 200VDC CER CAPACITOR-FXD 220PF +-5% 100VDC CER	28480 28480 28480 51642 72982	0160-3456 0160-3879 0160-3878 201-200-NP0-101J 8121-M100-COG-221J			
A4C21 A4C22* A4C23 A4C24 A4C25	0160-4498 0160-3873 0160-4498 0160-4518 0160-4389	8 1 8 3 6	4 7 3	CAPACITOR-FXD 5.6PF +5PF 200VDC CER CAPACITOR-FXD 4.7PF +5PF 200VDC CER CAPACITOR-FXD 5.6PF +5PF 200VDC CER CAPACITOR-FXD 3.9PF +5PF 200VDC CER CAPACITOR-FXD 100PF +-5PF 200VDC CER	51642 28480 51642 51642 51642	200-200-NP0-569D 0160-3873 200-200-NP0-569D 200-200-NP0-399D 200-200-NP0-101J			
A4C26 A4C27 A4C28 A4C29 A4C30	0160-4389 0160-3875 0160-3873 0160-3568	6 3 1	4	CAPACITOR-FXD 100PF +-5PF 200VDC CER NOT ASSIGNED CAPACITOR-FXD 22PF +-5% 200VDC CER 0+-30 CAPACITOR-FXD 4.7PF +5PF 200VDC CER CAPACITOR-FXD 2.7PF +-5% 200VDC CER	51642 28480 28480 51642	200-200-NP0-101J 0160-3875 0160-3873 100-100-NP0-279J			
A4C31 A4C32 A4C33 A4C34† A4C35	0160-3876 0160-2055 0160-3029 0180-0197 0160-3029	4 9 9 8 9	4 3 9	CAPACITOR-FXD 47PF +-20% 200VDC CER CAPACITOR-FXD .01UF +80-20% 100VDC CFR CAPACITOR-FXD 7.5PF +5PF 100VDC CER CAPACITOR-FXD 2.2UF-10% 20VDC TA CAPACITOR-FXD 7.5PF +5PF 100VDC CER	28480 28480 28480 56289 28480	0160-3876 0160-2055 0160-3029 150D225X9020A2 0160-3029			
A4C36 A4C37 A4C38 A4C39 A4C40	0160-4383 0160-3029 0160-4491 0160-2257	0 9 1 3	3 3 1	CAPACITOR-FXD 6.8PF +5PF 200VDC CER CAPACITOR-FXD 7.5PF +5PF 100VDC CER CAPACITOR-FXD 8.2PF +-5% 200VDC CER CAPACITOR-FXD 10PF +-5% 500VDC CER 0+-60 NOT ASSIGNED	20932 28480 51642 28480	5024E0200RD689D 0160-3029 200-200-NP0-829J 0160-2257			
A4C41 A4C42 A4C43 A4C44 A4C45	0160-4491 0160-3875 0160-3873 0160-3926 0160-3875	1 3 1 5 3	1	CAPACITOR-FXD 8.2PF +-5% 200VDC CER CAPACITOR-FXD 22PF +-5% 200VDC CER 0+-30 CAPACITOR-FXD 4.7PF +5PF 200VDC CER CAPACITOR-FXD HAVE 100PF 20% 200V CER CAPACITOR-FXD 22PF +-5% 200VDC CER 0+-30	51642 28480 28480 28480 28480	200-200-NP0-829J 0160-3875 0160-3873 0160-3873 0160-3875			
A4C46 A4C47 A4C48 A4C49 A4C50	0160-3454 0160-3459 0160-3456 0160-4494	4 9 6 4	1 1 2	NOT ASSIGNED CAPACITOR-FXD 220PF +-10% 1KVDC CER CAPACITOR-FXD .02UF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-10% 1KVDC CER CAPACITOR-FXD 39PF +-5% 200VDC CER 0+-30	28480 28480 28480 51642	0160-3454 0160-3459 0160-3456 200-200-NP0-390J			

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A4C51 A4C52 A4C53 A4C54 A4C55	0160-2055 0121-0449	9	3	CAPACITOR-FXD .01UF +80-20% 100VDC CER NOT ASSIGNED CAPACITOR-V TRMR-CER 3.5-10PF 63V PC-MTG NOT ASSIGNED NOT ASSIGNED	28480 28480	0160-2055 0121-0449
A4C56 A4C57 A4C58 A4C59 A4C60	0160~3 45 6 0160-3878	6		NOT ASSIGNED NOT ASSIGNED NOT ASSIGNED NOT ASSIGNED CAPACITOR-FXD 1000PF +-10% 1KVDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER	28480 28480	0160-3456 0160-3878
A4C61 A4C62 A4C63 A4C64 A4C65	0160-3875 0160-3456 0160-3878 0160-4767 0160-3456	3 6 6 4 6	1	CAPACITOR-FXD 22PF +-5% 200VDC CER 0+-30 CAPACITOR-FXD 1000PF +-10% 1KVDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 20PF +-5% 200VDC CER 0+-30 CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480 28480 28480 28480 28480	0160-3875 0160-3456 0160-3878 0160-4767 0160-3456
A4C66 A4C67 A4C68 A4C69 A4C70	0160-3878 0160-4497 0160-2055 0160-3878 0160-2204	6 7 9 6 0	1	CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 82PF +-5% 200VDC CER 0+-30 CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-5% 300VDC MICA	28480 28480 28480 28480 28480	0160-3878 0160-4497 0160-2055 0160-3878 0160-2204
A4071 A4072 A4073† A4074 A4075	0160-2055 0160-3878 0160-0155 0160-3453 0160-2055	9 6 6 3 9	1 3	CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 3300PF +-10% 200VDC POLYE CAPACITOR-FXD .05UF +80-20% 100VDC CER CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480 28480 28480 28480 28480	0160-2055 0160-3878 0160-0155 0160-3453 0160-2055
A4C76 A4C77† A4C78 A4C79 A4C80	0160-2055 0160-2218 0160-2055 0160-3876 0160-3874	9 6 9 4 2	1	CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD 1000PF +-5% 300VDC MICA CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD 47PF +-20% 200VDC CER CAPACITOR-FXD 10PF +5PF 200VDC CER	28480 28480 28480 28480 28480	0160-2055 0160-2218 0160-2055 0160-3876 0160-3874
A4C81 A4C82 A4C83 A4C84 A4C85	0160-4382 0160-3879 0160-3874 0121-0449	9 7 2 9		CAPACITOR-FXD 3.3PF +25PF 200VDC CER NOT ASSIGNED CAPACITOR-FXD .01UF +-20% 100VDC CER CAPACITOR-FXD 10PF +5PF 200VDC CER CAPACITOR-V TRMR-CER 3.5~10PF 63V PC-MTG	51642 28480 28480 28480	200-200-NP0-339C 0160-3879 0160-3874 0121-0449
A4C86	0160-3568	1		CAPACITOR-FXD 2.7PF +-5% 200VDC CER	51642	100-100-NP0-279J
A4CR1 A4CR2 A4CR3 A4CR4 A4CR5	1901-0050 1901-0189 1906-0098 1906-0098 1906-0098	3 9 9 9	1 4	DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-STEP RECOVERY DIODE-MATCHED 1V DIODE-MATCHED 1V DIODE-MATCHED 1V	28480 28480 28480 28480 28480	1901-0050 1901-0189 1906-0098 1906-0098 1906-0098
A4CR6 A4CR7 A4CR8 A4CR9 A4CR10	1906-0098 1901-0050 1901-0050 1901-0050 1901-0050	9 3 3 3 3		DIODE-MATCHED 1V DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-SWITCHING 80V 200MA 2NS DO-35	28480 28480 28480 28480 28480	1906-0098 1901-0050 1901-0050 1901-0050 1901-0050
A4CR11 A4CR12 A4CR13 A4CR14 A4CR15	1901-0050 1901-0050 1901-0050	3 3 3		DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-SWITCHING 80V 200MA 2NS DO-35 NOT ASSIGNED NOT ASSIGNED	28480 28480 28480	1901-0050 1901-0050 1901-0050
A4CR16 A4CR17 A4CR18 A4CR19	1901-0050 1901-0050 1901-0050 1901-0050	3 3 3 3		DIODE-SWITCHING BOV 200MA 2NS DO-35 DIODE-SWITCHING BOV 200MA 2NS DO-35 DIODE-SWITCHING BOV 200MA 2NS DO-35 DIODE-SWITCHING BOV 200MA 2NS DO-35	28480 28480 28480 28480	1901-0050 1901-0050 1901-0050 1901-0050
A4J1	1251-6731	0	1	CONNECTOR	28480	1251-6731
A4L1 A4L2 A4L3 A4L4 A4L5	9100-1627 9100-1627 9100-1627 9100-1627 9100-2247	2 2 2 2 4		INDUCTOR RF-CH-MLD 39UH 5% .166DX.385LG INDUCTOR RF-CH-MLD 100NH 10% .105DX.26LG	28480 28480 28480 28480 28480	9100-1627 9100-1627 9100-1627 9100-1627 9100-1627 9100-2247
A4L6 A4L7 A4L8 A4L9 A4L10	9100~2247	4		PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR RF-CH-MLD 100NH 10% .105DX.26LG	28480	9100-2247
A4L11 A4L12 A4L13 A4L14 A4L15	9135-0071 9100-2247 9135-0073	1 4 3	l	INDUCTOR RF-CH-MLD 62NH 5% .102DX.26LG PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR RF-CH-MLD 100NH 10% .105DX.26LG PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR RF-CH-MLD 51NH 6% .102DX.26LG	28480 28480 28480	9135-0071 9100-2247 9135-0073
A4L16 A4L17 A4L18 A4L19 A4L20	9135-0073 9135-0076 9135-0074	3 6 4	2	INDUCTOR RF-CH-MLD 51NH 6% .102DX.26LG PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR RF-CH-MLD 39NH 6% .102DX.26LG INDUCTOR RF-CH-MLD 47NH 4% .102DX.26LG	28480 28480 28480	9135-0073 9135-0076 9135-0074
					<u> </u>	

Table 6-3. Replaceable Parts

Reference Designation A4L21 A4L22 A4L23 A4L23 A4L25	HP Part Number	C D	Qty	Description	Mfr	846 5 . 31
A4L22 A4L23 A4L24		+ - +		Description	Code	Mfr Part Number
	9135-0081 9135-0081 9140-0158 9140-0158	3 6 6	3 20	INDUCTOR RF-CH-MLD 68NH 5% .102DX.26LG INDUCTOR RF-CH-MLD 68NH 5% .102DX.26LG INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG NOT ASSIGNED	28480 28480 28480 28480	9135-0081 9135-0081 9140-0158 9140-0158
A4L26 A4L27 A4L28 A4L29 A4L30	9135-0081 9135-0076 9100-3512 9100-2248	3 6 8 5	2	INDUCTOR RF-CH-MLD 68NH 5% .102DX.26LG INDUCTOR RF-CH-MLD 39NH 6% .102DX.26LG INDUCTOR-50NH .285D X .4LG PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR RF-CH-MLD 120NH 10% .105DX.26LG	28480 28480 28480 28480	9135-0081 9135-0076 9100-3512 9100-2248
A4L31 A4L32 A4L33 A4L34 A4L35	9140-0141 9100-2249 9100-1641 9135-0068	7 6 0 6	2 1 2	INDUCTOR RF-CH-MLD 680NH 10% .105DX.26LG NOT ASSIGNED INDUCTOR RF-CH-MLD 150NH 10% .105DX.26LG INDUCTOR RF-CH-MLD 240UH 5% .166DX.385LG INDUCTOR RF-CH-MLD 33NH 6% .102DX.26LG	28480 28480 28480 28480	9140-0141 9100-2249 9100-1641 9135-0068
A4L36 A4L37 A4L38 A4L39 A4L40	9100-3514 9100-3512 9100-3514 9100-3513 9135-0068	0 8 0 9 6	1	INDUCTOR-30NH .285D X .4LG INDUCTOR-30NH .285D X .4LG INDUCTOR-30NH .285D X .4LG INDUCTOR-75NH .285D X .4LG INDUCTOR RF-CH-MLD 33NH 6% .102DX.26LG	28480 28480 28480 20480 28480	9100-3514 9100-3512 9100-3514 9100-3513 9135-0068
A4L41	9100-2249	6		INDUCTOR RF-CH-MLD 150NH 10% .105DX.26LG	28480	9100-2249
A4MP1 A4MP2 A4MP3 A4MP4 A4MP5+	0362-0227 1251-1556 8150-0468 08656-00033	1 7 1 3 9	1 35 1	CONNECTOR-SGL CONT SKT 1.14-MM-BSC-SZ CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ WIRE 24AWG W/BK/O 300V PVC 7X32 80C GROUND CLIP-SEMI-RIGID BRACKET-HF LOOP FEEDTHRU	28480 28480 28480 28480 28480	0362-0227 1251-1556 8150-0468 08656-00033 08656-00089
A4MP6 A4MP7†	08656-00074	2	1	PLATE-HF LOOP BRACKET NOT ASSIGNED	28480	08656-00074
A4MP8 A4MP9 A4MP10	2420-0026 2190-0630 8150-0449	4 7 8	2 2 1	NUT WASHER-LOCK WIRE-AWG, RED	00000 28480 28480	ORDER BY DESCRIPTION 2190-0630 8150-0449
A4MP11 A4MP12†	8150-0460 08656-00090	3	1	WIRE-AWG,WHITE DRANGE GROUNDING SPRING	28480 28480	8150-0460 08656-00090
A4Q1 A4Q2 A4Q3 A4Q4 A4Q5	1853-0020 1854-0632 1854-0696 1853-0020 1854-0477	4 6 2 4 7	4 8 2	TRANSISTOR PNP SI PD=300MW FT=150MHZ TRANSISTOR NPN SI PD=180MW FT=4GHZ TRANSISTOR NPN SI TO-72 PD=200MW TRANSISTOR PNP SI PD=300MW FT=150MHZ TRANSISTOR NPN 2N2222A SI TO-18 PD=500MW	28480 25403 28480 28480 04713	1853-0020 BFR-91 1854-0696 1853-0020 2N2222A
A4Q6 A4Q7 A4Q8 A4Q9 A4Q10	1855-0235 1853-0007 1854-0071 1854-0071 1854-0477	7 7 7 7 7	1 8	TRANSISTOR J-FET N-CHAN D-MODE TO-52 SI TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW TRANSISTOR NPN SI PD=300MW FT=200MHZ TRANSISTOR NPN SI PD=300MW FT=200MHZ TRANSISTOR NPN 2N2222A SI TO-18 PD=500MW	28480 04713 28480 28480 04713	1855-0235 2N3251 1854-0071 1854-0071 2N2222A
A4R 1 A4R2 A4R3 A4R4 A4R5	0698-7227 0698-7189 0698-7227 0698-3153 0757-0440	6 9 6 9 7	4 2 2	RESISTOR 422 1% .05W F TC=0+-100 RESISTOR 11 1% .05W F TC=0+-100 RESISTOR 422 1% .05W F TC=0+-100 RESISTOR 3.83K 1% .125W F TC=0+-100 RESISTOR 7.5K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C3-1/8-T0-422R-G C3-1/8-T00-11R0-G C3-1/8-T0-422R-G C4-1/8-T0-3831-F C4-1/8-T0-7501-F
A4R6* A4R7* A4R8 A4R9 A4R10*	0698-7218 0698-7200 0698-3438 0757-0280 0698-7218	5 5 3 3 5	2 1 5	RESISTOR 178 1% .05W F TC=0+-100 RESISTOR 31.6 1% .05W F TC=0+-100 RESISTOR 147 1% .125W F TC=0+-100 RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 178 1% .05W F TC=0+-100	24546 24546 24546 24546 24546	C3-1/8-T0-178R-G C3-1/8-T00-31R6-G C4-1/8-T0-147R-F C4-1/8-T0-101-F C3-1/8-T0-178R-G
94R11 94R12 94R13 94R14 94R15	0698-3440 0698-3440 0698-3156 0698-3156 0757-0179	7 7 2 2 9	1	RESISTOR 196 1% .125W F TC=0+-100 RESISTOR 196 1% .125W F TC=0+-100 RESISTOR 14.7K 1% .125W F TC=0+-100 RESISTOR 14.7K 1% .125W F TC=0+-100 RESISTOR 196 1% .25W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-196R-F C4-1/8-T0-196R-F C4-1/8-T0-1472-F C4-1/8-T0-1472-F C5-1/4-T0-196R-F
A4R16 A4R17 A4R18 A4R19 A4R20	0698-7220 0698-7198 0698-7198 0698-7205 0698-7236	9 0 0 0 7	1 4 6 2	RESISTOR 215 1% .05W F TC=0+-100 RESISTOR 26.1 1% .05W F TC=0+-100 RESISTOR 26.1 1% .05W F TC=0+-100 RESISTOR 51.1 1% .05W F TC=0+-100 RESISTOR 1K 1% .05W F TC=0+-100	24546 24546 24546 24546 24546	C3-1/8-T0-215R-G C3-1/8-T00-26R1-G C3-1/8-T00-26R1-G C3-1/8-T00-51R1-G C3-1/8-T0-1001-G
94R21 † 94R22 94R23 94R24 94R25	0698-3438 0698-7205 0757-0394	0 0 0 3	28 3 5	RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 147 1% .125W F TC=0+-100 RESISTOR 51.1 1% .05W F TC=0+-100 RESISTOR 51.1 1% .125W F TC=0+-100 RESISTOR 10 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-1001-F C4-1/8-T0-147R-F C3-1/8-T00-51R1-G C4-1/8-T0-51R1-F C4-1/8-T0-10R0-F
94826 94827 94828 94829 94830	0698-0084 0698-3441 0698-3132	7 9 8 4	3 3	RESISTOR 196 1% .125W F TC=0+-100 RESISTOR 2.15K 1% .125W F TC=0+-100 RESISTOR 215 1% .125W F TC=0+-100 RESISTOR 261 1% .125W F TC=0+-100 RESISTOR 422 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-196R-F C4-1/8-T0-2151-F C4-1/8-T0-215R-F C4-1/8-T0-2610-F C4-1/8-T0-422R-F

See introduction to this section for ordering information *Indicates factory selected value † FOR BACKDATING INFORMATION REFER TO SECTION YII

Table 6-3. Replaceable Parts

Reference Designation		c	Qty	Description	Mfr Code	Mfr Part Number
A4R31 A4R32 A4R33 A4R34	0698-3132 0698-3441 0757-0279	4 8 0		RESISTOR 261 1% .125W F TC=0+-100 RESISTOR 215 1% .125W F TC=0+-100 RESISTOR 3.16K 1% .125W F TC=0+-100 NOT ASSIGNED RESISTOR 1K 1% .125W F TC=0+-100	24546 24546 24546 24546	C4-1/8-T0-2610-F C4-1/8-T0-215R-F C4-1/8-T0-3161-F C4-1/8-T0-1001-F
A4R35 A4R36 A4R37 A4R38 A4R39 A4R40	0698-0084 0698-3447 0698-7188 0698-8816 0698-7221	9 4 8 1 0	1 5	RESISTOR 2.15K 1% .125W F TC=0+-100 RESISTOR 422 1% .125W F TC=0+-100 RESISTOR 10 1% .05W F TC=0+-100 RESISTOR 2.15 1% .125W F TC=0+-100 RESISTOR 237 1% .05W F TC=0+-100	24546 24546 24546 28480 24546	C4-1/8-T0-2151-F C4-1/8-T0-422R-F C3-1/8-T00-10R-G 0698-8816 C3-1/8-T0-237R-G
A4R41 A4R42 A4R43 A4R44 A4R45	0698-7221 0698-7221 0698-7221 0698-7221 0698-3442	0 0 0 0 9		RESISTOR 237 1% .05W F TC=0+-100 RESISTOR 237 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C31/8-T0-237R-G C3-1/8-T0-237R-G C31/8-T0-237R-G C3-1/8-T0-237R-G C4-1/8-T0-237R-F
A4R46 A4R47 A4R48 A4R49 A4R50	0698-3442 0698-3442 0698-3442 0698-3442 1810-0269	9 9 9 9 3	1	RESISTOR 237 1% .125W F TC=0+-100 RESISTOR 237 1% .125W F TC=0+-100 RESISTOR 237 1% .125W F TC=0+-100 RESISTOR 237 1% .125W F TC=0+-100 NETWORK-RES 9-SIP10.0K OHM X 8	24546 24546 24546 24546 28480	C4-1/8-T0-237R-F C4-1/8-T0-237R-F C4-1/8-T0-237R-F C4-1/8-T0-237R-F 1810-0269
A4R51 A4R52 A4R53 A4R54 A4R55	0698-3158 2100-2216 0698-3158 0757-0438 2100-2030	4 0 4 3 6	2 1 3 1	RESISTOR 23.7K 1% .125W F TC=0+-100 RESISTOR-TRNR 5K 10% C TOP-ADJ 1-TRN RESISTOR 23.7K 1% .125W F TC=0+-100 RESISTOR 5.11K 1% .125W F TC=0+-100 RESISTOR-TRNR 20K 10% C TOP-ADJ 1-TRN	24546 73138 24546 24546 73138	C4-1/8-T0-2372-F 82PR5K C4-1/8-T0-2372-F C4-1/8-T0-5111-F 82PR20K
A4R56 A4R57 A4R58 A4R59 A4R60	0698-3156 0698-0084 0698-3454 0757-0416 0698-3156	2 9 3 7 2	4	RESISTOR 14.7K 1% .125W F TC=0+-100 RESISTOR 2.15K 1% .125W F TC=0+-100 RESISTOR 215K 1% .125W F TC=0+-100 RESISTOR 511 1% .125W F TC=0+-100 RESISTOR 14.7K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-1472-F C4-1/8-T0-2151-F C4-1/8-T0-2153-F C4-1/8-T0-511R-F C4-1/8-T0-1472-F
A4R61 A4R62 A4R63 A4R64 A4R65	0698-3457 0698-3154 0757-0280 0698-0084	6 0 3 9	4	NOT ASSIGNED RESISTOR 316K 1% ,125W F TC=0+-100 RESISTOR 4.22K 1% ,125W F TC=0+-100 RESISTOR 1K 1% ,125W F TC=0+-100 RESISTOR 2.15K 1% ,125W F TC=0+-100	28480 24546 24546 24546	0698-3457 C4-1/8-T0-4221-F C4-1/8-T0-1001-F C4-1/8-T0-2151-F
A4R66 A4R67 A4R68 A4R69 A4R70	0698-3266 0698-3438 0698-3445 0698-3454 0757-0438	53233	1	RESISTOR 237K 1% .125W F TC=0+-100 RESISTOR 147 1% .125W F TC=0+-100 RESISTOR 348 1% .125W F TC=0+-100 RESISTOR 215K 1% .125W F TC=0+-100 RESISTOR 5.11K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-2373-F C4-1/8-T0-147R-F C4-1/8-T0-348R-F C4-1/8-T0-2153-F C4-1/8-T0-5111-F
A4R71† A4R72 A4R73 A4R74 A4R75	0757-0280 0698-3441 0698-3452 0757-0458 0698-3452	3 8 1 7	2	RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 215 1% .125W F TC=0+-100 RESISTOR 147K 1% .125W F TC=0+-100 RESISTOR 51.1K 1% .125W F TC=0+-100 RESISTOR 147K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-1001-F C4-1/8-T0-215R-F C4-1/8-T0-1473-F C4-1/8-T0-5112-F C4-1/8-T0-1473-F
A4T1	08552-6024	9	1	TRANSFORMER-RF, YELLOW	28480	08552-6024
A4TP1 A4TP2 A4TP3 A4TP4 A4TP5	1251-0600 1251-1556 1251-1556 1251-1556 1251-1556	0 7 7 7 7		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ	28480 28480 28480 28480 28480	1251-0600 1251-1556 1251-1556 1251-1556 1251-1556
A4TP6 A4TP7 A4TP8 A4TP9 A4TP10	1251-1556 1251-0600 1251-1556 1251-1556 1251-0600	7 0 7 7 0		CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	28480 28480 28480 28480 28480	1251-1556 1251-0600 1251-1556 1251-1556 1251-1556
A4TP11 A4TP12 A4TP13 A4TP14 A4TP15	1251-0600 1251-0600 1251-0600 1251-0600 1251-0600	0 0 0		CONNECTOR-SGL CONT PIN 1.14-MM-8SC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-8SC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-8SC-SZ SQ	20480 28480 28480 28480 28480	1251-0600 1251-0600 1251-0600 1251-0600 1251-0600
A4TP16	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	28480	1251-0600
A4U1 A4U2 A4U3 A4U4	0955-0146 8090-0714 1820-1976 1820-0618 1820-1662	0 2 2 7 3	1 2 2	MIXER-DOUBLE BALANCED, 1000 MHZ SOLDER WIRE 354-DEG-F 2.4%-RMA IC BFR CHOS NON-INV HEX IC BFR TTL NON-INV HEX IC SHF-RGTR CHOS SERIAL-IN PRL-OUT 8-BIT	28480 28480 01928 01295 01928	0955-0146 8090-0714 CD4050RE SN7417N CD4094BE
A4U5 A4U6	1826-0323 1820-1211	3 8	2	IC OP AMP GP QUAD 14-DIP-C PKG IC GATE TTL LS EXCL-OR QUAD 2-INP	28480 01295	1826-0323 SN74LS86N
A5	08656-60013	5	1	HIGH FREQUENCY OSCILLATOR ASSEMBLY	28480	08656-60013
A5C1 A5C2 A5C3 A5C4 A5C5	0160-3878 0180-0197 0160-3878 0160-2055 0160-3878	6 8 6 9 6		CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 2.2UF+-10% 20VDC TA CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER	28480 56287 28480 28480 28480	0160-3878 150D225X9020A2 0160-3878 0160-2055 0160-3878

Table 6-3. Replaceable Parts

· 	r ————					
Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A5C6 A5C7 A5C8 A5C9 A5C10	0160-4389 0160-3878 0160-3878 0160-3568 0160-4389	6 6 6 1 6		CAPACITOR-FXD 100PF +-5PF 200VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 2.7PF +-5% 200VDC CER CAPACITOR-FXD 100PF +-5PF 200VDC CER	51642 28480 28480 51642 51642	200-200-NP0-101J 0160-3878 0160-3878 100-100-NP0-279J 200-200-NP0-101J
A5C11 A5C12 A5C13 A5C14 A5C15	0160-3878 0160-3878 0160-3878 0160-3878 0160-4386	6 6 6 3		CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 33PF +-5% 200VDC CER 0+-30	28480 28480 28480 28480 51642	0160-3878 0160-3878 0160-3878 0160-3878 200-200-NP0-330J
A5016 A5017 A5018 A5019 A5020	0160-3878 0160-3878 0160-4494 0160-3878 0160-4498	6 4 6 8		CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 39PF +-5% 200VDC CER 0+-30 CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 5.6PF +5PF 200VDC CER	28480 28480 51642 28480 51642	0160-3878 0160-3878 200-200-NP0-390J 0160-3878 200-200-NP0-569D
A5C21 A5C22*	0180-0197 0160-0690	8	2	CAPACITOR-FXD 2.2UF+-10% 20VDC TA CAPACITOR-FXD 1PF +5PF 100VDC CER	56289 28480	150D225X9020A2 0160-0690
A5CR1 A5CR2	0122-0072 0122-0072	6	2	DIODE-VVC 2.2PF 5% C3/C25-MIN=4.5 DIODE-VVC 2.2PF 5% C3/C25-MIN=4.5	04713 04713	BB105B BB105B
A5L1 A5L2 A5L3 A5L4 A5L5	9100-2247 9140-0158	4		PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR RF-CH-MLD 100NH 10% .105DX.26LG PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG	28480 28480	9100-2247 9140-0158
A5L6 A5L7	9100-2247 9140-0144	4 0		INDUCTOR RF-CH-MLD 100NH 10% ,105DX.26LG INDUCTOR RF-CH-MLD 4.7UH 10% ,105DX.26LG	28480 28480	9100-2247 9140-0144
A5L8 A5L9 A5L10	9100-2247 9100-2247	4 4		PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR RF-CH-MLD 100HH 10% .105DX.26LG INDUCTOR RF-CH-MLD 100HH 10% .105DX.26LG	28480 28480	9100-22 4 7 9100-22 4 7
A5L11 A5L12	9100-2247	4		PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR RF-CH-MLD 100NH 10% ,105DX.26LG	28480	9100-2247
A5MP1 A5MP2	1251-0600 8151-0014	0 5		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ WIRE 24AWG 1X24	28480 28480	1251-0600 8151-0014
A5Q1 A5Q2 A5Q3	1853-0020 1854-0632 1854-0632	4 6 6		TRANSISTOR PNP SI PD=300MW FT=150MHZ TRANSISTOR NPN SI PD=180MW FT=4GHZ TRANSISTOR NPN SI PD=180MW FT=4GHZ	28480 25403 25403	1953-0020 BFR-91 BFR-91
A5R1 A5R2 A5R3 A5R4 A5R5	0698-3445 0698-7222 0698-7225 0698-7202 0698-7216	2 1 4 7 3	1 1 2 3	RESISTOR 348 1% .125W F TC=0+-100 RESISTOR 261 1% .05W F TC=0+-100 RESISTOR 348 1% .05W F TC=0+-100 RESISTOR 38.3 1% .05W F TC=0+-100 RESISTOR 147 1% .05W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-348R-F C3-1/8-T0-261R-G C3-1/8-T0-348R-C C3-1/8-T00-38R3-G C3-1/8-T0-147R-G
A5R6 A5R7 A5R8 A5R9 A5R10	0757-0405 0757-0280 0698-3438 0698-3441 0698-7198	4 3 3 8 0		RESISTOR 162 1% .125W F TC=0+-100 RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 147 1% .125W F TC=0+-100 RESISTOR 215 1% .125W F TC=0+-100 RESISTOR 25 1 % .05W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-162R-F C4-1/8-T0-1001-F C4-1/8-T0-147R-F C4-1/8-T0-215R-F C3-1/8-T00-26R1-G
A5R11 A5R12 A5R13 A5R14 A5R15	0698-7198 0698-7227 0698-7189 0698-7227 0698-7212	0 6 9 6 9	1	RESISTOR 26.1 1% .05W F TC=0+-100 RESISTOR 422 1% .05W F TC=0+-100 RESISTOR 11 1% .05W F TC=0+-100 RESISTOR 422 1% .05W F TC=0+-100 RESISTOR 402 1% .05W F TC=0+-100	24546 24546 24546 24546 24546	C3-1/8-T00-26R1-G C3-1/8-T0-422R-G C3-1/8-T00-11R0-G C3-1/8-T0-422R-G C3-1/8-T0-100R-G
A5R 16 A5R 17 A5R 18 A5R 19 A5R 20	0698-7216 0698-7202 0757-0442 0698-7216 0698-3447	3 7 9 3 4	15	RESISTOR 147 1% .05W F TC=0+-100 RESISTOR 38.3 1% .05W F TC=0+-100 RESISTOR 10K 1% .125W F TC=0+-100 RESISTOR 147 1% .05W F TC=0+-100 RESISTOR 422 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C3-1/8-T0-147R-C C3-1/8-T00-38R3-G C4-1/8-T0-1002-F C3-1/8-T0-147R-G C4-1/8-T0-422R-F
A5R21 A5R22 A5R23	0698-0082 0698-7205 0698-7236	7 0 7		RESISTOR 464 1% .125W F TC=0+-100 RESISTOR 51.1 1% .05W F TC=0+-100 RESISTOR 1K 1% .05W F TC=0+-100	24546 24546 24546	C4-1/8-T0-4640-F C3-1/8-T00-51R1-G C3-1/8-T0-1001-G
A5TP1 A5TP2 A5TP3 A5TP4 A5TP5	1251-1556 1251-1556 1251-1556 1251-0600 1251-1556	7 7 7 0 7		CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ. CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ.	28480 28480 28480 28480 28480	1251-1556 1251-1556 1251-1556 1251-0600 1251-1556
A6	08656-60002	2	1	OUTPUT ASSEMBLY	28480	08656-60002
A6C1 A6C2 A6C3 A6C4 A6C5	0160-3878 0160-3878 0160-3878 0180-1746 0180-1746	66655		CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 15UF+-10% 20VDC TA CAPACITOR-FXD 15UF+-10% 20VDC TA	28480 28480 28480 56289 56289	0160-3878 0160-3878 0160-3878 1500156X9020B2 150D156X9020B2
t		_1.	1			

Table 6-3. Replaceable Parts

	ladie o-3. Hepiaceadie Parts								
Reference Designation	HP Part Number	CD	Qty	Description	Mfr Code	Mfr Part Number			
A6C6 A6C7 A6CB A6C9 A6C10	0180-1746 0160-0576 0160-3879 0180-0291 0160-3879	5 5 7 3 7	2	CAPACITOR-FXD 15UF+-10% 20VDC TA CAPACITOR-FXD .1UF +-20% 50VDC CER CAPACITOR-FXD .01UF +-20% 100VDC CER CAPACITOR-FXD 1UF+-10% 35VDC TA CAPACITOR-FXD .01UF +-20% 100VDC CER	56289 28480 28480 56289 28480	150D156X9020B2 0160-0576 0160-3879 150D105X9035A2 0160-3879			
A6C11 A6C12 A6C13 A6C14 A6C15	0160-3878 0160-3878 0160-3877 0160-3877 0160-3879	6 6 5 5 7	5	CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 100PF +-20% 200VDC CER CAPACITOR-FXD 100PF +-20% 200VDC CER CAPACITOR-FXD .01UF +-20% 100VDC CER	28480 28480 28480 28480 28480	0160-3878 0160-3878 0160-3877 0160-3877 0160-3877			
A6C16 A6C17 A6C18† A6C19 A6C20	0180-0291 0160-3878 0160-4519 0160-3879 0160-3878	3 6 4 7 6	1	CAPACITOR-FXD 1UF+-10% 35VDC TA CAPACITOR-FXD 1000PF +-20% 1000PC CER CAPACITOR-FXD 9.1PF +-5PF 200VDC CER CAPACITOR-FXD .01UF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER	56289 28480 51642 28480 28400	150D105X9035A2 0160-3878 200-200-NP0-919D 0160-3879 0160-3878			
A6C21 A6C22 A6C23 A6C24 A6C25	0160-3878 0160-3877 0160-3877 0160-3877 0180-0374	6 5 5 5	2	CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 100PF +-20% 200VDC CER CAPACITOR-FXD 100PF +-20% 200VDC CER CAPACITOR-FXD 100PF +-20% 200VDC CER CAPACITOR-FXD 100FF+-20% 20VDC TA	28480 28480 28480 28480 56289	0160-3878 0160-3877 0160-3877 0160-3877 150D106X9020B2			
A6C26 A6C27 A6C28 A6C29 A6C30	0140-0210 0180-0374 0160-0690 0160-3878 0160-3878	2 3 4 6	2	CAPACITOR-FXD 270PF +-5% 300VDC MICA CAPACITOR-FXD 10UF+-10% 20VDC TA CAPACITOR-FXD 1PF +5PF 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER	72136 56289 28480 28480 28480	DM15F271J0300WV1CR 150D106X9020B2 0160-0690 0160-3878 0160-3878			
A6C31 A6C32 A6C33 A6C34 A6C35	0160-4490 0160-3878 0160-3878 0160-3879	0 6 6 7		CAPACITOR-FXD 1.8PF +25PF 200VDC CER NOT ASSIGNED CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD .01UF +-20% 100VDC CER	28480 28480 20480 28480	0160-4490 0160-3878 0160-3878 0160-3879			
A6C36 A6C37 A6C38 A6C39 A6C40	0160-3876 0160-3876 0160-3878 0160-4498 0160-3878	4 4 6 8 6		CAPACITOR-FXD 47PF +-20% 200VDC CER CAPACITOR-FXD 47PF +-20% 200VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 5.6PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER	28480 28480 28480 51642 28480	0160-3876 0160-3876 0160-3878 200-200-NP0-569D 0160-3878			
A6C41 A6C42 A6C43 A6C44 A6C45	0160-3879 0160-3878 0160-4381 0160-3878 0160-4084	7 6 8 6 8	1	CAPACITOR-FXD .01UF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1.5PF +25PF 200VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD .1UF +-20% 50VDC CER	28480 28480 51642 28480 28480	0160-3879 0160-3878 150-200-NP0-159C 0160-3878 0160-4084			
A6C46 A6C47 A6C48 A6C49 A6C50	0160-0375 0160-4535 0160-0375 0160-0570 0160-4493	24293	2	CAPACITOR-FXD 2.2PF +1PF 300VDC CER CAPACITOR-FXD 1UF +-10% 50VDC CER CAPACITOR-FXD 2.2PF +1PF 300VDC CER CAPACITOR-FXD 220PF +-20% 100VDC CER CAPACITOR-FXD 27PF +-5% 200VDC CER 0+-30	28480 28480 28480 20932 51642	0160-0375 0160-4535 0160-0375 5024EM100RD221M 200-200-NP0-270J			
A6C51 A6C52 † A6C53 A6C54 A6C55	0160-4493 0160-4084 0160-3873 0160-3878 0160-4535	3 8 1 6 4	5	CAPACITOR-FXD 27PF +-5% 200VDC CER 0+-30 CAPACITOR-FXD .1UF +-20% 50VDC CER CAPACITOR-FXD 4.7PF +5PF 200VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1UF +-10% 50VDC CER	51642 28480 28480 28480 28480	200-200-NP0-270J 0160-4084 0160-3873 0160-3878 0160-4535			
A6C56† A6C57 A6C58 A6C59† A6C60	0121-0448 0121-0449 0160-2055 0160-4084	8 9 9 8	3	CAPACITOR-V TRMR-CER 2.5-5PF 63V PC-MTC CAPACITOR-V TRMR-CER 3.5-10PF 63V PC-MTC CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD .1UF +-20% 50VDC CER NOT ASSICNED	28480 28480 28480 28480	0121-0448 0121-0449 0160-2055 0160-4084			
A6C61 A6C62 A6C63 A6C64	0160-3878 0160-3878 0160-3878 0160-3878	6 6 6		CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER	28480 20480 28480 28480	0160-3878 0160-3878 0160-3878 0160-3878			
A6CR1 A6CR2 A6CR3 A6CR4 A6CR5†	1901-0050 1901-0050 1901-0179 1901-0050 1901-0844	3 3 7 3 3	4	DIODE-SWITCHINC 80V 200MA 2NS DO-35 DIODE-SWITCHINC 80V 200MA 2NS DO-35 DIODE-SWITCHINC 15V 50MA 750PS DO-7 DIODE-SWITCHINC 80V 200MA 2NS DO-35 DIODE-PIN	28480 28480 28480 28480 04713	1901-0050 1901-0050 1901-0179 1901-0050 MPN3401			
A6CR6 A6CR7+ A6CR8 A6CR9 A6CR10	1901-0050 1901-0844 1901-0050 1901-0179 1901-0050	3 3 7 3		DIODE-SWITCHINC 80V 200MA 2NS DO-35 DIODE-PIN DIODE-SWITCHINC 80V 200MA 2NS DO-35 DIODE-SWITCHING 15V 50MA 750PS DO-7 DIODE-SWITCHINC 80V 200MA 2NS DO-35	28480 04713 28480 28480 28480	1901-0050 MPN3401 1901-0050 1901-0179 1901-0050			
A6CR11 A6CR12 A6CR13 A6CR14 A6CR15	1901-0050 1901-0179 1901-1096 1901-1096 1901-0050	3 7 9 9	3	DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-SWITCHINC 15V 50MA 750PS DO-7 DIODE-PIN DIODE-PIN DIODE-SWITCHINC 80V 200MA 2NS DO-35	28480 28480 28480 28480 28480	1901-0050 1901-0179 1901-1096 1901-1096 1901-0050			

Table 6-3. Replaceable Parts

Reference HP Part c On Description Mfr Mfr									
HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number				
1901-0050 1901-0050 1901-1096 1901-0050 1901-0050	3 3 9 3 3		DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-PIN DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-SWITCHING 80V 200MA 2NS DO-35	28480 28480 28480 28480 28480	1901-0050 1901-0050 1901-1096 1901-0050 1901-0050				
1901-0844 1901-0050 1901-0050 1901-0050 1901-0050 0122-0329	3 3 3 6	2	DIODE-PIN DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-VVC 2.2PF 5% C3/C25-MIN=4.5	04713 28480 28480 28480 28480	MPN3401 1901-0050 1901-0050 1901-0050 0122-0329				
0122-0065 0122-0065 0122-0329 0122-0065 0122-0065	7 7 6 7 7		DIODE-VVC 29PF 3% DIODE-VVC 29PF 3% DIODE-VVC 2.2PF 5% C3/C25-MIN=4.5 DIODE-VVC 29PF 3% DIODE-VVC 29PF 3%	28480 28480 28480 28480 28480	0122-0065 0122-0065 0122-0329 0122-0065 0122-0065				
1901-0050 1901-0050 1901-0050 1901-0844 1901-0050	3 3 3 3 3		DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-PIN DIODE-SWITCHING 80V 200MA 2NS DO-35	28480 28480 28480 04713 28480	1901-0050 1901-0050 1901-0050 MPN3401 1901-0050				
1901-0050 1901-0050 1906-0245 1906-0245 1901-0050	3 8 8 3	1	DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-MATCHED PAIR PART OF AGCR38 DIODE-SWITCHING 80V 200MA 2NS DO-35	28480 28480 28480 28480 28480	1901-0050 1901-0050 1906-0245 1906-0245 1901-0050				
1901-0050 1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-SWITCHING 80V 200MA 2NS DO-35	28480 28480	1901-0050 1901-0050				
1251-5568 1200-0507 1200-0507 1251-4051	9 9 9 3	1	CONNECTOR 8-PIN M POST TYPE SOCKET-IC 16-CONT DIP-SLDR SOCKET-IC 16-CONT DIP-SLDR CONNECTOR 10-PIN M POST TYPE	28480 28480 28480 28480	1251-5568 1200-0507 1200-0507 1251-4051				
0490-1171	7	1	RELAY-REED 2A 500MA 200VAC 5VDC-COIL	28480	0490-1171				
9140-0158 9140-0158 9100-1618 9100-1618 9100-1618	6 1 1 1		INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG INDUCTOR RF-CH-MLD 5.6UH 10% INDUCTOR RF-CH-MLD 5.6UH 10% INDUCTOR RF-CH-MLD 5.6UH 10%	28480 28480 28480 28480 28480	9140-0158 9140-0158 9100-1618 9100-1618 9100-1618				
9140-0158 9140-0158 9140-0158 9140-0158 9140-0158	6 6 6 6	į	INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG	28480 28480 28480 28480 28480	9140-0158 9140-0158 9140-0158 9140-0158 9140-0158				
9100-1618 9140-0158 9100-2258 9140-0158 9140-0158	1 6 7 6 6	1	INDUCTOR RF-CH-MLD 5.6UH 10% INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG INDUCTOR RF-CH-MLD 1.2UH 10% .105DX.26LG INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG	28480 28480 28480 28480 28480	9100-1618 9140-0158 9100-2258 9140-0158 9140-0158				
9140-0158 9100-2247 9100-2247	6 4 4		INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG INDUCTOR RF-CH-MLD 100NH 10% .105DX.26LG INDUCTOR RF-CH-MLD 100NH 10% .105DX.26LG PART IS ETCHED TRACE ON CIRCUIT ROARD PART IS ETCHED TRACE ON CIRCUIT BOARD	28480 28480 28480	9140-0158 9100-2247 9100-2247				
9100-2247 9140-0158 9140-0158 9140-0158	4 6 6 6		INDUCTOR RF-CH-MLD 100NH 10% .105DX.26LG INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG PART IS ETCHED TRACE ON CIRCUIT BOARD	28480 28480 28480 28480	9100-2247 9140-0158 9140-0158 9140-0158				
9100-2248	5		PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR RF-CH-MLD 120NH 10% .105DX.26LG PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR RE-CHAND 100NH 10% .00FDX 2016	28480	9100-2248				
/100-664/	1		PART IS ETCHED TRACE ON CIRCUIT BOARD	<u>∠</u> 6480	9100-2247				
9100-3922 9140-0158	4	5	PART IS ETCHED TRACE ON CIRCUIT BOARD CHOKE, TOROIDAL 1.0UH INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG PART IS ETCHED TRACE ON CIRCUIT BOARD	28480 28480	9100-3922 9140-0158				
9100-3922 9140-0158	6		INDUCTOR-FIXED 120-1300 HZ INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD	28480 28480	9100-3922 9140-0158				
			PART IS ETCHED TRACE ON CIRCUIT BOARD	;					
	Number 1901-0050 1901-1096 1901-0050 1901-1096 1901-0050 1901-005	Number D 1901-0050 3 1901-1096 3 1901-1096 3 1901-0050 3 1901-0050 3 1901-0050 3 1901-0050 3 1901-0050 3 1901-0050 3 1901-0050 3 1901-0050 7 0122-0065 7 0122-006	Number D Uty 1901-0050 1901-0050 1901-0050 3 1901-1096 1901-0050 3 1901-0050 3 1901-0050 3 1901-0050 3 1901-0050 3 1901-0050 3 1901-0050 7 1122-0065 0122-0	Number D	Number D Cty				

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A6L46 A6L47 A6L48 A6L49 A6L50	9135-0073 9135-0078 9135-0073 9100-2255	3 8 3 4	1	PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR, 51NH INDUCTOR 82NH INDUCTOR, 51NH INDUCTOR, 51NH INDUCTOR RF-CH-MLD 470NH 10% .105DX.26LG	28480 28480 28480 28480 28480	9135-0073 9135-0078 9135-0073 9100-2255
A6L51 A6L52 A6L53 A6L54	9140-0158 9100-2252 9100-1648 9135-0075	6 1 7 5	1 1 2	INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG INDUCTOR RF-CH-MLD 270NH 10% .105DX.26LG INDUCTOR RF-CH-MLD 560UH 5% .2DX.45LG INDUCTOR, 43NH	28480 28480 28480 28480	9140-0158 9100-2252 9100-1648 9135-0075
A6MP1 A6MP2	1251-1556 08656-00033	7 3		CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ GROUND CLIP, SEMI-RIGID	28480 28480	1251-1556 08656-00033
A6Q1 A6Q2 A6Q3 A6Q4	1854-0696 1200-0172 1854-0632 1853-0007 1853-0281	2 4 6 7 9	2	TRANSISTOR NPN SI TO-72 PD=200MW INSULATOR-XSTR DAP-GL TRANSISTOR NPN SI PD=180MW FT=4GHZ TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW TRANSISTOR PNP 2N3251 SI TO-18 PD=400MW	28480 28480 25403 04713 04713	1854-0696 1200-0172 BFR-91 2N3251 2N2907A
A6Q5 A6Q6 A6Q7 A6Q8 A6Q9	1853-0012 1853-0007 1854-0720 1853-0007 1853-0007	4 7 3 7 7	1	TRANSISTOR PNP 2N2904A SI TO-39 PD=600MW TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW TRANSISTOR NPN SI PD=500MW FT=64DZ TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW	01295 04713 28480 04713 04713	2N2904A 2N3251 1854-0720 2N3251 2N3251
A6Q10 A6Q11 A6Q12 A6Q13 A6Q14	1853-0007 1853-0007 1854-0071 1853-0007 1854-0696 1200-0172	7 7 7 7 2 4	:	TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW TRANSISTOR NPN SI PD=300MW FT=200MHZ TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW TRANSISTOR NPN SI TO-72 PD=200MW INSULATOR-XSTR DAP-GL	04713 04713 28480 04713 28480 28480	2N3251 2N3251 1854-0071 2N3251 1854-0696 1200-0172
A6Q15	1854-0721 1200-0173 1205-0011	4 5 0	1 3 1	TRANSISTOR NPN SI TO-39 PD=1.5W INSULATOR-XSTR DAP-GL HEAT SINK TO-5/TO-39-CS	25403 28480 28480	BFR 95 1200-0173 1205-0011
A6R1 A6R2 A6R3 A6R4* A6R5	0698-3441 0757-0416 0698-7194 0757-0400 0698-7223	8 7 6 9 2	1 2 3	RESISTOR 215 1% .125W F TC=0+-100 RESISTOR 511 1% .125W F TC=0+-100 RESISTOR 17.8 1% .05W F TC=0+-100 RESISTOR 90.9 1% .125W F TC=0+-100 RESISTOR 20.7 1% .125W F TC=0+-100	24546 24546 24546 24546 24546 24546	C4-1/8-T0-215R-F C4-1/8-T0-511R-F C3-1/8-T00-17R8-G C4-1/8-T0-90R9-F C3-1/8-T0-287R-G
A6R6 A6R7 A6R8 A6R9 A6R10	0698-7223 0698-3444 0698-3132 0698-3440 0698-0084	2 1 4 7 9		RESISTOR 287 1% .05W F TC=0+-100 RESISTOR 316 1% .125W F TC=0+-100 RESISTOR 261 1% .125W F TC=0+-100 RESISTOR 196 1% .125W F TC=0+-100 RESISTOR 2.15K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C3-1/8-T0-287R-G C4-1/8-T0-316R-F C4-1/8-T0-2610-F C4-1/8-T0-196R-F C4-1/8-T0-2151-F
A6R11 A6R12 A6R13 A6R14 A6R15	0757-0438 0698-3444 0757-0439 0757-0280 0698-3439	3 1 4 3 4	4	RESISTOR 5.11K 1% .125W F TC=0+-100 RESISTOR 316 1% .125W F TC=0+-100 RESISTOR 6.81K 1% .125W F TC=0+-100 RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 178 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-5111-F C4-1/8-T0-316R-F C4-1/8-T0-6811-F C4-1/8-T0-1001-F C4-1/8-T0-178R-F
A6R16 A6R17 A6R18 A6R19 A6R20	0698-3440 0698-0085 0757-0416 0698-3440 0698-3161	7 0 7 7 9	1	RESISTOR 196 1% .125W F TC=0+-100 RESISTOR 2.61K 1% .125W F TC=0+-100 RESISTOR 511 1% .125W F TC=0+-100 RESISTOR 196 1% .125W F TC=0+-100 RESISTOR 38.3K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-196R-F C4-1/8-T0-2611-F C4-1/8-T0-511R-F C4-1/8-T0-196R-F C4-1/8-T0-3832-F
A6R21 A6R22 A6R23 A6R24 A6R25	0698-3154 0757-0401 0757-0420 0757-0442 0757-0442	0 0 3 9 9	8 2	RESISTOR 4.22K 1% .125W F TC=0+-100 RESISTOR 100 1% .125W F TC=0+-100 RESISTOR 750 1% .125W F TC=0+-100 RESISTOR 10K 1% .125W F TC=0+-100 RESISTOR 10K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-4221-F C4-1/8-T0-101-F C4-1/8-T0-751-F C4-1/8-T0-1002-F C4-1/8-T0-1002-F
A6R26 A6R27 A6R28 A6R29 A6R30	0757-0442 0698-0082 0757-0280 0698-3153 2100-2031	9 7 3 9 7	1	RESISTOR 10K 1% .125W F TC=0+-100 RESISTOR 464 1% .125W F TC=0+-100 RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 3.83K 1% .125W F TC=0+-100 RESISTOR-TRMR 50K 10% C TOP-ADJ 1-TRN	24546 24546 24546 24546 73138	C4-1/8-T0-1002-F C4-1/8-T0-4640-F C4-1/8-T0-1001-F C4-1/8-T0-3831-F 82PR50K
A6R31 A6R32 A6R33 A6R34 A6R35	0757-0199 0698-3162 0757-0424 0757-0394 2100-2061	3 0 7 0 3	1 7	RESISTOR 21.5K 1% .125W F TC=0+-100 RESISTOR 46.4K 1% .125W F TC=0+-100 RESISTOR 1.1K 1% .125W F TC=0+-100 RESISTOR 51.1 1% .125W F TC=0+-100 RESISTOR 51.1 1% .125W F TC=0+-100 RESISTOR-TRMR 200 10% C TOP-ADJ 1-TRN	24546 24546 24546 24546 73138	C4-1/8-T0-2152-F C4-1/8-T0-4642-F C4-1/8-T0-1101-F C4-1/8-T0-51R1-F 82PR200
A6R36 A6R37 A6R38 A6R39 A6R40	0698-3162 0698-3438 0757-0280 0698-7209 0757-0200	0 3 3 4 7	4 2	RESISTOR 46.4K 1% .125W F TC=0+-100 RESISTOR 147 1% .125W F TC=0+-100 RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 75 1% .05W F TC=0+-100 RESISTOR 5.62K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-4642-F C4-1/8-T0-147R-F C4-1/8-T0-1001-F C3-1/8-T00-75R0-G C4-1/8-T0-5621-F
A6R41 A6R42 A6R43 A6R44 A6R45	0698-3162 0757-0442 0698-7209 0698-7209 0698-3444	0 9 4 4		RESISTOR 46.4K 1% .125W F TC=0+-100 RESISTOR 10K 1% .125W F TC=0+-100 RESISTOR 75 1% .05W F TC=0+-100 RESISTOR 75 1% .05W F TC=0+-100 RESISTOR 316 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-4642-F C4-1/8-T0-1102-F C3-1/8-T00-75R0-G C3-1/8-T00-75R0-G C4-1/8-T0-316R-F

Table 6-3. Replaceable Parts

Table 0-3. Nephaceable Parts									
Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number			
A6R46 A6R47 A6R48† A6R49 A6R50	0698-3442 0698-7209 0757-0395 0757-0280 0699-0584	9 4 1 3 6	1	RESISTOR 237 1% .125W F TC=0+-100 RESISTOR 75 1% .05W F TC=0+-100 RESISTOR 56.2 1% .125W F TC=0+-100 RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 70.9 1% .125W F TC=0+-100	24546 24546 24546 24546 20480	C4-1/8-T0-237R-F C3-1/8-T00-75R0-G C4-1/8-T0-56R2-F C4-1/8-T0-1001-F 0499-0584			
A6R51 A6R52 A6R53 A6R54 A6R55	0698-3445 0757-0397 0699-0583 0757-0442 0698-7206	2 3 5 9 1	1	RESISTOR 348 1% .125W F TC=0+-100 RESISTOR 68.1 1% .125W F TC=0+-100 RESISTOR 34.8 1% .05W F TC=0+-100 RESISTOR 10K 1% .125W F TC=0+-100 RESISTOR 56.2 1% .05W F TC=0+-100	24546 24546 28480 24546 24546	C4-1/8-T0-348R-F C4-1/8-T0-68R1-F 0699-0583 C4-1/8-T0-1002-F C3-1/8-T00-56R2-G			
A6R56 A6R57 A6R58 A6R59 A6R60	0698-7205 0698-7223 0698-7206 0698-7205 0757-0421	0 2 1 0 4	5	RESISTOR 51.1 1% .05W F TC=0+-100 RESISTOR 287 1% .05W F TC=0+-100 RESISTOR 56.2 1% .05W F TC=0+-100 RESISTOR 51.1 1% .05W F TC=0+-100 RESISTOR 825 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C3-1/8-T00-51R1-G C3-1/8-T0-287R-G C3-1/8-T00-56R2-G C3-1/8-T00-51R1-G C4-1/8-T0-825R-F			
A6R61 A6R62 A6R63 A6R64 A6R65	0698-7205 0698-3446 0757-0280 0757-0416 0698-3446	0 3 3 7 3		RESISTOR 51.1 1% .05W F TC=0+-100 RESISTOR 383 1% .125W F TC=0+-100 RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 511 1% .125W F TC=0+-100 RESISTOR 383 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C3-1/8-T00-51R1-G C4-1/8-T0-383R-F C4-1/8-T0-1001-F C4-1/8-T0-511R-F C4-1/8-T0-383R-F			
A6R66 A6R67 A6R68 A6R69 A6R70	0757-0280 0698-7192 0757-0405 0698-3446 0698-7192	3 4 4 3 4	6	RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 14.7 1% .05W F TC=0+-100 RESISTOR 162 1% .125W F TC=0+-100 RESISTOR 383 1% .125W F TC=0+-100 RESISTOR 14.7 1% .05W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-1001-F C3-1/8-T00-14R7-G C4-1/8-T0-162R-F C4-1/8-T0-383R-F C3-1/8-T00-14R7-G			
AGR71 A6R72 A6R73 A6R74 A6R75	0757-0442 0698-7192 0698-3449 0698-3446 0757-0442	9 4 6 3 9	1	RESISTOR 10K 1% .125W F TC=0+-100 RESISTOR 14.7 1% .05W F TC=0+-100 RESISTOR 28.7K 1% .125W F TC=0+-100 RESISTOR 383 1% .125W F TC=0+-100 RESISTOR 10K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-1002-F C3-1/8-T00-14R7-G C4-1/8-T0-2872-F C4-1/8-T0-387-F C4-1/8-T0-1002-F			
A6R76 A6R77 A6R78 A6R79 A6R80	0757-0442 0698-7192 0757-0796 0698-3157 0698-0083	9 4 6 3 8	1 5	RESISTOR 10K 1% .125W F TC=0+-100 RESISTOR 14.7 1% .05W F TC=0+-100 RESISTOR 82.5 1% .5W F TC=0+-100 RESISTOR 19.6K 1% .125W F TC=0+-100 RESISTOR 1.96K 1% .125W F TC=0+-100	24546 24546 28480 24546 24546	C4-1/8-T0-1002-F C3-1/8-T00-14R7-G 0757-0796 C4-1/8-T0-1962-F C4-1/8-T0-1961-F			
A6R81 A6R82 A6R83 A6R84 A6R85	0698-7192 0698-7192 0757-0442 0698-3398 0698-8819	4 4 9 4	1 1	RESISTOR 14.7 1% .05W F TC=0+-100 RESISTOR 14.7 1% .05W F TC=0+-100 RESISTOR 10K 1% .125W F TC=0+-100 RESISTOR 46.4 1% .5W F TC=0+-100 RESISTOR 3.83 1% .125W F TC=0+-100	24546 24546 24546 28480 28480	C3-1/8-T00-14R7-C C3-1/8-T00-14R7-C C4-1/8-T0-1002-F 0698-3398 0698-8819			
A6R86 A6R87 A6R88 A6R89 A6R89	0698-3157 0698-0083 0757-0280 0757-0280 0698-3157	3 8 3 3 3		RESISTOR 19.6K 1% .125W F TC=0+-100 RESISTOR 1.96K 1% .125W F TC=0+-100 RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 1F 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-1962-F C4-1/8-T0-1961-F C4-1/8-T0-1001-F C4-1/8-T0-1001-F C4-1/8-T0-1962-F			
A6R91 A6R92 A6R93 A6R94 A6R95	0698-0083 0757-0465 0698-3154 0757-0442 0698-3153	8 6 0 9	:	RESISTOR 1.96K 1% .125W F TC=0+-100 RESISTOR 100K 1% .125W F TC=0+-100 RESISTOR 4.22K 1% .125W F TC=0+-100 RESISTOR 10K 1% .125W F TC=0+-100 RESISTOR 3.83K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-1961-F C4-1/8-T0-1003-F C4-1/8-T0-4221-F C4-1/8-T0-1002-F C4-1/8-T0-3831-F			
A6R96 A6R97 A6R98	0698-0083 0698-0083 0698-3154	8		RESISTOR 1.96K 1% .125W F TC=0+-100 RESISTOR 1.96K 1% .125W F TC=0+-100 RESISTOR 4.22K 1% .125W F TC=0+-100	24546 24546 24546	C4-1/8-TO-1961-F C4-1/8-TO-1961-F C4-1/8-TO-4221-F			
A651 A6TP1 A6TP2 A6TP3 A6TP4 A6TP5	3101-1162 1251-1556 1251-1556 1251-1556 1251-0600 1251-0600	6 7770 0	1	SWITCH-SL SPDT MINTR .5A 125VAC/DC PC CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	28480 28480 28480 28480 28480 28480	3101-1162 1251-1556 1251-1556 1251-1556 1251-0600 1251-0600			
AGTP6	1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	28480	1251-0600			
A6U1 A6U2 A6U3 A6U4	1820-1811 0340-0834 1820-2106 1826-0013 1820-1976	4 0 2 8 2	1 1 1 2	IC-DIGITAL INSULATOR-XSTR POLYI IC FF ECL D-M/S POS-EDGE-TRIC IC OP AMP LOW-NOISE TO-99 PKG IC BFR CMOS NON-INV HEX	28480 28480 07263 06665 01928	1820-1811 0340-0834 F11C06DC SSS741CJ CD4050BE			
A6U5 A6U6 A6U7 A6U8 A6U9	1820-0618 1826-0488 1820-1662 1820-1422 1820-0304	7 1 3 3 8	1 2 1	IC BFR TTL NON-INV HEX IC OP AMP WB TO-99 PKG IC SHF-RGTR CMOS SERIAL-IN PRL-OUT 8-BIT IC MV TTL LS MONOSTBL RETRIG IC FF TTL J-K M/S PULSE PRESET/CLEAR	01295 27014 0192B 01295 01295	SN7417N LM218H CD4094BE SN74LS122N SN7472N			
A6U10 A6U11	1826-0013 0955-0145	8 9		IC OP AMP LOW-NOISE TO-99 PKG MIXER, DOUBLE BALANCED 1000MHZ	0 6665 28480	SSS741CJ 0955-0145			

Table 6-3. Replaceable Parts

	Table 0-3. neplaceable rais								
Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number			
A7	08656-60063	5	1	RFI ASSEMBLY	28480	08656-60063			
A7C1 A7C2 A7C3 A7C4 A7C5	0160-0571 0160-0571 0160-0571 0160-0571 0160-0571	0 0 0 0	7	CAPACITOR-FXD 470PF +-20% 100VDC CER CAPACITOR-FXD 470PF +-20% 100VDC CER CAPACITOR-FXD 470PF +-20% 100VDC CER CAPACITOR-FXD 470PF +-20% 100VDC CER CAPACITOR-FXD 470PF +-20% 100VDC CER	28480 28480 28480 28480 28480	0160-0571 0160-0571 0160-0571 0160-0571 0160-0571			
A7C6 A7C7	0160-0571 0160-0571	0		CAPACITOR-FXD 470PF +-20% 100VDC CER CAPACITOR-FXD 470PF +-20% 100VDC CER	28480 28480	0160-0571 0160-0571			
A7J1 A7J2				PART OF ETCHED TRACE ON CIRCUIT BOARD PART OF ETCHED TRACE ON CIRCUIT BOARD					
A7L1 A7L2 A7L3 A7L4 A7L5	9100-2247 9100-2247 9100-2247 9100-2247 9100-2247	4 4 4 4		INDUCTOR RF-CH-MLD 100NH 10% .105DX.26LG	28480 28480 28480 28480 28480	9100-2247 9100-2247 9100-2247 9100-2247 9100-2247			
A7L6 A7L7	9100-2247 9100-2247	4 4		INDUCTOR RF-CH-MLD 100NH 10% .105DX.26LG INDUCTOR RF-CH-MLD 100NH 10% .105DX.26LG	28480 28480	9100-2247 9100-2247			
A8	08656-60004	4	1	FREQUENCY MULTIPLIER ASSEMBLY	28480	08656-60004			
ABC1 ABC2 ABC3 ABC4 ABC5	0180-1746 0160-3878 0160-3878 0160-3878 0160-4527	5 6 6 6 4	4	CAPACITOR-FXD 15UF+-10% 20VDC TA CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 56PF +-5% 200VDC CER 0+-30	56289 28480 28480 28480 51642	150D156X9020B2 0160-3878 0160-3878 0160-3878 200-200-NP0-560J			
A8C6 A8C7 A8C8 A8C9	0160-3878 0160-2249 4330-0145 0160-4527 0160-4527	6 3 9 4	1 8	CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 4.7PF +25PF 500VDC CER INSULATOR-BEAD GLASS CAPACITOR-FXD 5APF +-5% 200VDC CER 0+-30 CAPACITOR-FXD 5APF +-5% 200VDC CER 0+-30	28480 28480 28480 51642 51642	0160-3878 0160-2249 4330-0145 200-200-NP0-560J 200-200-NP0-560J			
A8C10 A8C11 A8C12 A8C13 A8C14	0160-3878 0160-3878 0160-3878 0160-4383 0160-3878	66606		CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 6.8PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER	28480 28480 28480 20932 28480	0160-3878 0160-3878 0160-3878 5124E0200RD689D 0160-3878			
A8C15 A8C16 A8C17 A8C18	0160-3878 0160-4493 0160-2055 0160-2243 4330-0145	63979	1	CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 27PF +-5% 200VDC CER 0+-30 CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD 2.7PF +25PF 500VDC CER INSULATOR-BEAD GLASS	28480 51642 28480 28480 28480	0160-3878 200-200-NP0-270J 0160-2055 0160-2243 4330-0145			
A8C19 A8C20 A8C21 A8C22 A8C23	0160-4493 0160-3878 0160-3878 0160-3878 0160-4493	3 6 6 6 3		CAPACITOR-FXD 27PF +-5% 200VDC CER 0+-30 CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 27PF +-5% 200VDC CER 0+-30	51642 28480 28480 28480 51642	200-200-NP0-270J 0160-3878 0160-3878 0160-3878 200-200-NP0-270J			
A8C24 A8C25 A8C26 A8C27 A8C28	0160-3878 0160-3878 0160-3878 0160-3878 0160-3873	6 6 6 6		CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 4.7PF +5PF 200VDC CER	28480 28480 28480 28480 28480	0160-3878 0160-3878 0160-3878 0160-3878 0160-3873			
A8C29 A8C30 A8C31 A8C32	0160-3873 0160-2237 4330-0145 0121-0448 0160-4491	1 9 9 8 1	1	CAPACITOR-FXD 4.7PF +5PF 200VDC CER CAPACITOR-FXD 1.2PF +25PF 500VDC CER INSULATOR-BEAD GLASS CAPACITOR-V TRMR-CER 2.5-5PF 63V PC-HTG CAPACITOR-FXD 8.2PF +-5% 200VDC CER	28480 28480 28480 28480 51642	0160-3873 0160-2237 4330-0145 0121-0448 200-200-NP0-829J			
A8C33 A8C34 A8C35† A8C36 A8C37	0160-4518 0160-4527 0160-4382 0160-3878 0160-3878	3 4 9 6 6	3	CAPACITOR-FXD 3.9PF +5PF 200VDC CER CAPACITOR-FXD 56PF +-5% 200VDC CER 0+-30 CAPACITOR-FXD 3.3PF +25PF 200VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER	51642 51642 51642 28480 28480	200-200-NP0-399D 200-200-NP0-560J 200-200-NP0-339C 0160-3878 0160-3878			
A8C38 A8C39 A8C40 A8C41 A8C42	0160-3878 0160-3878 0160-3878 0160-4383 0160-3878	6 6 6 0 6		CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 6.8PF +-20% 200VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER	28480 28480 28480 20932 28480	0160-3878 0160-3878 0160-3878 5024£0200RD689D 0160-3878			
ABC44 ABC44 ABC45 ABC46	0160-3878 0160-3878 0160-3878 0160-2234 4330-0145	6 6 6 9	1	CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD .51PF +25PF 500VDC CER INSULATOR-BEAD GLASS	28480 28480 28480 28480 28480	0160-3878 0160-3878 0160-3878 0160-2234 4330-0145			
ABC47 ABC48 ABC49 ABC50 ABC51	0121-0452 0160-3878 0160-4518	6	1	CAPACITOR-V TRMR-AIR 1.3-5.4PF 175V CAPACITOR-FXD 1000PF +-20X 100VDC CER PART IS ETCHED TRACE ON CIRCUIT BOARD CAPACITOR-FXD 3.9PF +5PF 200VDC CER PART IS ETCHED TRACE ON CIRCUIT BOARD	74970 28480 51642	187-0103-028 0160-3878 200-200-NP0-399D			

Table 6-3. Replaceable Parts

	Table 0-3. Nepraceable Parts									
Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number				
A8C52 A8C53	0160-3878	6		CAPACITOR-FXD 1000PF +-20% 100VDC CER PART IS ETCHED TRACE ON CIRCUIT BOARD	28480	0160-3878				
A8C54 A8C55 A8C56	0160-3878 0160-3878 0160-4382	6 6 9		CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 1000PF +-20% 100VDC CER CAPACITOR-FXD 3.3PF +25PF 200VDC CER	28480 28480 51642	0160-3878 0160-3878 200-200-NP0-339C				
A8C57†	0160-4490	0	2	CAPACITOR-FXD 1.8PF +25PF 200VDC CER	28480	0160-4490				
A8J1 A8J2 A8J3	1200-0507 1200-0507 1250-1626 2190-0124 2950-0078	9 0 4 9	4 2	SOCKET-IC 16-CONT DIP-SLDR SOCKET-IC 16-CONT DIP-SLDR CONNECTOR-RF SMC M PC 50-DHM WASHER-LK INTL T NO. 10 ,195-IN-ID NUT-HEX-DBL-CHAM 10-32-THD .067-IN-THK	28480 28480 28480 28480 28480	1200-0507 1200-0507 1250-1626 2190-0124 2950-0078				
A8J4	1250-1626 2190-0124 2950-0078	0 4 9		CONNECTOR-RF SMC M PC 50-OHM WASHER-LK INTL T NO. 10 .195-IN-ID NUT-HEX-DBL-CHAM 10-32-THD .067-IN-THK	28480 28480 28480	1250-1626 2190-0124 2950-0078				
A8L1 A8L2 A8L3 A8L4 A8L5	9100-1618 9140-0141	7		INDUCTOR RF-CH-MLD 5.6UH 10% INDUCTOR RF-CH-MLD 680NH 10% .105DX.26LG PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT 80ARD	28480 28480	9100-1618 9140-0141				
ABL6 ABL7 ABL8 ABL9 ABL10	9100-3922	4		PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR-FIXED 120-1300 HZ PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD	28480	9100-3922				
A8L11 A8L12 A8L13 A8L14 A8L15	9100-2251	0	3	INDUCTOR RF-CH-MLD 220NH 10% .105DX.26LG PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD	28480	9100-2251				
A8L16 A8L17 A8L18 A8L19 A8L20	9100~3922	4		INDUCTOR-FIXED 120-1300 HZ PART IS ETCHED TRACE ON CIRCUIT BOARD	28480	9100-3922				
A8L21 A8L22 A8L23 A8L24 A8L25	9100-2251	0		PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR RF-CH-MLD 220NH 10% .105DX.26LG PART IS ETCHED TRACE ON CIRCUIT BOARD	28480	9100-2251				
A8L26 ABL27 A0L28 A8L29 A8L30	9100-3922	4		PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR-FIXED 120-1300 HZ PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD	28480	9100-3922				
A8L31 A8L32 A8L33 A8L34 A8L35				PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD						
A8L36 A8L37 A8L38 A8L39 A8L40	9100-2251	0	:	PART IS ETCHED TRACE ON CIRCUIT BOARD INDUCTOR RF-CH-MLD 220NH 10% .105DX.26LG	28480	9100-2251				
ABL 41 ABL 42 AGL 43				PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD PART IS ETCHED TRACE ON CIRCUIT BOARD						
A8MP1 A8MP2 A8MP3 A8MP4	1251-1556 1251-2194 8150-0459 08656-00033	7 1 0 3	2	CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT SKT .021-IN-BSC-SZ WIRE 24AWG W/R 300V PVC 7X32 80C GROUND CLIP-SEMIRIGID	28480 28480 28480 28480	1251-1556 1251-2194 8150-0459 08656-00033				
ABQ1 ABQ2 ABQ3 AOQ4 ABQ5	1854-0632 1854-0632 1854-0632 1853-0020 1854-0632	6 6 4 6		TRANSISTOR NPN SI PD=180MW FT=4GHZ TRANSISTOR NPN SI PD=180MW FT=4GHZ TRANSISTOR NPN SI PD=180MW FT=4GHZ TRANSISTOR PNP SI PD=300MW FT=150MHZ TRANSISTOR NPN SI PD=180MW FT=4GHZ	25403 25403 25403 28480 25403	8FR-91 8FR-91 8FR-91 1853-0020 8FR-91				
A8Q6 A8Q7 A8Q8	1854-0696 1854-0247 1200-0173 1854-0247 1200-0173	2 9 5 9 5		TRANSISTOR NPN SI TO-72 PD=200MW TRANSISTOR NPN SI TO-39 PD=1W FT=800MHZ INSULATOR-XSTR DAP-GL TRANSISTOR NPN SI TO-39 PD=1W FT=800MHZ INSULATOR-XSTR DAP-GL	28480 28480 28480 28480 28480	1854-0696 1854-0247 1200-0173 1854-0247 1200-0173				
A8R1 A8R2 A8R3 A8R4 A8R5	0757-0294 0757-0403 0698-3439 0698-3443 0757-0424	9 2 4 0 7	1	RESISTOR 17.8 1% .125W F TC=0+-100 RESISTOR 121 1% .125W F TC=0+-100 RESISTOR 178 1% .125W F TC=0+-100 RESISTOR 287 1% .125W F TC=0+-100 RESISTOR 1.1K 1% .125W F TC=0+-100	19701 24546 24546 24546 24546	MF4C1/8-T0-17R8-F C4-1/8-T0-121R-F C4-1/8-T0-17BR-F C4-1/8-T0-287R-F C4-1/8-T0-1101-F				
		_1	l							

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A8R6 A8R9 A8R9 A8R9 A8R10	0698-3153 0757-0398 0757-0346 0757-0424 0698-3153	9 4 2 7 9		RESISTOR 3.83K 1% .125W F TC=0+-100 RESISTOR 75 1% .125W F TC=9+-100 RESISTOR 10 1% .125W F TC=0+-100 RESISTOR 1.1K 1% .125W F TC=0+-100 RESISTOR 3.83K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-3831-F C4-1/8-T0-75R0-F C4-1/8-T0-10R0-F C4-1/8-T0-1101-F C4-1/8-T0-3831-F
A8R11† A8R12 A8R13 A8R14 A8R15	0698-3442 0757-0278 0757-0398 0757-0278 0698-3153	9 9 4 9	7 2	RESISTOR 237 1% .125W F TC=0+-100 RESISTOR 1.78K 1% .125W F TC=0+-100 RESISTOR 75 1% .125W F TC=0+-100 RESISTOR 1.78K 1% .125W F TC=0+-100 RESISTOR 3.83K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-237R-F C4-1/8-T0-1781-F C4-1/8-T0-75R0-F C4-1/8-T0-1781-F C4-1/8-T0-3831-F
ABR16 ABR17 ABR18 ABR19 ABR20	0757-0346 0757-0424 0698-4037 0757-0346 0757-0424	2 7 0 2 7	1	RESISTOR 10 1% .125W F TC=0+-100 RESISTOR 1.1K 1% .125W F TC=0+-100 RESISTOR 46.4 1% .125W F TC=0+-100 RESISTOR 10 1% .125W F TC=0+-100 RESISTOR 1.1K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-10R0-F C4-1/8-T0-1101-F C4-1/8-T0-46R4-F C4-1/8-T0-10R0-F C4-1/8-T0-1101-F
A8R21 A8R22 A8R23 A8R24 A8R25	0698-3153 0698-3153 0757-0398 0757-0401 0757-0421	9 9 4 0 4		RESISTOR 3.83K 1% .125W F TC=0+-100 RESISTOR 3.83K 1% .125W F TC=0+-100 RESISTOR 75 1% .125W F TC=0+-100 RESISTOR 100 1% .125W F TC=0+-100 RESISTOR 825 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-3831-F C4-1/8-T0-3831-F C4-1/8-T0-75R0-F C4-1/8-T0-101-F C4-1/8-T0-825R-F
ABR26 ABR27 ABR28 ABR29 ABR30	0757-0424 0757-0401 0757-0424 0757-0346 0698-3153	7 0 7 2 9		RESISTOR 1.1K 1% .125W F TC=0+-100 RESISTOR 100 1% .125W F TC=0+-100 RESISTOR 1.1K 1% .125W F TC=0+-100 RESISTOR 10 1% .125W F TC=0+-100 RESISTOR 3.83K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-1101-F C4-1/8-T0-101-F C4-1/8-T0-1101-F C4-1/8-T0-1080-F C4-1/8-T0-3831-F
A8R31 A8R32 A8R33 A8R34 A8R35	0757-0401 0757-0398 0757-0180 0757-0401 0757-0421	0 4 2 0 4		RESISTOR 100 1% .125W F TC=0+-100 RESISTOR 75 1% .125W F TC=0+-100 RESISTOR 31.6 1% .125W F TC=0+-100 RESISTOR 100 1% .125W F TC=0+-100 RESISTOR 825 1% .125W F TC=0+-100	24546 24546 28480 24546 24546	C4-1/B-T0-101-F C4-1/8-T0-75R0-F 0757-0180 C4-1/8-T0-101-F C4-1/8-T0-825R-F
A8R36 A8R37 A8R38	0757-0424 0757-0401 0757-0401	7 0 0		RESISTOR 1.1K 1% .125W F TC=0+-100 RESISTOR 100 1% .125W F TC=0+-100 RESISTOR 100 1% .125W F TC=0+-100	24546 24546 24546	C4-1/8-T0-1101-F C4-1/8-T0-101-F C4-1/8-T0-101-F
A8TP1 A8TP2 A8TP3	1251-1556 1251-1556 1251-1556	777		CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ	28480 28480 28480	1251-1556 1251-1556 1251-1556
A8U1†	0955-0145	9	2	MIXER, DOUBLE BALANCED, 1000MHZ	28480	0955-0145
A8W1	08656-20018	6	1	CABLE, COAX SEMI-RIGID #2	28480	08656-20018
A9	08656-60018	0	1	ATTENUATOR ASSEMBLY	28480	08656-60018
A9L1	0491-0106	8	1	SOLENOID BANK ASSEMBLY	28490	0491-0106
A9MP1 A9MP2 A9MP3 A9MP4 A9MP5	0400-0126 08656-00013 08656-40002 08656-40003 08656-40004		7 21 7 4 1	GROMMET-RND .125-IN-ID .188-IN-GRV-OD CONTACT, SWITCH ATTENUATOR CAM, ATTENUATOR CAM GUIDE, DUAL CAM GUIDE, SINGLE	28480 28480 28480 28480 28480	0400-0126 08656-00013 08656-40002 08656-40003 08656-40004
A951				PART IS COMPRISED OF MP1,MP2, & MP3		
A9A1	08656-60014	6	1	HETERODYNE/PAD/REVERSE POWER ASSEMBLY	28480	08656-60014
A9A1C1 A9A1C2 A9A1C3 A9A1C4 A9A1C5	8151-0013 8151-0013 8151-0013 0160-3879 0160-3879	4 4 7 7		WIRE 22AWG 1X22 WIRE 22AWG 1X22 WIRE 22AWG 1X22 CAPACITOR-FXD .01UF +-20% 100VDC CER CAPACITOR-FXD .01UF +-20% 100VDC CER	28480 28480 28480 28480 28480	8151-0013 8151-0013 8151-0013 0160-3879 0160-3879
A9A1C6 A9A1C7 A9A1C8	8151-0013 0160-0576 8151-0013	4 5 4		WIRE 22AWG 1X22 CAPACITOR-FXD .1UF +-20% 50VDC CER WIRE 22AWG 1X22	28480 28480 28480	8151-0013 0160-0576 8151-0013
A9A1CR1 A9A1CR2	1901-0050 1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35 DIODE-SWITCHING 80V 200MA 2NS DO-35	28480 28480	1901-0050 1901-0050
A9A1J1 A9A1J2	1200-0507 1250-1627	9	1	SOCKET-IC 16-CONT DIP-SLDR CONNECTOR-RF SMC M PC 50-OHM	28480 28480	1200-0507 1250-1627
A9A1K1	0490-1073	В	1	RELAY-REED 1A 258MA 120VAC 4.5VDC-COIL	28480	0490-1073
A9A1L1	9135-0075	5		INDUCTOR RF-CH-MLD 43NH 8% ,102DX,26LG	28480	9135-0075
A9A1HP1 A9A1MP2 A9A1MP3 A9A1MP4 A9A1MP5	1251-1556 2190-0124 2740-0010 08656-00033 08656-00057		2	CONNECTOR-SGL CONT SKT .018-IN-BSC-SZ WASHER-LK INTL T NO. 10 .195-IN-ID NUT-HEX-DBL-CHAM 10-32-THD .094-IN-THK GROUND CLIP-SEMI-RIGID BRACKET-ATTENUATOR WALL	28480 28480 00000 28480 28480	1251-1556 2190-0124 ORDER 8Y DESCRIPTION 08656-00033 08656-00057

Table 6-3. Replaceable Parts

Table 6-3. Replaceable Parts									
Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number			
A9A1R1 A9A1R2 A9A1R3 A9A1R4 A9A1R5	0699-0089 0699-0094 0699-0089 0699-0092 0699-0091	6 3 6 1 0	6 3 2 1	RESISTOR 53.27 .1% .25W F TC=0+-50 RESISTOR 790 .1% .25W F TC=0+-50 RESISTOR 53.27 .1% .25W F TC=0+-50 RESISTOR 96.25 .1% .25W F TC=0+-50 RESISTOR 71.15 .1% .25W F TC=0+-50	28480 28480 28480 28480 28480	0699-0089 0699-0094 0699-0089 0699-0092 0699-0091			
A9A1R6 A9A1R7 A9A1R8 A9A1R9 A9A1R10	0699-0092 0699-0089 0699-0094 0757-0442 0699-0089	1 6 3 9 6		RESISTOR 96.25 .1% .25W F TC=0+-50 RESISTOR 53.27 .1% .25W F TC=0+-50 RESISTOR 790 .1% .25W F TC=0+-50 RESISTOR 10K 1% .125W F TC=0+-100 RESISTOR 53.27 .1% .25W F TC=0+-50	28480 28480 28480 24546 28480	0699-0092 0699-0089 0699-0094 C4-1/8-T0-1002-F 0699-0089			
A9A1R11 A9A1R12 A9A1R13 A9A1R14 A9A1R15	0699-0090 0699-0093 0699-0090 0699-0089 0699-0094	9 2 9 6 3	1	RESISTOR 61.11 .1% .25W F TC=0+-50 RESISTOR 247.5 .1% .25W F TC=0+-50 RESISTOR 61.11 .1% .25W F TC=0+-50 RESISTOR 53.27 .1% .25W F TC=0+-50 RESISTOR 790 .1% .25W F TC=0+-50	28480 28480 28480 28480 28480	0699-0090 0699-0093 0699-0090 0699-0089 0699-0094			
A9A1R16	0699-0089	6		RESISTOR 53.27 .1% .25₩ F TC=0+-50	28480	0699-0089			
A9A1VR1 A9A1VR2	1902-0579 1902-0579	3	5	DIODE-ZNR 5.11V 5% DO-15 PD=1W TC=009% DIODE-ZNR 5.11V 5% DO-15 PD=1W TC=009%	28480 28480	1902-0579 1902-0579			
A10	08656-60006	6	1	AUDIO/POWER SUPPLY ASSEMBLY	28480	08656-60006			
A10C1 A10C2 A10C3 A10C4 A10C5	0160-5035 0160-5036 0180-1835 0160-2225 0160-0336	1 2 3 5 5	1 1 1 1	CAPACITOR, FXD .051UF 2% CAPACITOR, FXD .27UF 2% CAPACITOR-FXD .68UF+-20% 15VDC TA CAPACITOR-FXD 2000PF +-5% 300VDC MICA CAPACITOR-FXD 100PF +-1% 300VDC MICA	28480 28480 56289 28480 20480	0160-5035 0160-5036 150D686X0015R2 0160-2225 0160-0336			
A10C6 A10C7 A10C8 A10C9 A10C10	0160-3490 0160-0127 0160-0127 0180-0100 0180-0100	3 3 8	1 2	CAPACITOR-FXD 1UF +-20% 50VDC CER CAPACITOR-FXD 1UF +-20% 25VDC CER CAPACITOR-FXD 1UF +-20% 25VDC CER CAPACITOR-FXD 4.7UF+-10% 35VDC TA CAPACITOR-FXD 4.7UF+-10% 35VDC TA	28480 28480 28480 56209 56289	0160-3490 0160-0127 0160-0127 1500475X9035B2 1500475X9035B2			
A10C11 A10C12 A10C13 A10C14 A10C15	0160-4084 0140-0210 0180-0291 0180-0291 0160-3453	8 2 3 3 3		CAPACITOR-FXD .1UF +-20% 50VDC CER CAPACITOR-FXD 270PF +-5% 300VDC MICA CAPACITOR-FXD 1UF+-10% 35VDC TA CAPACITOR-FXD 1UF+-10% 35VDC TA CAPACITOR-FXD .05UF +80-20% 100VDC CER	28480 72136 56289 56289 28480	0160-4084 DM15F271J030DWV1CR 150D105X9035A2 150D105X9035A2 0160-3453			
A10C16 A10C17 A10C18 A10C19 A10C20	0160-3453 0180-2874 0180-2911 0180-2874 0180-2874	3 2 8 2 2	3 1	CAPACITOR-FXD .05UF +80-20% 100VDC CER CAPACITOR-FXD 3200UF+75-10% 40VDC AL CAPACITOR-FXD .013F+75-10% 25VDC AL CAPACITOR-FXD 3200UF+75-10% 40VDC AL CAPACITOR-FXD 3200UF+75-10% 40VDC AL	28480 28480 28480 28480 28480	0160-3453 0180-2874 0180-2911 0180-2874 0180-2874			
A10C21 A10C22 A10C23 A10C24 A10C25	0180-2141 0180-0558 0180-2144 0180-1780 0180-2144	6 5 9 7 9	1 1 2 1	CAPACITOR-FXD 3.3UF+-10% 50VDC TA CAPACITOR-FXD 470UF+-20% 10VDC TA CAPACITOR-FXD 200UF+75-10% 25VDC AL CAPACITOR-FXD 500UF+75-10% 10VDC AL CAPACITOR-FXD 200UF+75-10% 25VDC AL	56209 56289 56289 28480 56289	150D335X9050B2 150D477X0010S2 30D207G025DH9 0180-1780 30D207G025DH9			
A10C26 A10C27 A10C28	0180-0291 0180-0291 0180-0291	3 3		CAPACITOR-FXD 1UF+-10% 35VDC TA CAPACITOR-FXD 1UF+-10% 35VDC TA CAPACITOR-FXD 1UF+-10% 35VDC TA	56289 56289 56289	150D105X9035A2 150D105X9035A2 150D105X9035A2			
A10CR1 A10CR2 A10CR3 A10CR4 A10CR5	1901-0040 1901-0040 1901-0040 1901-0376 1901-0040	1 1 1 6 1	4	DIODE-SWITCHING 30V 50MA 2NS DO-35 DIODE-SWITCHING 30V 50MA 2NS DO-35 DIODE-SWITCHING 30V 50MA 2NS DO-35 DIODE-SWITCHING 30V 50MA DO-35 DIODE-SWITCHING 30V 50MA 2NS DO-35	28480 28480 28480 28480 20480	1901-0040 1901-0040 1901-0040 1901-0376 1901-0376			
A10CR6 A10CR7 A10CR8 A10CR9 A10CR10	1901-0328 1901-0328 1901-0200 1901-0200 1901-0200	88555	8 4	DIODE-PWR RECT 400V 1A 6US DIODE-PWR RECT 400V 1A 6US DIODE-PWR RECT 100V 1.5A DIODE-PWR RECT 100V 1.5A DIODE-PWR RECT 100V 1.5A	03508 03508 28480 20480 28480	A14D A14D 1901-0200 1901-0200 1901-0200			
A10CR11 A10CR12 A10CR13 A10CR14 A10CR15	1901-0200 1901-0328 1901-0328 1901-0328 1901-0328	8888	į	DIODE-PWR RECT 100V 1.5A DIODE-PWR RECT 400V 1A 6US DIODE-PWR RECT 400V 1A 6US DIODE-PWR RECT 400V 1A 6US DIODE-PWR RECT 400V 1A 6US	20480 03508 03508 03508 03508	1901-0200 A14D A14D A14D A14D			
A10CR16 A10CR17	1901-0328 1901-0328	8		DIODE-PWR RECT 400V 1A 6US DIODE-PWR RECT 400V 1A 6US	0350B 0350B	A14D A14D			
A10DS1 A10DS2 A10DS3	1990-0523 1990-0523 1990-0523	2 2	3	LED-LAMP LUM-INT=1MCD IF=50MA-MAX BVR=5V LED-LAMP LUM-INT=1MCD IF=50MA-MAX BVR=5V LED-LAMP LUM-INT=1MCD IF=50MA-MAX BVR=5V	28480 28480 28480	5082-4950 5082-4950 5082-4950			
A10F1+	2110-0519	3	1	FUSE 4A 125V NTD .348X.25	75915	273004			
A10F2 A10F3	1251-1998 2110-0516 1251-1998 2110-0516 1251-1998	1 0 1 0 1	8 2	CONNECTOR-SGL CONT SKT .025-IN-BSC-SZ FUSE 1A 125V NTD .348X.25 CONNECTOR-SGL CONT SKT .025-IN-BSC-SZ FUSE 1A 125V NTD .348X.25 CONNECTOR-SGL CONT SKT .025-IN-BSC-SZ	28480 75915 28480 75915 28480	1251-1998 273001 1251-1998 273001 1251-1998			
		_[

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A10F4	2110-0520 1251-1998	6 1	1	FUSE 5A 125V NTD .348X.25 CONNECTOR-SGL CONT SKT .025-IN-BSC-SZ	75915 28480	273005 1251-1998
A10J1 A10J2 A10J3 A10J4 A10J5	1251-5571 1251-5569 1200-0507 1251-5569 1251-5611	4 0 9 0 3	2 2	CONNECTOR 17-PIN M POST TYPE CONNECTOR 7-PIN M POST TYPE SOCKET-IC 16-CONT DIP-SLDR CONNECTOR 7-PIN M POST TYPE CONNECTOR 5-PIN M POST TYPE	28480 28480 28480 28480 28480	1251-5571 1251-5569 1200-0507 1251-5569 1251-5611
A10J6	1200-0507	9		SOCKET-IC 16-CONT DIP-SLDR	28480	1200-0507
A10L1 A10L2 A10L3 A10L4	9140-0144 9140-0142 9140-0144 9100-1635	0 8 0 2	1	INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG INDUCTOR RF-CH-MLD 2.2UH 10% .105DX.26LG INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG INDUCTOR RF-CH-MLD 91UH 5% .166DX.385LG	28480 28480 28480 28480	9140-0144 9140-0142 9140-0144 9100-1635
A10MP1 A10MP2 A10MP3	1251-0600 1400-0482 1400-0966	0 3 8	6	CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CABLE TIE .062-3-DIA .14-WD NYL CLIP-HINGE	28480 28480 91506	1251-0600 1400-0482 6015-13AT
A10Q1 A10Q2 A10Q3 A10Q4 A10Q5	1884-0012 1854-0810 1884-0012 1855-0253	9 2 9 9	2 2	THYRISTOR-SCR 2N3528 TO-8 URRM=200 TRANSISTOR NPN SI PD=625MW FT=200MHZ THYRISTOR-SCR 2N3528 TO-8 URRM=200 TRANSISTOR J-FET N-CHAN D-MODE TO-92 SI NOT ASSIGNED	0192B 28480 0192B 28480	2N3528 1854-0810 2N3528 1855-0253
A10Q6 A10Q7 A10Q8 A10Q9 A10Q10	1855-0020 1855-0020 1855-0020 1855-0020 1855-0020	8 8 8 8	5	TRANSISTOR J-FET N-CHAN D-MODE TO-18 SI TRANSISTOR J-FET N-CHAN D-MODE TO-18 SI	28480 28480 28480 28480 28480	1855-0020 1855-0020 1855-0020 1855-0020 1855-0020
A10Q11 A10Q12	1855-0253 1884-0018	9	1	TRANSISTOR J-FET N-CHAN D-MODE TO-92 SI THYRISTOR-SCR 2N4186 VRRM=200	28480 04713	1855-0253 2 N4 186
A10R1 A10R2 A10R3 A10R4 A10R5	0757-0814 0698-0082 2100-0568 0698-3440 0757-0465	9 7 1 7 6	1 2	RESISTOR 511 1% .5W F TC=0+-100 RESISTOR 464 1% .125W F TC=0+-100 RESISTOR-TRMR 100 10% C TOP-ADJ 1-TRN RESISTOR 196 1% .125W F TC=0+-100 RESISTOR 196 1% .125W F TC=0+-100	28480 24546 28480 24546 24546	0757-0814 C4-1/8-T0-4640-F 2100-0568 C4-1/8-T0-196R-F C4-1/8-T0-1003-F
A10R6 A10R7 A10R8 A10R9 A10R10	0757-0442 0757-0465 0698-3441 0757-0462 0757-0461	9 6 8 3 2	1	RESISTOR 10K 1% .125W F TC=0+-100 RESISTOR 100K 1% .125W F TC=0+-100 RESISTOR 215 1% .125W F TC=0+-100 RESISTOR 75K 1% .125W F TC=0+-100 RESISTOR 68.1K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-1002-F C4-1/8-T0-1003-F C4-1/8-T0-215R-F C4-1/8-T0-7502-F C4-1/8-T0-6812-F
A10R11 A10R12 A10R13 A10R14 A10R15	0698-3457 0757-0280 0757-0288 0757-0420 0698-5405	6 3 1 3 8	2	RESISTOR 316K 1% .125W F TC=0+-100 RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 9.09K 1% .125W F TC=0+-100 RESISTOR 750 1% .125W F TC=0+-100 RESISTOR 600 1% .25W F TC=0+-100	28480 24546 19701 24546 24546	0698-3457 C4-1/B-T0-1001-F MF4C1/B-T0-9091-F C4-1/B-T0-751-F C5-1/4-T0-600R-F
A10R16 A10R17 A10R18 A10R19 A10R20	2100-0568 0698-8827 0757-0394 0698-8827 0698-3160	1 4 0 4 8	3	RESISTOR-TRMR 100 10% C TOP-ADJ 1-TRN RESISTOR 1M 1% .125W F TC=0+-100 RESISTOR 51.1 1% .125W F TC=0+-100 RESISTOR 1M 1% .125W F TC=0+-100 RESISTOR 31.6K 1% .125W F TC=0+-100	28480 28480 24546 28480 24546	2100-0568 0698-8827 C4-1/8-T0-51R1-F 0698-8827 C4-1/8-T0-3162-F
A10R21 A10R22 A10R23 A10R24 A10R25	0683-1065 0698-6983 0757-0465 0757-0465 0698-6983	7 9 6 6 9	1 4	RESISTOR 10M 5% .25W CC TC=-900/+1100 RESISTOR 20.4K .1% .125W F TC=0+-25 RESISTOR 100K 1% .125W F TC=0+-100 RESISTOR 100K 1% .125W F TC=0+-100 RESISTOR 20.4K .1% .125W F TC=0+-25	01121 19701 24546 24546 19701	CB1065 MF4C1/B-T9-2042-B C4-1/B-T0-1003-F C4-1/B-T0-1003-F MF4C1/B-T9-2042-B
A10R26 A10R27 A10R28 A10R29 A10R30	0698-3157 0698-6320 0698-8863 0757-0288 0698-8863	3 8 8 1 8	5	RESISTOR 19.6K 1% .125W F TC=0+-100 RESISTOR 5K .1% .125W F TC=0+-25 RESISTOR 5.2K .1% .125W F TC=0+-25 RESISTOR 9.09K 1% .125W F TC=0+-100 RESISTOR 5.2K .1% .125W F TC=0+-25	24546 03888 28480 19701 28480	C4-1/8-T0-1962-F PME55-1/8-T9-5001-B 0698-8863 MF4C1/8-T0-9091-F 0698-8863
A10R31 A10R32 A10R33 A10R34 A10R35	0698-6320 2100-0567 2100-3212 0757-0401 0698-3151	8 0 8 0 7	1	RESISTOR 5K .1% .125W F TC=0+-25 RESISTOR-TRMR 2K 10% C TOP-ADJ 1-TRN RESISTOR-TRMR 200 10% C TOP-ADJ 1-TRN RESISTOR 100 1% .125W F TC=0+-100 RESISTOR 2.87K 1% .125W F TC=0+-100	03888 28480 28480 24546 24546	PME55-1/8-T9-5001-B 2100-0567 2100-3212 C4-1/8-T0-101-F C4-1/8-T0-2871-F
A10R36 A10R37 A10R38 A10R39 A10R40	0698-3151 0757-0280 0757-0280 0757-0422 0698-4424	7 3 3 5 9		RESISTOR 2.87K 1% .125W F TC=0+-100 RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 909 1% .125W F TC=0+-100 RESISTOR 1.4K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-2871-F C4-1/8-T0-1001-F C4-1/8-T0-1001-F C4-1/8-T0-909R-F C4-1/8-T0-1401-F
A10R41 A10R42 A10R43 A10R44 A10R45	0757-0280 0698-3454 0698-3454 0757-1094 0757-0421	3 3 9 4		RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 215K 1% .125W F TC=0+-100 RESISTOR 215K 1% .125W F TC=0+-100 RESISTOR 1.47K 1% .125W F TC=0+-100 RESISTOR 825 1% .125W F TC=0+-100	24546 24546 24546 24546 24546	C4-1/8-T0-1001-F C4-1/8-T0-2153-F C4-1/8-T0-2153-F C4-1/8-T0-1471-F C4-1/8-T0-1825R-F

Table 6-3. Replaceable Parts

Table 0-3. Replaceable Falls									
Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number			
A10R46 A10R47 A10R48 A10R49 A10R50	0698-3459 2100-0558 0698-8827 0698-3444 0698-6347	8 9 4 1 9	1 1	RESISTOR 383K 1% .125W F TC=0+-100 RESISTOR-TRMR 20K 10% C TOP-ADJ 1-TRN RESISTOR 1M 1% .125W F TC=0+-100 RESISTOR 316 1% .125W F TC=0+-100 RESISTOR 1.5K .1% .125W F TC=0+-25	28480 28480 28480 24546 28480	0698-3459 2100-0558 0698-8827 C4-1/8-T0-316R-F 0698-6347			
A10R51 A10R52 A10R53 A10R54 A10R55	0698-7394 0698-3451 0690-3451 0698-6983 0690-6983	8 0 0 9	1 2	RESISTOR 698 .1% .125W F TC=0+-25 RESISTOR 133K 1% .125W F TC=0+-100 RESISTOR 133K 1% .125W F TC=0+-100 RESISTOR 20.4K .1% .125W F TC=0+-25 RESISTOR 20.4K .1% .125W F TC=0+-25	19701 24546 24546 19701 19701	MF4C1/8-T9-698R-R C4-1/8-T0-1333-F C4-1/8-T0-1333-F MF4C1/8-T9-2042-B MF4C1/8-T9-2042-B			
A10R56 A10R57 A10R58 A10R59 A10R60	0757-0465 0757-0465 0757-0442 0757-0280 0757-0290	6 6 9 3 5		RESISTOR 100K 1% .125W F TC=0+-100 RESISTOR 100K 1% .125W F TC=0+-100 RESISTOR 10K 1% .125W F TC=0+-100 RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 6.19K 1% .125W F TC=0+-100	24546 24546 24546 24546 19701	C4-1/8-T0-1003-F C4-1/8-T0-1003-F C4-1/8-T0-1002-F C4-1/8-T0-1001-F MF4C1/8-T0-6191-F			
A10R61 A10R62 A10R63 A10R64 A10R65	0757-0421 0757-0200 0698-3155 2100-0567 0698-3405	4 7 1 0 4	1	RESISTOR 825 1% .125W F TC=0+-100 RESISTOR 5.62K 1% .125W F TC=0+-100 RESISTOR 4.64K 1% .125W F TC=0+-100 RESISTOR-TRNM 2K 10% C TOP-ADJ 1-TRN RESISTOR 422 1% .5W F TC=0+-100	24546 24546 24546 28480 28480	C4-1/8-T0-825R-F C4-1/8-T0-5621-F C4-1/8-T0-4641-F 2100-0567 0698-3405			
A10R66 A10R67 A10R68 A10R69 A10R70	0698-3407 0757-0816 0698-3407 0698-3407 0757-0198	6 1 6 6 2	3 1 1	RESISTOR 1.96K 1% .5W F TC=0+-100 RESISTOR 681 1% .5W F TC=0+-100 RESISTOR 1.96K 1% .5W F TC=0+-100 RESISTOR 1.96K 1% .5W F TC=0+-100 RESISTOR 100 1% .5W F TC=0+-100	28480 28480 28480 28480 28480	0698-3407 0757-0816 0698-3407 0698-3407 0757-0198			
A10R71 A10R72 A10R73 A10R74 A10R75	0757-0280 0698-3156 0698-6942 0698-8284 0818-0056	3 2 0 7 1	1 1 1	RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 14.7K 1% .125W F TC=0+-100 RESISTOR 25K .1% .125W F TC=0+-50 RESISTOR 118.37K .1% .125W F TC=0+-50 RESISTOR 1 3% 10W PW TC=0+-50	24546 24546 28480 19701 91637	C4-1/8-T0-1001-F C4-1/8-T0-1472-F 0698-6942 MF4C1/8-T2-118371-B CW10-1-11W-T2-1R0-H			
A10R76 A10R77 A10R78 A10R79 A10R80	0698-7861 0698-6722 0757-1000 2100-1768 0757-0440	4 4 7 5 7	1 1 1 1	RESISTOR 25.42K .1% .125W F TC=0+-50 RESISTOR 124K .1% .125W F TC=0+-50 RESISTOR 51.1 1% .5W F TC=0+-100 RESISTOR-TRNR 20 5% WW TOP-ADJ 1-TRN RESISTOR 7.5K 1% .125W F TC=0+-100	19701 28480 28480 28480 24546	MF4C1/8-T2-25421-B 0698-6722 0757-1000 2100-1768 C4-1/8-T0-7501-F			
A10R81 A10R82 A10R83 A10R84	0690-3439 0757-0158 0698-3439 0757-0158	4 4 4	2	RESISTOR 178 1% .125W F TC=0+-100 RESISTOR 619 1% .5W F TC=0+-100 RESISTOR 178 1% .125W F TC=0+-100 RESISTOR 619 1% .5W F TC=0+-100	24546 28480 24546 28480	C4-1/8-T0-178R-F 0757-0158 C4-1/8-T0-178R-F 0757-0158			
A10TP1 A10TP2	1251-0600 1251-0600	0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	28480 28480	1251-0600 1251-0600			
A10U1 A10U2 A10U3 A10U4 A10U5	1820-1423 1826-0412 1820-1423 1826-0462 1820-1730	4 1 4 1 6	1 3 7	IC MV TTL LS MONOSTBL RETRIG DUAL IC COMPARATOR PRCN DUAL 8-DIP-P PKG IC MV TTL LS MONOSTBL RETRIG DUAL IC CONV 10-B-D/A 16-DIP-C PKG IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295 27014 01295 04713 01295	SN74LS123N LM393N SN74LS123N MC3410CL SN74LS273N			
A10U6 A10U7 A10U8 A10U9 A10U10	1820-1730 1020-2111 1826-0462 1820-1730 1820-1730	6 9 1 6 6	3	IC FF TTL LS D-TYPE POS-EDGE-TRIG COM IC DRVR TTL INV IC CONV 10-B-D/A 16-DIP-C PKG IC FF TTL LS D-TYPE POS-EDGE-TRIG COM IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295 01295 04713 01295 01295	SN74LS273N SN7546BN MC3410CL SN74LS273N SN74LS273N			
A10U11 A10U12 A10U13 A10U14 A10U15	1820-2111 1820-2111 1820-1730 1826-0462 1826-0371	9 9 6 1	2	IC DRVR TTL INV IC DRVR TTL INV IC DRVR TTL INV IC FF TTL LS D-TYPE POS-EDGE-TRIG COM IC CONV 10-B-D/A 16-DIP-C PKG IC OP AMP LOW-BIAS-H-IMPD TO-99 PKG	01295 01295 01295 04713 27014	9N75468N SN75468N SN74L9273N MC3410CL LF256H			
A10U16 A10U17 A10U18 A10U19 A10U20	1820-1730 1826-0521 1826-0323 1820-1730 1826-0521	63363	2	IC FF TTL LS D-TYPE POS-EDGE-TRIG COM IC OP AMP DUAL 8-DIP-P PKG IC OP AMP GP QUAD 14-DIP-C PKG IC FF TTL LS D-TYPE POS-EDGE-TRIG COM IC OP AMP DUAL 8-DIP-P PKG	01295 01295 28480 01295 01295	SN74L8273N TL072CP 1826-0323 SN74L8273N TL072CP			
A10U21 A10U22 A10U23	1826-0138 1826-0138 1826-0371	8 8 1	2	IC COMPARATOR GP QUAD 14-DIP-P PKG IC COMPARATOR GP QUAD 14-DIP-P PKG IC OP AMP LOW-BIAS-H-IMPD TO-99 PKG	01295 01295 27014	LM339N LM339N LF256H			
A10VR1 A16VR2 A16VR3 A16VR4 A16VR5	1902-1299 1902-1299 1902-0777 1902-0064 1902-3381	6 6 3 1	2 1 1	DIODE-ZNR 3.3V 10% DO-15 PD=1W TC=061% DIODE-ZNR 3.3V 10% DO-15 PD=1W TC=061% DIODE-ZNR 1N825 6.2V 5% DO-7 PD=.4W DIODE-ZNR 7.5V 5% DO-35 PD=.4W TC=+.05% DIODE-ZNR 68.1V 5% DO-7 PD=.4W TC=+.079%	20480 28480 04713 28480 28480	1902-1299 1902-1299 18825 1902-0064 1902-3381			
A10VR6	1902-3139	7		DIODE-ZNR 8.25V 5% DQ-35 PD=.4W	28480	1902-3139			
A11	08656-60097	7	1	MICROPROCESSOR/MEMORY/HP-IB ASSEMBLY	20400	08656-60007			

Table 6-3. Replaceable Parts

	Table 0-3. neplaceable raits								
Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number			
A11C1 A11C2 A11C3 A11C4 A11C5	0180-2207 0180-0229 0160-2055 0180-0229 0180-0116	5 7 9 7	1	CAPACITOR-FXD 100UF+-10% 10VDC TA CAPACITOR-FXD 33UF+-10% 10VDC TA CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD 33UF+-10% 10VDC TA CAPACITOR-FXD 6.8UF+-10% 35VDC TA	56289 56289 28480 56289 56289	150D107X9010R2 150D336X9010B2 0160-2055 150D336X9010B2 150D685X9035B2			
A11C6 A11C7 A11CB A11C9 A11C10	0160-2055 0160-2055 0180-0197 0160-2055 0180-0116	9 9 8 9		CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD 2.2UF+-10% 20VDC TA CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD 6.8UF+-10% 35VDC TA	28480 28480 56289 28480 56289	0160-2055 0160-2055 150D225X9020A2 0160-2055 150D685X9035B2			
A11C11 A11C12 A11C13 A11C14 A11C15	0160-2055 0160-2055 0160-2055 0160-2055 0160-2055	9 9 9 9		CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480 28480 28480 28480 28480	0160-2055 0160-2055 0160-2055 0160-2055 0160-2055			
A11C16 A11C17 A11C18 A11C19 A11C20	0160-4493 0160-2055 0160-2055 0160-2055 0160-0574	3 9 9 3		CAPACITOR-FXD 27PF +-5% 200VDC CER 0+-30 CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD .01UF +80-20% 100VDC CER CAPACITOR-FXD .022UF +-20% 100VDC CER	51642 28480 28480 28480 28480	200-200-NP0-270J 0160-2055 0160-2055 0160-2055 0160-2055			
A11C21 A11C22	0160-0574 0160-4493	3		CAPACITOR-FXD .022UF +-20% 100VDC CER CAPACITOR-FXD 27PF +-5% 200VDC CER 0+-30	28480 51642	0160-0574 200-200-NP0-270J			
A11CR1	1901-0518	8	1	DIODE-SM SIG SCHOTTKY	28480	1901-0518			
A11J1 A11J2 A11J3 A11J4	1251-5571 1251-5595 1200-0507 1251-5835 1200-0507	4 2 9 3 9	1	CONNECTOR 17-PIN M POST TYPE KEY, POLARIZING SOCKET-IC 16-CONT DIP-SLDR CONNECTOR 6-PIN M POST TYPE SOCKET-IC 16-CONT DIP-SLDR	28480 28480 28480 28480 28480	1251-5571 1251-5595 1200-0507 1251-5835 1200-0507			
A11J5 A11J6	1251-5855 1251-5671	7 5	1 1	CONNECTOR 16-PIN M POST TYPE CONNECTOR 20-PIN M POST TYPE	28480 28480	1251-5855 1251-5671			
A11MP1	1400-0966	8		CLIP-HINGE	91506	6015-13AT			
A11Q1	1854-0810	2		TRANSISTOR NPN SI PD=625MW FT=200MHZ	28480	1854-0810			
A11R1 A11R2 A11R3 A11R4 A11R5	0698-3162 0757-0280 0757-0280 0757-0442 0698-3162	0 3 3 9 0		RESISTOR 46.4K 1% .125W F TC=0+-100 RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 1K 1% .125W F TC=0+-100 RESISTOR 10K 1% .125W F TC=0+-100 RESISTOR 46.4K 1% .125W F TC=0+-100	24546 24546 24546 24546 24546 24546	C4-1/8-T0-4642-F C4-1/8-T0-1001-F C4-1/8-T0-1001-F C4-1/8-T0-1002-F C4-1/8-T0-4642-F			
A11R6 A11R7 A11R8 A11R9 A11R10	0757-0465 0757-0279 0698-3162 1810-0278 0757-0279	6 0 0 4 0	1	RESISTOR 100K 1% .125W F TC=0+-100 RESISTOR 3.16K 1% .125W F TC=0+-100 RESISTOR 46.4K 1% .125W F TC=0+-100 NETWORK-RES 10-51P3.3K OHM X 9 RESISTOR 3.16K 1% .125W F TC=0+-100	24546 24546 24546 01121 24546	C4-1/8-T0-1003-F C4-1/8-T0-3161-F C4-1/8-T0-4642-F 210A332 C4-1/8-T0-3161-F			
A11R11 A11R12 A11R13 A11R14 A11R15	0757-0279 0698-3162 0757-1094 1810-0205 0698-3444	0 9 7 1	1	RESISTOR 3.16K 1% .125W F TC=0+-100 RESISTOR 46.4K 1% .125W F TC=0+-100 RESISTOR 1.47K 1% .125W F TC=0+-100 NETWORK, RES 4.7K 8-PIN-SIP .1-PIN-SPCG RESISTOR 316 1% .125W F TC=0+-100	24546 24546 24546 01121 24546	C4-1/8-T0-3161-F C4-1/8-T0-4642-F C4-1/8-T0-1471-F 2084472 C4-1/8-T0-316R-F			
A11R16	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F			
A1151 A1152 A1153 A1154	3101-2172 3101-2172 3101-2335 3101-2135	0 0 7 5	2 1 1	SWITCH-TGL DIP-RKR-ASSY SPDT .05A 30VDC SWITCH-TGL DIP-RKR-ASSY SPDT .05A 30VDC SWITCH-RKR DIP-RKR-ASSY 3PDT .05A 30VDC SWITCH-RKR DIP-RKR-ASSY DPDT .05A 30VDC	28480 28480 28480 28480	3101-2172 3101-2172 3101-2335 3101-2335			
A11TP1 A11TP2 A11TP3 A11TP4 A11TP5	1251-0600 1251-0600 1251-0600 1251-0600 1251-0600	0 0 0 0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	28480 28480 28480 28480 28480	1251-0600 1251-0600 1251-0600 1251-0600 1251-0600			
A11TP6 A11TP7 A11TP8 A11TP9 A11TP10	1251-0600 1251-0600 1251-0600 1251-0600 1251-0600	0 0 0 0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	28480 28480 28480 28480 28480	1251-0600 1251-0600 1251-0600 1251-0600 1251-0600			
A11TP11 A11TP12 A11TP13 A11TP14 A11TP15	1251-0600 1251-0600 1251-0600 1251-0600 1251-0600	0 0 0 0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	28480 28480 28480 28480 28480	1251-0600 1251-0600 1251-0600 1251-0600 1251-0600			
A11TP16 A11TP17 A11TP18	1251-0600 1251-0600 1251-0600	0 0		CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ	28480 28480 28480	1251-0600 1251-0600 1251-0600			

Table 6-3. Replaceable Parts

	lable b-3. Heplaceable Parts									
Reference Designation	HP Part Number	CD	Qty	Description	Mfr Code	Mfr Part Number				
A11U1 A11U2† A11U3 A11U4 A11U5†	1820-1240 1818-1365 1818-0701 1818-0701 1818-1362	3 8 4 4 5	3 1 2 1	IC DCDR TTL S 3-TO-8-LINE 3-INP ROM \$1 IC NMOS 1024 (1K) RAM STAT 360-NS 3-S IC NMOS 1024 (1K) RAM STAT 360-NS 3-S ROM \$6	01295 18324 04713 04713 18324	SN74S13BN N2616N MASKED MCM6BA10P MCM6BA10P N2616N MASKED				
A11U6† A11U7† A11UB† A11U9† A11U10	1818-1361 1818-1360 1818-1359 1818-1358 1820-2102	4 3 0 9 8	1 1 1 1	ROM #5 ROM #4 ROM #3 ROM #2 IC LCH TTL LS D-TYPE OCTL	18324 18324 18324 18324 01295	N2616N MASKED N2616N MASKED N2616N MASKED N2616N MASKED SN741.S373N				
A11U11 A11U12 A11U13 A11U14 A11U15	1820-1240 1820-1759 1820-2099 1820-2075 1820-2075	39244	4 1 2	IC DCDR TTL S 3-TO-8-LINE 3-INP IC BFR TTL LS NON-INV OCTL IC MICPROC NMOS 8-BIT IC MISC TTL LS IC MISC TTL LS	01295 27014 04713 01295 01295	SN74S13BN DMB1LS97N MC6802P SN74LS245N SN74LS245N				
A11U16 A11U17 A11U18 A11U19 A11U20	1820-1491 1820-1759 1820-1759 1820-2219 1820-1759	6 9 8 9	1	IC BFR TTL LS NON-INV HEX 1-INP IC BFR TTL LS NON-INV OCTL IC BFR TTL LS NON-INV OCTL IC MICPROC-ACCESS NMOS 8-BIT IC BFR TTL LS NON-INV OCTL	01295 27014 27014 04713 27014	SN74LS367AN DM81LS97N DM81LS97N MC6848BP DM81LS97N				
A11U21 A11U22 A11U23 A11U24 A11U25	1820-1200 1820-1216 1820-1689 1820-1240 1820-1201	53436	1 4 1	IC INV TTL LS HEX IC DCDR TTL LS 3-TO-8-LINE 3-INP IC UART TTL QUAD IC DCDR TTL S 3-TO-8-LINE 3-INP IC GATE TTL LS AND QUAD 2-INP	01295 01295 01295 01295 01295	SN74LS05N SN74LS138N MC3446P SN74S138N SN74LS08N				
A11U26 A11U27 A11U28 A11U29 A11U30	1820-1689 1820-1689 1820-1422 1820-1112 1820-1689	4 3 8 4		IC UART TTL QUAD IC UART TTL QUAD IC MV TTL LS MONOSTBL RETRIG IC FF TTL LS D-TYPE POS-EDGE-TRIG IC UART TTL QUAD	01295 01295 01295 01295 01295	MC3446P MC3446P SN74LS122N SN74LS74AN MC3446P				
A11U31 A11U32 A11U33	1820-1568 1820-2056 1820-1216	9 1 3	1	IC BFR TTL LS 8US QUAD IC FF TTL LS D-TYPE POS-EDGE-TRIG COM IC DCDR TTL LS 3-TO-8-LINE 3-INP	01295 01295 01295	SN74LS125AN SN74LS378N SN74LS138N				
A11VR1 A11Y1	1902-3070 0410-0465	2	1	DIODE-ZNR 4.22V 5% DO-35 PD=.4W CRYSTAL-QUARTZ 4.00000 MHZ HC-6/U-HLDR	28480 28480	1902-3070 0410-0465				
A12	08656-60016	8	1	VOLTAGE REGULATOR ASSEMBLY	28480	08656-60016				
A12C1 A12C2 A12C3 A12C4 A12C5	0160-0575 0160-0575 0180-0116 0160-4084 0180-0116	4 4 1 8 1		CAPACITOR-FXD .047UF +-20% 50VDC CER CAPACITOR-FXD .047UF +-20% 50VDC CER CAPACITOR-FXD 6.8UF+-10% 35VDC TA CAPACITOR-FXD 1.1UF +-20% 50VDC CER CAPACITOR-FXD 6.8UF+-10% 35VDC TA	28480 28480 56289 28480 56289	0160-0575 0160-0575 150D685X9035B2 0160-4084 150D685X903582				
A12C6	0180-0291	3		CAPACITOR-FXD 1UF+-10% 35VDC TA	56289	150D105X9035A2				
A12J1	1251-5810	4	1	CONNECTOR 10-PIN M POST TYPE	28480	1251-5810				
A13	08656-60064	6	1	HP-IB CONNECTOR ASSEMBLY	28480	08656-60064				
A13J1 A13J2	1251-3283	1	1	PART IS ETCHED TRACE ON CIRCUIT BOARD CONNECTOR 24-PIN F MICRORIBBON	28480	1251-3283				
A13MP1 A13MP2 A13MP3 A13MP4 A13MP5	0380-0644 1530-1098 2190-0034 2200-0109 2260-0009	4 4 5 8 3	ଥ ଥ ଥ 4	STANDOFF-HEX .327-IN-LG 6-32THD CLEVIS 0.070-IN W SLT: 0.454-IN PIN CTR WASHER-LK HLCL NO. 10 .194-IN-ID SCREW-MACH 4-40 .438-IN-LG PAN-HD-POZI NUT-HEX-W/LKWR 4-40-THD .094-IN-THK	00000 00000 28480 00000 00000	ORDER BY DESCRIPTION ORDER BY DESCRIPTION 2190-0034 ORDER BY DESCRIPTION ORDER BY DESCRIPTION				
A14	08656-60078	2	1	FILTER BANK ASSEMBLY	28480	08656-60 078				
A14J1 A14J2 A14J3	1251-5880 1251-4966 1251-4966	8 9 9	1 2	CONNECTOR 15-PIN M D SUBMINIATURE CONNECTOR 8-PIN M POST TYPE CONNECTOR 8-PIN M POST TYPE	28480 28480 28480	1251-5880 1251-4966 1251-4966				
A14MP1 A14MP2 A14MP3 A14MP4 A14MP5	0460-1439 2200-0103 2260-0009 08656-00047 08656-00048	7 3 9 0	1	TAPE, INDUSTRIAL (1 INCH) SCREW-MACH 4-40 .25-IN-LG PAN-HD-POZI NUT-HEX-W/LKWR 4-40-THD .094-IN-THK CORNER BRACKET, REAR PANEL GASKET, CORNER BRACKET	28480 00000 00000 28480 28480	0460-1439 ORDER BY DESCRIPTION ORDER BY DESCRIPTION 08656-00047 08656-00048				
A15	0960-0443 0360-0001 0890-0983 8150-2919 8151-0013 7120-8986	1 5 1 4 0	1 3 5 1	LINE POWER MODULE TERMINAL-SLDR LUG LK-MTG FOR-\$6-SCR TUBING-HS ,125-D/,062-RCVD .02-WALL WIRE 18AWG G/Y 600V PVC 19X30 105C WIRE 22AWG 1X22 LABEL	28480 28480 28480 28480 28480 28480	0960-0443 0360-0001 0890-0983 8150-2919 8151-0013 7120-8986				

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A16	0950-0411 8150-2890 8150-0447 2200-0103 2360-0113 0360-0001 0360-0053 0590-1245 3050-0066 08656-80005 2360-0199	27622578874	1 1 1 20 2 5 6 1 3	10 MHZ REFERENCE OSCILLATOR ASSEMBLY WIRE 18AWG BK 600V PVC 19X30 105C WIRE 24AWG BK 300V PVC 7X32 80C SCREW-MACH 4-40 .25-IN-LG PAN-HD-POZI SCREW-MACH 6-32 .25-IN-LG PAN-HD-POZI TERMINAL-SLDR LUG LK-MTG FOR-\$6-SCR TERMINAL-SLDR LUG LK-MTG FOR-\$6-SCR NUT-SHMET-U-TP 6-32-THD .017-IN-THK WASHER-FL MTLC NO. 6 .147-IN-ID FINGER GUARD-INTERNAL SCREW-MACH 6-32 .438-IN-LG PAN-HD-POZI	28480 28480 01000 01000 28480 28480 10000 28480 28480 00000	0950-0411 8150-2890 8150-0447 ORDER BY DESCRIPTION 0360-0001 0360-0053 ORDER BY DESCRIPTION 3050-0066 08656-80005 ORDER BY DESCRIPTION
A16W1 A16W2	08656-60066 8120-2682	8	1 1	CABLE-COAXIAL, REF. OSC./A16J1 CABLE-COAXIAL, A16J1/J3	28480 28480	08656-60066 8120-2682
A17†	08656-60081	7	1	FRONT FEEDTHRU ASSEMBLY	28480	08656-60081
		:				

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	СБ	Qty	Description	Mfr Code	Mfr Part Number
B1	3160-0346 0590-1245 2360-0205 2360-0199	0 8 3	1	CHASSIS PARTS FAN-TBAX 36-CFM 115V 50/60-HZ 1.5KV-DIEL NUT-SHMET-U-TP 6-32-THD .017-IN-THK SCREW-MACH 6-32 .75-IN-LG PAN-HD-POZI SCREW-MACH 6-32 .438-IN-LG PAN-HD-POZI	20480 00000 00000 00000	3160-0346 ORDER BY DESCRIPTION ORDER BY DESCRIPTION ORDER BY DESCRIPTION
C1 C2 C3 C4	0160-4900 0160-4900 0160-4900 0160-4900 0160-4900	77777	19	CAPACITOR-FDTHRU 1000PF +80 -20% 200V CAPACITOR-FDTHRU 1000PF +80 -20% 200V CAPACITOR-FDTHRU 1000PF +80 -20% 200V CAPACITOR-FDTHRU 1000PF +80 -20% 200V CAPACITOR-FDTHRU 1000PF +80 -20% 200V	72982 72982 72982 72982 72982 72982	2425-011-X5U0-102-M 2425-011-X5U0-102-M 2425-011-X5U0-102-M 2425-011-X5U0-102-M 2425-011-X5U0-102-M
C6 C7 C8 C9 C10	0160-4900 0160-4900 0160-4900 0160-4900 0160-4982	7 7 7 7 6		CAPACITOR-FDTHRU 1000PF +80 -20% 200V CAPACITOR-FDTHRU 1000PF 20% 200V CER (INCLUDES MOUNTING HARDWARE)	72982 72982 72982 72982 72982 28480	2425-011-X5U0-102-M 2425-011-X5U0-102-M 2425-011-X5U0-102-M 2425-011-X5U0-102-M 0160-4082
C11 C12 C13 C14 C15	0160-4900 0160-4900 0160-4900 0160-4900 0160-4900	7 7 7 7 7		CAPACITOR-FDTHRU 1000PF +80 -20% 200V CAPACITOR-FDTHRU 1000PF +80 -20% 200V CAPACITOR-FDTHRU 1000PF +80 -20% 200V CAPACITOR-FDTHRU 1000PF +80 -20% 200V CAPACITOR-FDTHRU 1000PF +80 -20% 200V	72982 72982 72982 72982 72982	2425-011-X5U0-102-M 2425-011-X5U0-102-M 2425-011-X5U0-102-M 2425-011-X5U0-102-M 2425-011-X5U0-102-M
C16 C17 C18 C19 C20	0160-4900 0160-4900 0160-4900 0160-4900 0160-4900	7 7 7 7 7		CAPACITOR-FDTHRU 1000PF +80 -20% 200V CAPACITOR-FDTHRU 1000PF +80 -20% 200V CAPACITOR-FDTHRU 1000PF +80 -20% 200V CAPACITOR-FDTHRU 1000PF +80 -20% 200V CAPACITOR-FDTHRU 1000PF +80 -20% 200V	72982 72982 72982 72982 72982 72982	2425-011-X5U0-102-M 2425-011-X5U0-102-M 2425-011-X5U0-102-M 2425-011-X5U0-102-M 2425-011-X5U0-102-M
C21 C22 C23	0160-4898 0160-4898 0160-4071 08656-00071 08656-20079	2 2 3 9 9	2 1 1 1	CAPACITOR-FDTHRU 100PF +80 -20% 200V CER CAPACITOR-FDTHRU 100PF +80 -20% 200V CER CAPACITOR-FDTHRU 20PF 20% 200V CER MOUNTING FLANGE NUT-FLANGE	72982 72982 28480 28480 28480	2425-011-X5U0-101-M 2425-011-X5U0-101-M 0160-4071 08656-00071 08656-20079
F1 F1	2110-0016	5 5	1	FUSE .6A 250V TD 1.25X.25 UL (FOR 220/240V OPERATION)	75915	313.600
	2110-0305			FUSE 1.25A 250V TD 1.25X.25 UL (FOR 100/120V OPERATION)	75915	3131 . 25
FL1 FL2 FL3	08656-60005 8151-0013 8159-0005 9135-0099 9135-0099	5 4 0 3 3	2	FILTER, BANDPASS WIRE 22AWG 1X22 WIRE 22AWG W PVC 1X22 80C FILTER, LOW-PASS FILTER, LOW-PASS	28480 28480 28480 28480 28480	08656-60005 8151-0013 8159-0005 9135-0099 9135-0099
J1	1250-0118 2190-0016 2950-0001 8150-0464	3 8 7	5 5 5	CONNECTOR-RF BNC FEM SGL-HOLE-FR 50-OHM (MOD INPUT/OUTPUT;EXCEPT OPT 002) WASHER-LK INTL T 3/8 IN .377-IN-ID NUT-HEX-DBL-CHAM 3/8-32-THD .094-IN-THK WIRE 24AWG W/V 300V PVC 7X32 80C	28480 28480 00000 28480	1250-0118 2190-0016 ORDER BY DESCRIPTION 8150-0464
J2				CONNECTOR, NSR P/O W11 (RF OUTPUT)		
J3	1250-0118 0360-1170 0890-0050 0890-0983 2190-0016 2950-0001 8150-0462	3 5 7 5 3 8 5	2	CONNECTOR-RF BNC FEM SGL-HOLE-FR 50-OHM (TIME BASE INPUT) TERMINAL-SLDR LUG PL-HTG FOR-\$3/8-SCR TUBING-HS .405-D/.29-RCVD .02-WALL PVC TUBING-HS .125-D/.062-RCVD .02-WALL WASHER-LK INTL T 3/8 IN .377-IN-ID NUT-HEX-DBL-CHAM 3/8-32-THD .094-IN-THK WIRE 24AWG W/G 300V PVC 7X32 80C	28480 28480 28480 28480 28480 00000 28480	1250-0118 0360-1190 0890-0050 0890-0983 2190-0016 ORDER BY DESCRIPTION 8150-0462
J4	1250-0118 0360-1190 0890-0983 2190-0016 2950-0001 8150-0460	3 5 5 3 8 3	2	CONNECTOR-RF BNC FEM SGL-HOLE-FR 50-OHM (TIME BASE OUTPUT) TERMINAL-SLDR LUG PL-MTG FOR-\$3/8-SCR TUBING-HS .125-D/.062-RCVD .02-WALL WASHER-LK INTL T 3/8 IN .377-IN-ID NUT-HEX-DBL-CHAM 3/8-32-THD .094-IN-THK WIRE 24AWG W/O 300V PVC 7X32 80C	20480 28480 28480 28480 00000 28480	1250-0118 0360-1190 0890-0983 2190-0016 ORDER BY DESCRIPTION 8150-0460
J5	1250-0118	3		CONNECTOR-RF BNC FEM SGL-HOLE-FR 50-OHM (SEQ; EXCEPT OPT, 002)	28480	1250-0118
J6	2190~0016 2950-0001 1250-0118	3 8 3		WASHER-LK INTL T 3/8 IN .377-IN-ID NUT-HEX-DBL-CHAM 3/8-32-THD .074-IN-THK CONNECTOR-RF BNC FEM SGL-HOLE-FF 50-OHM (MDD INPUT/OUTPUT;OPT 002 ONLY)	28480 00000 28480	2190-0016 ORDER BY DESCRIPTION 1250-0118
	2190-0016 2950-0001 8150-0404	3 8 5	1	WASHER-LK INTL T 3/8 IN .377-IN-ID NUT-HEX-DBL-CHAM 3/8-32-THD .094-IN-THK WIRE 18AWG 0 300V PVC 19X30 80C	28480 00000 28480	2190-0016 ORDER BY DESCRIPTION 8150-0404
L1† L2†	9100-2257 9100-2257	6	2	INDUCTOR RF-CH-MLD 820NH 10% ,105DX.26LG INDUCTOR RF-CH-MLD 820NH 10% ,105DX.26LG	28480 28480	9100-2257 9100-2257

Table 6-3. Replaceable Parts

Table 6-3. Replaceable Farts							
Reference Designation	HP Part Number	С	Qty	Description	Mfr Code	Mfr Part Number	
MP1 MP2 MP3 MP4 MP5	08656-20100 08656-00004 08656-40001 5060-9803 08656-20102	7 8 9 2 9	1 1 2 2 2	FRAME-MACHINED COVER-INSTRUMENT-TOP COVER-INSTRUMENT-SIDE HANDLE-STRAP CAP-FRONT	28480 28480 28480 28480 28480	08656-20100 08656-00004 08656-40001 5060-9803 08656-20102	
MP 6 MP7 MP8 MP9 MP10+	2680-0118 08656-20103 5040-7202 5001-0439 08656-00076	5 0 9 8 4	4 2 1 2 1	SCREW-MACH 10-32 .5-IN-LG 82 DEG CAP-REAR TRIM-TOP TRIM-SIDE COVER-INTERNAL RF-TOP	00000 28480 28480 28480 28480	ORDER BY DESCRIPTION 08656-20103 5040-7202 5001-0439 08656-00076	
MP11 MP12 MP13 MP14 MP15	08656-00034 1460-1761 08656-00069 2360-0111 08656-00059	4 9 5 0 3	1 4 4 1	HINGE-TOP HINGE-SPRING HINGE LOCK SCREW-MACH 6-32 .188-IN-LG PAN-HD-POZI HINGE-BOTTOM	28480 28480 28480 00000 28480	08656-00034 1460-1761 08656-00069 ORDER BY DESCRIPTION 88656-00059	
MP16+ MP17 MP18 MP19 MP20+	08656-00069 08656-20083 2360-0203 2190-0006 08656-00078	5 1 1 6	3 1 17 25 2	HINGE LOCK CLAMP-ATTENUATOR PLATE SCREW-MACH 6-32 .625-IN-LG PAN-HD-POZI WASHER-LK HLCL ND. 6 .141-IN-ID GASKET-ATTENUATOR	28480 28480 00000 28480 28480	08656-00069 08656-20083 ORDER BY DESCRIPTION 2190-0006 08656-00078	
MP21 MP22 MP23+ MP24 MP25	08656-00045 08656-00068 08656-00075 2360-0113 08656-00005	7 4 3 2 9	2 1 1	INSULATOR-ATTENUATOR INSULATOR-ATTENUATOR COVER-INTERNAL RF-BOTTOM SCREW-MACH 6-32 .25-IN-LG PAN-HD-POZI COVER-BOTTOM	28480 28480 28480 00000 28480	08656-00045 08656-00068 08656-00075 ORDER BY DESCRIPTION 08656-00005	
MP26 MP27 MP28 MP29† MP30†	08656-20101 5040-7201 1460-1345 08656-00079 08656-00080	8 8 5 7 0	2 2 2 4 2	FOOT-FRONT FOOT-REAR TILT STAND SST COVER-INTERNAL RF #1 COVER-INTERNAL RF #2	28480 28480 28480 28480 28480	08656-20101 5040-7201 1460-1345 08656-00079 08656-00080	
MP31† MP32† MP33† MP34† MP35†	08656-00081 08656-00082 08656-00083 08656-00084 08656-00085	1 2 3 4 5	2 2 2 1	COVER-INTERNAL RF \$3 COVER-INTERNAL RF \$4 COVER-INTERNAL RF \$5 COVER-INTERNAL RF \$6 COVER-INTERNAL RF \$7	28480 28480 28480 28480 28480	08656-00081 08656-00082 08656-00083 08656-00084 08656-00085	
MP36+ MP37+ MP38 MP39 MP40	08656-00086 08656-00087 08656-00027 0590-1285 0360-1665	67 56 9	7 3 2 62 1	COVER-INTERNAL RF #8 COVER-INTERNAL RF #9 SHIELD-PIN MODULATOR NUT-SELF THREADING .375 IN A/F; .116 IN TERMINAL STRIP 3-TERM PHEN 1.13-IN-L	28480 28480 28480 00000 28480	08656-00086 08656-00087 08656-00027 Order by Description 0360-1665	
MP41 MP42 MP43 MP44 MP45	2510-0133 2190-0010 08656-00037 08656-00039 1400-0249	5 7 7 9 0	5 1 1 1 14	SCREW-MACH 8-32 .188-IN-LG PAN-HD-POZI WASHER-LK EXT T NO. 8 .168-IN-ID SR WALL CLIP CLIP-FEED THRU CABLE TIE .062625-DIA .091-WD NYL	00000 28480 28480 28480 06383	ORDER BY DESCRIPTION 2190-0010 08656-00037 08656-00039 PLT1M-8	
MP46 MP47 MP48 MP49 MP50	1400-0510 2740-0003 08656-20082 7120-8726 7120-8130	B 5 4 6 6	29 1 1 1	CLAMP-CABLE .15-DIA .62-WD NYL NUT-HEX-W/LKWR 10-32-THD .125-IN-THK GASKET-ATTENUATOR PLATE CLAMP LABEL 'AM ADJ/DET ADJ' LABEL 'CAUTION DO NOT REMOVE'	28480 00000 28480 28480 28480	1400-0510 ORDER BY DESCRIPTION 08656-20082 7120-8726 7120-8130	
MP51 MP52 MP53† MP54† MP55	7120-8346 2360-0135 8160-0350 8160-0351 3050-0002	6 8 1 2 2	1 1 1 4 1	LABEL 'FRONT' SCREW-MACH 6-32 1.5-IN-LG PAN-HD-POZI GASKET-RFI BEAD GASKET-RFI BEAD WASHER-FL MTLC NO. 10 .203-IN-ID	28480 00000 28480 20480 28480	7120-8346 ORDER 8Y DESCRIPTION 8160-0350 8160-0351 3050-0002	
MP56 MP57 MP58 MP59- MP99	2360-0121 3050-0227 2190-0007	3 2	1 1 1	SCREW-MACH 6-32 .5-IN-LG PAN-HD-POZI WASHER-FL MTLC NO. 6 .149-IN-ID WASHER-LK INTL T NO. 6 .141-IN-ID NOT ASSIGNED	00000 28480 28480	ORDER BY DESCRIPTION 3050-0227 2190-0007	
MP100 MP100 MP101 MP102 MP103	08656-00046 08656-00094 2360-0185 08656-20066 08656-20067	6 8 4	1 1 4 1 1	PANEL-FRONT(EXCEPT OPT 002) PANEL-FRONT(OPT 002 ONLY) SCREW-MACH 6-32 .5-IN-LG 82 DEG WINDOW-FRONT PANEL-RIGHT WINDOW-FRONT PANEL-EFT	28480 28480 00000 28480 28480	08656-00046 08656-00094 Order by Description 08656-20066 08656-20067	
MP104 MP105† MP106 MP107 MP108	08656-20068 08731-210 7120-1254 2200-0103	6 2 1 2	1 1 1	WINDOW-FRONT PANEL-CENTER NUT-LOCK NAMEPLATE .312-IN-WD .54-IN-LG AL SCREW-MACH 4-40 .25-IN-LG PAN-HD-POZI NOT ASSIGNED	28480 28480 28480 00000	08656-20068 08731-210 7120-1254 Order by Description	
MP109 MP110 MP111 MP112 MP113	08656-00063 2360-0302 2190-0087 08656-40009	18	1 3	NOT ASSIGNED SHROUD-FAN SCREW-MACH 6-32 1.625-IN-LG PAN-HD-POZI WASHER-LK HLCL NO. 8 .168-IN-ID FOOT-LEFT REAR	28480 00000 28480 28480	08656-00063 ORDER BY DESCRIPTION 2190-0087 08656-40009	

Replaceable Parts Model 8656A

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	CD	Qty	Description	Mfr Code	Mfr Part Number
MP 1 1 4	2510-0124	4	2	SCREW-MACH 8-32 .625-IN-LG 82 DEG	00000	ORDER BY DESCRIPTION
MP115 MP116	2190-0017 3050-0139	6	4 2	WASHER-LK HLCL NO. 8 .168-IN-ID WASHER-FL MTLC NO. 8 .172-IN-ID	28480 28480	2190-0017 3050-0139
MP117 MP118†	2580-0004 08656-40013	6	2 1	NUT-HEX-DBL-CHAM 8-32-THD .125-IN-THK SERIES REGULATOR COVER	00000 28480	ORDER BY DESCRIPTION 08656-40013
MP119	0361-1098	4	1	RIVET-PRESS ON	28480 28480	0361-1098 08656-00007
MP120 MP120	08656-00007 08656-00095	1 7	1	PANEL-LEFT REAR(EXCEPT OPT 002) PANEL-LEFT REAR(OPT 002 ONLY)	28400	08656-00095
MP121	08656-00049	1	1	GASKET-LEFT REAR PANEL (EXCEPT OPT. 002)	28480	08656-00049
MP 1 21	08656-00096	8	1	GASKET-LEFT REAR PANEL (OPT 002 ONLY)	28480	08656-00096
MP 1 22	2360-0195	0	5	SCREW-MACH 6-32 .312-IN-LG PAN-HD-POZI	00000	ORDER BY DESCRIPTION
MP123 MP124	08656-00064 2360-0115	0 4	1 1	BRACKET-CRYSTAL SCREW-MACH 6-32 .312-IN-LG PAN-HD-POZI	28480 00000	08656-00064 ORDER BY DESCRIPTION
MP 125	08656-40010	0	i	FOOT-RIGHT REAR	28480 28480	08656-40010 3050-0066
MP 126	3050-0066	8		WASHER-FL MTLC NO. 6 .147-IN-ID		
MP127 MP128	08656-40011 7120-4295	1 6	1 2	GROMMET-LARGE HOLE LABEL-'HAZARDOUS VOLTAGE'	28480 28480	08656-40011 7120-4295
MP 129	7120-5911	5	1	LABEL-'METRIC THREADED FASTENERS'	28480 28480	7120-5911 1251-6539
MP 130 MP 131	1251-6539 1251-6540	9	1 1	CONNECTOR-MIN. F RECP CONNECTOR-MIN-M PLUG	28480	1251-6540
MP132	1251-6541	0	2	HOOD-MINIATURE	28480	1251-6541
MP133 MP134	6960-0002 3160-0300	4	1 1	PLUG-HOLE DOME-HD FOR .5-D-HOLE STL GUARD-FINGER-EXTERNAL	28480 28480	6960-0002 3160-0300
MP135†		1 1	•	NOT ASSIGNED	28480	1400-0510
MP136	1400-0510	8		CLAMP-CABLE .15-DIA .62-WD NYL (OPT. 002 ONLY)	28480	1400-0510
MP 1 37	6960-0009	1	1	PLUG-HOLE FL-HD FOR .438-D-HOLE BRS (OPT. 002 ONLY)	28480	6960-0009
Т1	9100-5000	3	1	TRANSFORMER	28480	9100-5000
	0360-0053 2190-0034	7 5	7	TERMINAL-SLDR LUG LK-MTG FOR-#10-SCR WASHER-LK HLCL NO. 10 .194-IN-ID	28480 28480	0360-0053 2190-0034
	1251-3252	4	2	CONTACT-CONN U/W-SUBMIN-D FEM CRP	28480	1251-3252
	1251-4283 2680-0073	3	2	CONTACT-CONN U/W-POST-TYPE FEM CRP SCREW-MACH 10-32 2-IN-LG PAN-HD-POZI	28480 00000	1251-4283 ORDER BY DESCRIPTION
U1†	1826-0819	2	1	IC-VOLTAGE REGULATOR TO-3 SCREW-MACH 4-40 .5-IN-LG PAN-HD-POZI	28480 00000	1826-0819 ORDER BY DESCRIPTION
	2200-0111 2200-0113	2	1 8	SCREW-MACH 4-40 .625-IN-LG PAN-HD-POZI	00000	ORDER BY DESCRIPTION
U2 ↑	1826-0513 1200-0043	3	1	IC V RGLTR TO-3 INSULATOR-XSTR ALUMINUM	80103 28480	LAS-1905 1200-0043
	2200-0113 08660-40002	4	3	SCREW-MACH 4-40 .625-IN-LG PAN-HD-POZI INSULATOR	00000 28480	ORDER BY DESCRIPTION 00660-40002
	400/ 0000	_	1	TO HOLTAGE DECLINATION TO 7	28480	1826-0820
u3 †	1826-0820 0340-0875	5 9	2	IC-VOLTAGE REGIJLATOR TO-3 INSULATOR-XSTR THRM-CNDCT	28480	0340-0875
	2200-0113 08660-40002	6		SCREW-MACH 4-40 .625-IN-LG PAN-HD-POZI INSULATOR	00000 28480	ORDER BY DESCRIPTION 08660-40002
114	10040271	2	1	DIODE-CT-RECT 200V 15A	28480	1906-0231
U4	1906-0231 0340-0875	9		INSULATOR-XSTR THRM-CNDCT	28480	0340-0875
	2200-0113 08660-40002	4		SCREW-MACH 4-40 .625-IN-LG PAN-HD-POZI INSULATOR	00000 28480	ORDER BY DESCRIPTION 08660-40002
W1	08656-60045	3	1	WIRING HARNESS, A1J1 TO A2J2	28480	08656-60045
W2	7120-8725 08656-60037	5	1 1	LABEL 'A1-J1' WIRING HARNESS, A2J1 TO C1-8	28480 28480	7120-8725 08656-60037
W3 W4	08656-60020 08656-60039	4	1 1	CABLE, COAX,60-110MHZ A3J4 TO A8J4 WIRING HARNESS, A3J1 TO A7J1/C11-13 TO	28480 28480	08656-60020 08656-60039
				C1517, 19	20400	00454-40019
W5 W6	08656-60019 08656-60020	1 2	1 1	CABLE, COAX, 50MHZ, A3J5 TO A8J3 WIRING HARNESS, A6J1 TO A4J1	28480 28480	08656-60019 08656-60028
W7	08656-60027 1400-0510	1 8	1 13	WIRING HARNESS, A7J2 TO A6J4/FL2, 3 CLAMP-CABLE .15-DIA .62-WD NYL	28480 28480	08656-60027 1400-0510
W8	08656-20022		1	CABLE, SEMI-RIGID, 690-740MHZ, FL1 TO A4	28480	08656-20022
W9	08656-20019	7	1	CABLE, SEMI-RIGID, 690-740MHZ, A8 TO A4	28480 20480	08656-20019 08656-20023
W10 W11	08656-20023 8120-2896	0	1 1	CABLE, SEMI-RIGID, 800MHZ, A8 TO A6 CABLE, SEMI-RIGID, 1-990MHZ, A9A1J2/J2	28480	08656-20023 8120-2896
W11	08656-20117	6	1	(EXCEPT OPT, 002) INCL J2 CABLE-SEMI-RIGID,REAR 0.1-990MHZ W12 TO J2 (OPT, 002 ONLY;INCL J2)	28480	08656-20117
W12	08656-20116	5	1	CABLE-SEMI-RIGID, FRONT 0.1-990MHZ	28480	08656-20116
W13	08656-20021	1	1	A9A1J2 TO W11(OPT, 002 ONLY) CABLE,SEMI-RIGID,800.1-923.5MHZ,A6/A9A1	28480	08656-20021
W14	08656-20017	5	i 1	CABLE, SEMI-RIGID, 123.5-990MHZ, A6 TO A9A1	28480 28480	08656-20017 08656-60033
W15	08656-60033 7120-8724	4	1	WIRING HARNESS, A11J1 TO A10J1 LABEL 'A10-J1'	28480	7120-8724
	l	J	J I		ı	

See introduction to this section for ordering information *Indicates factory selected value † FOR BACKDATING INFORMATION REFER TO SECTION VII

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
W16 W16 W17 W18 W19	08656-60029 08656-60084 8120-2993 8120-2946 08656-60072	3 0 8 1 6	1 1 1 1 1	WIRING HARNESS, MAIN (EXCEPT OPT 002) WIRING HARNESS, MAIN (OPT 002 ONLY) CABLE, RIBBON, A10J3 TO A9AJJ1 CABLE, RIBBON, A11J6 TO A13J1 WIRING HARNESS, A12J1 TO A14J1 CABLE, MAINS POWER	28480 28480 28480 28480 28480 28480	08656-60029 08656-60084 8120-2993 8120-2946 08656-60072

Table 6-4. Code List of Manufacturers

Mfr Code	Manufacturer Name	Address	Zip Code
00 000 00 000 01 01 121 01 1275 01 1218 02114 03508 02114 03508 047 13 066 01 063 83 066 01 1063 83 17856 18324 19701 20 932 240 46 245 46 25 403 32 293 32 33 33 33 33 33 33 33 33 33 33 33 33 3	ANY SATISFACTORY SUPPLIER NIPPON ELECTRIC CO ALLEN-BRADLEY CO TEXAS INSTR INC SEMICOND CMPNT DIV RCA CORP SOLID STATE DIV FERROXCUBE CORP GE CO SEMICONDUCTOR PROD DEPT KDI PYROFILM CORP MOTOROLA SEMICONDUCTOR PRODUCTS GE CO ELEK CAP & BAT PROD DEPT PANDUIT CORP PRECISION MONOLITHICS INC FAIRCHILD SEMICONDUCTOR DIV SILICONIX INC SIGNETICS CORP MEPCO/ELECTRA CORP EMCON DIV ITW TRANSITRON ELECTRONIC CORP CORNING GLASS WORKS (BRADFORD) AMPEREX ELEK CORP SEMICON & MC DIV NATIONAL SEMICONDUCTOR CORP HEWLETT-PACKARD CO CORPORATE HQ INTERSIL INC BOURNS INC TRIMPOT PROD DIV CENTRE ENGINEERING INC STETTNER-TRUSH INC SFRAGUE ELECTRIC CO ELECTRO MOTIVE CORP SUB IEC ERIE TECHNOLOGICAL PRODUCTS INC BECKMAN INSTRUMENTS INC HELIPOT DIV JOHNSON E F CO	MILWAUKEE WI DALLAS TX SOMERVILLE NJ SAUGERTIES NY SYRACUSE NY WHIPPANY NJ PHOENIX AZ IRMO SC TINLEY PARK IL SANTA CLARA CA MOUNTAIN VIEW CA SANTA CLARA CA SUNNYUALE CA MINERAL WELLS TX SAN DIEGO CA WAKEFIELD MA BRADFORD PA SLATERSVILLE RI SANTA CLARA CA PALO ALTO CA RIVERSIDE CA SINTY CLARA CA PALO ALTO CA CUPERTINO CA RIVERSIDE CA STATE COLLEGE PA CAZENOVIA NY NORTH ADAMS MA WILLIMANTIC CT ERIE PA FULLERTON CA WASECA MN	5320 4 75222 08876 12477 13201 07981 85062 29063 60477 95050 940 42 95054 94086 76067 92129 01880 16701 02876 95051 94304 95507 16801 13035 01247 06226 16512 92634
5915 0 103 1506 1637	LITTELFUSE INC LAMBDA ELECTRONICS CORP AUGAT INC DALE ELECTRONICS INC	DES PLAINES IL MELVILLE NY ATTLEBORO MA COLUMBUS NE	60016 11746 02703 68601

Model 8656A Replaceable Parts

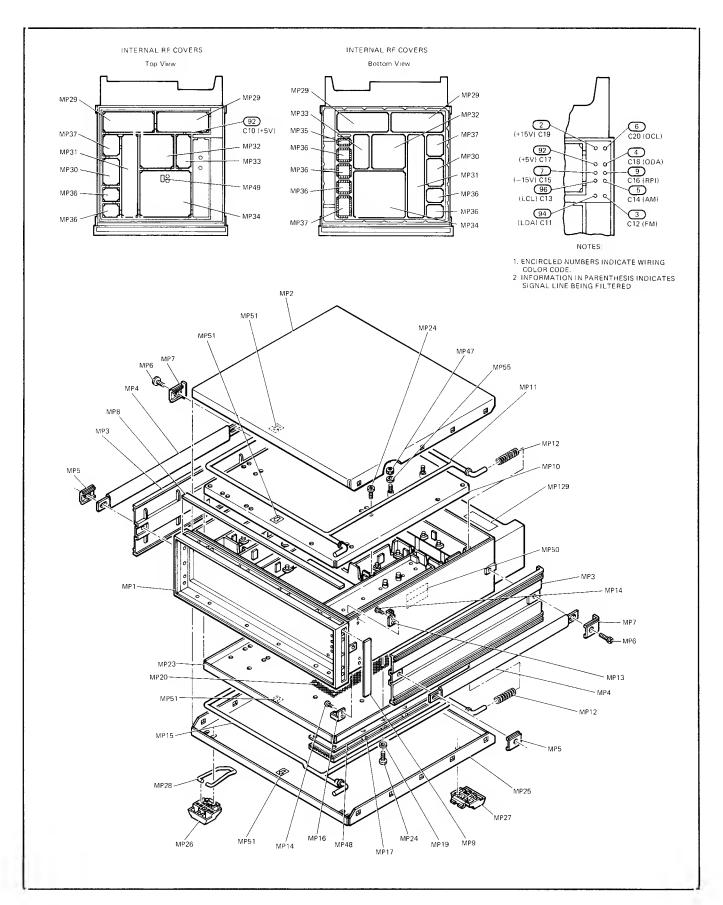


Figure 6-1. Cabinet, Parts Identification

Replaceable Parts

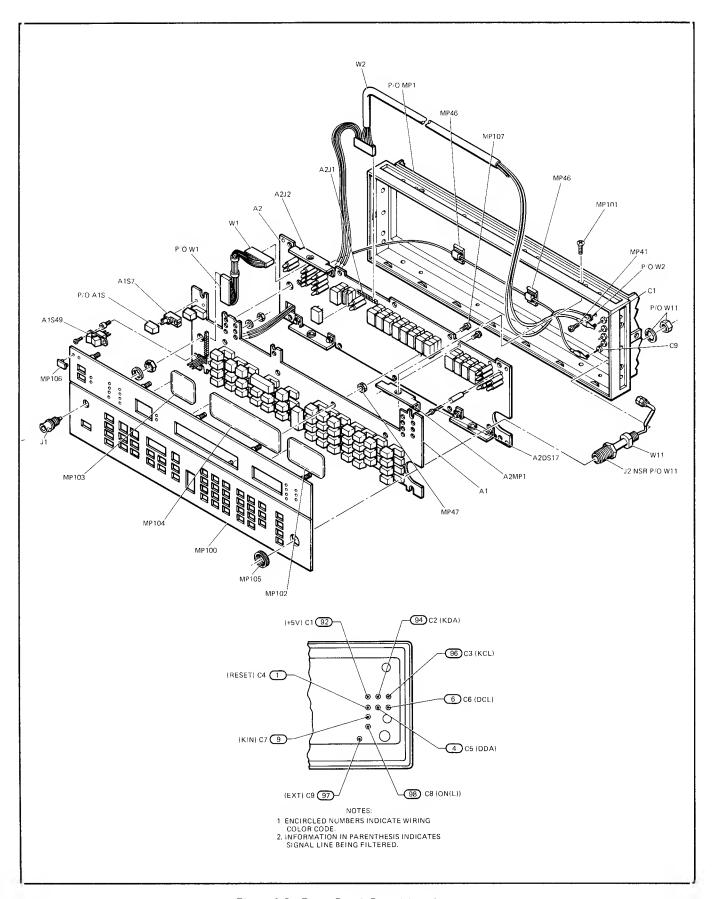


Figure 6-2. Front Panel, Parts Identification

Model 8656A

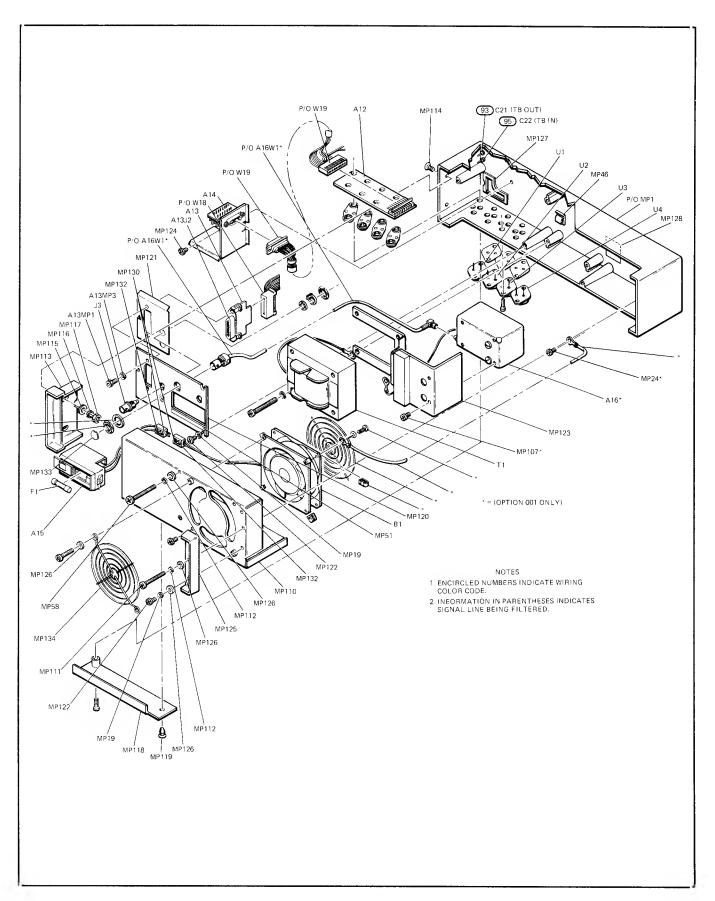


Figure 6-3. Rear Panel, Parts Identification

Replaceable Parts Model 8656A

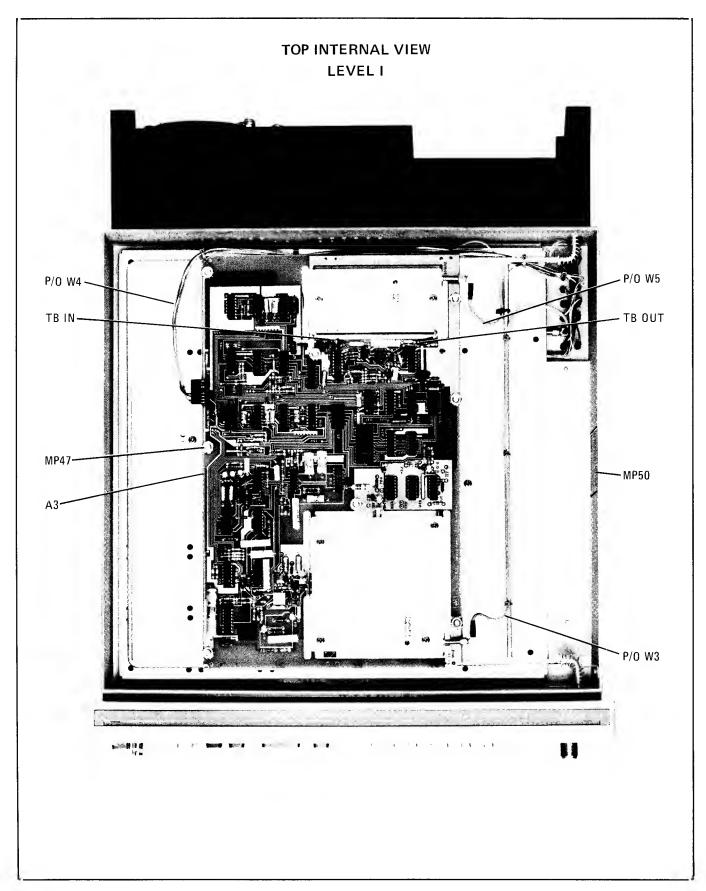


Figure 6-4. Top Internal View; Top Cover Removed

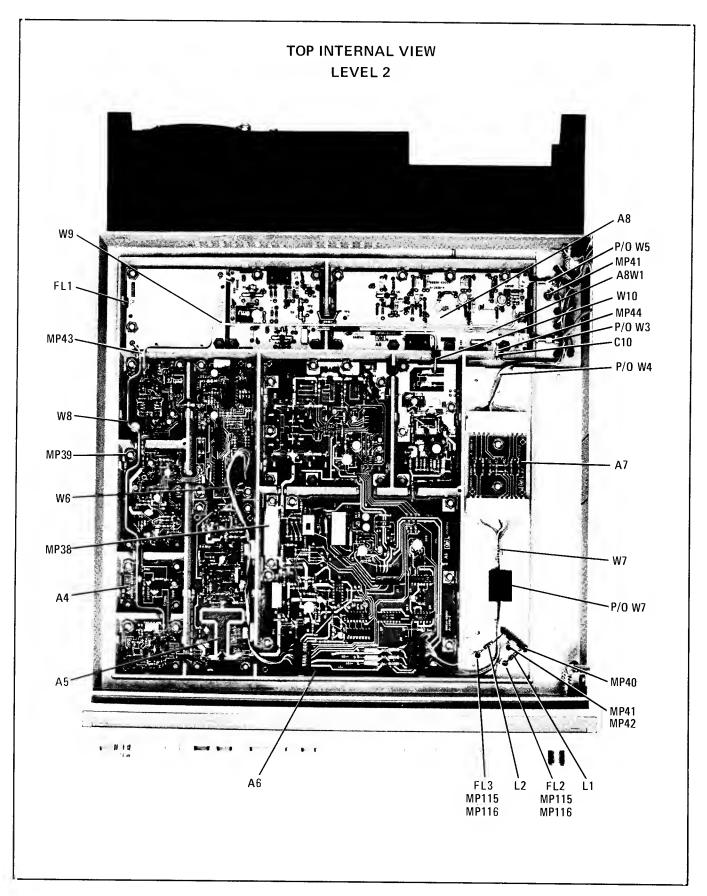


Figure 6-5. Top Internal View; A3 Assembly in Service Position

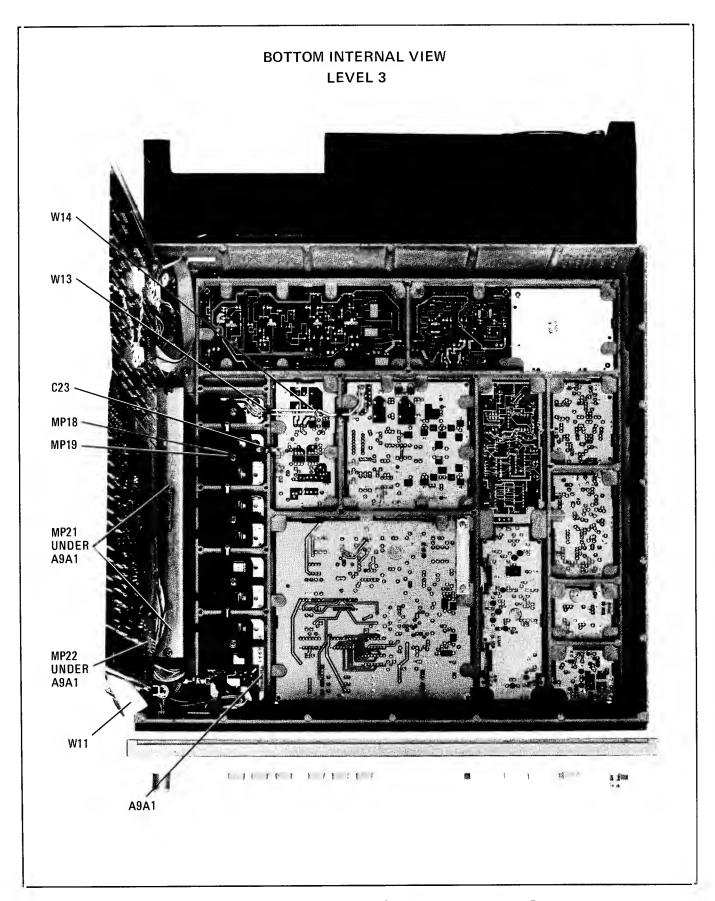


Figure 6-6. Bottom Internal View; A10/A11 Assemblies in Service Position

Model 8656A

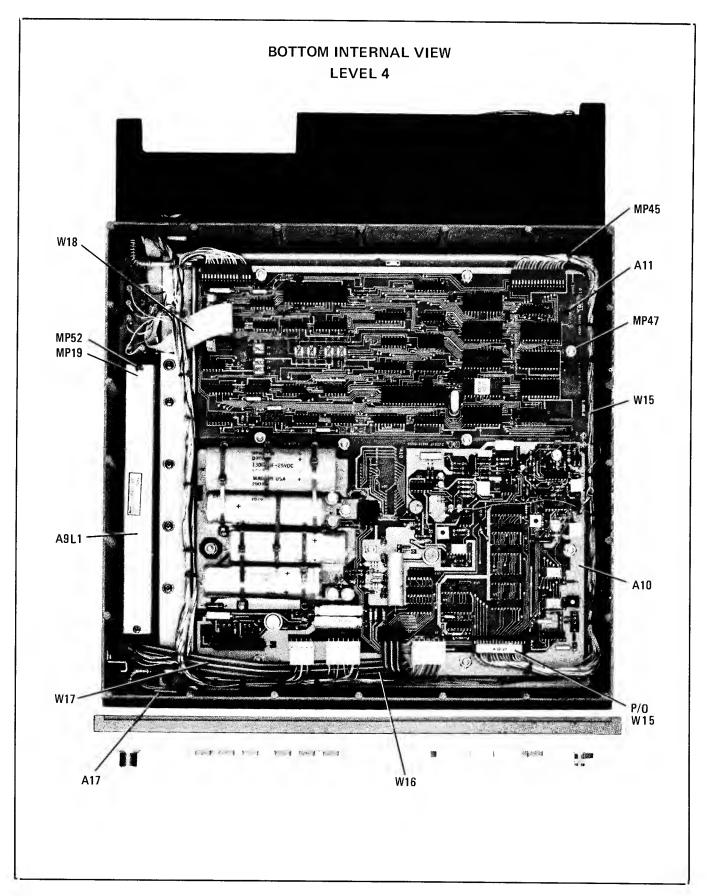


Figure 6-7. Bottom Internal View; Bottom Cover Removed

Replaceable Parts Model 8656A

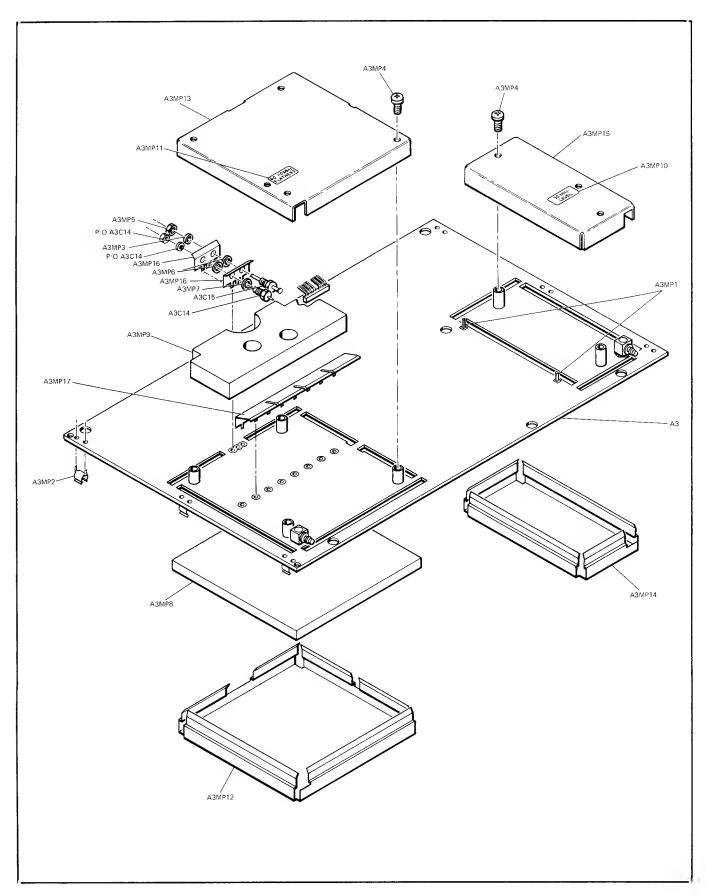


Figure 6-8. Low Frequency Loop Assembly — A3, Parts Identification

Model 8656A Replaceable Parts

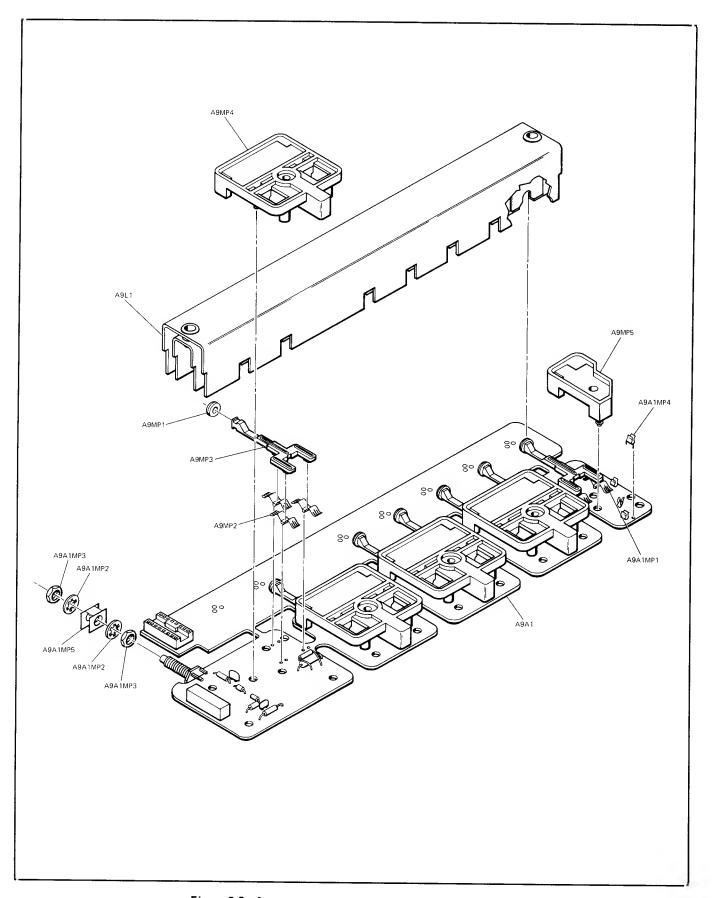


Figure 6-9. Attenuator Assembly - A9, Parts Identification

Model 8656A Manual Changes

SECTION VII MANUAL CHANGES

7-1. INTRODUCTION

This section contains manual change instructions for backdating this manual for HP Model 8656A Signal Generators that have serial number prefixes that are lower than 2035A. This section also contains instrument modification suggestions and procedures that are recommended to improve the performance and reliability of your instrument.

7-2. MANUAL CHANGES

To adapt this manual to your instrument, refer to Table 7-1 and make all of the manual changes listed opposite your instrument's serial number or prefix. The manual changes are listed in serial number sequence and should be made in the sequence listed. For example, Change A should be made after Change B; Change B should be made after Change C; etc. Table 7-2 is a summary of changes by component.

If your instrument's serial number or prefix is not listed on the title page of this manual or in Table 7-1, it may be documented in a MANUAL CHANGES supplement. For additional important information about serial number coverage, refer to INSTRUMENTS COVERED BY MANUAL in Section I of this manual.

Table 7-1. Manual Changes by Serial Number

Serial Prefix or Number	Make Manual Changes	Serial Prefix or Number	Make Manuai Changes
2009A	J,I,H,G,F,E,D,C,B,A	2024A	J,I,H,G
2014A	J,I,H,G,F,E,D,C,B	2025A	J,I,H,F
2018A	J,I,H,G,F,E,D,C	2026A	J,H,F
2022A	J,I,H,G,F,E,D	2027A	J,I
2023A	J,I,H,G,F,E	2032A	J

Table 7-2. Summary of Changes by Component

Manual	Assemblies										
Change	A2	A3	A4	A6	A8	A10	A11	A17	Chassis		
A				C18	C57, U1				MP23		
В					C35			(*)	MP16, MP105		
С							U2, U5, U6, U7, U8, U9, (**)		P/O U2, MP135		
D			MP5, MP12								
E			MP7						MP29-37		
F									MP10, MP23		
G				C52, C59, CR5, CR7, R48							
Н	(**)			CR25, CR28							
ì			C34, C73, C77, R71		R11	F1					
J		L23, R118		C56					L1, L2, MP20, MP118, U1, U3		

7-3. MANUAL CHANGE INSTRUCTIONS

CHANGE A

Table 6-3:

The components affected by this change are:

A6C18, 0160-3873, 4.7 pF

A8C57, 0160-3568, 2.7 pF

A8U1, 0955-0146, Mixer-Double Balanced

MP23, 08656-00003, Cover—Internal RF Bottom.

In each case the new part listed in Table 6-3 is the recommended replacement. Therefore no manual change is recommended. These parts may be replaced independently of the others listed in this change.

Service Sheet 3 schematic:

A8C57 originally was 2.7 pF. The part shown on the schematic is the recommended replacement. Therefore, no manual change is recommended. This part may be replaced independently of the others listed in this change.

Service Sheet 4 schematic:

A6C18 originally was 4.7 pF. The part shown on the schematic is the recommended replacement. Therefore, no manual change is recommended. This part may be replaced independently of the others listed in this change.

CHANGE B

Table 6-3:

The components affected by this change are:

A8C35, 0160-4382, 3.9 pF

A17, 08656-60087, Front Feedthru Assembly

MP16, 08656-00070, Hinge Lock-Bottom

MP105, 0590-0505, Nut-Knurled

The new parts listed in Table 6-3 for A8C35, MP16 and MP105 are the recommended replacements. For these parts no manual change is recommended. These parts may be replaced independently of the others listed in this change. Delete A17 from Table 6-3.

Service Sheet 3 schematic:

A8C35 originally was 2.7 pF. The part shown on the schematic is the recommended replacement. Therefore, no manual change is recommended. This part may be replaced independently of the others listed in this change.

Service Sheet 6 schematic:

At the MOD INPUT/OUTPUT connector J1, eliminate the A17 assembly and show the white/violet wire P/O W16 connected to C9.

Service Sheet 18 schematic:

At the KEYBOARD CLOCK input, eliminate the A17 assembly and show the white/blue wire P/O W16 connected to C3.

At the outputs on the right side of the schematic, eliminate the A17 assembly and show the wires on the right connected as follows:

- l) white/yellow to C2
- 2) white to C7
- 3) white/gray to C8
- 4) brown to C4.

MANUAL CHANGE INSTRUCTIONS (Cont'd)

CHANGE B (Cont'd)

Service Sheet 19 schematic:

At the inputs on the left side of the schematic, eliminate the A17 assembly and show the wires on the left connected as follows:

- 1) blue to C6
- 2) yellow to C5

Service Sheet 22 schematic:

At the +5V output on the right side of the schematic, eliminate the A17 assembly and show the white/red wire on the left connected to C1.

CHANGE C

Table 6-3:

The components affected by this change are:

Under U2, 1200-0043, Insulator-Thermal Conductive Transistor

A11U2, 08656-80006, ROM #1 Alternate

A11U5, 08656-80011, ROM #6 Alternate

A11U6, 08656-80010, ROM #5 Alternate

A11U7, 08656-80009, ROM #4 Alternate

A11U8, 08656-80008, ROM #3 Alternate

A11U9, 08656-80007, ROM #2 Alternate

MP135, 3150-0376, Foam Filter

In each case the new part listed in Table 6-3 is the recommended replacement. Therefore, no manual change is recommended. These parts may be replaced independently of the other parts listed in this change.

NOTES

Refer to paragraph 7-5 for information about a recommended modification to the Signal Generator involving the thermal conductive transistor insulator listed under U2.

MP135 has been deleted from Table 6-3. See paragraph 7-5 for important information concerning this part.

Service Sheet 2, Troubleshooting Using Signature Analysis: Delete.

Service Sheet 5, Troubleshooting Using Signature Analysis: Delete.

Service Sheet 9, Troubleshooting Using Signature Analysis: Delete.

MANUAL CHANGE INSTRUCTIONS (Cont'd)

CHANGE C (Cont'd)

Service Sheet 15 schematic:

Replace appropriate portion of schematic with the following partial schematic:

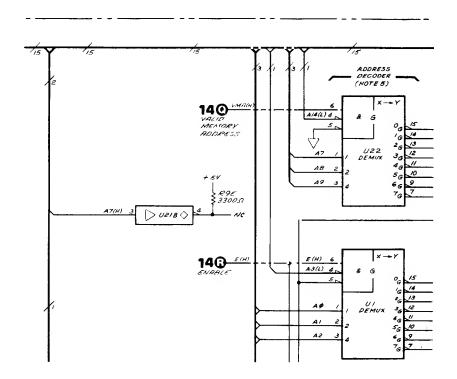


Figure 7-1. Address Buffering and Decoding, Serial I/O and Control Schematic Diagram (P/O Change C)

Service Sheet 16 schematic:

The components affected by this change are:

A11U2, 08656-80006, ROM #1 Alternate

A11U5, 08656-80011, ROM #6 Alternate

A11U6, 08656-80010, ROM #5 Alternate

A11U7, 08656-80009, ROM #4 Alternate

A11U8, 08656-80008, ROM #3 Alternate

A11U9, 08656-80007, ROM #2 Alternate

In each case the new part shown on the schematic is the recommended replacement. Therefore, no manual change is recommended. These parts may be replaced independently of the others listed in this change.

Service Sheet 18, Troubleshooting Using Signature Analysis: Delete

Service Sheet 19, Troubleshooting Using Signature Analysis: Delete

MANUAL CHANGE INSTRUCTIONS (Cont'd)

CHANGE C (Cont'd)

Service Sheet 20, Troubleshooting Using Signature Analysis: Delete.

Service Sheet 21, Troubleshooting Using Signature Analysis: Delete.

CHANGE D

Table 6-2:

The components affected by this change are:

A4MP5, 08656-00073 and A4MP12. The new part listed for A4MP5 is the recommended replacement. Therefore, no manual change is recommended. This part may be replaced independently of A4MP12. Delete A4MP12 from Table 6-3.

NOTE

Refer to paragraph 7-6 for information about a recommended modification for the Signal Generator involving the High Frequency Loop Feedthrough Bracket, A4MP5.

CHANGE E

Table 6-3:

A4MP7 and MP29 through MP37 are the parts affected by this change. These parts are listed below. A4MP7, 0624-0208, Screw-Self Tapping 6-32.

I	nte	rn	al	R	Fſ	'nu	AI	2

Reference Designation					
MP29	08656-00018	4			
MP 30	08656-00019	2			
MP31	08656-00020	2			
MP32	08656-00021	2			
MP33	08656-00022	2			
MP34	08656-00023	2			
MP 35	08656-00024	1			
MP36	08656-00025	7			
MP 37	08656-00026	3			

In each case the new part listed in Table 6-3 is the recommended replacement. Therefore no manual change is recommended. These parts may be replaced independently of the others listed in this change. However, if one or more of MP29 through MP37 is replaced, it is recommended that MP29 through MP37 all be replaced to take full advantage of this change. Add A4MP37 to Table 6-3.

NOTE

Refer to paragraph 7-7 for information about a recommended modification for this Signal Generator involving the Internal RF Covers, MP29 through MP37.

MANUAL CHANGE INSTRUCTIONS (Cont'd)

CHANGE F

Table 6-3:

MP10 and MP23 are the parts affected by this change. These parts are listed in the table below.

Signal Generator Covers

Reference Designation	HP Part Number	Qty
MP10 MP23	08656-00002 08656-00072	1

In each case the new part number listed in Table 6-3 is the recommended replacement. Therefore, no manual change is recommended. Each part may be replaced independently of the other. However, if one is replaced it is recommended that the other be replaced to take full advantage of the change.

NOTE

Refer to paragraph 7-7 for information about a recommended modification for this Signal Generator involving MP10 and MP23.

CHANGE G

Table 6-3:

The components affected by this change are:

A6C52 and C59, 0160-4535, 1 μ F

A6CR5 and CR7, 1901-0050, Switching Diode

A6R48, 0757-0395, 61.9 Ω .

In each case the new part listed in Table 6-3 is the recommended replacement. Therefore, no manual change is necessary. If either A6C52 or A6C59 as listed above is changed to the value shown in Table 6-3, replace both. If either A6CR5 or A6CR7 as listed above is changed to the value shown in Table 6-3, replace both. A6R48 may be replaced independently of the other parts listed in this change.

Service Sheet 4 schematic:

A6CR5 and CR7 were originally PIN diodes. A6R48 was originally 61.9Ω .

The new parts shown on the schematic are the recommended replacements. Therefore, no change to the manual is recommended. If either A6CR5 or A6CR7 (PIN diode) is replaced with the parts listed in Table 6-3 (switching diode), replace both. A6R48 may be replaced independently of the other components listed in this change.

Service Sheet 5 schematic:

The original values of A6C52 and C59 were 1 μ F. Because the new parts are the recommended replacements, no change to the manual is recommended. If either of these parts is replaced by the value shown in Table 6-3, replace both.

MANUAL CHANGE INSTRUCTIONS (Cont'd)

CHANGE H

Table 6-3:

The following parts are affected by this change:

A6CR25 and CR28, 0122-0072, DIODE-VVC 2.2 pF 5%

In each case the new part listed in Table 6-3 is the recommended replacement. Therefore no manual change is recommended. If either of these parts is replaced by the value shown in Table 6-3, replace both. This change is independent of the accompanying circuit change.

NOTE

Refer to paragraph 7-8 for information about a recommended modification for this Signal Generator involving A6CR25 and CR28.

Service Sheet 18 schematic:

The original circuit had no connection from +5V to U18-pin 10. The circuit shown on the schematic is the recommended configuration. Therefore no manual change is recommended. This circuit change is independent of the accompanying diode change.

NOTE

Refer to paragraph 7-9 for an explanation of the recommended circuit modification and how it can be done.

CHANGE I

Table 6-3:

The components originally affected by this change are:

A4C34, 0180-0291, 1.0 μ F

A4C73, 0160-0155, 0.15 μ F

A4C77, 0160-2230, 3300 pF

A4R71, 0757-0442, $10k\Omega$

A8R11, 0698-3439, 178Ω

A10F1, 2110-0518, Fuse 3A, 125V.

In each case the new part listed in Table 6-3 is the recommended replacement. Therefore, no manual change is recommended.

NOTES

- 1. If A4C34, A4C73, A4C77 and A4R71 are the values shown above, and if one or more parts are changed to the value shown in Table 6-3, they should all be changed to the values shown in Table 6-3.
- 2. A8R11 and A10F1 may be replaced independently of the others listed in this change.

Service Sheet 1 schematic:

A4C34 was originally 2.2 μ F. The part shown on the schematic is the recommended replacement. Therefore no manual change is recommended. Refer to Note 1 above.

Model 8656A Manual Changes

MANUAL CHANGES

MANUAL CHANGE INSTRUCTIONS (Cont'd)

CHANGE I (Cont'd)

Service Sheet 2 schematic:

The components affected by this change are:

A4C73, 0.15 μ F A4C77, 3300 pF A4R71, 10 kΩ.

In each case the part shown on the schematic is the recommended replacement. Therefore no manual change is recommended. Refer to Note 1 above.

Service Sheet 3 schematic:

A8R11 was originally 178Ω . The part shown on the schematic is the recommended replacement. Therefore no manual change is recommended. Refer to Note 2 above.

Service Sheet 22 schematic:

A10F1 was originally 3A. The part shown on the schematic is the recommended replacement. Therefore no manual change is recommended. Refer to Note 2 above.

CHANGE J

Table 6-3:

The components affected by this change are:

A3L23, 9140-0141, 680 nH (A3R118 shown in Table 6-3 is the direct replacement for A3L23.)

A6C56, 0121-0449, CAPACITOR-V TRMR-CER 3.5-10 pF

L1 and L2, 9100-2258, 1.2 µH

MP20, 08656-00058, Attenuator Gasket

MP118, 08656-40008, Series Regulator Cover

U1, 1826-0203, IC V RGLTR

U3, 1826-0169, IC V RGLTR.

In each case the new part listed in Table 6-3 is the recommended replacement. Therefore no manual change is necessary.

NOTES

Refer to the Heterodyne Band Accuracy and Flatness Adjustment in Section V. It may be necessary to change A6C56 to the value listed in Table 6-3 in order to make the adjustment.

If either L1 or L2 is changed from the value shown above to the value listed in Table 6-3, change the other to the value listed in Table 6-3.

MP20, MP118, U1 and U3 may be replaced independently of the other parts listed in this change. However, if U1 or U3 is changed to the value listed in Table 6-3, it is recommended that both be changed to take full advantage of the change.

Service Sheet 5 schematic:

A6C56 was originally 3.5-10 pF. The part shown on the schematic is the recommended replacement. Therefore no manual change is recommended. Refer to Note 1 above.

Service Sheet 7 schematic:

L1 and L2 were originally $1.2 \mu H$. The parts shown on the schematic are the recommended replacement. Therefore no manual change is recommended. Refer to Note 2 above.

MANUAL CHANGE INSTRUCTIONS (Cont'd)

CHANGE J (Cont'd)

Service Sheet 13 schematic:

R118 68.1Ω is the part used in place of the original L23 680 nH. Because R118 is the recommended replacement and is shown on the schematic, no manual change is recommended.

Service Sheet 22 schematic:

The original part number of U1 was 1826-0203. U3 was 1826-0875. The new part numbers shown on the schematic are the recommended replacements. Therefore no manual change is recommended. Refer to Note 3 above.

INSTRUMENT MODIFICATIONS

7-4. INSTRUMENT IMPROVEMENT MODIFICATIONS

7-5. Improving Power Supply Reliability

On instruments with serial prefixes 2018A and below, it is recommended that the thermal insulator, P/O U2, be replaced to increase reliability. Also, the Foam Filter MP135 should be removed and discarded. It may slip into the fan and stop the blade rotation.

Remove the Series Regulator Cover MP118. Refer to Figure 6-3. Remove the No. 1 Pozidriv screws that hold U2 in place. Remove U2. Replace the thermal insulator with an HP 1200-0043 (check digit 8) aluminum transistor insulator. Reinstall U2 and the Series Regulator Cover.

Loosen the screws on the External Finger Guard MP134. Refer to Figure 6-3. Pull the Foam Filter from behind the External Finger Guard. Discard the filter; tighten the screws.

7-6. Decreasing Spurious Signal Output

For an instrument that has a spurious signal at 500.5 MHz with serial prefix 2022A or below, it is recommended that a new High Frequency Loop Feedthrough Bracket A4MP5, HP 08656-00089 be installed in place of the old bracket. Refer to the paragraph entitled Disassembly Procedure in Section VIII for instructions used to gain access to the A4 Assembly. Refer to the component location diagram for the A4 Assembly (refer to Service Sheets 1 and 2) for the location of A4MP5. Un-

solder A4C5, C44 and MP5 from the circuit board. Extract the bracket assembly from the circuit board casting. Insert the capacitors into the new bracket in the same relative positions. Insert the assembly into the casting and resolder the capacitors and mounting bracket. Clean the circuit board. Reassemble the instrument in the reverse order of the way it was taken apart.

7-7. Improving Low Level Accuracy

For instruments with low level RF accuracy problems, improvement may be gained by following these suggestions.

On instruments with serial prefixes 2023A and below, replace the old internal covers with those listed in the table.

Internal RF Covers

Reference Designation	HP Part Number	C D	Qty
MP29	08656-00079	4	4
MP 30	08656-00080	5	2
MP 31	08656-00081	8	2
MP 32	08656-00082	9	2
MP 33	08656-00083	0	2
MP34	08656-00084	1	2
MP35	08656-00085	2	1
MP36	08656-00086	3	7
MP37	08656-00087	4	3

INSTRUMENT MODIFICATIONS

Improving Low Level Accuracy (Cont'd)

Refer to the paragraph entitled Disassembly Procedures in Section VIII and Figure 6-1 for information about gaining access to the covers.

On instruments with serial prefixes 2023A and below, 2025A and 2026A, replace the old internal covers with those listed in the table.

Signal Generator Covers

Reference	HP Part	C	Qty
Designation	Number	D	
MP10	08656-00076	6	1
MP23	08656-00075	0	1

On instruments with serial prefixes 2032A and below, replace L1 and L2 with 9100-2257, 0.82 μ H inductors, check digit 6. These parts are mounted near FL2 and FL3. Refer to the Disassembly procedures in Section VIII.

7-8. Improving RF Frequency Response

If the RF output level rolls off near 990 MHz on instruments with serial prefixes 2026A and below,

it is recommended that diodes A6CR25 and CR28 be replaced by varactor diodes (HP 0122-0329). Refer to the Disassembly Procedures and A6 Assembly component location diagram (part of Service Sheet 4) for instructions about gaining access to these components.

7-9. Loss of Signal Generator Control by the Keyboard

Intermittent control of Signal Generator operation by the keyboard may occur on instruments with serial prefixes of 2026A and below. Furthermore, certain keys may be more prone to problems than others if this condition exists.

For instruments experiencing this problem, it is recommended that the +5V supply be connected to A2U18-pin 10. Refer to the Disassembly Procedures in Section VIII for instructions about removing the A2 Assembly.

When the A2 assembly is removed, connect a red 26 AWG wire from +5V U18 pin 16 to U18-pin 10.

Model 8656A Service

SECTION VIII SERVICE

8-1. INTRODUCTION

This section contains information for troubleshooting and repairing the Signal Generator. Included are block and circuit diagrams, principles of operation, troubleshooting tests, and repair procedures.

8-2. SERVICE SHEETS

The foldout pages in the last part of this section are the service sheets. They consist of block diagrams, circuit schematic diagrams, supplemental diagrams and associated information. For more information, refer to the paragraphs under the general heading of Troubleshooting in this section.

8-3. Block Diagrams

The block diagrams and related information are found on Service Sheets BD1 through BD4. BD1 is the overall block diagram that shows the major functional sections. BD1 serves as an index to the troubleshooting blocks and as a starting point for troubleshooting.

The troubleshooting block diagrams and related information are found on Service Sheets BD2 through BD4. Each troubleshooting block diagram shows the major circuits in their functional groupings. These blocks serve as indexes to the circuit schematic diagrams. The High Frequency Loop and Output Section is shown on BD2, the Low Frequency Loop on BD3 and the digital (control) circuits are on BD4.

8-4. Circuit Schematic Diagrams

The circuit schematic diagrams and their associated information are part of Service Sheets 1 through 22. These diagrams, in functional groupings, are aids for understanding operation and for troubleshooting the Signal Generator. Refer to the paragraphs entitled Troubleshooting for more information.

8-5. SAFETY CONSIDERATIONS

8-6. Before Applying Power

Verify that the instrument is set to match the available line voltage and that the correct fuse is installed. An uninterrupted safety earth ground must be provided from the main power source to the

instrument input wiring terminals, power cord, or supplied power cord set.

8-7. Warnings and Cautions

Pay attention to WARNINGS and CAUTIONS. They must be followed for your protection and to avoid damage to the equipment.

WARNINGS

Maintenance described herein is performed with power supplied to the instrument and with the protective covers removed. Such maintenance should be performed only by service-trained personnel who are aware of the hazards involved (for example, fire and electrical shock). Where maintenance can be performed without power supplied, the power should be removed.

Any interruption of the protective (grounding) conductor (inside or outside the instrument) or disconnection of the protective earth terminal will create a potential shock hazard that could result in personal injury. Grounding one conductor of a two conductor outlet is not sufficient. Whenever it is likely that the protection has been impaired, the instrument must be made inoperative (i.e., secured against unintended operation).

If this instrument is to be energized via an autotransformer, make sure that the autotransformer's common terminal is connected to the earth terminal of the power source.

Capacitors inside the instrument can still be charged even if the instrument is disconnected from its source of supply.

Make sure that only 250 volt fuses with the required rated current and of the specified type (normal blow, time delay, etc.) are used for replacement. Do not use repaired fuses or short-circuited fuseholders. To do so could create a shock or fire hazard. Service Model 8656A

Warnings and Cautions (Cont'd)

CAUTIONS

Do not disconnect or remove any boards in the Signal Generator unless the instrument is unplugged. Some boards contain devices which can be damaged if the board is removed when the power is on. Use conductive foam when removing MOS devices from sockets. Use care when unplugging ICs from high-grip sockets.

8-8. RECOMMENDED TEST EQUIPMENT AND ACCESSORIES

Test equipment and test accessories required to maintain the Signal Generator are listed in the table of Recommended Test Equipment in Section I. Equipment other than that listed may be used if it meets the listed critical specifications.

8-9. SERVICE TOOLS, AIDS AND INFORMATION

8-10. Service Tools

There are unique tools available that will make servicing of this instrument easier. Service aids are

provided in the instrument. Service information is provided in this manual. Information provided in the paragraph entitled Repair (found in this section) shows how the instrument is accessed for repair purposes. Refer also to Figure 8-1.

Pozidriv Screwdrivers. Many screws in the Signal Generator appear to be Phillips type, but are not. To avoid damage to the screw slots, Pozidriv screwdrivers should be used. HP 8710-0899 is the No. 1 Pozidriv. HP 8710-0900 is the No. 2 Pozidriv.

Tuning Tools. For adjustments requiring non-metallic tuning tools, use the HP 8710-0033 blade tuning tool or the HP 8710-1010 (JFD Model No. 5284) hex tuning tool. For other adjustments an ordinary small screwdriver or suitable tool is sufficient. No matter which tool is used, never force any adjustment control. This is especially critical when adjusting variable inductors or capacitors.

Heat Staking Tool. The front panel pushbutton switches have small plastic pins protruding from the back. These tabs fit through holes in the keyboard printed circuit board and are melted down to hold the switch in place. This process is known as heat staking the heat stasking tool is a standard

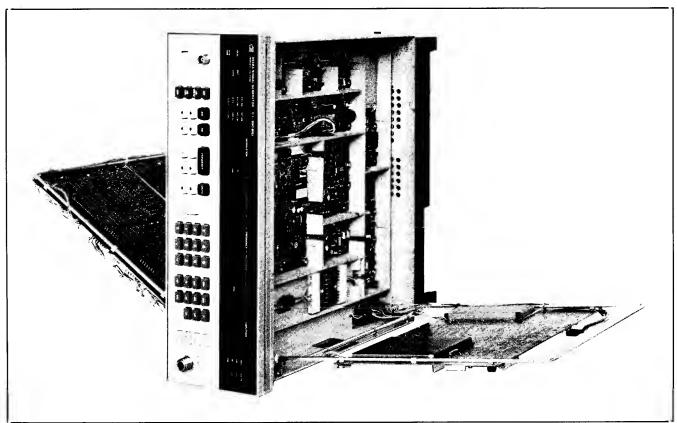


Figure 8-1. Recommended Position for Maintenance and Servicing

Model 8656A Service

Service Tools (Cont'd)

soldering iron with a special tip attached (refer to Figure 8-5, under paragraphs entitled Replacement of Key Cap and Pushbutton Switches).

Refer to the paragraphs entitled Replacement of Key Cap and Pushbutton Switches under REPAIR in Section VIII for the heat staking procedure.

8-11. Assembly Locations

Assemblies in the Signal Generator are numbered sequentially, front to back, left to right, top to bottom. For example, A1 and A2 are part of the front panel assembly of the instrument.

8-12. Parts and Cable Locations

The locations of individual components mounted on printed circuit boards or other assemblies are shown adjacent to the schematic diagram on the appropriate Service Sheet. The part reference designator is the assembly designator plus the part designator. For example, A6R9 is R9 on the A6 assembly. For specific component descriptions and ordering information, refer to Table 6-3, Replaceable Parts, in Section VI. Chassis and frame parts, as well as mechanical parts and cables, are identified on Figures 6-1 through 6-5.

Major mechanical parts have reference designations that begin with the letters MP. Other mechanical parts, such as screws, are listed in the replaceable parts list below the part to which they fasten. To find the part number and description of a mechanical part, find the part in one of the figures in Section VI or Section VIII. The part in the figure will be labelled with its reference designator. Look up that reference designator in the Table of Replaceable Parts. If the part is a fastener, such as a screw, nut, or washer, look to the figure for the part to which it fastens. Then, look up the fastened part in the parts list. Just below it you will see the part numbers and description of the desired hardware.

Illustrated parts breakdowns of chassis and frame parts, as well as assemblies and mechanical parts and cables, can be identified on Figues 6-1 through 6-9. Parts breakdowns of the front and rear panels are located on Figures 6-2 and 6-3.

8-13. Test Points and Adjustment Locations

Most test points and adjustments are indicated on individual circuit board assemblies. Test points and adjustments can also be found on the component locator photograph adjacent to the assembly's schematic diagram.

8-14. Service Aids on Printed Circuit Boards

Service aids on printed circuit boards include test points, indicator lights, transistor and integrated circuit and relay designations, adjustment names, and assembly part numbers. Of particular importance are the three test LEDs on the A10 Audio/Power Supply Assembly.

8-15. Other Service Documents

Service Notes, Manual Change Supplements, and other service literature are available through Hewlett-Packard. For further information, contact your nearest Hewlett-Packard office.

8-16. TROUBLESHOOTING

8-17. General

Instrument problems usually fall into three general categories: operator errors, operation out of specification and catastrophic failures. The troubleshooting strategy is different for each category. For more information refer to the table of Specifications in Section I and the detailed operating instructions found in Section III.

Operator Error. Apparent failures sometimes result from operator errors. These may take one of several forms. The operator may allow external influences which affect instrument operation. At times he may attempt to operate the instrument in an "out of specification" mode. Under certain circumstances the Signal Generator allows the out of specification operation. Under other conditions it doesn't.

A reverse power level of greater than 0.2 watts (3 volts) coupled to the front panel RF connector will cause an apparent failure. There is no output signal and the Amplitude display flashes. This, however, is normal operation under the circumstances. The instrument has temporarily disconnected itself from the high power level that could do damage to internal circuits. To bring the instrument back to its normal operating mode, remove the high reverse power at the RF output connector and enter a new output power level at the front panel.

NOTE

The Reverse Power Protection provided by this circuit is adequate up to 50 watts (50 volts).

The Signal Generator does allow out of specification operation at frequencies below 0.1 MHz. The

TROUBLESHOOTING (Cont'd)

frequency is accurate but other specifications, such as RF output power level may be incorrect.

Not-allowed operation is generally indicated by displays that flash or default to the last valid entry. An example of the former is a flashing FM display that occurs when the frequency is changed to a range that will not allow wide deviation. To stop the flashing display, press the FM mode select button. This will change the FM deviation to a level that is acceptable.

Examples of not-allowed operation where the Signal Generator defaults to the last valid entry are: selecting an RF output level that is too high or selecting an AM depth that causes the maximum total RF output power level to be too high.

Instrument Out of Specification. If it is suspected that the instrument's operating parameters are out of tolerance, the Abbreviated Performance Tests table in Section IV tells which test may be performed to verify proper operation. This table may also be used to determine which assembly requires adjusting and on what service sheet the adjustable components are located. The Post-Repair Adjustments table in Section V tells which adjustments are related and may also require adjustment. After adjustments are complete, perform the performance test(s) in Section IV. If the performance is still out of tolerance, refer to the troubleshooting information. Although the problem may be solved very quickly by going to the service sheet where the adjustment is located, it is good practice to begin with the overall troubleshooting information found on Service Sheet BD1.

Catastrophic Failures. When a catastrophic failure occurs, begin troubleshooting on Service Sheet BD1. The information there is used to quickly isolate the problem to one of the three major sections of the instrument.

8-18. Strategy

Troubleshooting for the Signal Generator is organized into three levels. The overall troubleshooting level is where problems are isolated to the power supply or one of the functional sections. The functional section level of troubleshooting isolates the malfunction to the circuit level. At the circuit level, the problem is isolated to a stage within the circuits shown on the schematic. It is expected that further troubleshooting, to the component level, depends on the skill and experience of the troubleshooter.

8-19. Overall Troubleshooting (Service Sheet BD1)

Overall troubleshooting begins with verifying that the power-on sequence occurs properly. At this point, power supply problems become evident. The effect of inputs from the keyboard and an external computer are compared. It is possible to separate a digital or analog problem at this level. Digital problems are usually referred to Service Sheet BD4. Further troubleshooting determines which analog (phase lock) loop is defective. Problems here are referred to Service Sheet BD2 or BD3. If none of the sections or circuits above are defective, further troubleshooting isolates a malfunction in the special circuits.

8-20. Functional Section Troubleshooting (Service Sheets BD2-BD4)

Troubleshooting of the loop sections (Service Sheets BD2 and BD3) is done primarily from an analog viewpoint with the intent of isolating a malfunction to the circuit level. The digital section (Service Sheet BD4) continues with troubleshooting from Service Sheet BD1 but with the intent of isolating the problem to the circuit level.

8-21. Circuit Troubleshooting (Service Sheets 1-22)

The goal of troubleshooting at the previous service sheet level is to be confident that the problem is within the circuits shown by the schematic. Because of the interaction of circuits in the Signal Generator, it may be necessary to refer to other service sheets to completely isolate a problem. Some of the circuits that are mostly analog have digital control circuits. In these cases, troubleshooting the digital circuits first is offered as an alternative.

When the problem is isolated to a stage, the ability of the one doing the troubleshooting is utilized to isolate the defective component.

8-22. Signature Analysis

Signature analysis is a simple method of verifying the operation of digital circuitry. When properly used, signature analysis can detect extremely subtle hardware faults. Signatures must identically match those given in the signature tables located opposite the schematics. If everything is working correctly, signatures will all match exactly. If they don't match, by even one digit, something is wrong.

With the Generator's internal signature analysis routine, the signature analyzer's test probe is used

Model 8656A Service

Signature Analysis (Cont'd)

to check nodes in the circuit under test. The signature analyzer converts the signals at the node into a four digit "signature", which it displays. The signature is then compared to the signature in the troubleshooting checks adjacent to the appropriate schematic. These two signatures must be identical.

Signature analysis can be speeded up if the following considerations are kept in mind:

- Make sure that every step is performed as described in the set-up procedure. That is, make sure that the clock, start, and stop connections and triggering are correct.
- 2. Double-check that the signatures are being taken at the correct node.
- 3. Make sure that the signature analyzer probe is making good contact with the pin being checked. Oxidation on pins can cause invalid signatures due to poor contacts.
- 4. When you think that you have found a bad signature, double check to make sure.
- 5. When checking a node, check that the unstable-signature indicator is not blinking.

8-23. Additional Information

Additional troubleshooting information may be found in various locations in the manual. Reference is made to the information in the appropriate troubleshooting procedure. Examples of this information are the Power-On Sequence, the Basic Functional Checks and the HP-IB Functional Checks which are all found in Section III.

8-24. REPAIR

8-25. Disassembly Procedures

For the most part, disassembling the Signal Generator is quite straightforward. Most of the procedures simply indicate the size, number, type and general location of the mounting hardware. Where it is necessary, the procedures are more detailed. Table 8-1 indicates which procedure will give access to a particular assembly and which figure shows the location of a particular assembly. Reference to the appropriate exploded view in Section VI is included. If a circuit board within the main casting is to be removed from the Signal Generator, seek access to its component (top) side. To reassemble the Signal Generator, follow the procedures in the reverse order.

WARNING

Before beginning any disassembly procedure, be sure that the line (Mains) voltage is disconnected.

CAUTION

DO NOT REMOVE the circuit boards mounted on the casting unless absolutely necessary. With repeated reassembly, the Pal nut cuts new threads in the boss. It then becomes impossible to tighten the Pal nut to provide an effective ground.

Front Panel Removal. Remove the knurled nut MP105 from the RF Output connector with a pair of soft jawed pliers (HP part number 8710-0986). Remove the top trim MP8 and four No 2 Pozidriv screws MP101 from the top and bottom edge of the front panel casting. Pull the front panel forward with the BNC connector until it is free of the casting.

A1 Keyboard and A2 Display Assembly Removal. The front panel has already been removed. Place the front panel face down. To free the A2 Assembly, remove fourteen 4-40 machine screws MP107 from the back of the circuit board with a No 2 Pozidriv screwdriver. Unsolder the front panel switch and BNC connector wires and remove them from the cable clamp MP46 on the casting wall. Remove the cable connectors at A2J1 and A2J2.

CAUTION

During reassembly, be sure that you reconnect A2J1 and J2 correctly. It is possible to reverse the connectors. For reference, the second pins of both connectors are connected to yellow wires while the fourth pins are connected to blue wires. The pin numbers are etched on the circuit board.

Remove the A1 assembly by first removing the eleven 10-32 hex nuts MP47 which hold the assembly in place. Lift the assembly from the mounting lugs.

Cover Removal, Top and Bottom (Levels 1 and 4 Access). Set the Signal Generator in its normal operating position. Free the handles and side covers by removing four No. 2 Posidriv screws MP6.

Service Model 8656A

Table 8-1. Assembly Access Information

To Gain Access to an Assembly or Module	Perform Procedure(s)	For Disassembly Information Refer to Figure(s)
A1 and A2	Front Panel Removal and, if required, A1 Keyboard and A2 Display Assembly Removal	6-2
A3 (top)	Cover Removal, Top (Level 1 Access)	6-1, 6-4, 6-8
A3 (top and bottom)	Cover Removal, Top (Level 1 Access) A3 Assembly Service Position	6-1, 6-4, 6-8, 8-1
A4, A5, A6, A7, A8 (top), A9A1 (bottom) and FL1, FL2, FL3, L1, L2	Cover Removal, Top (Level 1 Access) A3 Assembly Service Position Level 2 Access	6-1, 6-4, 6-5, 8-1 (A9 Only) 6-9
A4, A5, A6, A8 (bottom) A9A1 (top) and A9L1	Cover Removal, Bottom (Level 4 Access) A10/A11 Assemblies Service Position Level 3 Access	6-1, 6-6, 6-7, 8-1
A10 and A11 (top) A17	Cover Removal, Bottom (Level 4 Access)	6-1, 6-7
A10 and A11 (top and bottom)	Cover Removal, Bottom (Level 4 Access) A10/A11 Assemblies Service Position	6-1, 6-7, 8-1
A12, A13, A14, A15	Rear Panel Removal	6-3, 8-2
A16, B1, T1	Fan Shroud Removal	6-3, 8-2

Disassembly Procedures (Cont'd)

Remove the front and rear handle caps (MP5 and MP7) and the handles MP4. Push the side covers toward the Signal Generator's rear panel to release the angled tabs that fit into the holes in the top and bottom covers. Remove the side covers. The top cover may now be lifted off for Level 1 Access or the instrument may be turned over and the bottom cover lifted off for Level 4 Access.

A3 Assembly Service Position. The top cover has been removed. Remove eight 10-32 inch nuts and washers (MP47 and MP55) from the top of the circuit board. Rotate the circuit board and the hinged carrier MP11 up and to the right. To lock the carrier

in place, press the spring loaded hinge toward the rear of the instrument until it slides around the hinge lock MP13.

Level 2 Access. Remove two No 2 Pozidriv screws MP24 from the top internal cover. Lift the cover up and out by the cover handles. Place a standard blade screwdriver under the corner of the small internal RF cover which covers the individual board. Lift the cover from the casting.

NOTES

Insert all shield braid removed during disassembly into the appropriate space(s) in the casting wall before the small internal RF covers are reinstalled.

Model 8656A Service

Disassembly Procedures (Cont'd) NOTES (Cont'd)

DO NOT PRESS the small internal RF covers all the way into the casting during reassembly. Make sure the top of the cover is the same level as the top of the casting.

A10/A11 Assemblies Service Position. The bottom cover has been removed. Remove eleven 10-32 nuts and associated washers (MP47 and MP55) from the top of the circuit board. Raise the circuit board and hinged carrier MP15 up and to the left. To lock the carrier in place, press the spring loaded hinge toward the rear of the Signal Generator until it slides around the hinge lock MP13.

Level 3 Access. A10/A11 Assemblies have been locked into the service position. Remove seven No 2 Pozidriv screws MP24 from the bottom internal cover. Remove twelve sets of No 2 Pozidriv screws and washers (MP56 and MP57) from the attenuator cover. Lift the attenuator cover off the bottom internal cover. Lift the bottom internal cover up and out by the cover handles. Access to individual boards is achieved by raising the corners of the small internal RF covers with a standard blade screwdriver.

NOTE

DO NOT PRESS the small internal RF covers all the way in. Make sure the top of the cover is the same level as the top of the casting.

Rear Panel Removal. Position the instrument so you are facing the rear panel as shown in Figure 8-2.

- 1. Free the left rear foot (item 1) by removing two sets of No 2 Pozidriv screws, washers, lockwashers and nuts (items 2).
- 2. Free the Rear Panel (item 4) by removing three sets of No 2 Pozidriv screws and lockwashers (items 3).
- 3. Pull the rear panel toward yourself. Be careful not to pinch the black wire.
- 4. Remove the flat ribbon cable connector from the HP-IB Connector Assembly—A13.

CAUTION

While reinstalling the rear panel, be sure the thin wall metal gasket MP121 is not twisted or bent against the top, bottom or side of the machined frame (casting) MP1.

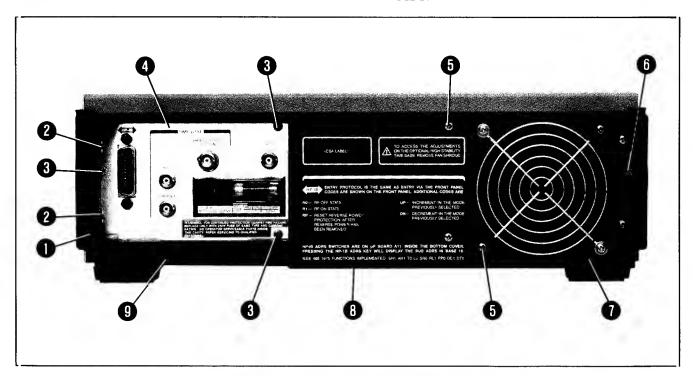


Figure 8-2. Rear-Panel and Fan Shroud Removal

Service Model 8656A

Disassembly Procedures (Cont'd)

5. While reinstalling the rear panel, reverse the steps of the preceding procedure.

Fan Shroud Removal. Position the instrument on either side.

- 1. Remove the plastic pin (item 8) that attaches the series regulator cover (item 9) to the Fan Shroud (item 7). (Refer to Figure 6-3).
- 2. Position the instrument so you are facing the rear panel as shown in Figure 8-2.
- 3. Free the fan shroud (item 7) by removing three sets of attaching hardware. Two sets are No 2 Pozidriv screws, lockwashers and flatwashers (item 5). The other set is a No 2 Pozidriv screw, lockwasher and flatwasher (item 6).

NOTE

Removing the transformer will free the bracket holding the Option 001 10 MHz Reference Oscillator if it has been installed.

CAUTION

Be sure that none of the wires within this assembly are crushed between the casting and the transformer while reinstalling the transformer. With Option 001 installed, it may be necessary to remove the rear panel to ensure that no damage occurs.

8-26. Replacement of Key Cap and Pushbutton Switches

Key Cap Replacement. Removing a front-panel key cap may be easily done in one of two ways. If the front panel has been removed (refer to the Front Panel Removal procedure), use a small flat blade screwdriver to press on the switch side of the key cap while working it from side-to-side with your fingers. Removing the key cap without opening the instrument is done as follows. Grasp the key cap firmly with pliers. Work it from side-to-side while pulling away from the panel.

NOTE

The pliers may damage the key cap unless the jaws are covered with a protective material. Be sure the key cap is aligned properly before snapping into place. Note that the key cap has 8 possible positions. Refer to Figure 8-3.

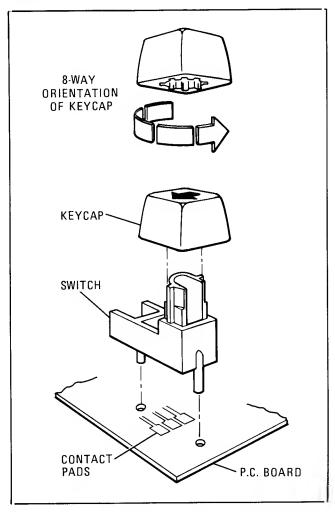


Figure 8-3. Front-Panel Pushbutton Switch Assembly

Switch Replacement. The front-panel switches have a very high cycle life. However, if one becomes faulty and needs replacement, follow the procedure outlined below:

- 1. Remove the front panel (refer to the Front Panel Removal Procedure).
- 2. Remove the key cap as indicated above.
- 3. Remove the switch by chipping away the melted plastic tabs at the circuit of the keyboard which hold the switch in place.
- 4. To assure long life and reliable electrical performance, the circuit board contact traces (which are found underneath the switch) should

Model 8656A Service

Disassembly Procedures (Cont'd)

be clean and free of surface imperfections. Clean the switch contact pads before installing a new switch.

5. For reliable operation, any method of assembly must assure that the switch is mounted tightly against the pc board. To facilitate the heat staking operation, specially molded support anvils (HP 5040-6881) can be ordered. Refer to Figure 8-4.

NOTE

The following operation should be done in a well ventilated area. If the heat staking tip is too hot, the plastic will vaporize and emit fumes. These fumes, however, are non-toxic.

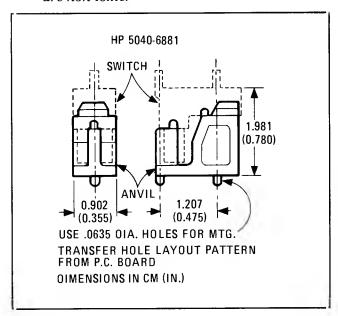


Figure 8-4. Pushbutton Switch Support Anvil

6. To assure proper switch assembly, verify that the switch is pushed firmly against the circuit board and, with the hot (440°C or 825°F) staking tip (refer to Figure 8-5) push down on each of the posts (2) of the switch. Each post should take about one second to stake. With the proper cycle, the post should turn a darker color and, in about ten seconds, return to its original bright red color. The correctly staked post should have a smooth round "rivet" like top. Refer to Figure 8-6.

CAUTIONS

Do not disturb the assembly for at least 10 seconds after heat staking.

If not enough heat is applied, the plastic will tend to stick to the tip of the iron.

If too much heat is applied, the plastic will fume profusely, the "rivet" will be irregularly shaped, and the plastic will be permanently discolored.

If the staking tool is worn or flaked, it will cause a misshaped rivet and/or a contamination deposit on the surface.

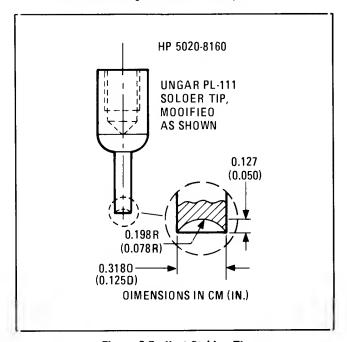


Figure 8-5. Heat Staking Tip

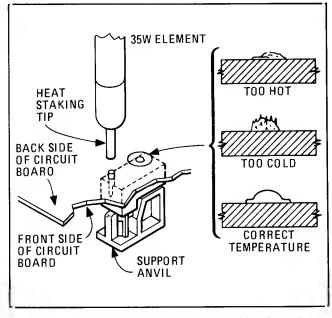


Figure 8-6. Typical Assembly for Heat Staking Operation

8-27. Factory-Selected Components (*)

Some component values are selected at the time of final checkout at the factory (see Table 5-1). These values are selected to provide optimum compatibility with associated components. These components are identified on individual schematics and the parts list by an asterisk (*).

8-28. Manual Backdating (†)

A dagger (†) by an item of service information means that information is different for Signal Generators with serial number prefixes lower than the one to which this manual applies directly. Table 7-1 lists the backdating changes by serial number prefix. The backdating changes are contained in Section VII. Recommended modifications are also contained in Section VII.

8-29. Manual Updating (Manual Changes Supplement)

Production changes to Signal Generators made after the publication date of this manual are indicated by a change in the serial number prefix. Changes to this manual's information are recorded by a serial number prefix on the Manual Changes supplement. Errors are also noted in the ERRATA portion of the Manual Changes supplement.

Keep this manual up to date by periodically requesting the latest, complimentary supplement from your Hewlett-Packard office.

8-30. Etched Circuits (Printed Circuit Boards)

The etched circuit boards in the Signal Generator have plated-through holes which make a solderable path through to both sides of the insulating material. Soldering can be done from either side of the board with equally good results. When soldering to any circuit board, keep in mind the following recommendations:

- 1. Avoid unnecessary component substitution. Substitution can result in damage to the circuit board and/or adjacent components.
- 2. Do not use a high-power soldering iron on etched circuit boards. Excessive heat may lift a conductor or damage the board.
- Use a suction device or wooden toothpick to remove solder from component mounting holes. DO NOT USE A SHARP METAL OBJECT SUCH AS AN AWL OR TWIST

DRILL FOR THIS PURPOSE. SHARP OBJECTS MAY DAMAGE THE PLATED-THROUGH CONDUCTOR. Refer to Table 8-2 for information on available tools for working on etched circuit boards.

8-31. MOS and CMOS Integrated Circuit Replacement

MOS and CMOS integrated circuits are used in this instrument. They are prone to damage from both static and transients and must be handled carefully. When working on the Signal Generator, keep in mind the following recommendations to avoid damaging these sensitive components.

- Do not remove any board unless the Signal Generator has been unplugged.
- When removing a socketed MOS or CMOS device from an assembly, be careful not to damage it. Avoid removing devices from these sockets with pullers. Instead, use a small screwdriver to pry the device up from one end, slowly pulling it up one pair of pins at a time.
- Once a MOS or CMOS device has been removed from an assembly, immediately stick it into a pad of conductive foam or other suitable holding medium.
- 4. When replacing a MOS or CMOS device, ground the foam on which it resides to the instrument before removing it. If a device requires soldering, make sure that the assembly is lying on a sheet of conductive foam, and that the foam and soldering iron tip are grounded to the assembly. Apply as little heat as possible.
- Before turning the instrument off, remove any large ac sources which may be driving MOS switches.

8-32. RETROFITTING OPTION 001

Option 001 may be retrofitted to the Signal Generator after taking delivery. Refer to Section I for the descripton and part numbers under the paragraphs entitled Options.

8-33. SCHEMATIC SYMBOLOGY AND OPERATING PRINCIPLES

8-34. Schematic Diagram Notes

Table 8-3, which just precedes the foldouts, summarizes the symbology used for presenting the devices used in the Signal Generator.

8-35. Basic Logic Symbology

The logic symbols used in this manual are based on the American National Standards Institute (ANSI)

Item	Use	Specification	Item Recommended	HP Part No.
Soldering Tool	Soldering, Heat Staking	Wattage: 35W Tip Temp.: 390—440°C (735—825°F)	Ungar No. 135 Ungar Division Eldon Ind. Corp. Compton, CA 90220	8690-0167
Soldering Tip	Soldering, Unsoldering	*Shape: Chisel	*Ungar PL113	8690-0007
Soldering Tip	Heat Staking	Shape: Cupped	HP 5020-8160 or modified Ungar PL111 (see Figure 8-2)	5020-8160
De-Soldering Aid	To remove molten solder from connection	Suction Device	Soldapullt by Edsyn Co., Van Nuys, CA 91406	8690-0060
Rosin (flux) Solvent	To remove excess flux from soldered area before applica- tion of protective coating	Must not dissolve etched circuit base board	Freon	8500-0232
Solder	Component replacement; Circuit Board repair wiring	Rosin (flux) core, high tin content (63/37 tin/lead), 18 gauge (SWG) 0.048 in. diameter preferred.		8090-0607

Basic Logic Symbology (Cont'd)

Y32.14-1973, "Graphic Symbols for Logic Diagrams (Two State Devices)". A summary of this symbology is provided to aid in interpreting these symbols.

Gates and Qualiflers. This section includes a brief description of the basic logic symbols used on the service sheets (see Figure 8-7), a summary of indicator symbols (see Figure 8-8), a discussion of contiguous blocks, control blocks, and dependency notation, and a summary of symbology for some of the more complex devices.

Qualifiers are that portion of a device symbol that denotes the logic function. For example, "&" denotes the AND function. See Figure 8-7 for a summary of the basic logic symbols and their qualifiers.

Power supply and ground connections are not shown on the symbols. This information is tabulated on the right margins of the service sheets.

Indicator Symbols. Indicator symbols identify the active state of a device's input or output, as shown in Figure 8-8.

Contiguous Blocks. Two symbols may share a common boundary parallel or perpendicular to the direction of the signal flow. Note that in the examples shown in Figure 8-9, there is generally no logic connection across a horizontal line, but there is always an implied logic connection across a vertical line. Notable exceptions to this rule are the horizontal lines beneath control blocks and between sections of shift registers and counters (dividers).

Dependency Notation. Dependency Notation simplifies symbols for complex integrated circuit ele-

^{*}For working on circuit boards; for general purpose work, use No. 555 Handle (8690-0261) and No. 4037 Heating Unit 47-1/2-56-1/2 W (HP 8690-0006); tip temperature of 850-900°F, and Ungar No. PL113 1/8" chisel tip.

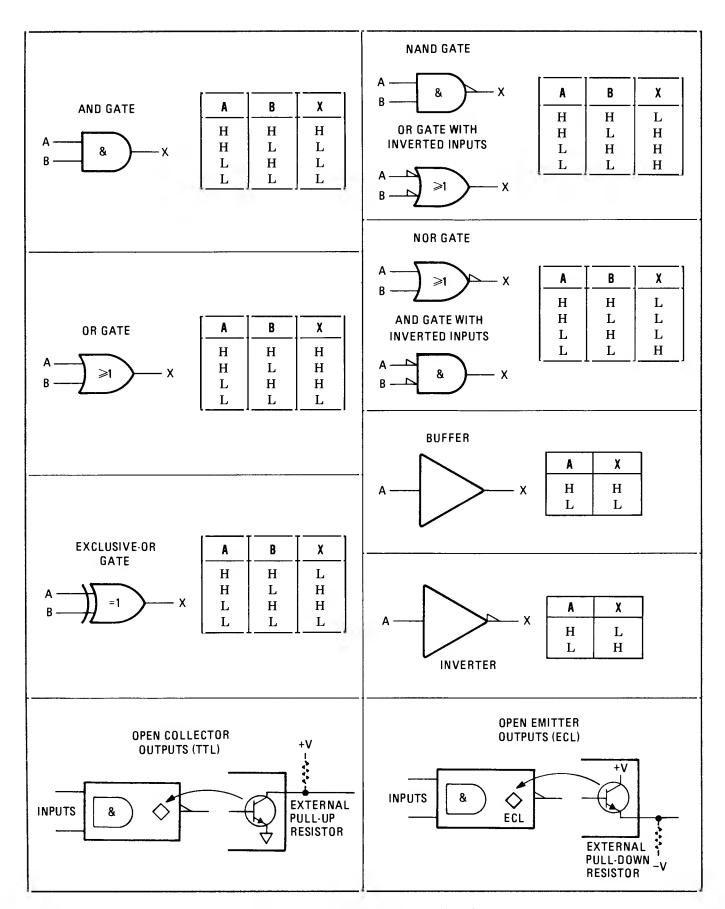


Figure 8-7. Basic Logic Symbols and Qualifiers

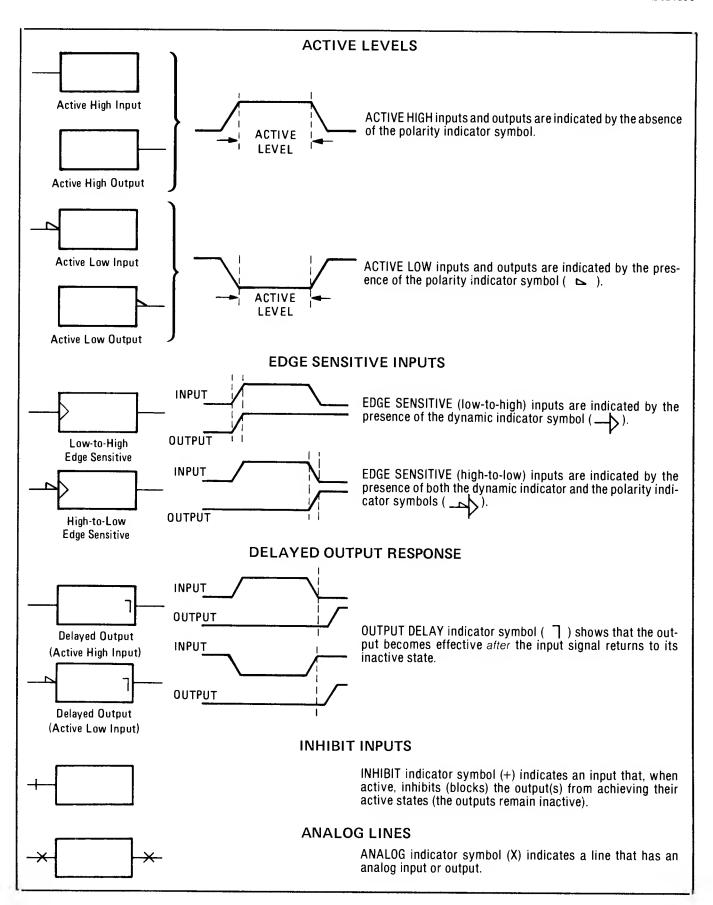


Figure 8-8. Indicator Symbols

Basic Logic Symbology (Cont'd)

ments by defining the interdependencies of inputs or outputs without actually showing all the elements and interconnections involved (see Figures 8-10 through 8-12). The following examples use the letter A for address, C for control, G for AND, V for OR, and F for free dependencies. The dependent input or output is labeled with a number that is

either prefixed (e.g. 1X) or subscripted (e.g. X₁). They both mean the same thing. Note that many times a controlled line may already be labeled with a number that indicates input or output weighting (for example, in a coder). In this case, the controlling or gating input will be labeled with a letter (see Figure 8-11).

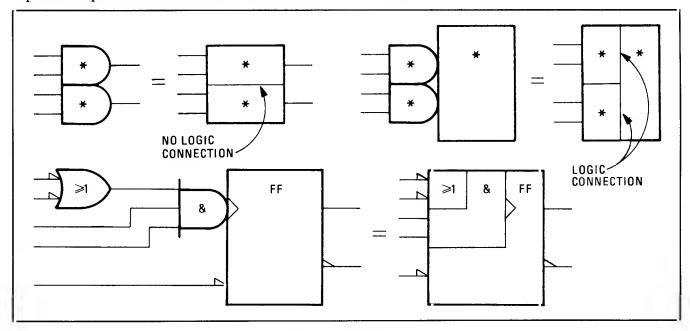


Figure 8-9. Contiguous Blocks

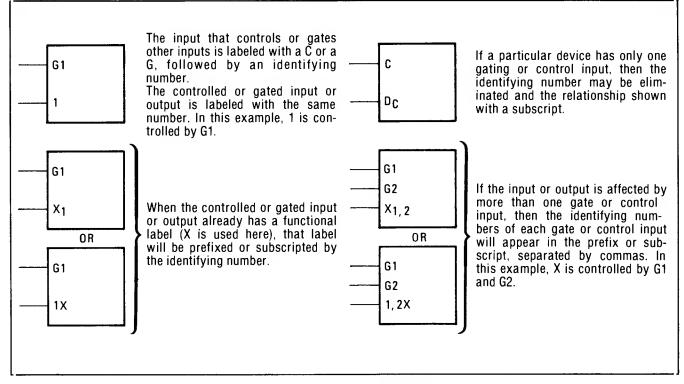


Figure 8-10. AND Dependency Notation

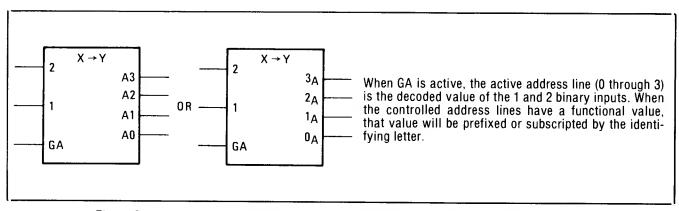


Figure 8-11. Address Dependency Notation: Coder Example Using Alpha Characters (Letters)

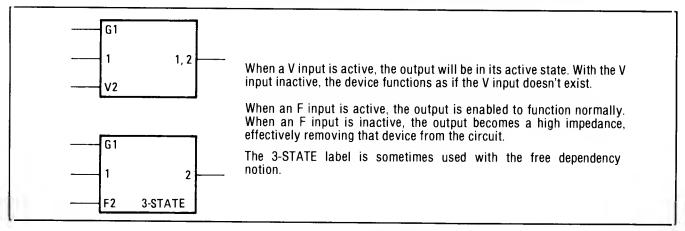


Figure 8-12. OR and Free Dependency Notation

Common Control Block. The Control block is used in conjunction with an array of related symbols in order to group common logic lines. Figure 8-13 shows how the Control block is usually represented. Figure 8-14 shows a quad D-type flip-flop with reset. This can be redrawn as shown in Figure 8-15. Note that the more complex representation shown in Figure 8-14 can be used when the flip-flops are functionally scattered around the schematic (i.e., not used as a quad unit).

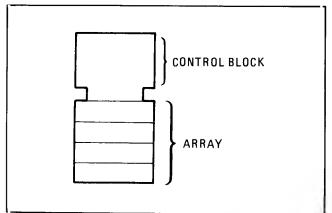


Figure 8-13. Common Control Block

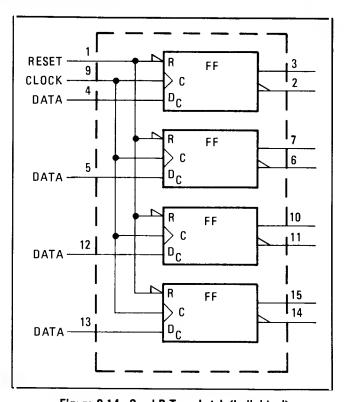


Figure 8-14. Quad D-Type Latch (Individual)

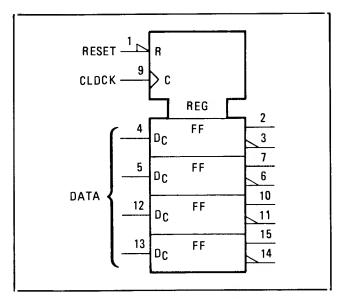


Figure 8-15. Quad D-Type Latch (Combined)

Complex Device Symbology. Figures 8-16 through 8-19 show how the basic symbols can be combined to illustrate behavior of fairly complex devices.

Shift Register. The Shift Register Control Block is used to show common inputs to a bidirectional shift register. Notice that " \rightarrow m" means shift the contents to the right or down by "m" units. And " \leftarrow m" means shift the contents to the left or up by "m" units. Note: If m=1, it may be omitted. Inputs "a" and "b" are each single IC pins that have two functions. Input "a" enables one of the inputs to the top

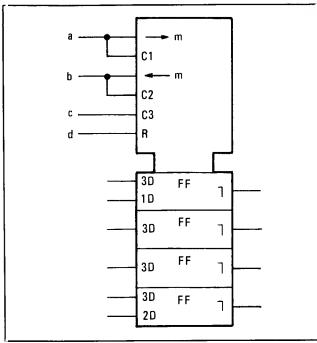


Figure 8-16. Shift Register

D-type flip-flop (1D) and also shifts the register contents down "m" units. Input "b" enables one of the inputs to the bottom flip-flop (2D), and also shifts the register contents up "m" units. Input "c" loads all four flip-flops in parallel (3D). Input "d" is a common reset. The output delay indicator is used because these are master-slave flip-flops.

AND-OR Selector. The Selector Control Block is used to simplify the AND portion of a quad AND-OR select gate. When G1 is high, the data presented at the "1" inputs will be gated through. When G2 is high, the data presented at the "2" inputs will be gated through.

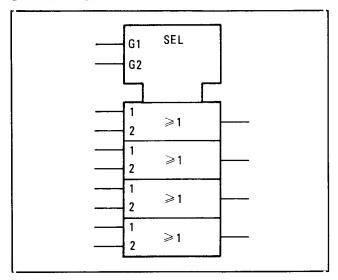


Figure 8-17. AND-OR Selector

Up/Down Counter. The Counter Control Block is used to show common inputs to a Presettable Decade UP/Down Counter. Notice that "+m" means count up (increment the count) by "m"; "-m" means count down by "m". Note: if m = 1, it may be omitted. Since the D-type flip-flops are master-slave, the output delay indicator is used. The "=9, +1" and "=0, -1" notation defines when the carry and borrow outputs are generated. They also define it as a decade counter; a binary counter would have the carry indicated with "=15, +1". Flip-flop weighting is indicated in parentheses. Input "C1" allows all four "D1" flip-flops to be preset in parallel.

Quad D-Type Latch. The Register control block is used to illustrate a quad D-type latch. There is a common active-low reset (R), and a common edge-triggered control input (C). Since there is only one dependency relationship, the controlling input is not numbered and the controlled functions (D) are subscripted with a C.

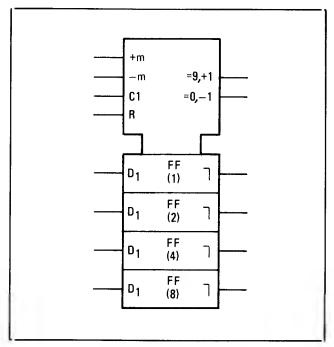


Figure 8-18. Up/Down Counter

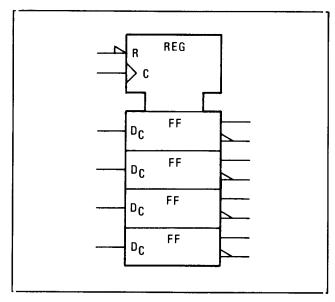


Figure 8-19. Quad D-Type Latch

8-36. Complex Logic Symbology and Operating Principles

Microprocessor. For information regarding this device, refer to the principles of operation on Service Sheet 14.

Random Access Memory. Refer to Figure 8-20. This device provides temporary storage for up to 128 eight-bit words. Memory words are addressed on the address bus. When G2 is high, data is written into memory; when G3 is low, data is read from

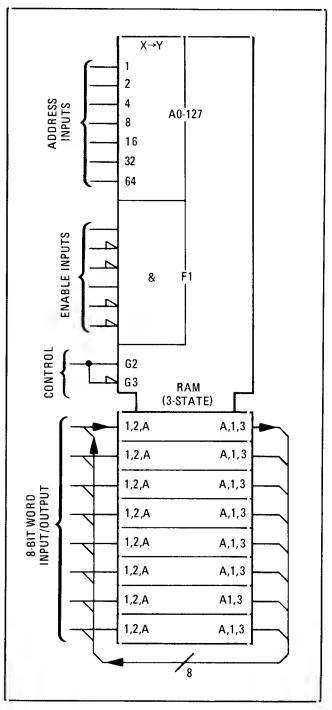


Figure 8-20. Random Access Memory

memory. G2 and G3 are connected internally. The device is active only when the six F1 inputs are active. Note that the input and output lines for each data bit are the same.

Read Only Memory. Refer to Figure 8-21. This device provides permanent storage for up to 2048 eight-bit words. Memory words are addressed by the address bus. When all control inputs are

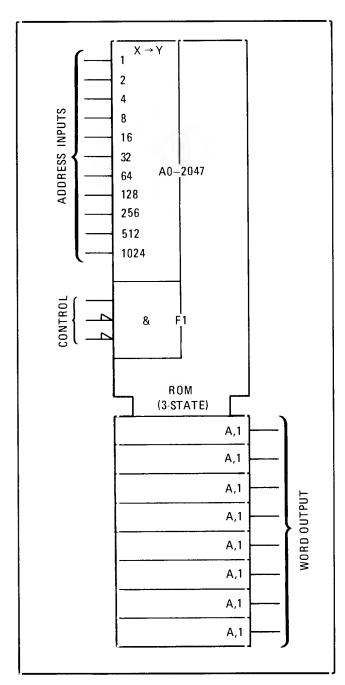


Figure 8-21. Read Only Memory

Complex Logic Symbology and Operating Principles (Cont'd)

active, the output of the ROM is enabled. When any one of the F1 inputs are inactive, the output is forced into an inactive (high-impedance) state.

Multiple Bus Transceivers. Refer to Figure 8-22. This device is used as an interface between the Signal Generator's interface adapter and data bus. If the G2 input is high, the device will allow data to pass from the left-hand inputs to the right-

hand outputs. If the G1 input is low, the device passes data from the right inputs to the left outputs. If F3 is high, no data can be passed (all inputs and outputs are driven to a high impedance state). When F3 is low, the device is enabled. Due to the Schmitt trigger type configuration, the propagation delay, switching voltage, and hysteresis voltage will vary slightly from bit to bit as they pass through this device.

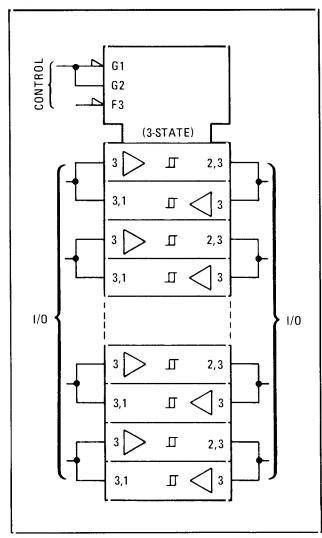


Figure 8-22. Multiple Bus Transceiver With 3-State Output

General Purpose Interface Adapter (GPIA). Refer to Figure 8-23. The GPIA interfaces a microprocessor through the instrument interface and a computer controller through the HP-IB interface. Data flow between the Signal Generator's microprocessor circuits and the interface bus occurs via the D0—D7 data bus lines and the IB0—IB7 signal lines. Each allows bi-directional data transfer. The signal lines pass ASCII data (7 bits).

Model 8656A Service

Complex Logic Symbology and Operating Principles (Cont'd)

The HP-IB mode is selected by placing a low on chip select CS. The read/write and address (register select) lines RS0, RS1 and RS2 select data and control information flow to and from the microprocessor circuits. The clock is derived from the microprocessor's system clock. The interrupt request IRQ is set low to interrupt microprocessor operation for data or control inputs. ASE address select enables the address output to the data lines. RESET initializes the chip. For this Signal Generator, DMA REQUEST is not used. DMA GRANT must be grounded to enable the chip.

The handshake control lines DAV, RFD and DAC are explained in more detail on Service Sheet 17. The bus management lines ATN attention, SRQ service request, REN remote enable, IFC interface clear and EOI end of information or identify are used to control information to and from the Signal Generator. Refer to Section III, HP-IB Functional Checks for information relating to these lines under various control configurations. In this unit TRIG, T1, T2, R1 and R2 are not used.

Successive Approximation Register (SAR). Refer to Figure 8-24. Successive approximation as used in this instrument is a digital approach to negative feedback. The output signal is converted to digital form and is clocked into the SAR at the DATA input. The SAR output is tied to a Digital-to-Analog Converter (DAC). The DAC acts as an attenuator, thereby controlling the output amplitude directly. Several steps (approximations) are required to bring the output amplitude to the required level. At the end of the conversion cycle, the END OF CONVERSION output inhibits the clock input. This halts the data flow. The data output is maintained at the output just prior to the end of conversion. Start Conversion must be set high to begin the conversion cycle. Feed Forward allows the conversion to be halted before the cycle is complete.

Digital-to-Analog Converter (DAC). Refer to Figure 8-25. The analog output of this Digital-to-Analog Converter is a current flow that is proportional to the maximum current available and to the binary value of the digital input. The voltage output in the formulas is shown in its simplest form and with a minimum of external components. Be aware that other components will affect the actual voltage.

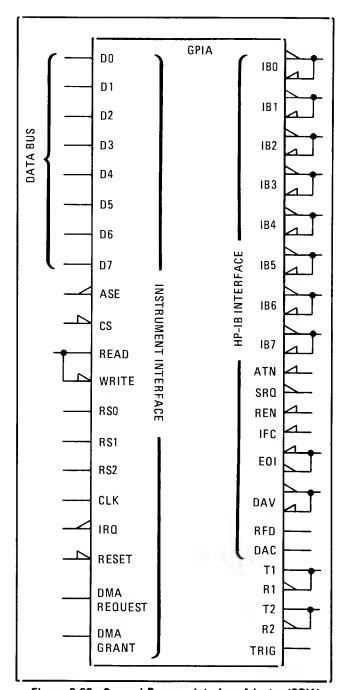


Figure 8-23. General Purpose Interface Adapter (GPIA)

The DAC output for dc voltages is:

$$\begin{split} V_o &= V_{MAX} \ (Y/256) \ + \ V_{EE} \\ \text{because} \ V_{MAX} &= I_{MAX} \ (R_1) \\ \text{and} \ I_{MAX} &= (V_1 \ - \ V_{REF(+)})/R_{EXT} \end{split}$$
 The DAC output for ac voltages is:

 $V_0 = V_1 (Y/256)$

Where V_0 =output voltage

V_{MAX} =maximum dc output voltage

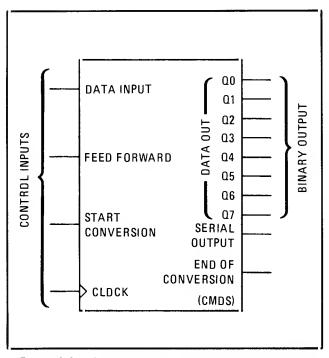


Figure 8-24. Successive Approximation Register (SAR)

Complex Logic Symbology and Operating Principles (Cont'd)

Where $V_0 =$ output voltage

 $V_{MAX} = maximum dc output voltage$

V_{EE} = DAC negative bias voltage. (Note: the formulas assume R1 is connected

to VEE)

 $\begin{array}{ccc} V_1 = & DAC & input \ dc \ voltage \ applied \ to \\ & & V_{REF(+)} \ through \ R_{EXT} \end{array}$

 $V_{REF(+)} = DAC$ positive dc reference

 $V_i = ac input voltage$

IMAX = maximum dc current

 $R_1 = output resistance$

 $R_{EXT} = resistor that sets maximum current$

Y =summation of binary inputs (X)

from 1 to 255 in steps of 1

Programmable Interval Timer. Refer to Figure 8-26. This device contains three independent 16-bit down counters which can operate in either binary or BCD count sequences. Each counter is gated and clocked via its own input port. The Data Input pins of the device are bi-directional; data is input to or output from the internal buffer following read or write instructions. Functions of the internal data bus buffers include: programming the modes of the internal counters, pre-setting the count registers. and reading intermediate count values. An active low on the Write line allows the internal counters

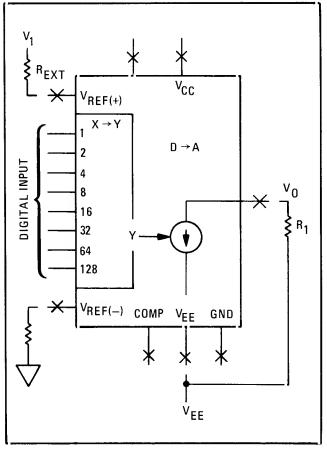


Figure 8-25. Digital-to-Analog Converter (8-bit)

and mode registers to be loaded; an active low on the Read line allows any one of the counter's immediate count values to be read. The Read/Write inputs are enabled by a low at the Select input which has no effect on any count operation. The A0 and A1 address inputs serve to select one of the three counters and to address the internal control word register for mode selection. A "00" at the A0 and A1 inputs selects counter 0, "01" selects counter 1, "10" selects counter 2, and "11" selects the control word register. Each counter's input, gate, and output functions are controlled through the selection of modes via the data bus. Mode selection is stored in the control word register. The six modes of counter operation are interrupt on terminal count, one-shot operation, rate generation, square wave generation, software triggered strobing and hardware triggered strobing.

BCD-to-Seven-Segment Latch/Decoder/Divider. Refer to Figure 8-27. This device latches and decodes BCD data to drive the individual segments of a 7-segment common cathode display. The BCD code is latched into the four flip-flops when C2 goes low. The BCD data is converted to a decimal code and then to the seven-segment code.

Model 8656A Service

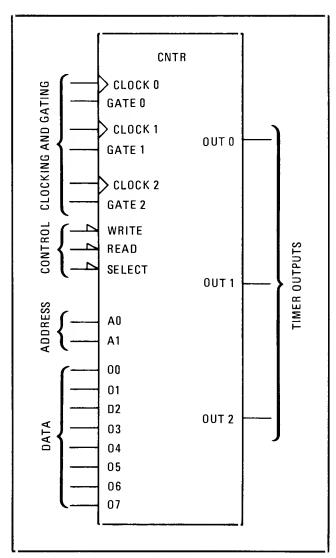


Figure 8-26. Programmable Interval Timer

Complex Logic Symbology and Operating Principles (Cont'd)

The seven-segment output is enabled by an active G4 and an active V1. G4 is active when two conditions exist together: 1) when the binary data is equivalent to decimal 0—9 and 2) when G3 is high. When G3 is low, the outputs are disabled and the display is blanked. When V1 is active (low) all seven output lines will be high to test all segments of the display.

8-37. Linear Device Operating Principles

Operational Amplifiers. The source of gain in an operational amplifier can be characterized as an ideal differential voltage amplifier having low output impedance, high input impedance, and very high differential gain. The output of an operational amplifier is proportional to the difference in the voltages applied to the two input terminals. In use,

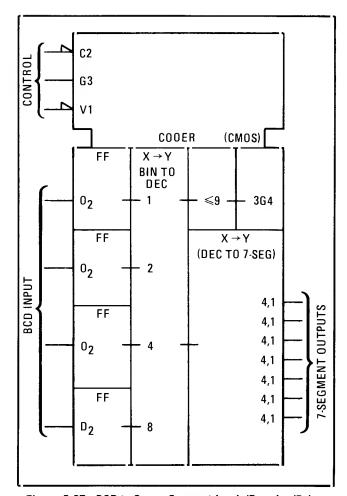


Figure 8-27. BCD-to-Seven-Segment Latch/Decoder/Driver

the amplifier output drives the input voltage difference close to zero through a feedback path.

When troubleshooting an operational amplifier circuit, measure the voltages at the two inputs; the difference between these voltages should be less than $10\,\text{mV}$. (Note: This troubleshooting procedure will not work for operational amplifiers which are configured as comparators.) A difference voltage much greater than $10\,\text{mV}$ indicates trouble in the amplifier or its external circuitry. Usually, this difference will be several volts and one of the inputs will be very close to one of the supply voltages (e.g., +15V or -15V).

Next, check the amplifier's output voltage. It will probably also be close to one of the supply voltages (e.g., ground, +15V, or -15V). Check to see that the output conforms to the inputs. For example, if the inverting input is more positive than the noninverting input, the output should be negative; if the non-inverting input is more positive than the inverting input, the output should be positive. If the

Linear Device Operating Principles (Cont'd)

output conforms to the inputs, check the amplifier's external circuitry. If the amplifier's output does not conform to its inputs, it is probably defective.

Figures 8-28, 8-29 and 8-30 show typical operational amplifier configurations. Figure 8-28 shows a non-inverting buffer amplifier with a gain of 1. Figure 8-29 is a non-inverting amplifier with gain determined by R1 and R2. Figure 8-30 is an inverting amplifier with a gain determined by R1 and R2.

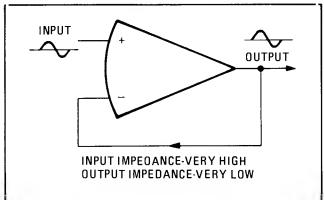


Figure 8-28. Non-Inverting Amplifier (Gain = 1)

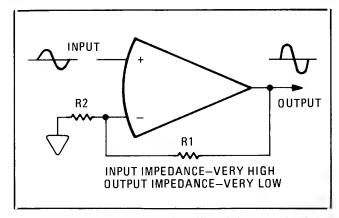


Figure 8-29. Non-Inverting Amplifier (Gain = $1 + R_1/R_2$)

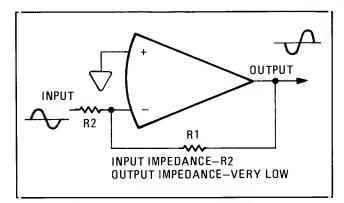


Figure 8-30. Inverting Amplifier (Gain = $-R_1/R_2$)

Comparators. Comparators are used as level sense amplifiers, switch drivers, pulse height discriminators, and voltage comparators. A voltage reference is connected to one of the amplifier's inputs as shown in Figures 8-31 and 8-32. When the other input signal voltage crosses the reference, the output is switched to the opposite polarity; the output remains at this polarity until the input signal recrosses the reference.

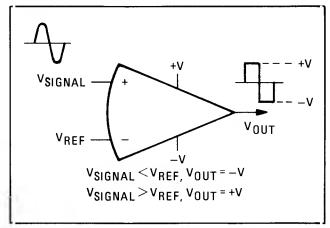


Figure 8-31. Non-Inverting Comparator

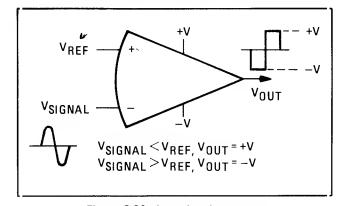


Figure 8-32. Inverting Comparator

Table 8-3. Schematic Diagram Notes (1 of 8)


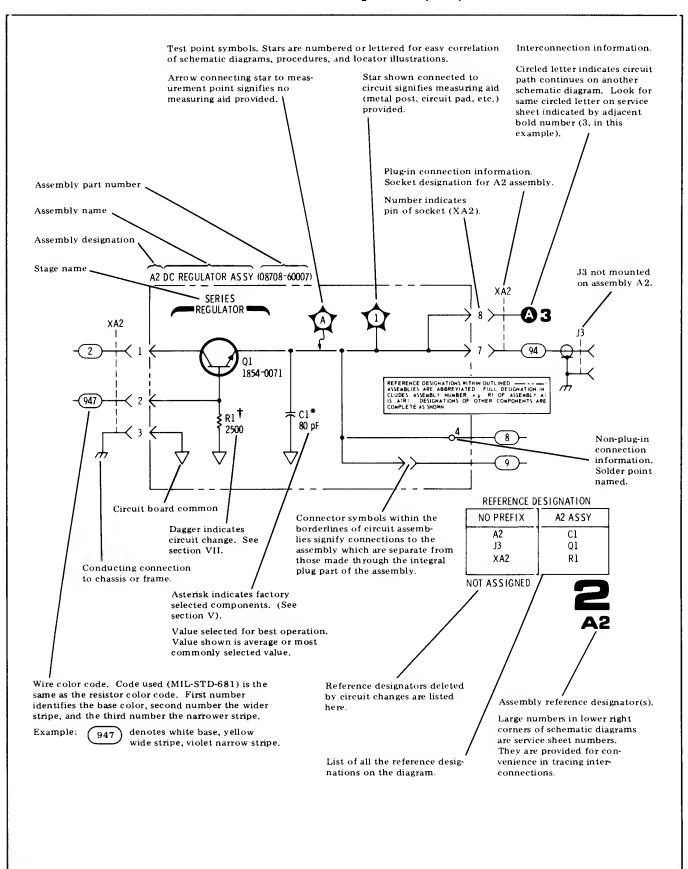


Table 8-3. Schematic Diagram Notes (2 of 8)

	SCHEMATIC DIAGRAM NOTES
*	Asterisk denotes a factory-selected value. Value shown is typical. See Section V
†	Dagger indicates circuit change. See Section VII.
•	Tool-aided adjustment. O Manual control.
	Encloses front-panel designation.
[[]]	Encloses rear-panel designation.
	Circuit assembly borderline.
	Other assembly borderline.
	Heavy line with arrows indicates path and direction of main signal.
>	Heavy dashed line with arrows indicates path and direction of main feedback.
	Indicates stripline (i.e., RF transmission line above ground).
<u>≰cw</u>	Wiper moves toward cw with clockwise rotation of control (as viewed from shaft or knob).
堂	Numbered Test Point measurement aid provided.
	Encloses wire or cable color code. Code used is the same as the resistor color code. First number identifies the base color, second number identifies the wider stript and the third number identifies the narrower stripe, e.g., (947) denotes white base, yellow wide stripe, violet narrow stripe.
Ť	A direct conducting connection to earth, or a conducting connection to a structure that has a similar function (e.g., the frame of an air, sea, or land vehicle).
\mathcal{H}	A conducting connection to a chassis or frame.
\Diamond	Common connections. All like-designation points are connected.
© 12	Letter = off-page connection, e.g., \Q . Number = Service Sheet number for off-page connection, e.g., 12 .
1HIS PAGE	Number (only) = on-page connection.

Table 8-3. Schematic Diagram Notes (3 of 8)

SCHEMATIC DIAGRAM NOTES

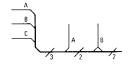

Indicates multiple paths represented by only one line. Letters or names identify individual paths. Numbers indicate number of paths represented by the line.



Coaxial or shielded cable.



Relay. Contact moves in direction of arrow when energized.



Indicates a pushbutton switch with a momentary (ON) position.



Indicates a PIN diode.




Indicates a current regulation diode.



Indicates a voltage regulation diode.



Indicates a Schottky (hot-carrier) diode.

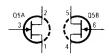

Multiple transistors in a single package—physical location of the pins is shown in package outline on schematic.



Identification of logic families as shown (in this case, ECL).

Table 8-3. Schematic Diagram Notes (4 of 8)

DIGITAL SYMBOLOGY REFERENCE INFORMATION **Input and Output Indicators** Implied Indicator-Absence of polarity indicator (see below) implies that the active state is a relative high voltage level. Absence of negation indicator (see below) implies that the active state is a relative high voltage level at the input or output. Polarity Indicator—The active state is a relatively low voltage level. Dynamic Indicator—The active state is a transition from a relative low to a relative high voltage level. Inhibit Input—Input that, when active, inhibits (blocks) the active state outputs of a digital device. Analog Input—Input that is a continuous signal function (e.g., a sine wave). Polarity Indicator used with Inhibit Indicator—Indicates that the relatively low level signal inhibits (blocks) the active state outputs of a digital device. mЛ Output Delay—Binary output changes state only after the referenced input (m) returns to its inactive state (m should be replaced by appropriate dependency or function symbols). Open Collector or Open Emitter Output.

Model 8656A Service

Table 8-3. Schematic Diagram Notes (5 of 8)

	DIGITAL SYMBOLOGY REFERENCE INFORMATION
	Input and Output Indicators (Cont'd)
3-STATE	Three-state Output—Indicates outputs that can have a high impedance connect) state in addition to the normal binary logic states.
	Combinational Logic Symbols and Functions
&	AND—All inputs must be active for the output to be active.
≥1	OR—One or more inputs being active will cause the output to be active.
≥m	Logic Threshold—m or more inputs being active will cause the output to be accreplace m with a number).
=1	EXCLUSIVE OR—Output will be active when one (and only one) input is ac
=m	m and only m—Output will be active when m (and only m) inputs are ac (replace m with a number).
=	Logic Identity—Output will be active only when all or none of the inputs are active. (i.e., when all inputs are identical, output will be active).
	Amplifier—The output will be active only when the input is active (can be with polarity or logic indicator at input or output to signify inversion).
X/Y	Signal Level Converter—Input level(s) are different than output level(s).
•	Bilateral Switch—Binary controlled switch which acts as an on/off switch analog or binary signals flowing in both directions. Dependency notation she used to indicate affecting/affected inputs and outputs. Note: amplifier syn (with dependency notation) should be read to indicate unilateral switching.
X→Y	Coder - Input code (X) is converted to output code (Y) per weighted values or a talk and talk and
(Functional Labels)	The following labels are to be used as necessary to ensure rapid identification device function.
MUX	Multiplexer—The output is dependent only on the selected input.
DEMUX	Demultiplexer—Only the selected output is a function of the input.
CPU	Central Processing Unit

Table 8-3. Schematic Diagram Notes (6 of 8)

DIGITAL SYMBOLOGY REFERENCE INFORMATION		
1	Monostable—Single shot multivibrator. Output becomes active when the input becomes active. Output remains active (even if the input becomes inactive) for a period of time that is characteristic of the device and/or circuit.	
G	Oscillator—The output is a uniform repetitive signal which alternates between the high and low state values. If an input is shown, then the output will be active if and only if the input is in the active state.	
FF	Flip-Flop—Binary element with two stable states, set and reset. When the flip-flop is set, its outputs will be in their active states. When the flip-flop is reset, its outputs will be in their inactive states.	
Т	Toggle Input—When active, causes the flip-flop to change states.	
S	Set Input—When active, causes the flip-flop to set.	
R	Reset Input—When active, causes the flip-flop to reset.	
J	J Input—Analogous to set input.	
К	K Input—Analogous to reset input.	
D	Data Input—Always enabled by another input (generally a C input—see Dependency Notation). When the D input is dependency-enabled, a high level at D will set the flip-flop; a low level will reset the flip-flop. Note: strictly speaking, D inputs have no active or inactive states—they are just enabled or disabled.	
+m	Count-Up Input—When active, increments the contents (count) of a counter by "m" counts (m is replaced with a number).	
-m	Count-Down Input—When active, decrements the contents (count) of a counter by "m" counts (m is replaced with a number).	
→m	Shift Right (Down) Input—When active, causes the contents of a shift register to shift to the right or down "m" places (m is replaced with a number).	
⊷m	Shift Left (Up) Input—When active, causes the contents of a shift register to shift to the left or up "m" places (m is replaced with a number).	
	NOTE	
	For the four functions shown above, if m is one, it is omitted.	
(Functional Labels)	The following functional labels are to be used as necessary in symbol build-ups to ensure rapid identification of device function.	
mCNTR	Counter—Array of flip-flops connected to form a counter with modules m (m is replaced with a number that indicates the number of states: 5 CNTR, 10 CNTR, etc.).	

Table 8-3. Schematic Diagram Notes (7 of 8)

DIGITAL SYMBOLOGY REFERENCE INFORMATION		
	Sequential Logic Functions (Cont'd)	
REG	Register—Array of unconnected flip-flops that form a simple register or latch.	
SREG	Shift Register—Array of flip-flops that form a register with internal connections that permit shifting the contents from flip-flop to flip-flop.	
ROM	Read Only Memory—Addressable memory with read-out capability only.	
RAM	Random Access Memory—Addressable memory with read-in and read-out capability.	
	Dependency Notation	
mAm	Address Dependency—Binary affecting inputs of affected outputs. The m prefix is replaced with a number that differentiates between several address inputs, indicates dependency, or indicates demultiplexing and multiplexing of address inputs and outputs. The m suffix indicates the number of cells that can be addressed.	
Gm	Gate (AND) Dependency—Binary affecting input with an AND relationship to those inputs or outputs labeled with the same identifier. The m is replaced with a number or letter (the identifier).	
Cm	Control Dependency—Binary affecting input used where more than a simple AND relationship exists between the C input and the affected inputs and outputs (used only with D-type flip-flops).	
Vm	OR Dependency—Binary affecting input with an OR relationship to those inputs or outputs labeled with the same identifier. The m is replaced with a number or the letter (the identifier).	
Fm	Free Dependency—Binary affecting input acting as a connect switch when active and a disconnect when inactive. Used to control the 3-state behavior of a 3-state device.	
	NOTE	
	The identifier (m) is omitted if it is one—that is, when there is only one dependency relationship of that kind in a particular device. When this is done, the dependency indicator itself $(G, C, F, or V)$ is used to prefix or suffix the affected (dependent) input or output.	
	Miscellaneous	
	Schmitt Trigger—Input characterized by hysterisis; one threshold for positive going signals and a second threshold for negative going signals.	

Table 8-3. Schematic Diagram Notes (8 of 8)

DIGITAL SYMBOLOGY REFERENCE INFORMATION

Miscellaneous (Cont'd)

Active

Active State—A binary physical or logical state that corresponds to the true state of an input, an output, or a function. The opposite of the inactive state.

Enable

Enabled Condition—A logical state that occurs when dependency conditions are satisfied. Although not explicitly stated in the definitions listed above, functions are assumed to be enabled when their behavior is described. A convenient way to think of it is as follows:

A function becomes active when:

- it is enabled (dependency conditions—if any—are satisfied)
- and its external stimulus (e.g., voltage level) enters the active state.

SERVICE SHEET BD1 (Cont'd)

tuned by a voltage derived from the high frequency VCO's tune voltage. The filters therefore track the oscillator's frequency and are biased on only when that band is selected. This selection of filters provides better isolation and filtering of the out-of-band spurious and harmonic frequencies.

Output level is stepped in 10 dB steps by an electromechanical step attenuator. Output level changes less than 10 dB are controlled by the input to the Automatic Level Control (ALC) Amplifier from the Level Digital-to-Analog Converter (DAC). The ALC Amplifier has two inputs. One is the detected output voltage to level the output. The other is the sum of the amplitude modulation voltage and the level voltage (for level changes less than 10 dB and level correction for frequency response). The output of the ALC Amplifier controls the current through the PIN diode Modulator which controls the fine level attenuation and amplitude modulation of the output.

When triggered, the reverse power protection circuit opens a relay in series with the output. Limiting diodes sense reverse power and provide the voltage to open the relay and protect the output circuits during the time delay until the relay opens.

Internal modulation signals of 400 Hz or 1000 Hz for amplitude and frequency modulation from the Audio Oscillator can be used, or external amplitude and frequency modulation can be selected at the front panel. The internal and external modulation signals are converted to the proper drive levels by the AM% DAC and the FM Dev DAC. The Signal Generator's output can be simultaneously amplitude and frequency modulated by either the 400 Hz or 1000 Hz internal signals and an external signal or any combination thereof. However, only one amplitude modulation and one frequency modulation level can be used. The carrier frequency modulation is generated in the low frequency loop which allows for RF output FM deviation up to 99 kHz for output frequencies that are not divided. These frequencies are the heterodyne band (100 kHz to 123.5 MHz) and the basic band (494 to 990 MHz). The amplitude modulation signal is applied to the ALC Amplifier.

Low Frequency and FM Section. The 50 MHz Reference Oscillator is a crystal oscillator. Its output phase locks the VCOs and is also divided down to provide the 1 MHz time base. The rear panel TIME

BASE OUTPUT is a jumper-selectable frequency of 1, 5, or 10 MHz that is divided from the 50 MHz Reference Oscillator and can be used as a stable reference for other instruments.

For Option 001, a 10 MHz temperature-stabilized crystal oscillator is used. The 50 MHz Reference Oscillator is phase locked to the crystal oscillator for greater accuracy and stability. An external reference of 1, 5, or 10 MHz may also be used to phase lock the 50 MHz Reference Oscillator. However, the jumper-selected frequency of 1, 5, or 10 MHz must be the same as the external frequency. With Option 001 instruments, the jumper selection must be 10 MHz. The 50 MHz reference signal is distributed and translated by frequency doublers and mixers to provide reference signals at other frequencies.

The 60 to 110 MHz low frequency VCO is tracked by the high frequency basic band oscillator's frequency. The low frequency VCO is tuned to the correct frequency by the Microprocessor and is locked to the 50 MHz Reference Oscillator. Depending upon the frequency, the Reference Oscillator and the low frequency VCO signals are both divided down to 100 or 250 Hz. This output is used to phase lock the VCO and for the output frequency resolution of 100 Hz or 250 Hz. Any phase difference between the two signals is converted to a voltage, sampled, and applied to the VCO to correct its frequency. The low frequency loop has a narrow bandwidth which enables the VCO to be frequency modulated outside the loop bandwidth. The VCO is tuned over its 50 MHz range in 100 Hz or 250 Hz steps. It therefore steps the 690 to 740 MHz signal, generated by mixing the 60 to 110 MHz with the 800 MHz in the Frequency Multiplier Mixer, in 100 Hz or 250 Hz steps.

Microprocessor, Keyboard, and Display Section. The Microprocessor controls the information on the address bus and data bus, thereby controlling all digital data throughout the instrument. The Microprocessor with its associated Read Only Memory (ROM), Random Access Memory (RAM), Input/Output (I/O), and decoder circuits processes the front panel keyboard inputs, the Hewlett-Packard Interface Bus (HP-IB) inputs, and all displayed information.

Digital data sent to the High Frequency and Output Section performs the following functions:

a. Controls the Voltage Controlled Oscillator (VCO) lock point.

Model 8656A Service

SERVICE SHEET BD1 (Cont'd)

- b. Turns off the correct IF notch filter to pass the specified IF frequency and lock the VCO at the correct frequency.
- c. Corrects the output level for frequency response.
 - d. Changes attenuation in 0.1 dB increments.
- e. Controls the amplitude modulation of the carrier.
- f. Selects the heterodyne frequencies, and the divide by one, two, or four band as required.
 - g. Sets attenuation in 10 dB steps.
 - h. Resets the Reverse Power Relay.

Digital data sent to the Low Frequency and FM Section determines the frequency modulation of the carrier and the frequency resolution of the output (100 or 250 Hz).

Two high frequency data words and eight low frequency data words are serially sent to the High Frequency and Output Section and the Low Frequency and FM Section. The serial data is strobed into the correct registers by decoding the address bus bits. Parallel data is also sent to the High Frequency and Output Section to select AM, FM, and level control; to select the frequency bands; and to select the amount of attenuation in the step attenuator.

TROUBLESHOOTING

The troubleshooting checks on this service sheet are used to isolate a malfunction to one of the three major functional assemblies. The checks are easy to perform and provide much key information. In most instances the checks isolate a failure to either a hardware or a software (controller) problem. The comments associated with each procedure summarize the information known as a result of passing or failing the check. The checks should be done in order.

$\left\langle \sqrt{1} \right\rangle$ Line Check

Procedure. Remove the Signal Generator's bottom cover. Refer to the Disassembly Procedures under Repair in Section VIII. After the bottom cover is removed, connect the line voltage.

Normal Indications.

- 1. The fan runs indicating line voltage or Mains (ac) power is present on the power transformer primary.
- 2. The three green Light Emitting Diodes (LEDs) on the A10 Audio Power Supply Assembly are lighted indicating that the regulated supplies are operating. This does not mean that the supply voltages are within the required tolerance.
- 3. Set the RESET/STBY/ON Switch to ON. The amplitude is -127 dBm and the increment is 10 dB. Press the amplitude increment key (up arrow). The clicks can be heard as the attenuator solenoid switches are opened and closed. The attenuator latches receive power from the +24 volt unregulated supply.

Abnormal Indications. If an abnormal indication occurs:

- 1. Check rear-panel line fuse and line voltage selector.
- 2. Measure individual regulated supplies and unregulated supply. If necessary, go to Service Sheet 22.

$\overline{\left<\sqrt{2}\right>}$ Power-Up Check

Procedure. Switch RESET-STBY-ON switch to RESET and back to ON. Check the front panel annunciators (LEDs) and display segments.

Normal Indication. All front panel indicators are lighted for approximately 1.5 seconds to provide a visual inspection of each front panel annunciator and display segment.

- 1. All the display segments will display the number eight except the least significant FRE-QUENCY digit will be a five and the most significant AMPLITUDE digit will be a one.
- 2. When the power up subroutine is completed, the modulation display will be off, frequency set to 100 MHz and amplitude to -127 dBm.

Abnormal Indication. If an abnormal indication occurs, that is:

1. The LEDs stay lighted and display segments remain eights, five and one, go to Service Sheet BD4.

SERVICE SHEET BD1 (Cont'd)

- 2. The LEDs stay lighted and numerical displays are all zeros except the least significant FRE-QUENCY digit.
 - a) Check for a noisy +5 Vdc power supply. If necessary, go to Service Sheet 22.
 - b) Check the Microprocessor clock. Go to Service Sheet 14.
- 3. An LED or display segment does not show the correct output. Check the display's associated components and drive circuits. Go to Service Sheets 19 or 20 (FREQUENCY display problem) or Service Sheet 19 or 21 (MODULATION or AMPLITUDE display problem).

$\overline{\sqrt{3}}$ Frequency and Amplitude

Procedure. Set the amplitude to 0.0 dBm and check the RF OUTPUT frequency and amplitude.

Normal Indication.

- 1. The RF output is phase locked at 100 MHz; the amplitude is 0.0 dBm ± 1.0 dB.
- 2. The FREQUENCY display is 100 MHz; the AMPLITUDE display is 0.0 dBm.

Abnormal Indication. If an abnormal indication occurs, that is:

1. The AMPLITUDE or FREQUENCY display is not 0.0 dBm or 100 MHz respectively, go to Service Sheet BD4.

- 2. The output frequency is not phase locked, go to Service Sheets BD2 or BD3.
- 3. The output frequency is incorrect, go to Service Sheet BD2.
- 4. The output amplitude is incorrect, go to Service Sheet BD2.

$\sqrt{4}$

Modulation


Procedure. Set the modulation to INT 1 kHz, AM 50% and FM 50 kHz.


Normal Indications.


- 1. MODULATION display 1 kHz, INT AM, INT FM, and 50% or 50 kHz (depending on last input).
- 2. Modulated RF output of 50% AM and 50 kHz FM deviation at 1 kHz rate.

Abnormal Indication. If abnormal indication occurs, that is:

- 1. The MODULATION display is incorrect, go to Service Sheet BD4.
- 2. Amplitude modulation level is incorrect, go to Service Sheet BD2.
- 3. Frequency modulation level is incorrect, go to Service Sheet BD3.
- 4. Modulation rate is incorrect, go to Service Sheet
- 6.

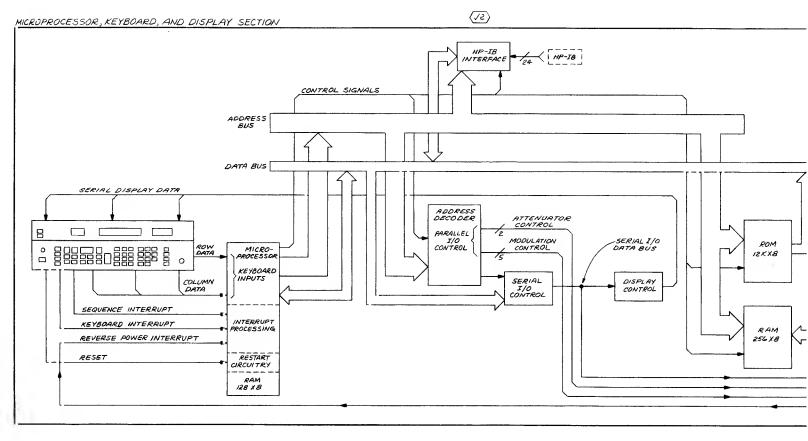

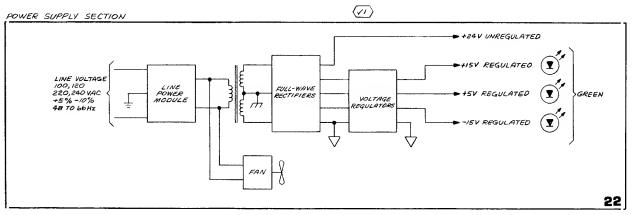

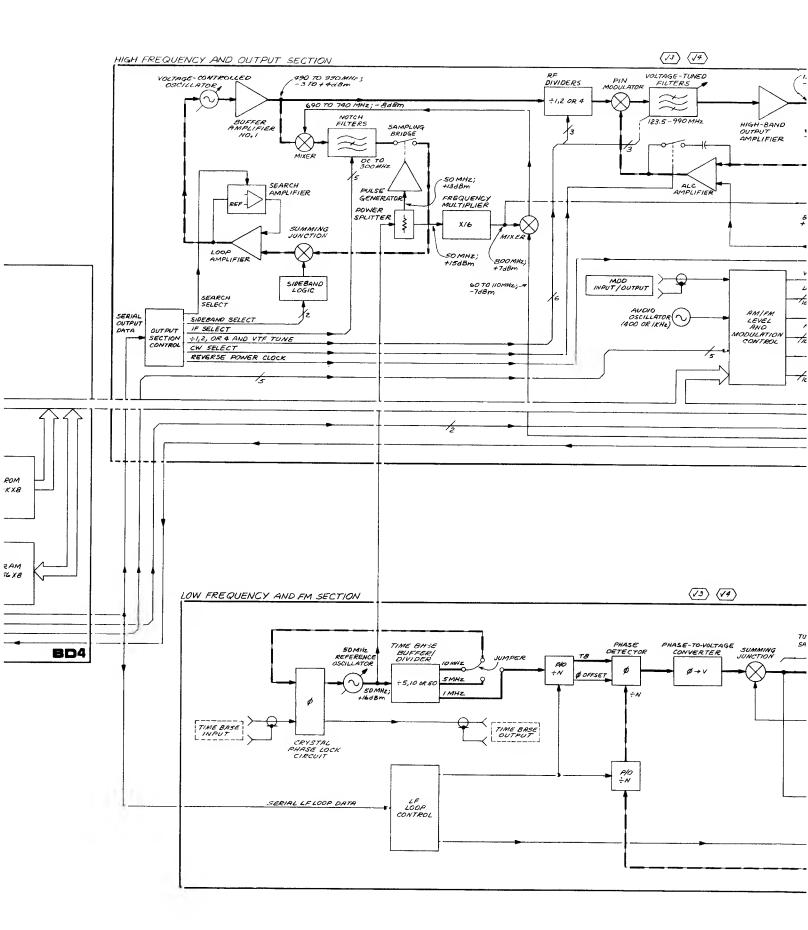

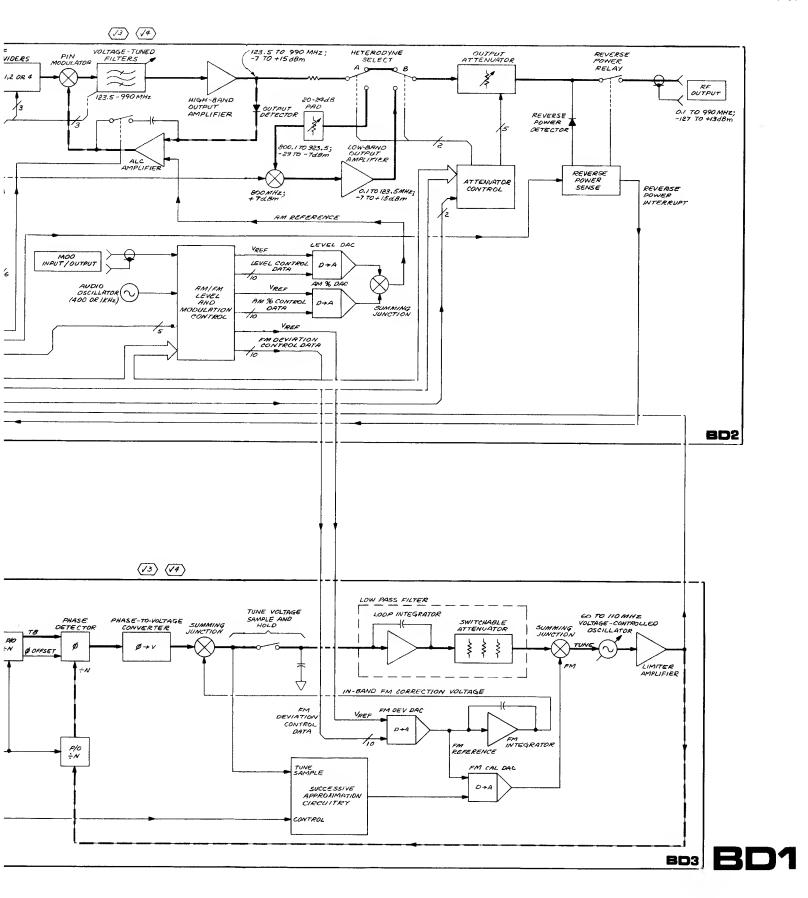


Figure 8-33. Overall Block Diagram

SERVICE SHEET BD2 HIGH FREQUENCY AND OUTPUT SECTION TROUBLESHOOTING HELP

Service Sheet BD1
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

A8 Frequency Multiplier Assembly. The Frequency Multiplier Assembly multiplies the 50 MHz reference signal by 16 to obtain an 800 MHz signal. The reference signal is doubled four times for frequencies of 100, 200, 400, and 800 MHz. The output of each multiplier is passed through a bandpass filter for the output frequency of that stage to filter out the harmonics and subharmonics generated by the multiplier.

The 800 MHz signal is applied to the A6 Output Assembly and mixed with specific basic band frequencies (800.1 to 923.5 MHz) when output frequencies in the heterodyne band (100 kHz to 123.5 MHz) are selected. It is also applied to the Frequency Multiplier Buffer Amplifier No.1. The signal is amplified and then mixed with the 60 to 110 MHz output from the A3 Low Frequency Loop Assembly (see BD3). The output from the Mixer is a frequency between 690 and 740 MHz that is used to phase lock the high frequency loop. Before a frequency between 690 and 740 MHz is sent to the A4 High Frequency Loop Assembly, it is amplified by two Buffer Amplifiers and filtered by the Bandpass Filter. The 690 to 740 MHz Bandpass Filter filters out the 800 MHz and the Mixer products of 860 to 910 MHz. The Compensation Network is adjusted for a flat frequency response of ±1.5 dB at the input of the A4 High Frequency Loop Assembly.

A4 High Frequency Loop Assembly. The High Frequency Loop Assembly phase locks the 494 to 990 MHz basic band Voltage Controlled Oscillator (VCO) on the A5 High Frequency Oscillator Assembly. The output from this oscillator passes through the 1100 MHz Low-Pass Filter, Buffer Amplifier No.2, and the 450 MHz High-Pass Filter before being mixed with a frequency between 690 and 740 MHz from the A8 Frequency Multiplier Assembly. Both the upper and lower sidebands from the Mixer are used to obtain IF phase lock signals in 50 MHz steps from 0 to 250 MHz. The IF phase lock signal passes throuh the 260 MHz IF Input Filter and is amplified by the IF Buffer Amplifier. The notch filter for the specific IF is not selected which allows that IF signal to pass through the Notch Filters. The IF signal is then sampled at a 50 MHz rate by a pulse from the Pulse Generator that is driven by the 50 MHz Reference Oscillator signal. The output of the Sampling Bridge is a correction voltage proportional to the phase difference of the IF and 50 MHz reference signals. The correction voltage is amplified by the Sampler Amplifier, filtered by the 13 MHz Low-Pass Filter and applied to the Loop Amplifier. It is then fed back to correct the frequency of the VCO on A5.

The dc notch is not selected when the high frequency VCO output is 690 to 740 MHz. The Mixer then functions as a phase detector with both inputs at the same frequency. The Mixer's output is now a

SERVICE SHEET BD2 (Cont'd)

voltage proportional to the phase difference of the two inputs. All other circuits function as previously described in the high frequency loop.

The eight bit data word used to control the high frequency loop is clocked serially into the HF Loop Data Storage/Drivers circuit. Five bits control the dc, 50, 100, 150, 200 and 250 MHz notch filters. Of these, the 150 and 200 MHz bits also control the Gain Compensation to compensate for the nonlinearity of the VCO frequency change with voltage. Another bit selects the Search Amplifier reference so the Loop Amplifier ramp will be in the direction required to sweep the VCO and phase lock the loop without sweeping the VCO to one end and then back to the lock frequency. The last two bits are for the Sideband Logic that prevents the VCO from locking at the wrong frequency. This is necessary because both the upper and lower sidebands from the Mixer are used for the IF frequencies of 50, 100, 150, 200 and 250 MHz to phase lock the 494 to 990 MHz VCO frequencies.

A5 High Frequency Oscillator Assembly. The High Frequency Oscillator generates the instrument's 494 to 990 MHz basic band frequencies. The VCO is tuned and locked by the A4 High Frequency Loop Assembly. The output of the VCO is amplified by Buffer Amplifier No. 1 and then applied through a 6 dB Pad to the High Frequency Loop Assembly to phase lock the VCO. It is also applied directly to the A6 Output Assembly.

A6 Output Assembly. The Output Assembly translates the 494 to 990 MHz basic band frequencies by dividing (123.5 to 990 MHz) or heterodyning (100 kHz to 123.5 MHz) the basic band frequencies. Each of the divide by 1, 2, and 4 bands is one octave. The output of the dividers passes through the PIN diode Modulator to the Voltage-Tuned Filters. Each filter's bandwidth is also one octave and tuned by the VCO tune voltage. The filters therefore track the VCO frequency and are biased on only when that band is selected. This selection of filters provides better isolation and filtering of the out-of-band spurious and harmonic frequencies.

The eight-bit data word is clocked serially into the Output Section Data Storage/Drivers circuit. Three bits control the dividers and three bits control the Voltage-Tuned Filters. The other two bits are used to select the CW mode and to clock the Reverse Power Sense circuit.

The output from the Voltage-Tuned Filters is amplified by the High-Band Output Amplifier and applied to the Output Detector and the A9 Attenuator Assembly. Output amplitude changes within the 10 dB range set by the step attenuator are controlled by the input to the Automatic Level Control (ALC) Amplifier from the Digital-to-Analog Converter (DAC) on the A10 Audio/Power Supply Assembly. The ALC amplifier has two inputs. One is the detected output voltage used to level the output. The other is the sum of the amplitude modulation voltage (ac) and the leveling voltage (dc) for amplitude changes within the 10 dB range set by the step attenuator and level

SERVICE SHEET BD2 (Cont'd)

correction for frequency response. The output of the ALC amplifier controls the current through the PIN diodes of the PIN Modulator which controls amplitude modulation and RF level into the output attenuator (-4 to +13 dBm).

When output frequencies from 100 kHz to 123.5 MHz are selected, the first switch (A) of the A9 Attenuator Assembly switches the output back to the A6 Output Assembly where the output frequencies of 800.1 to 923.5 MHz are mixed (heterodyned) with the 800 MHz from the A8 Frequency Multiplier Assembly. The difference frequency of 100 kHz to 123.5 MHz is filtered by a low-pass Diplex Filter, amplified by the Low-Band Output Amplifier, and returned to the A9 Attenuator Assembly through the second switch (B).

A9 Attenuator Assembly. The Attenuator Assembly is an electrome-chanical step attenuator that steps the output 120 dB in 10 dB steps. The output circuits are reverse power protected for inputs up to 50 watts. A voltage level of 3 volts will trigger the circuit and open the Reverse Power Relay. When a reverse power condition is detected by the Reverse Power Sense circuit, the RPI bit is generated to interrupt the Microprocessor. The AMPLITUDE Display will flash to indicate that a reverse power condition has been detected. The Reverse Power Relay will remain open until the source of reverse power is removed and the AMPTD key is pressed. At that time, the RCL bit, from the Output Data Storage/Drivers circuit on A6, resets the relay.

Ten of the fourteen data bits from the Attenuator Control circuits on the A10 Audio/Power Supply Assembly control the attenuator pads to attenuate the output signal by the amount selected. The remaining four bits control the heterodyne select sections of the Attenuator Assembly.

A10 Audio/Power Supply Assembly. The amplitude modulation and level circuits portion of the Audio/Power Supply Assembly are shown on BD2. The external modulation signal level must be set at the source and the output of the External Modulation Buffer is monitored by the Over and Under Modulation Comparators which control the HI EXT and LOW EXT LEDs (not shown) on the front panel to indicate when the input is too high or low.

The modulation signals are applied to the FM Deviation Summing Amplifier (shown on BD3) and to the AM% Summing Amplifier. The output of the AM% Summing Amplifier is used as a reference voltage by the AM% DAC. The digitally controlled output of the AM% DAC is summed with the dc level voltage from the Level DAC and applied to the input of the AM Reference Summing Amplifier. The AM reference is applied to the ALC Amplifier on A6. The +2 Vdc level is applied to the Level Buffer to produce a reference voltage which is used by the Level DAC before it is summed with the amplitude modulation signal.

Five 8-bit data words are strobed into the Modulation Control Latches each time a front panel or HP-IB modulation entry is made. These data words are used to control all modulation functions, the level of

SERVICE SHEET BD2 (Cont'd)

the modulation signals, and the reference level voltage applied to the ALC loop.

TROUBLESHOOTING

General

Procedures for checking the High Frequency and Output Sections of the instrument are given below. The blocks or points to check are marked on the block diagram by a hexagon with a check mark and a number inside, e.g., $\sqrt{2}$.

Test Equipment

√1 RF Output and Attenuator Check

- 1. Set the Signal Generator's frequency to 500 MHz and amplitude to 0.0 dBm. Connect the RF OUTPUT to the spectrum analyzer's input.
- 2. Center the signal on the spectrum analyzer's display. Verify that the signal is locked at 500 MHz with an amplitude of 0.0 dBm.
 - a) If signal is unlocked perform $\sqrt{3}$.
 - b) If no output, perform (12).
 - c) If amplitude is not $0.0 \, dBm \pm 3.0 \, dB$, continue with $\sqrt{1}$ step 3.
- 3. Reduce the Signal Generator's amplitude in $10~\mathrm{dB}$ steps to $-50~\mathrm{dBm}$. The amplitude should change $10~\mathrm{dB}$ for each step.
 - a) If the amplitude does not change in 10 dB steps, go to Service Sheet 7.
 - b) If the amplitude changes in 10 dB steps perform $\sqrt{2}$.
- 4. Set the Signal Generator's frequency to 100 MHz. If there is no output or the output is low, go to Service Sheet 5.

√2 Output Assembly Check

- 1. Set the Signal Generator's frequency to 50 MHz.
- 2. Measure the amplitude and frequency at the assembly input A6TP1 and output A6W14 with the spectrum analyzer.
 - a) If the input is correct $(500\,\text{MHz}$ and $-3\,\text{to}+4\,\text{dBm})$, if the output level is low (less than $-7\,\text{dBm}$) or if the frequency is incorrect, go to Service Sheet 4.
 - b) If the input is low, go to Service Sheet 1.



SERVICE SHEET BD2 (Cont'd)

3. Set the Signal Generator's frequency to 300 MHz and then 150 MHz. Measure the output of the assembly with the spectrum analyzer. If the output level is low or the frequency is not 300 or 150 MHz, go to Service Sheet 5.


√3 Frequency Multiplier


- 1. Set the Signal Generator's frequency to 500 MHz.
- 2. Measure the 50 MHz input directly from W5 with the spectrum analyzer. If either level (+15 to +13 dBm) or frequency (50 MHz) is incorrect, go to Service Sheet 13.
- 3. Measure the 60—110 MHz input (100 MHz) directly from W3 with the spectrum analyzer. If the level (-7 to -9 dBm) is incorrect or frequency (100 MHz) is incorrect or unlocked, go to Service Sheet BD3.
- 4. Measure the output (690 to 740 MHz) of the FL1 Bandpass Filter. If either level (-1.5 to -9.5 dBm) or

frequency (700 MHz) is incorrect, go to Service Sheet 3. If level and frequency are correct, go to Service Sheet 1 or Service Sheet 2.

√4 Audio/Power Supply

- 1. Set the Signal Generator's frequency to 500 MHz, amplitude 0.0 dBm, modulation INT 1 kHz, and AM 50%. Connect the RF OUTPUT to the modulation analyzer's input. Connect the modulation analyzer's modulation output to the oscilloscope's input.
- 2. Measure the amplitude modulation. It should be $50 \pm 5\%$. If the modulation level is incorrect, go to Service Sheet 6 (logic control circuits) or Service Sheet 4 (ALC PIN modulator).
- 3. Set the AM to off and select INT 1 kHz, FM $50~\mathrm{kHz}$.
- 4. Measure the frequency modulation. It should be 50 ± 2.5 kHz. If the modulation level is incorrect, go to Service Sheet 6 (logic control circuits) or Service Sheet BD3.

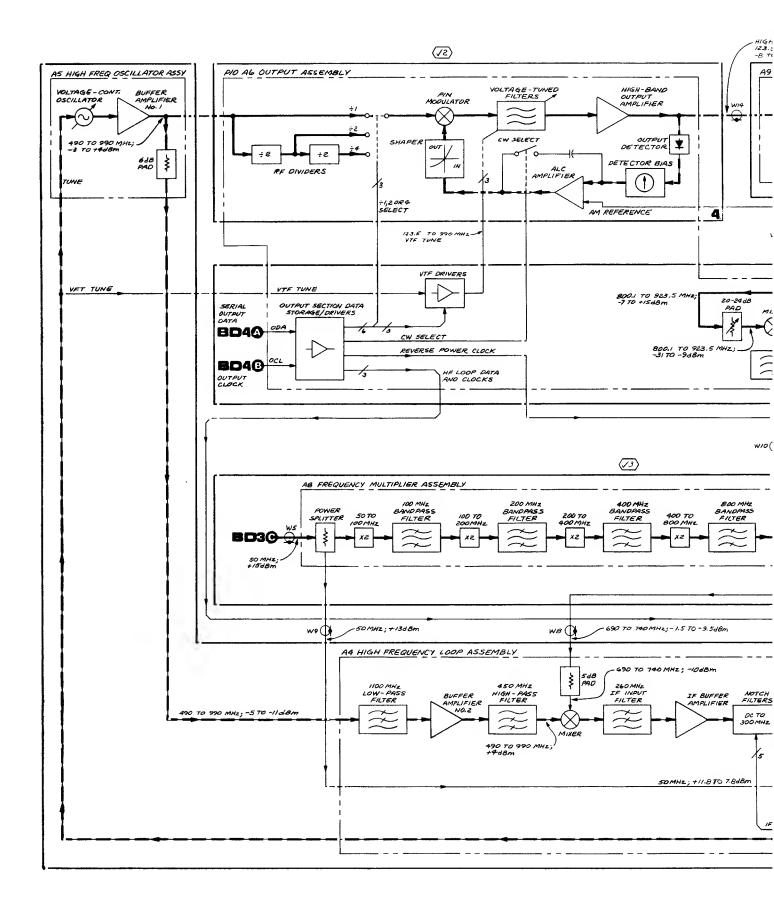

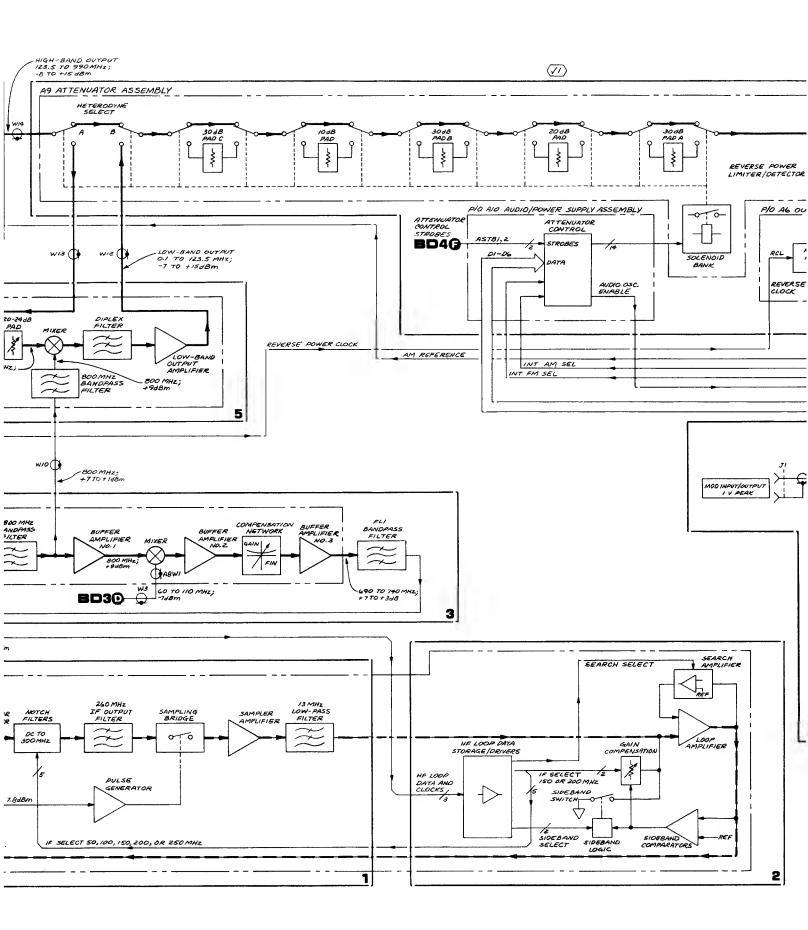

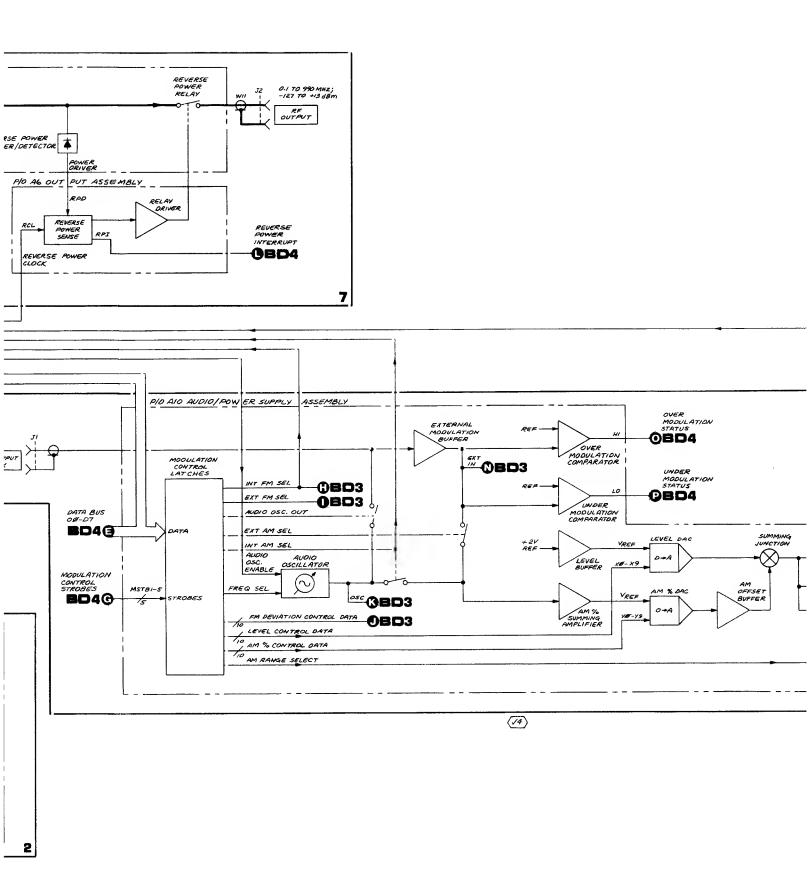


Figure 8-34. High Fi

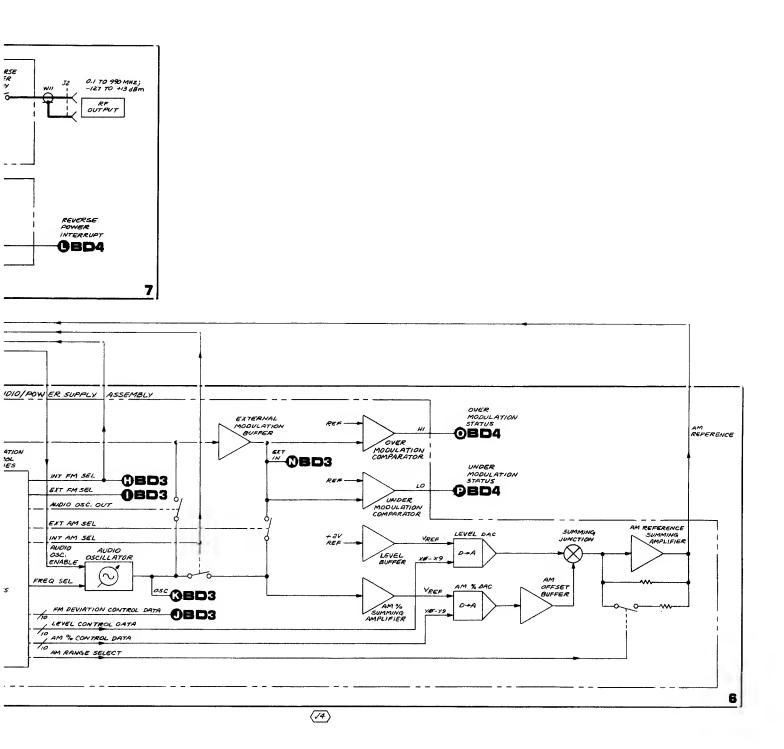




Figure 8-34. High Frequency and Output Section Block Diagram

SERVICE SHEET BD3 LOW FREQUENCY AND FM SECTION TROUBLESHOOTING HELP

Service Sheet BD1
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

A3 Low Frequency Loop Assembly. The 50 MHz Reference Oscillator is a crystal oscillator that is used to phase lock the Voltage Controlled Oscillators (VCOs). Its output is also divided down to provide the 1 MHz time base. The rear panel TIME BASE OUTPUT signal is a jumper selectable frequency of 1, 5, or 10 MHz divided from the 50 MHz Reference Oscillator and coupled through the Crystal Phase Lock Circuit. For Option 001, a 10 MHz temperature-stabilized crystal oscillator is installed in the Signal Generator. The Option 001 oscillator output is available at the rear panel TIME BASE HIGH STABILITY OPTION connector (not shown). When connected to the TIME BASE INPUT connector, a phase lock is established between the high stability oscillator and the 50 MHz Reference Oscillator. The 1 MHz (divided from the 50 MHz Reference) is the clock 1 and 2 signal for counter 1 and 2 of the Triple Programmable Counter. These two counters supply the Time Base (TB) and ϕ Offset signals to phase lock the low frequency (60 to 110 MHz) VCO to the reference.

Digital data is written to the LF Loop Shift Registers almost every time the frequency is changed. The data sets the frequency of the 60 to 110 MHz low frequency VCO. Data is written into Counter No. 1 (100 Hz resolution; divide-by-1 mode) and Counter No. 2 (1600 Hz resolution; divide-by-1 mode). Data is written into the Triple Programmable Counter when the VCO frequency crosses a 25.6 kHz band edge (Counter 0) or when the frequency resolution changes (Counters 1 and 2). Data is written to all counters when the instrument goes through the power-up routine. This occurs when the Signal Generator is connected to line voltage or reset with the front panel switch.

The Tune Sample Monostable circuit in the low frequency loop sets the LF Loop Ready line low. This line is connected to the Serial LF Loop Data input from the Microprocessor and signals the Microprocessor that the low frequency loop is ready to receive data. The Microprocessor will write the data words serially into the LF Loop Shift Registers and then parallel load the data into the applicable counters to correctly configure the instrument.

Counters No. 1 and No. 2 are up counters and the Triple Programmable Counter's counter 0 is a down counter. Counter No.1 is clocked by the signal from the low frequency VCO. The output of each counter then clocks the next counter dividing the low frequency VCO frequency down to 100 or 250 Hz at the Triple Programmable Counter's counter 0 (Out 0). The Out 0 signal is applied to the Terminal Count Flip-Flop to set a 100 Hz or 250 Hz window on the AND gate. One pulse from Counter No. 2 is gated to the terminal count ÷N output during the window duration. The divide-by-

SERVICE SHEET BD3 (Cont'd)

N signal is applied to the Phase-to-Voltage Converter to phase lock the low frequency loop.

The other clock to the Triple Programmable Counter (Clocks 1 and 2) is the 1 MHz derived from the 50 MHz Reference Oscillator. The output of counter 1 (Out 1) is 100 or 250 Hz, depending upon the Signal Generator frequency selected. This is the time base reference (TB) input to the Phase-to-Voltage Converter. The phase of the divide-by-N input is compared to the TB input to lock the low frequency VCO to the 50 MHz Reference Oscillator. The other input to the Phase-to-Voltage Converter is the 20 μs ϕ Offset pulse from the Triple Programmable Counter.

If a phase or frequency difference exists between the TB and divide-by-N inputs, the Phase-to-Voltage Converter generates a voltage that is proportional to the difference. This voltage is the correction voltage to the low frequency VCO and is applied to the Summing Junction. The Summing Junction output is applied to the Loop Summing Amplifier and then stored on the Tune Voltage Sample and Hold capacitor. The stored voltage is applied to the Loop Integrator. The Loop Integrator output is attenuated, buffered, and summed with the FM signal to tune and frequency modulate the VCO. The VCO's 60 to 110 MHz output is amplified by the Limiter Amplifier before being applied through the VCO Buffer to Counter No.1 and to the 110 MHz Low Pass Filter. The output of the filter is mixed with the 800 MHz on the A6 Frequency Multiplier Assembly (see BD2) to generate the 690 to 740 MHz signal that phase locks the high frequency loop.

On the A10 Audio/Power Supply Assembly, the internal and external frequency modulation signals from BD2 are applied to the FM Deviation Summing Amplifier, converted by the FM Deviation Digital-to-Analog Converter (DAC) programmed by the FM Deviation Control Data from the Microprocessor and amplified by the FM Deviation Amplifier. The FM Deviation Amplifier output is applied to the A3 Low Frequency Loop Assembly Summing Junction and then to the FM Reference Summing Amplifier whose output is the FM Reference input to the FM Cal DAC. The FM Cal DAC output is determined by the data inputs from the Successive Approximation Register (SAR). The output of the SAR is changed when FM Calibration takes place following each frequency change that causes data to be written to Counters 0, 1 or 2 of the Triple Programmable Counter. The calibrated output of the FM Cal DAC is applied to the Current-to-Voltage Converter and then to the DAC Offset Sample and Hold Buffer. This output is then summed with the Tune Voltage in the Summing Junction. The output from the Summing Junction is used to tune and frequency modulate the VCO.

Also included in the low frequency loop is the FM deviation calibration circuitry consisting of the FM Calibration Signal Generator and the Successive Approximation Register and Control Circuitry. Calibration is necessary to ensure that the FM deviation does not vary with oscillator frequency. Calibration is performed by setting

the Successive Approximation Register using the Tune Voltage Sample output from the Loop Summing Amplifier as an input to the Successive Approximation Control Circuitry. A binary search sequence varies the frequency modulation drive signal level until the phase detected deviation of the FM loop signal is nulled by the signal from the FM Integrator.

During calibration the phase lock loop is opened. The frequency of the Voltage Controlled Oscillator (VCO) is fixed by the Tune Voltage Sample and Hold and the VCO is frequency modulated by the FM Calibration Signal Generator signal. The voltage from the phase-to-voltage converter is the detected frequency modulation from the VCO. This voltage is summed with (subtracted from) the In-Band FM Correction Voltage (the FM calibration reference signal) at the first Summing Junction. The resultant voltage is applied to the Loop Summing Amplifier whose output sets the SAR. The Tune Voltage Sample output from the Loop Summing Amplifier is equivalent to phase error. Calibration is complete when this voltage to the SAR is reduced to zero.

TROUBLESHOOTING

General

Procedures for checking the Low Frequency and FM Sections of the instrument are given below. The blocks or points to check are marked on the block diagram by a hexagon with a check mark and a number inside, e.g., $\langle \sqrt{2} \rangle$

Test Equipment

Power Meter and SensorHP 436A/8482A



$\langle \sqrt{\mathsf{1}} \; angle$ 50 MHz Reference Oscillator Checks

- 1. Set the Signal Generator's frequency to 500 MHz, amplitude to 0.0 dBm and modulation off.
- 2. Connect the TIME BASE INPUT on the rear panel to the frequency counter's OUTPUT. With the jumper in the 10 MHz position check that the frequency is 10 MHz. If frequency is not correct, go to Service Sheet 13.
- 3. Connect the power meter to the 50 MHz reference output by removing W5. The power level should be +16 to +14 dBm. If the level is not correct, go to Service Sheet 13.

$\langle \sqrt{2} \rangle$ Divider Circuit (Counter) Checks

1. Connect the frequency counter to test point A3J3 pin 5. The frequency should be 1 MHz divided from the 50 MHz reference. If the frequency is not correct, go to Service Sheet 13.



Service Model 8656A

SERVICE SHEET BD3 (Cont'd)

- 2. Connect the frequency counter to A3TP4, the buffered output of the LF Loop VCO. With the frequency set to 500 MHz, the VCO frequency should be 100 MHz. If the frequency is incorrect, go to Service Sheet 8.
- 3. Connect the oscilloscope to test points A3J3 pins 4, 6 and 7. The waveforms at pins 4 and 7 should be a 100 Hz squarewave; at pin 6 a 20 μ s pulse at a 100 Hz rate. If any or all of the waveforms are not correct, go to Service Sheet 9.


$\left\langle \sqrt{3} \right angle$ VCO Tune Voltage and FM Checks


- 1. Connect the multimeter to A3TP2 and measure the dc voltage. It should be 0.6 ± 0.3 Vdc with the frequency set to 500 MHz (LF VCO frequency should be 100 MHz). If voltage is not correct, go to Service Sheet 10.
- 2. Increment the frequency up and down 5 MHz from 500 MHz. Voltage should change approximately 1.2 volts for each step. Return to 500 MHz. If the voltage change is incorrect, go to Service Sheet 10.

- 3. Connect the multimeter to feedthrough capacitor C15 (the +13 Vdc power supply for the LF Loop VCO). The voltage should be $+13\pm2$ Vdc with the noise less than 0.03 Vp-p. If the voltage or noise is incorrect, go to Service Sheet 10 or Service Sheet 22 (+15V power supply).
- 4. Connect the oscilloscope to A3TP2 and set the Signal Generator's modulation to 1 kHz INT, FM, 99 kHz deviation. The waveform should be a 1 kHz modulation signal at approximately 0.05 Vp-p. If incorrect, go to Service Sheet 11.

√4 Frequency Modulation Checks

- 1. Set the Signal Generator's frequency to 500 MHz, modulation to 1 kHz INT FM at 99 kHz deviation.
- 2. Connect the oscilloscope to A3J1 pin 7. The waveform should be 1 kHz at approximately 6.5 Vp-p. If incorrect, go to Service Sheet 6.
- 3. Connect the oscilloscope to test point A3J2 pin 13. The waveform should be a 1 kHz modulation signal of about 7.5 Vp-p. If incorrect, go to Service Sheet 12.

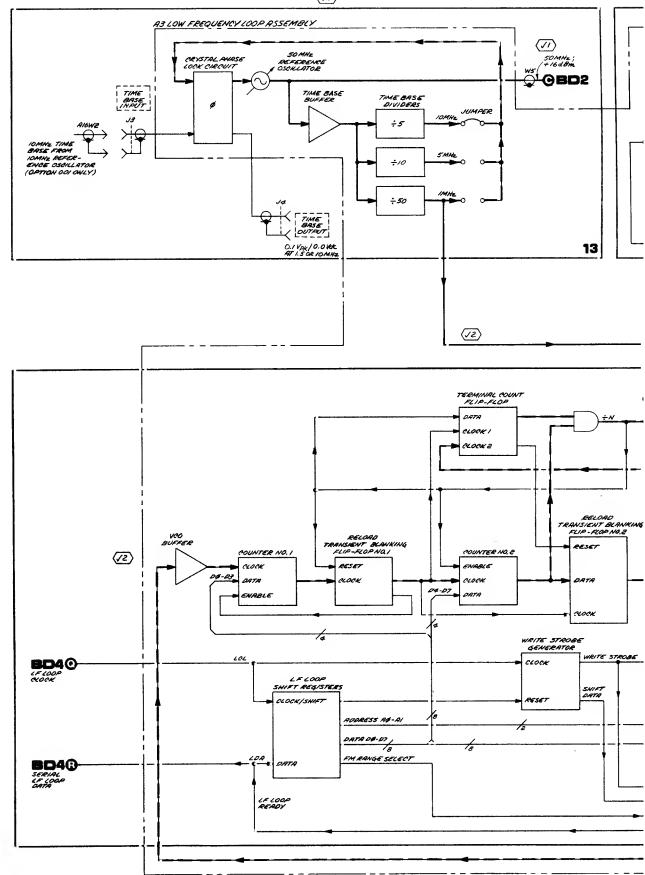

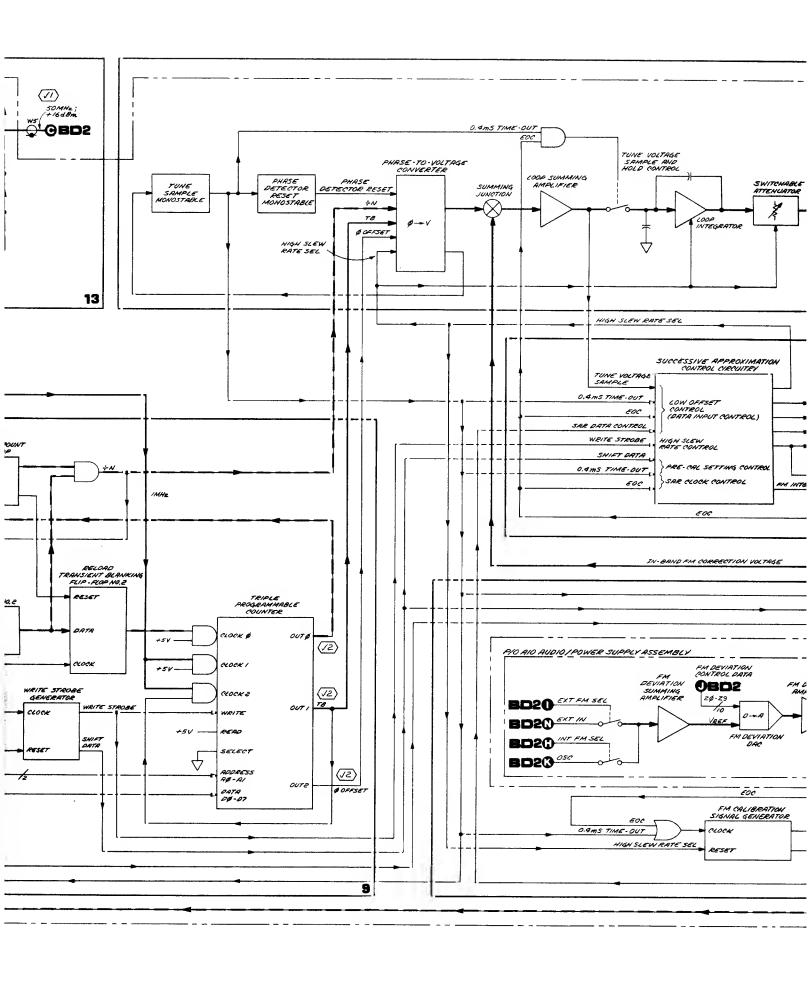

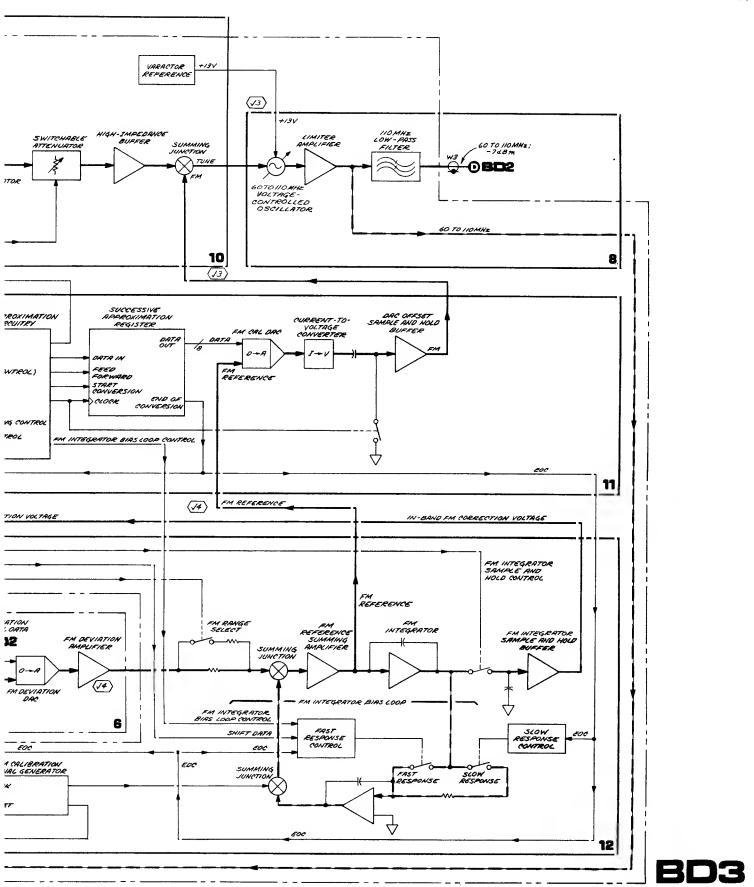


Figure 8-35. Low Frequency and FM Section Block Diagram

SERVICE SHEET BD4 KEYBOARD, DISPLAY AND MICROPROCESSOR SECTIONS TROUBLESHOOTING HELP

Service Sheet BD1
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

A1 Keyboard Assembly. The Keyboard Assembly consists of forty-eight pushbuttons or keys hard-wired in an eight-row by six-column matrix. Whenever a key is pressed, a row line is connected to a column line. This causes a keyboard interrupt to be issued to the Microprocessor. When the Microprocessor is interrupted, the row and column data is strobed into the Keyboard Data Latch/Shift Register and then serially shifted over the data bus to the Microprocessor.

A11 Microprocessor, Memory, and HP-IB Assembly. The data bus (D0) through D7 consists of eight bidirectional lines which are used to transfer 8-bit, positive-true data to and from the Microprocessor. The Microprocessor reads data from memory, the keyboard, and the HP-IB interface. Information on the data bus is buffered as it enters or leaves the Microprocessor. The Read/Write signal (R/W) from the Microprocessor is used to control the direction of data transfer on the data bus. This signal is buffered by one of the Microprocessor Control Line Buffers.

The address bus (A0 through A15) consists of sixteen unidirectional lines which are used to transfer the 16-bit, positive-true address from the Microprocessor. These address bits are buffered and then used to enable the ROM Select Decoder and address the Read Only Memory (ROM) and Random Access Memory (RAM) locations. In addition, the buffered address bits are decoded to produce modulation, attenuator, and serial Input/Output (I/O) control strobes. The serial I/O control changes the eight bits of parallel data to serial data and clocks this data to the high frequency loop and output section (see BD2), the low frequency loop (see BD3), and the display. It also clocks serial input data from the keyboard to the Microprocessor.

The Halt input to the Microprocessor halts program execution and the Reset input starts the Microprocessor from a power down condition. This signal sequence is used during initial start up of the instrument, after a power failure has occurred, or after the RESET/STBY/ON switch is momentarily set to the RESET position. When the Microprocessor is reset, it will enter its power-up subroutine to initialize the instrument.

The Maskable Interrupt Request (IRQ) input to the Microprocessor is used to interrupt program execution. Maskable interrupts occur whenever a key on the keyboard is pressed, a reverse power condition is detected, or an active low is on the rear panel connector J5 (SEQ). The three maskable interrupts plus the five status conditions (i.e., ON, Overmodulation, Undermodulation, HP-IB interrupt, and

LF Loop Ready) all provide status inputs to the Interrupt Processing circuit which puts the instrument status information on the data bus.

The Signal Generator memory consists of 348 bytes of RAM (128 internal to the Microprocessor and 12K bytes of ROM. The program used to control the operation of the Signal Generator is stored in the ROM.

All HP-IB data input/output, control, and handshake signals are buffered before being applied to the HP-IB General Purpose Interface Adapter.

A2 Display Assembly. Sixteen bits of serial display data (DDA) are sent from the Microprocessor to the Display Address and Data Shift Registers. Six of the bits are decoded to produce the eleven display strobes and two keyboard strobes. The keyboard strobes are used to strobe column and row data from the keyboard while the display strobes are used to strobe modulation, frequency, and amplitude display data into their respective control drivers and latches. The display data is decoded and latched to drive the applicable 7-segment display or LED annunciator.

TROUBLESHOOTING

General

Procedures for checking the Keyboard, Display and Microprocessor sections of the instrument are given below. The blocks or points to check are marked on the block diagram by a hexagon with a check mark and a number inside, e.g. $\sqrt{3}$.

Test Equipment

$\overline{\left<\sqrt{1}\right>}$ Power-On or Reset Sequence

1. Switch the RESET-STBY-ON switch to RESET and back to ON to initiate the internal memory check. This check tests for a failure in ROM (Read Only Memory) and in RAM (Random Access Memory). During this check, all front panel indicators will light for approximately 1.5 seconds to provide a quick visual inspection of each front panel annunciator and display segment. All the display segments will display the number eight except the least significant FRE-QUENCY digit will be five and the AMPLITUDE most significant digit will be a one. If a memory failure is detected, all front panel annunciators and display segments will remain lit until any front panel key is pressed. If the memory check was successful, the front panel indicators will display a carrier frequency of 100.0000 MHz, an output amplitude of -127.0 dBm, and no modulation. All annuciators (except dBm) will remain off. Table 1 lists the conditions of the Signal Generator as a result of a successful initialization sequence.

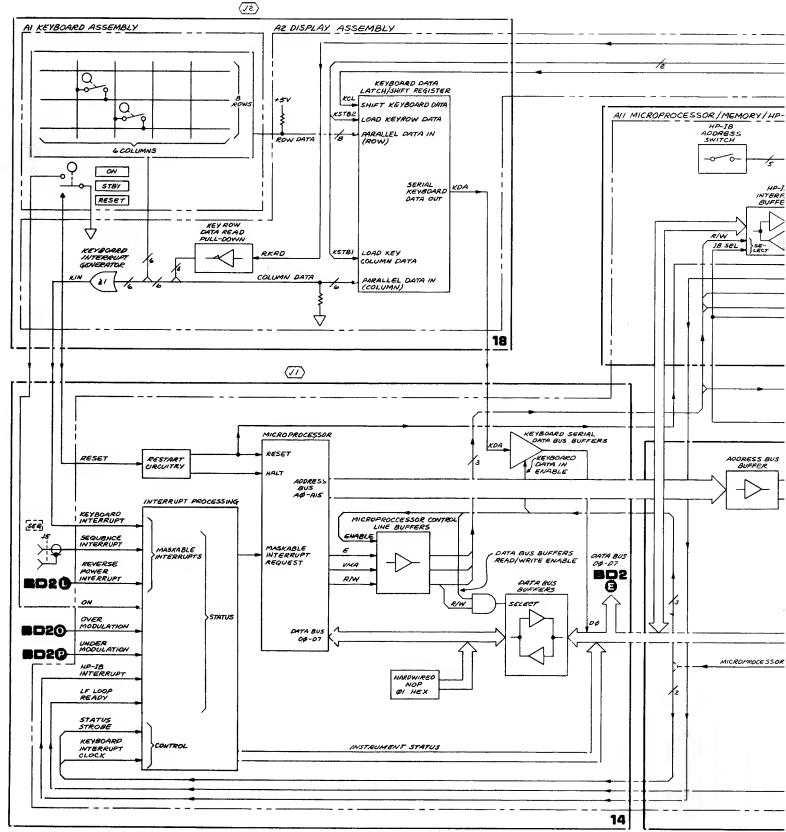



Table 1. Initialized Conditions


Parameter	Initialized Condition
Carrier Frequency Output Amplitude AM Depth FM Peak Deviation Frequency Carrier Frequency Increment Output Amplitude Increment AM Depth Increment FM Peak Deviation Frequency Increment Coarse and Fine Tune Pointer Sequence Counter All 10 Internal Storage Registers	100.0000 MHz -127.0 dBm 0% 0.0 kHz 10.0000 MHz 10.0 dB 1% 1.0 kHz 10.0000 MHz 0 100.0000 MHz and -127.0 dBm with no


If the reset sequence is not completed successfully, see Service Sheets 14 and 16. Perform the signature checks for the two Service Sheets.

- 1. Connect the Signal Generator's RF Output to the modulation analyzer's input.
- 2. Connect the HP-IB controller to the Signal Generator's HP-IB input connector.
- 3. Enter modulation, frequency and amplitude data from the keyboard and the controller.
 - a) If the RF output modes follow the data entered, but one or more of the displays do not, go to Service Sheets 19 and 20 or 21. Trouble-shoot the appropriate strobes, latches, drivers and displays.
 - b) If the displays follow the data entered but one or more of the RF output modes do not, go to Service Sheets BD2, BD3, or 15.
 - c) If the output modes and displays follow data entered from the keyboard but not the HP-IB controller, go to Service Sheet 17.
 - d) If the output and displays follow data entered from the HP-IB controller but not the keyboard, go to Service Sheet 18.



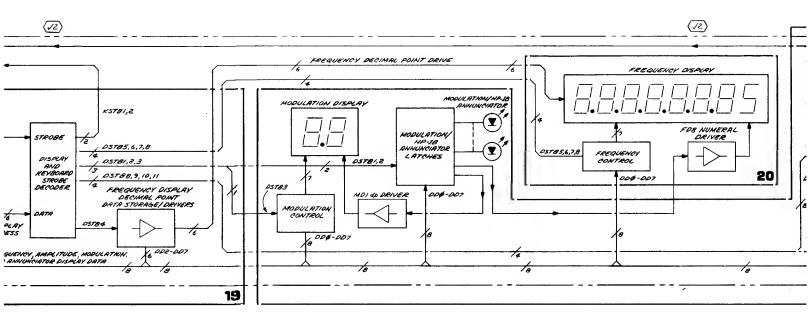

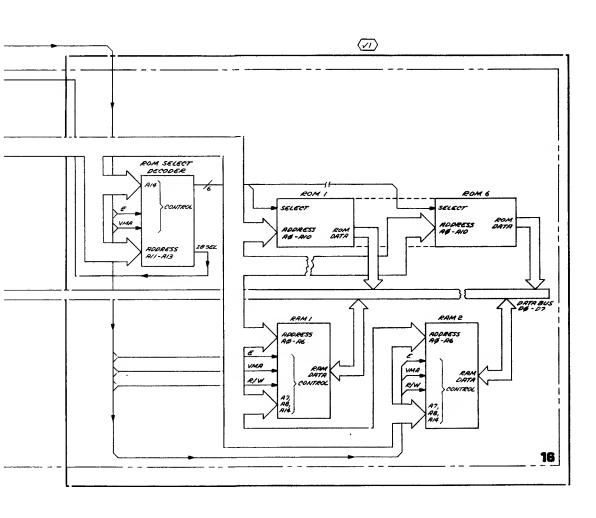

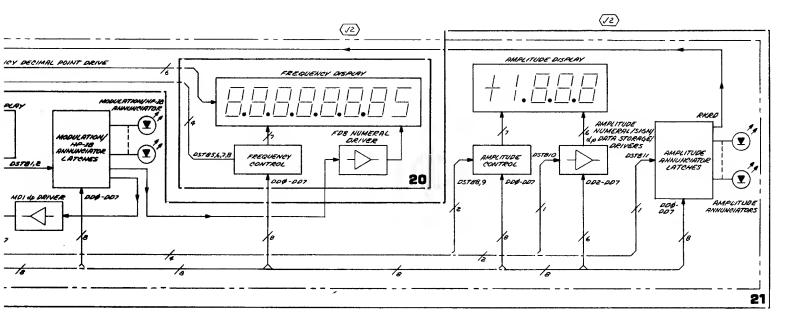

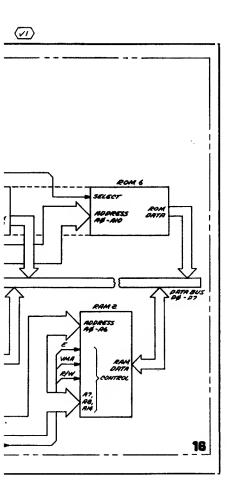




Figure 8-36. Microprocessor, Keyboard and Display Section Block Diagram

SERVICE SHEET 1 P/O A4 HIGH FREQUENCY LOOP ASSEMBLY A5 HIGH FREQUENCY OSCILLATOR ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD2
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

General

The Voltage Controlled Oscillator (VCO) oscillates over a range of 494 to 990 MHz. It is tuned over this range by a -7.5 to +12 volt triangular wave signal. The output signal passes through a power splitter and is coupled to the RF Dividers (on the way to the RF Output) and to the High Frequency Loop Assembly.

Within the High Frequency Loop, the VCO signal is mixed with the phase locked signal (690-740 MHz). As the VCO is searching for its lock point, the mixer generated sidebands pass through a bank of selectable notch filters. The appropriate filter is turned off thus allowing the selected IF sideband to pass. The sampling bridge phase-compares the sideband (a multiple of 50 MHz) with a 50 MHz reference signal. When the correct sideband appears at the sampling bridge, the output to the loop with the amplifier (which up to now has been a continuously changing voltage) becomes a dc voltage. This voltage sets the High Frequency Loop Phase lock point. For more information, refer to the Loop and Search Amplifiers in Service Sheet 2.

Voltage Controlled Oscillator

The tune voltage ramp and the phase lock voltage are supplied to the varicaps CR1 and CR2 by the Loop Amplifier in conjunction with the Search Amplifier. This voltage is coupled into the VCO by the Low Pass Filter composed of L5, L6 and C10. The LPF also isolates the VCO. Varicaps CR1 and CR2 tune the tank circuit which includes inductor L8. Capacitors C11, C13 and C14 provide RF ground for the tank circuit. Varicap bias voltage of approximately $-7.5~\rm Vdc$ is obtained from voltage divider R20, R21 and the $-15\rm V~(F2)$ supply. The output of the tank circuit is coupled into the VCO transistor Q3 by capacitor C15. Transistor Q3 is dc biased by R20, R21, L10 and R23. Inductor L11 causes a negative resistance to appear at the emitter of Q3 while C18 removes the negative resistance effect of L11 at low frequencies. Resistor R22 and capacitor C20 moderate the negative resistance effect looking into the emitter and reduce the Q of L11. Capacitors C19 and C21 bypass RF frequencies and power supply noise to ground. Power supply noise or other noise will frequency modulate the oscillator output.

Buffer Amplifier No. 1

Output of the VCO is coupled to the base of Q2 through capacitors C1 and C5 and the 6 dB isolation pad R3, R4, and R5. The collector current of Q3 flows through R1 and R2 to dc bias the base of Q1. Since the emitter of Q1 is also connected to the +15V (F4) supply by R6, the emitter voltage will be approximately 0.6 Vdc more positive than the base. The current in resistor R6 is determined by the voltage difference between the +15 volt supply and the voltage at the emitter of Q1. The current through R6 takes two paths. One path for the current is into the emitter of Q1 and out at its collector. This current is multiplied by the common-base current gain of Q1 which is approximately one. This is the base current for Q2. The other path for the current from R6 flows through R8 and L3 and is the collector current for Q2. The actual base and collector currents depend on the DC current gain of Q2. Therefore, the total current from R6 is

the sum of the base current and collector current of Q2. This is equal to the emitter current of Q2. The result is that the bias circuit gives accurate and stable control of the emitter current of Q2. Inductor L4 is used to match the collector to the output. Inductor L2, resistor R9, and capacitor C7 are for collector-to-base feedback. Capacitor C9 is a frequency compensation capacitor for Q2 emitter resistors R10 and R11. Capacitors C2, C3, C4, and C6 are filter capacitors.

Power Splitter

Output of Q2 is coupled to the Power Splitter by capacitor C8 and a 2 dB pad which consists of R12, R13, and R14. One output of the Power Splitter goes to the RF Dividers which are located on the A6 Assembly. The other output of Power Divider goes through the 6 dB pad which consists of R16, R17, R19, and C17 to Buffer Amplifier #2 which is located on the A4 Assembly. This output is used to phase lock the VCO. Coupling capacitor C17 passes the RF signal and blocks the +15V(F5) from inductor L12 which also acts to block the RF signal. The RF signal and +15V (F5) are both connected to Buffer Amplifier #2 by the same wire. The Power Splitter also serves to isolate the RF output path from the 690-740 MHz input to Mixer U1.

Buffer Amplifier No. 2

Output of the A5 Assembly is accoupled to the base of Q2 through 1100 MHz Low Pass Filter composed of L6, L7, L8, L9, C9, C10, and C11. Capacitor C14 blocks the +15 Vdc from the A5 Assembly. Resistors R4 and R5 form the voltage divider to dc bias the base of Q1. The current in resistor R8 is determined by the voltage difference between the +15 Vdc supply and the voltage at the emitter of Q1. The current through R8 takes two paths. One path is into the emitter of Q1 and out at its collector. This current is multiplied by the common-base current gain of Q1 which is approximately one. This is the base current for Q2. The other path for the current from R8 flows through R15 and L3 and is the collector current for Q2. The actual base and collector current depends on the dc current gain of Q2. Therefore, the total current from R8 is the sum of the base current and collector current to Q2. This is equal to the emitter current of Q2. The result is that the bias circuit gives accurate and stable control of the emitter current of Q2. Inductor L14 is used to match the collector to the output. Inductor L12, resistor R16 and capacitor C18 are for collector to base feedback. Capacitor C13 and C15 are filter capacitors. Buffer Amplifier #2 amplifies the VCO's 494-990 MHz signal to about +5 dBm. The signal is then ac coupled through the 450 MHz high-pass filter C21, C22, C23, L17 and L18 to one input of Mixer U1. The other input to Mixer U1 is a 690 to 740 MHz signal of approximately -2 dBm from the Frequency Multiplier Assembly A8. The factory selected pad, that consists of resistors R6, R7, and R10 reduces this signal to -7 dBm. The difference frequencies from Mixer U1 are passed through the IF Input Filter which consists of inductors L19, L21, L26 and capacitors C33, C26, C38, and C41. The output of Mixer U1 is terminated by C30 and R23. C43 and L28 form a notch filter which is tuned to 300 MHz.

IF Buffer Amplifier

One of the IF sideband frequencies from Mixer U1 are phasecompared to the 50 MHz Reference to phase-lock the High Frequency Loop. Refer to Table 1 for a listing of these signals. Table 2 can be used with Table 1 to find the sideband for any frequency selected. At the 0 MHz (dc) frequency, the Mixer acts as a phase dectector. The IF Buffer Amplifier transistors Q3 and Q4 are biased off until one of the Notch Filters is selected (turned off). When a notch filter control line is pulled low by the output of the IF Drivers (See Service Sheet 2), the selected notch filter is turned off by biasing on one of the diodes CR7, CR8, CR9, CR10, or CR11 which shorts out the series capacitor of the notch filter C53, C61, C64, C67, or C70. The notch filter that is turned off then becomes a parallel tuned circuit. It now is a bandpass filter for the selected IF frequency. When the selected diode is biased on, current is drawn from the +15 Vdc supply through resistor R29 which biases on transistor Q4. Transistor Q4 will bias transistors Q3 and Q5 on. Q3 will amplify the IF signal by approximately 6 dB and Q5 will ground any dc voltage from Mixer U1. Resistor R31 provides collector to base feedback in the IF Buffer Amplifier and resistor R39 and capacitor C50 increase the gain at the high IF frequencies to compensate for the increased losses in the input and output filters.

The DC Notch Filter Q5 is used when the VCO's frequency to Mixer U1 is from 690 to 740 MHz (the same as the input from the Frequency Multiplier Assembly A8). The two frequencies will track and the mixer will function as a phase detector. The mixer's dc output voltage is proportional to the phase difference of the two inputs. The output of Mixer U1 looks into a high impedance and not into 50 ohms since the DC Notch Filter and the IF Buffer Amplifier are turned off. Consequently, the voltage level is 6 dB higher in the dc notch range. Since transistors Q3, Q4 and Q5 are all off, Q5 does not ground the dc voltage from Mixer U1. The dc voltage is sampled and fed back to keep the VCO locked.

Sampling Bridge and Pulse Generator

The output of the IF Buffer Amplifier or the DC Notch Filter is the input to be sampled by the Sampling Bridge. The 50, 100, 150, 200 or 250 MHz IF frequency is filtered by the 300 MHz Notch Filter (C85, C86 and L40) and the IF Output Filter (L20, L22, L27, C35, C37, C80, and C81). Resistor R24 and capacitor C79 provide a 50Ω impedance looking into the Sampling Bridge. The 50 MHz Reference Oscillator drives the Sampling Bridge. The 50 MHz, +13 dBm reference signal is applied to transformer T1. Resistors R1, R2 and R3 form a 2 dB pad and inductor L11 and capacitor C12 are used for impedance matching. T1 is the input to the Pulse Generator where 50 MHz pulses are generated by biasing the step recovery diode CR2 on and off. The IF input to the Sampling Bridge is sampled every 20 ns for 1.5 ns. When CR2 is biased off, inductors L15 and L16 will turn the Sampling Bridge on for 1.5 ns. The sampled output is stored in capacitors C28 and C29 and the dc voltage is applied to the 13 MHz Low Pass Filter through R27. When the level of the voltage from the

Table 1. Loop and IF Sideband Frequencies

High Frequency VCO Output (MHz)	Difference Frequencies from Mixing LF Loop Output and 800 MHz (MHz)	'Not Selected' IF Sideband (MHz)
494-540	694-740	-200
540-590	690-740	-150
590-640	690-740	-100
640-690	690-740	-50
690-740	690-740	DC
740-790	690-740	+50
790-840	690-740	+100
840-890	690-740	+150
890-940	690-740	+200
940-990	690-740	+250

Table 2. RF OUTPUT versus HF Loop Output

0	Output			Bandwid	ith (MHz)	
Output Divider	Frequency (MHz)		T	otal	IF Sic	leband
Mode	RF	HF Loop	RF	HF Loop	RF	HF Loop
÷1/						
Heterodyne	0.1-123.5	800.1-923.5	123.4	123.4	50	50
÷4	123.5-247	494-988	123.5	494	12.5	50
÷2	247-494	494-988	247	494	25	50
÷1	494-990	494-990	496	496	50	50

sampler is changing at a rate greater than 80 Hz, the voltage is coupled through C29 and C34 to the 13 MHz Low Pass Filter. FET Q6 provides a high impedance for the sampling bridge to drive and transistor Q7 provides a low impedance output to drive the 13 MHz Low Pass Filter. The Sampler Amplifier, which consists of Q6 and Q7, is a voltage follower feedback amplifier which functions to increase the bandwidth of the sampler. Transistor Q7 and FET Q6 are always turned on. Approximately 5 mA flows through R22 and Q6 providing 0.6 Vdc between the base and emitter to bias Q7 on. The sampled voltage is stored in capacitor C29 and C28 which is connected to the gate of Q6. For a small voltage change on the gate of Q6 more current must go through R26 to produce the voltage change at the collector-source junction of Q6 and Q7. A portion of the current is supplied by Q6 and the remainder is collector current from Q7. This voltage change is also coupled through C16 to increase the sampler bandwidth.

TROUBLESHOOTING

Procedures for checking circuits of the A5 High Frequency Oscillator Assembly and P/O A4 High Frequency Loop Assembly are given

below. The areas or points to check are marked on the schematic by a hexagon with a checkmark and a number inside, e.g., $(\sqrt{1})$. Fixed voltages are shown on the schematic inside a hexagon, e.g. $(2V\pm0.2V)$. Transistor bias voltages are shown without tolerances.

Test Equipment

Power Meter	HP 436A
Power Sensor	HP 8482A
Digital Multimeter	HP 3465A
Frequency Counter	
Adapter Probe	HP 1250-1598
Adapter, Type-N male to	
BNC female	HP 1250-0780
Cable-BNC male to SMC female.	HP 08662-60080

$\sqrt{1}$ Voltage Tuned Oscillator Check

- 1. Check the bias voltage on Q3.
- 2. Connect counter to TP5 using the cable and adapters.
- 3. Connect counter time base to the Signal Generator's TIME BASE INPUT.
- 4. Set the Signal Generator's output level to $-10~\mathrm{dBm}$ without modulation.
- 5. Verify that the oscillator frequency is within ± 1000 Hz of the center frequency, and that the tune voltage is within tolerance for each frequency shown in Table 3.

Table 3. VCO Frequency versus Tune Voltage

Oscillator Frequency (MHz)	Typical Tune* Voltage (Vdc)	Tune Voltage* Tolerance (Vdc)
500.0000	-6.715	-6.9 to -6.0
510.0000	-6.528	-6.7 to -5.8
520.0000	-6.327	-6.5 to -5.6
530.0000	-6.112	-6.3 to -5.4
540.0000	-5.888	-6.1 to -5.6
550.0000	-5.650	-5.9 to -5.4
715.0000	-0.905	-3.0 to +2.5
990.0650	+8.945	+2.5 to +12

^{*}Voltage measured at TUNE signal location (white/black/orange wire.)

$\sqrt{2}$ Buffer Amplifier No. 1

- 1. Check the bias voltages on transistor A5Q1 and Q2.
- 2. Set the Signal Generator to -10 dBm at 500 MHz without modulation.

3. Measure the power at the test points shown in Table 4. Connect the power sensor to the test points using the cable and adapters.

$\langle \sqrt{3} \rangle$ Buffer Amplifier No. 2

- 1. Check the bias voltages on A6Q1 and Q2.
- 2. Set the Signal Generator to -10 dBm at 500 MHz without modulation.
- 3. Measure the power at the test points shown in Table 5. Connect the power sensor to the test points using the cables and adapters.

$\langle \sqrt{4} \rangle$ IF Input Filter

- 1. Set the Signal Generator to -10 dBm at 500 MHz without modulation.
- 2. Connect power sensor to test points indicated in Table 6 using cable and adapters. Verify that the power levels are correct.

$\langle \sqrt{5} \rangle$ IF Buffer Amplifler

- 1. Set the Signal Generator to −10 dBm at 500 MHz without modulation.
- 2. Measure and verify the voltages shown in Table 7.

3. Disconnect the TUNE voltage to the A5 High Frequency Oscillator Assembly. Measure the voltage at TP8. It should be 0.000 ± 0.005 Vdc.

$\left(\sqrt{6} \right)$ Notch Filters

- 1. Set the Signal Generator to -10 dBm at 500 MHz without modulation.
- 2. Connect counter to TP8 using cable and adapters.
- 3. Measure and verify the IF Filter select voltages in Table 8.

$\langle \sqrt{7} \rangle$ Pulse Generator, Sampling Bridge

- 1. Set the Signal Generator to $-10~\mathrm{dBm}$ at $500~\mathrm{MHz}$ without modulation.
- 2. Connect power sensor to the test points indicated in Table 9 using cable and adapters. Measure and verify the power levels.
- 3. Ground TP13 and disconnect the TUNE voltage to the High Frequency Oscillator Assembly A5. Remove the wire to the feedthrough capacitor C44. Verify that the voltage at TP12 is 0.000 ± 0.010 Vdc.

Table 4. Buffer Amplifier No. 1 Power Levels

Test	Power Le	Power Level (dBm)				
Point Closed Circuit		Open Circuit*	Circuit Opened By			
A5TP1	-4.00 to -10.00	+2.00 to -4.00	Remove jumper to A4			
A5TP2	+6.45 to +0.45	+8.00 to +2.00	Remove jumper to A6			
A5TP3	+4.45 to −1.55	+7.15 to +1.15	Remove jumper to A4			
A5TP5	+3.65 to -2.35	+4.50 to -1.50	Unsolder base of Q2			

^{*}To make the open circuit measurements, disconnect the white/black/orange wire. Ground the TUNE input to the Voltage Controlled Oscillator on A5.

Table 5. Buffer Amplifier No. 2 Power Levels

Test	Power Le		
Point	Closed Circuit	Open Circuit*	Circuit Opened By
A4TP2 A4TP3 A4TP4	-5.0 to -11.0 -1.5 to -9.5 +5.5 to -0.5	-2.0	remove R6 and R7

^{*}To make the open circuit measurements, disconnect the white/black/orange wire. Ground the TUNE input to the Voltage Controlled Oscillator on A5.

Model 8656A Service

SERVICE SHEET 1 (Cont'd)

Table 6. IF Input Filter Power Levels

Test	Power Le	Power Level (dBm)				
Point	Closed Circuit	Open Circuit*	Circuit Opened By			
A4TP5	−15.5 to −19.5	-11.5 to -15.5	Disconnect C30, L19			
A4TP6	-18.0 to -22.0	-14.0 to -18.0	Disconnect C47, L30			

^{*}To make the open circuit measurements, disconnect the white/black/orange wire. Ground the TUNE input to the Voltage Controlled Oscillator on A5.

Table 7. IF Buffer Amplifiers Biasing

Signal		Bias Q3 (Vdc)		Bias Q4 (Vdc)			Bias Q5 (Vdc)	
Generator Frequency	E	В	C	E	В	С	E	В	С
500 MHz	+0.14	+0.89	+4.82	+10.47	+9.79	+2.27	0.00	+0.74	grd
700 MHz	0.00	0.00	+14.06	+14.06	+14.06	0.00	0.00	0.00	grd

Table 8. IF Filter Select Voltages

Signal	IF Filter Select Voltage* (Vdc) at IF SEL Inputs					
Generator Frequency (MHz)	250	200	150	100	50	Frequency at TP8 (MHz)
500	14.0	0.9	14.0	14.0	14.0	200
550	14.0	14.0	0.9	14.0	14.0	150
600	14.0	14.0	14.0	0.9	14.0	100
650	14.0	14.0	14.0	14.0	0.9	50
940	0.9	14.0	14.0	14.0	14.0	250
700	14.0	14.0	14.0	14.0	14.0	DC

Table 9. Pulse Generator and Sampling Bridge Power Levels

Test	Power Lo	Circuit Onemed Du	
Point	Closed Circuit	Open Circuit*	Circuit Opened By
A4TP8	-9.0 to -13.0		
A4TP9	+11.8 to +7.8	+15.0 to +11.0	Disconnect R1, R2

 $^{{\}bf *To\ make\ the\ open\ circuit\ measurements,\ disconnect\ and\ ground\ the\ TUNE\ voltage\ input\ to\ the\ A5\ Voltage\ Controlled\ Oscillator.}$

Service Model 8656A

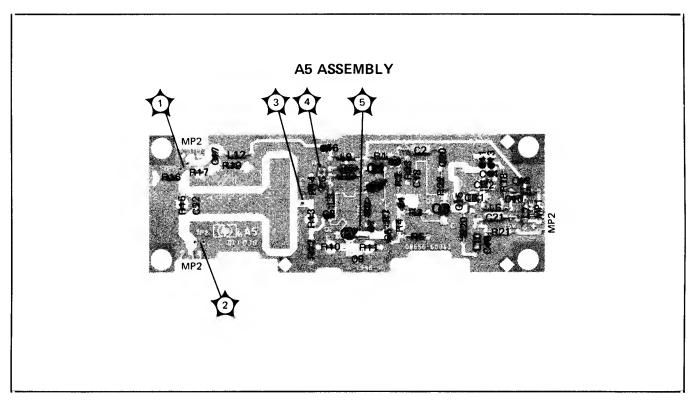


Figure 8-37. High Frequency Oscillator Component Locations

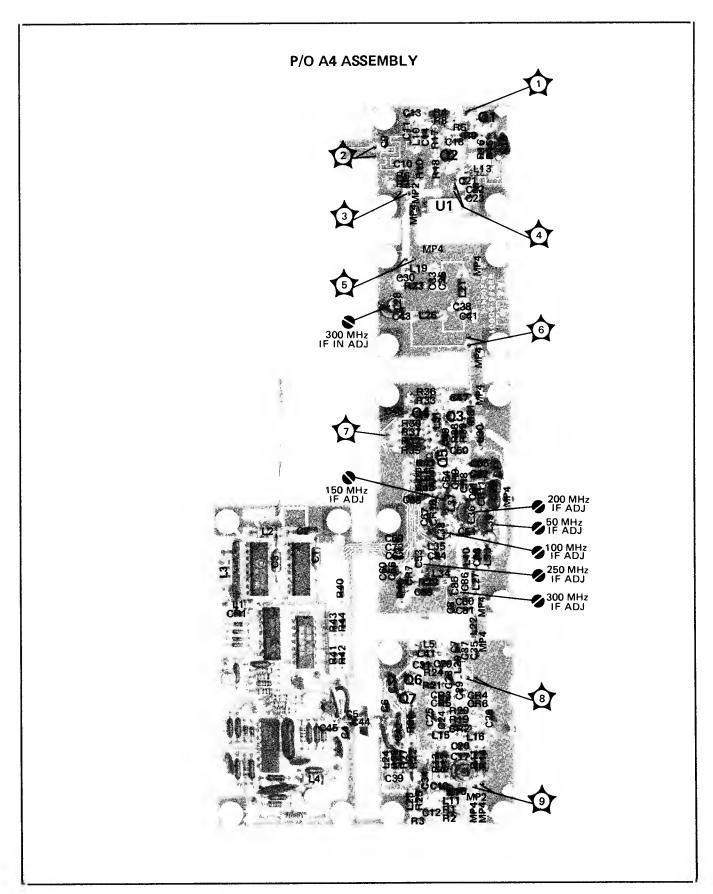


Figure 8-38. IF Section (A4 Assembly) Component Locations




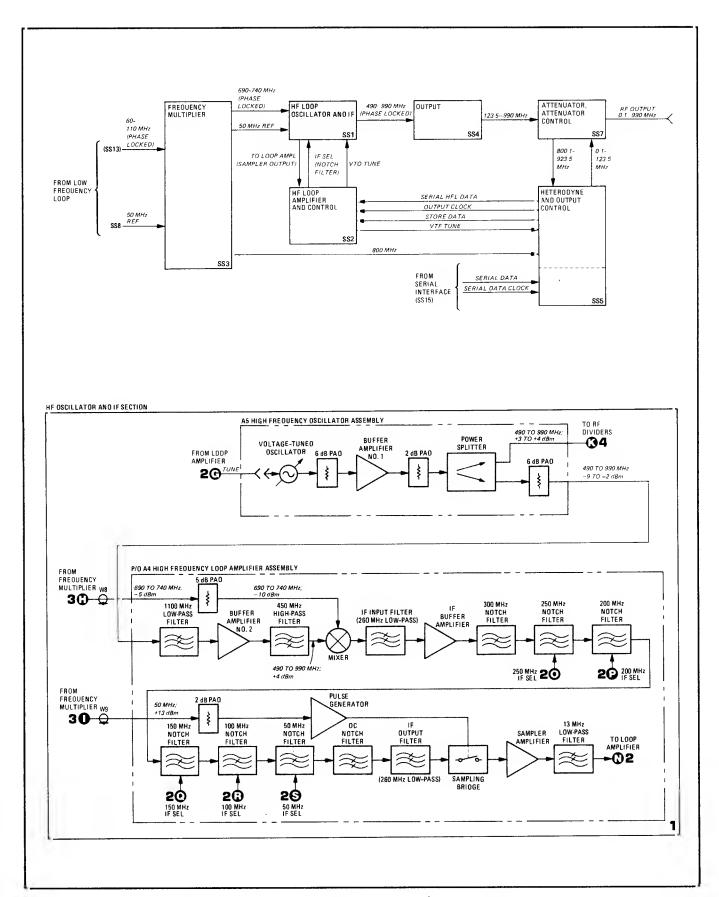


Figure 8-39. High Frequency Oscillator and IF Section Block Diagrams

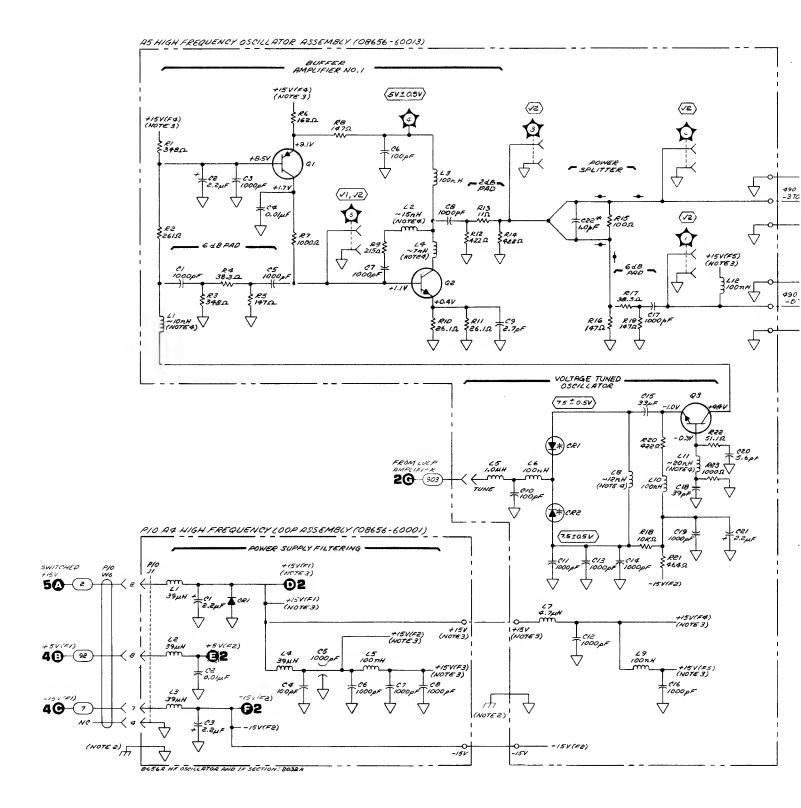

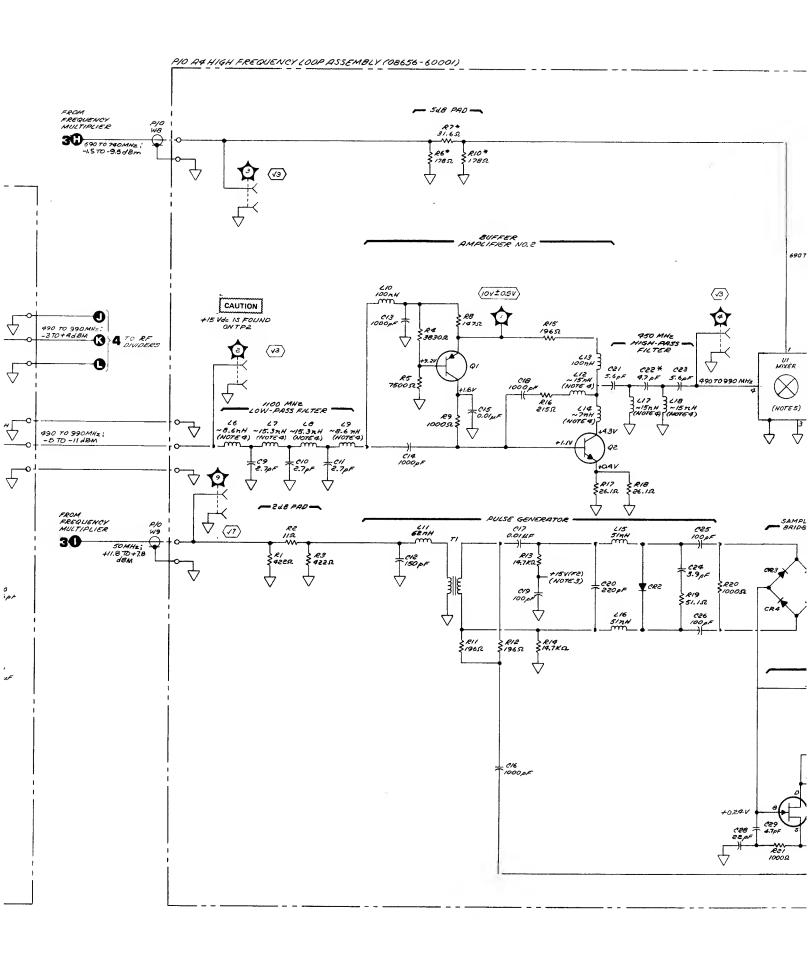

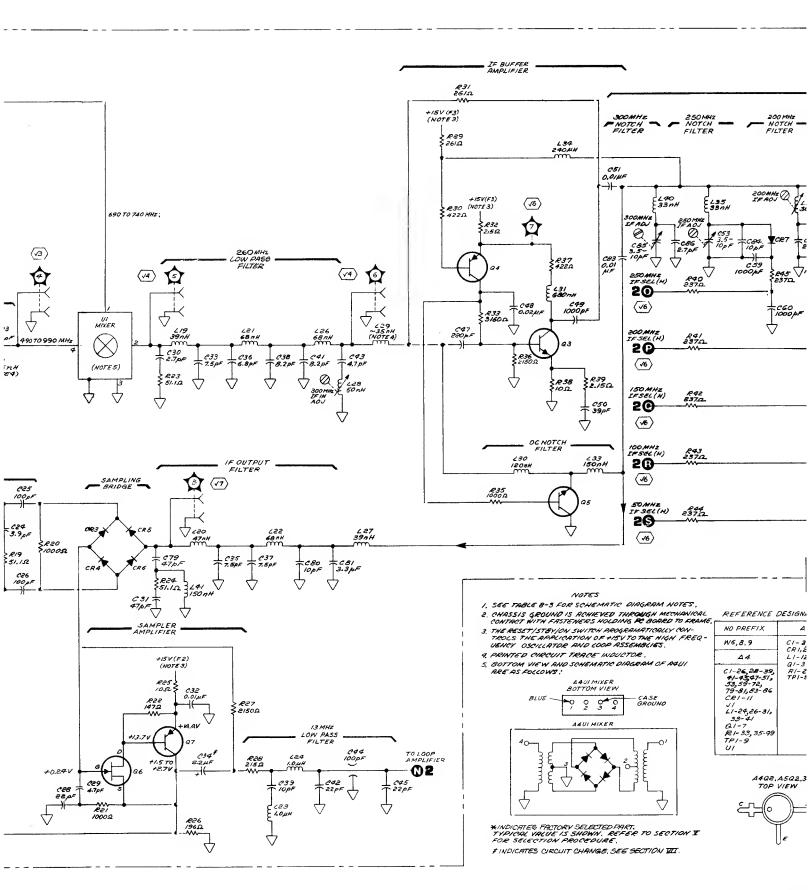

Figur

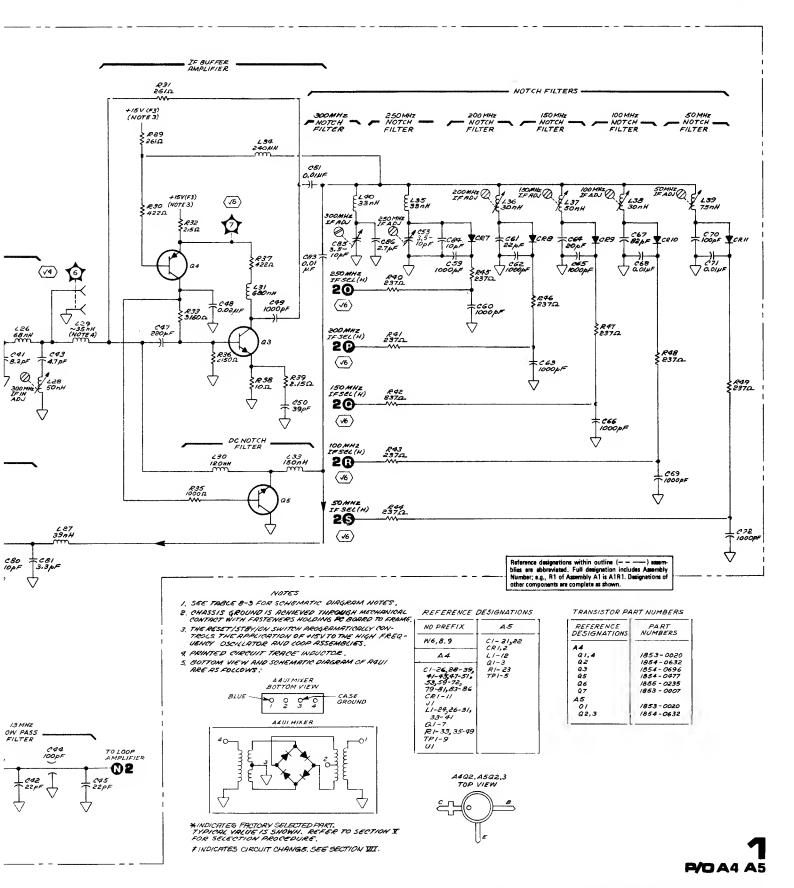


Figure 8-40. High Frequency Oscillator and IF Section Schematic Oiagram

SERVICE SHEET 2 P/O A4 HIGH FREQUENCY LOOP ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD2
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

General

The Loop Amplifier, U5A, functions as an integrator within the loop bandwidth (less than 50 kHz). U5B is a comparator. When the search mode is entered, the input from the sampler (positive input to U5A) begins to change. The comparator input U5B-pin 3 follows the output of U5A. When the reference level (-3.75 Vdc) is reached, the comparator output switches to the opposite polarity which places a voltage differential across C73. C73 begins to discharge and the voltage again approaches the comparator's reference level. This continued action of the comparator and integrator produces a linear triangle waveform. It is used to sweep the voltage controlled oscillator across its frequency range while searching for the loop lock point. When phase lock occurs, the input voltage from the sampler becomes a dc level. The input to the comparator no longer changes, the switching action of U5B stops, and the sweeping output of U5A (the VCO's tune voltage) stops. The VCO output frequency is now essentially fixed and phase locked.

Loop and Search Amplifiers

The Loop Amplifier U5A is a non-inverting unity gain amplifier for frequencies greater than 50 kHz and an integrator for frequencies less than 50 kHz. The phase lock loop does not require additional gain above 50 kHz for phase lock operation. The input signal level from the sampler is at a higher level than necessary for the Voltage Controlled Oscillator's sensitivity. Resistor R72 and capacitor C78 reduce this level by 6 dB. Since the Loop Amplifier does not have any dc feedback the dc gain is open loop. AC feedback is by capacitor C73. The higher frequencies are coupled directly to the VCO tune bus through capacitor C77. The VCO Tune bus applies the TUNE voltage to the Voltage Controlled Oscillator across R70, R71 and R54 and to the positive input of Search Amplifier U5B through resistor R69.

Search Amplifier U5B functions as a comparator. The negative input of U5B is fixed at approximately -3.75 Vdc by resistor R73 and R74. The voltage at pin 1 will be near either -14 Vdc or +14 Vdc. This change in voltage of U5B will be integrated by U5A to generate both a negative and positive "ramp" VCO Tune Voltage to sweep the Voltage Controlled Oscillator. Therefore, U5A and U5B form a triangle wave generator with an output from U5A that will sweep from approximately -7.5V to +12V.

Refer to the waveforms in Figure 1. The loop is unlocked and the positive input to U5B is more positive than $-3.75\,\mathrm{Vdc}$. The output of U5B is switched to $+12\,\mathrm{Vdc}$. The VCO is swept across its frequency range (990 to 494 MHz). At time T1 the comparator U5B has just changed state. CR16 is biased on and CR17 is biased off. At time T2 the positive input to U5B becomes more negative then the negative input and the output switches to $-14\mathrm{V}$, CR16 is biased off, CR17 is on and the positive input to U5B is pulled to $-8.7\mathrm{V}$. During this time the instrument would normally have locked. At time T3 the positive input to U5B becomes more positive than the negative input and the output changes to $+14\mathrm{V}$, CR16 is biased on, CR17 is biased off and the positive input of U5B is pulled to $+6\,\mathrm{volts}$. This cycle is repeated until a locked voltage is received from the sampler.

Under normal circumstances, the maximum lock time is one ramp or 1.5 ms. When the lock point is reached the output voltage of the Sampling Bridge and Sampling Amplifier will be a dc voltage to lock the loop and fix the VCO frequency. The Loop and Search Amplifiers stop functioning as a triangle wave generator. The voltage on the VCO bus is fixed except for small changes. The positive input to U5B is fixed and the output will stay at -14 or +14 Vdc and the negative input to U5B has an offset voltage of 20 mVdc from the current flow through R62, R59, R58, and R55. The offset voltage prevents the loop from locking at invalid lock points.

The SEARCH SELECT logic control from the Microprocessor is connected to the negative input of U5B. This reference input sets the output of Search Amplifier to either +14 or -14 volts. Thus the Loop Amplifier integrator "ramp" will be in the right direction for phase lock in the minimum time (1.5 ms maximum). For example, the VCO frequency is 500 MHz and is changed to 600 MHz. The sweep should go up in frequency from 500 MHz to 600 MHz. The logic level of SEARCH SEL will be high which sets the output of U5B to -14 volts and causes the tune voltage to sweep the VCO up in frequency.

Sideband Comparators

Sideband comparator U5D and exclusive-OR gates U6 determine if the instrument will lock at a frequency above or below 715 MHz. The 715 MHz adjustment sets the reference voltage equal to the positive input of U5D with the instrument set to 715 MHz. Lets look at an example where an input frequency of 900 MHz is selected. The Low Frequency Loop oscillator is tuned to 100 MHz. The 200 MHz Notch Filter is 'not selected'. This action passes only the 200 MHz IF sideband. All the other sidebands are 'selected' which effectively filters them out. The input frequency to the mixer A4U1 (refer to Service Sheet 1) will be 700 MHz. The VCO frequency is being swept since the loop is not locked. At the previous frequency, the VCO was tuned to 494 MHz. As the VCO sweeps through 500 MHz, the IF is 200 MHz and the loop wants to lock. SIDEBAND C SEL is set to logic level one, which passes the sideband above 715 MHz. This prevents the loop from locking below 715 MHz. As the VCO sweeps up to 900 MHz, the 700 MHz input is subtracted from the VCO frequency to yield the 200 MHz intermediate frequency and the loop locks.

Under the preceding conditions, both inputs to Nor gate U6D will be high so the output is low. Both inputs to U6A will be low so the output is low. Both inputs to U6B will then be low (output of U6A and U6D) so the output will be low. CR18 will be on and TP16 is approximately +0.6 Volts so CR19 will be off. The VCO sweep voltage will be in a positive direction so the negative input to sideband comparator U5D is also swept in the positive direction. The 715 MHz adjustment is adjusted so at 715 MHz both inputs to U5D are equal. Therefore, with CR19 off, the positive input to U5D is fixed by divider R51, R52, R53 between +15 and -15 volts. So below 715 MHz the positive input will be more positive than negative input of U5D. Output of U5D will be approximately +12 volts and the corresponding input to nor gate

U6C will be high. The output will be high which turns on Q10 and grounds the phase detector output. The VCO can not lock at 500 MHz. As the VCO sweeps through 715 MHz, the output of comparator U5D switches, the output of Nor gate U6C goes low and Q10 is turned off allowing the loop to lock.

Gain Compensation

Frequency change of the VCO is not linear with respect to voltage. Transistors Q8 and Q9 are used to compensate for this non-linear relationship. The collector of Q9 is low (0 volts dc) when the 200 MHz IF Notch Filter is 'not selected'; the collector of Q8 is low when the 150 MHz IF Notch Filter is 'not selected'. Both the base-emitter junctions of Q8 and Q9 will be forward biased when the VCO frequency is below 715 MHz; the output of U5D will be +12 Vdc. Resistors R56 and R57 are a voltage divider for the dc bias voltage to the base of Q8 and Q9. When the VCO frequency is 500 MHz, Q9 is biased on and resistor R67 and C75 increase the attenuation of the VCO tune voltage. When the VCO frequency is 550 MHz, Q8 is biased on and resistor R68 and capacitor C76 increase the attenuation of the VCO tune voltage.

TROUBLESHOOTING

Procedures for checking part of the circuits of the A4 High Frequency Loop Assembly are given below. The area or points to check are marked on the schematic by a hexagon with a check mark and a number inside, e.g. $\langle \sqrt{1} \rangle$. Fixed voltages are shown on the schematic inside a hexagon, $\overline{\text{e.g.}}$. $\langle 2V\pm0.2V \rangle$. Transistor bias voltages are shown without tolerances.

Test Equipment

Digital Multimeter	 HP 3465A
Oscilloscope	 HP 1222A



$\left\langle \sqrt{\mathsf{1}} \right. \left. \left\langle \mathsf{HF} \right. \mathsf{Loop} \right. \mathsf{Data} \left. \mathsf{Storage/Drivers} \right. \left. \left\langle \mathsf{Totage/Drivers} \right. \left. \left\langle \mathsf{Totage/Drivers} \right. \right. \left. \left\langle \mathsf{Totage/Drivers} \right. \left. \left\langle \mathsf{Totage/Drivers} \right. \right. \left. \left\langle \mathsf{Totage/Drivers} \right. \left. \left\langle \mathsf{Totage/Drivers} \right. \right. \left. \left\langle \mathsf{Totage/Drivers} \right. \left. \langle \mathsf{T$

- 1. Set the Signal Generator to -10 dBm at 100 kHz without modulation.
- 2. Enter frequencies in the order listed in Table 1 beginning with 500 MHz.
- 3. Check the voltages at the Outputs of U2, U3 and U4 as indicated.

$\sqrt{2}$ Exclusive-Or Gate A4U6

- 1. Set the Signal Generator to -10 dBm at 500 MHz without modulation.
- 2. Check the voltages listed in Table 2.

Table 1. IF Filter Notch Filter Select*

Olemal	Oigital Level**									
Signal Generator	SEARCH SEL(H)		IF SEL(SIDEBAND						
Frequency (MHz)		250	200	150	100	50	C SEL	B SEL		
500	L	Н	L	Н	Н	Н	L	Н		
550	Н	Н	Н	L	Н	Н	L	Н		
600	Н	Н	Н	Н	L	Н	L	Н		
650	Н	Н	Н	Н	Н	L	L	Н		
700	Н	Н	Н	Н	Н	Н	L	L		
900	Н	Н	L	Н	Н	Н	Н	L		
950	Н	L	Н	Н	Н	Н	Н	L		
800	L	Н	Н	Н	L	Н	Н	L		

^{*}A notch filter that is selected "filters out" that IF sideband. Therefore, the required IF sideband filter is 'not selected' in order to pass the required frequency.

Table 2. A4U6 Digital Voltage Levels

Signal Generator Frequency	U6A-Pin		U6B-Pin			U6C-Pin			U60-Pin			
(MHz)	1	2	3	4	5	6	В	9	10	11	12	13
500	Н	L	Н	Н	Н	L	L	Н	Н	Н	L	Н
900	L	L	L	L	L	L	L	L	L	L	Н	Н
715	L	L	L	L	H	H	L	H	H	Н	L	Н

Search Amplifier, Loop Amplifier, Sideband Comparator, and Sideband Switch

- 1. Set the Signal Generator to -10 dBm at 500 MHz without modulation.
- 2. Disconnect the TUNE voltage to the VCO.
- 3. Verify that the waveforms of Figure 1 are correct.

TROUBLESHOOTING USING SIGNATURE ANALYSIS

This is an alternate method of troubleshooting Service Sheet 2 circuits. Service Sheet BD4 and Service Sheet 5 (which both refer to this service sheet) are used primarily to troubleshoot from the digital (control) standpoint. Note that digital information from the Microprocessor and related circuits must pass through the circuits shown on Service Sheet 5 before they get to circuits on Service Sheet 2. Be sure that the Service

^{**}Digital Levels are as follows: A4U4 H>+2 Vdc L<+0.5 Vdc, A4U2 H>+3.5 Vdc L<+1.5 Vdc and A4U3 H>+13 Vdc L<+0.5 Vdc.

Sheet 5 signatures are correct before trying to isolate an incorrect signature in these circuits. If the signatures on these circuits are correct, the problem may be in the controlled circuits. In this case continue with the troubleshooting information preceding this paragraph or refer to the troubleshooting information found on Service Sheet BD2.

Purpose. Verify correct data transfer from the Microprocessor to the High Frequency Loop.

NOTE

Signatures are not valid for Signal Generators with serial number prefixes 2009A through 2018A.

Setup. Connect the signature analyzer as follows:

- 1) GND to GND A11TP2
- 2) CLK to SA4 A11TP7
- 3) START to SA5 A11TP9
- 4) STOP to SA5 A11TP9.

Set the controls as follows:

- 1) START-IN
- 2) STOP-OUT
- 3) CLK-IN.

Set up the Signal Generator as follows:

- 1) Set the LOGIC/RAM switch P/O A11S1 to LOGIC.
- 2) On the A6 Output Assembly board, short TP5 to TP4 (GND); short TP6 to TP4 (refer to Service Sheet 5).

Initialize. Briefly short A11TP3 NMI to ground.

NOTE

With careless probing it is possible to get the Microprocessor into a program sequence other than that portion intended for signature analysis. If the +5V signature is incorrect, this has probably happened. Restart the test by setting the RST/RUN switch to RST and then RUN. Briefly touch the NMI test point to ground.

Service Model 8656A

SERVICE SHEET 2

Probe. Connect the probe to the node indicated in Table 3. Verify that each signature is correct and stable.

Disconnect the jumpers between the test points and between the test point and ground. Reset the LOGIC/RAM switch to RAM. Reset the Signal Generator with the front panel RESET-STBY-ON switch.

Table 3. High Frequency Loop Signatures

Node	Correct Signature	Comments				
+5V	F84P					
* U4 #3	F84P	SIPO CLK				
U4 #2	744F	HF DATA				
U4#4 U2#2	HA4C	SRCH SEL				
U4#5 U2#4	PH25	250 MHZ				
U4#6 U2#6	U692	200 MHZ				
U4#7 U2#10	UC49	150 MHZ				
U4#14 U2#15	UHA4	100 MHZ				
U4#13 U2#12	7PH2	50 MHZ				
U4 #11	13C0	SIDEBAND B				
U4 #12	CU69	SIDEBAND C				

^{*}This signature is the same as the +5V signature; the probe should blink.

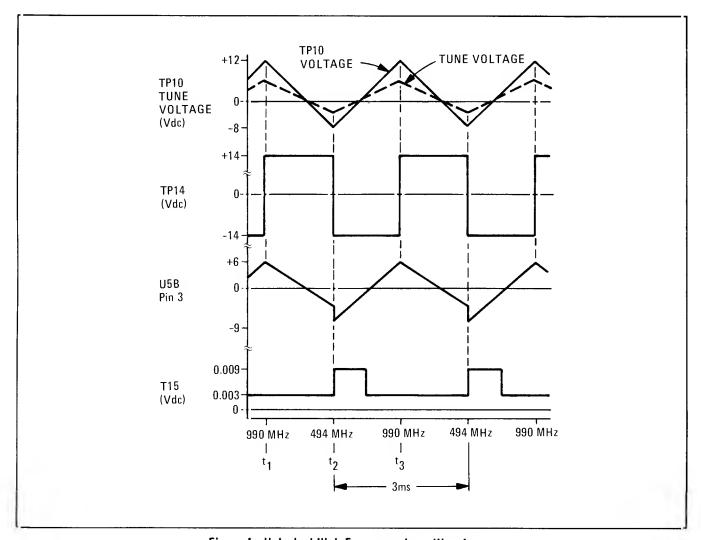


Figure 1. Unlocked High Frequency Loop Waveforms

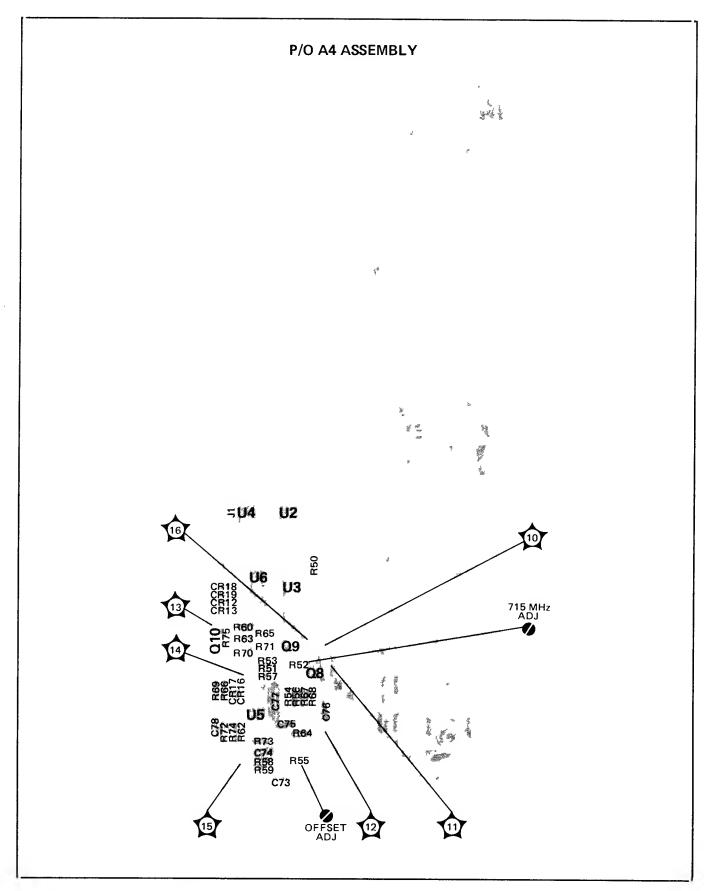


Figure 8-41. High Frequency Loop Amplifier and Control Component Locations

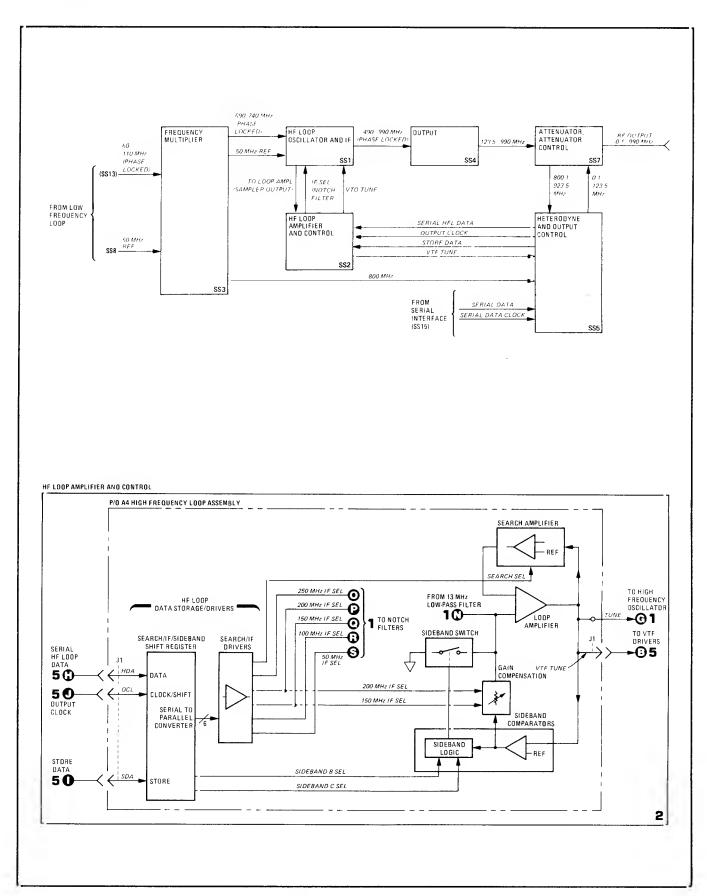
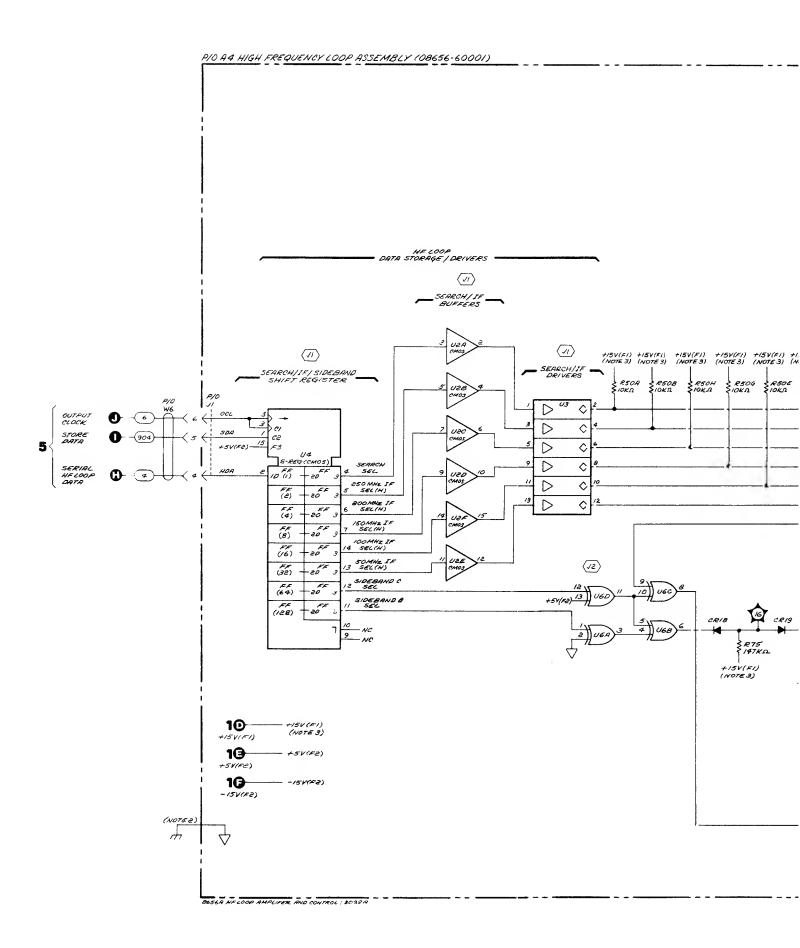


Figure 8-42. High Frequency Loop Amplifer and Control Block Diagrams



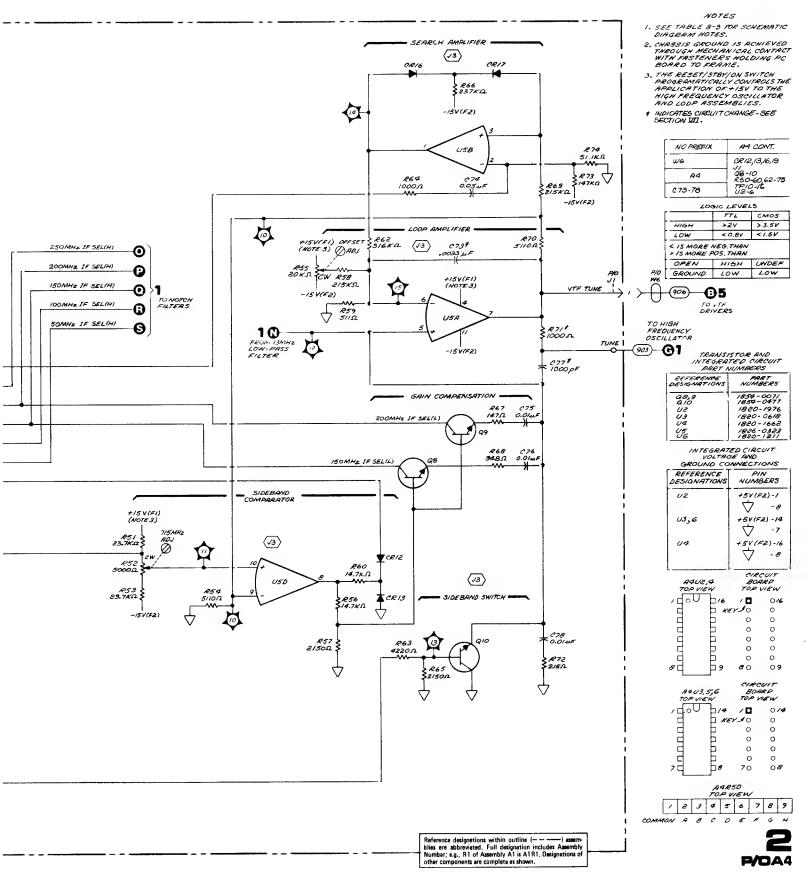


Figure 8-43. High Frequency Loop Amplifier and Control Schematic Diagram

SERVICE SHEET 3 A8 FREQUENCY MULTIPLIER ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD2
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

General

The 50 MHz reference is multiplied by 16 to 800 MHz. It is mixed with the phase locked 60 to 110 MHz signal from the Low Frequency Loop Assembly. The Mixer's output is amplified and applied to a Bandpass Filter that passes the difference frequency 690 to 740 MHz. The input frequencies to the Mixer are phase locked to the 50 MHz reference. Therefore, the Mixer's output serves as a reference to lock the High Frequency Loop. The 800 MHz output is also applied to the Output Assembly (refer to Service Sheet 5).

Frequency Multiplier

The 50 MHz +15 dBm input from the Reference Oscillator is applied to the Power Splitter consisting of R1, R2, R3, and R4. One output of the Power Splitter goes to the Sampler of the High Frequency Loop (shown on Service Sheet 1). The other output is ac coupled by C2 to Q8, the first multiplier stage. Here, the 50 MHz is doubled four times to a frequency of 800 MHz.

Each of the four multiplier stages (Q8, 7, 6, and 5) is dc biased so the transistor operates in its non-linear region thus generating harmonics. The output of each stage is filtered by a bandpass filter at 100, 200, 400, or 800 MHz. This passes the doubled frequency and filters out the input frequency and other harmonics. Since the stages are electrically equivalent, only the first stage will be discussed in detail. Note, however, that the 800 MHz filter ultilizes printed circuit trace capacitors instead of discrete capacitors.

Resistors R5 and R6 divide the +5 Vdc supply voltage to dc bias the base of Q8 at approximately +1.0 Volts dc without the 50 MHz signal connected. Resistor R7 is the emitter bias resistor. Capacitor C6 bypasses the ac emitter signal to ground. Inductor L2 is an RF choke, capacitor C3 is an RF bypass and C4 ac couples the output to the 100 MHz Bandpass Filter. The 800 MHz output of the last multiplier stage Q5 is applied to the 800 MHz Bandpass Filter on the output Assembly A6 (shown on Service Sheet 5) and to Buffer Amplifier No. 1.

Buffer Amplifier No. 1/Mixer U1

The 800 MHz signal is coupled to the base of Q3 through resistor R11, the circuit board transmission line and capacitor C13. The transmission line serves to isolate Q3 from the input. DC current flows through resistors R14 and 15 to dc bias the base of Q4. Since the emitter of Q4 is also connected to the +5V(F) supply by resistor R18, the emitter voltage will be approximately 0.6 Vdc more positive than the base. The current through resistor R18 is determined by the voltage difference between the +5 Vdc supply and the voltage at the emitter of Q4. The current through R18 takes two paths. One path is into the emitter of Q4 and out at its collector. This current minus the base current of Q4 is the base current of Q3. The other path for the current from R18 flows through L12 and into the collector of Q3. The base to collector current ratio

depends on the dc current gain of Q3. Therefore, the total current from R18 is equal to the emitter current of Q3. Inductor L11 is an RF choke while L12 serves as a matching element. Capacitors C15, C20, and C21 are RF by-pass capacitors. Capacitor C24 ac couples the output of the Buffer Amplifier to Mixer U1. The other input to Mixer U1 is the 60 to 110 MHz from the Voltage Controlled Oscillator (refer to Service Sheet 8). The difference output of 690 to 740 MHz is ac coupled to Buffer Amplifier No. 2.

Buffer Amplifiers No. 2 and 3

The dc current flowing through resistors R25 and R26 dc bias the base of Q2 at approximately 2.0 Vdc. Resistor R27 is the emitter bias resistor and capacitors C36 and C37 are the emitter resistor bypass to ground. Inductor L24 is an RF choke while capacitors C38 and C39 are RF bypass capacitors. L23, L25 and C41 all serve as matching elements. The output of Buffer Amplifier No. 2 is ac coupled to the Compensation Network by capacitor C41. The Compensation Network is adjusted to keep the 690 to 740 MHz flatness within ±1.5 dB. The signal is ac coupled to Buffer Amplifier No. 3 which functions the same as Buffer Amplifier No. 2. The output of the buffer amplifier passes through Bandpass Filter FL1 which passes the difference frequencies (between 690 and 740 MHz) from the Mixer and filters and eliminates all the other frequencies. A frequency between 690 and 740 MHz goes to the Mixer in the High Frequency Loop (refer to Service Sheet 1) to serve as a phase locked reference for the High Frequency Voltage Controlled Oscillator.

TROUBLESHOOTING

Procedures for checking circuits of the A8 Frequency Multiplier Assembly are given below. The areas or points to check are marked on the schematic by a hexagon with a check mark and a number inside, e.g. $\sqrt{3}$. Fixed voltages are shown on the schematic inside a hexagon, e.g. $\sqrt{2V\pm0.2V}$ Transistor bias voltages are shown without tolerances.

Test Equipment

Power Meter	HP	436A
Power Sensor	ΗP	8482 A
Digital Multimeter	ΗP	3456 A
Frequency Counter	ΗP	5328 A
Adapter-Probe		
Adapter-Type N(male)		
to BNC (female)	ΗP	1250-0780
Cable-BNC(male) to SMC(female)]		

√1 Multiplier Stages Bias Voltages

- 1. Set the Signal Generator to any frequency.
- 2. Measure and verify the bias voltages as indicated in Table 1.

√2 RF Levels

- 1. Set the Signal Generator to any frequency.
- 2. Check 50 MHz Reference Oscillator input to Frequency Multiplier Assembly at W5 with W5 disconnected. The level should be +15 dBm ± 4.0 dB.

Table 1. Multiplier Stages Bias Voltages

Tuesdatas	50 MHz Input Signal (Vdc)			
Transistor	Connected	Not Connected		
Q8-E (J2-Pin 2)	+0.8	+0.23 to 0.47		
Q8-B	+1.0	+1.0		
Q8-C	+5.0	+5.0		
Q7-E (J2-Pin 4)	+0.35	+0.23 to 0.47		
Q7-B	+1.0	+1.0		
Q7-C	+5.0	+5.0		
Q6-E (J2-Pin 6)	+0.8	+0.23 to 0.47		
Q6B	+1.0	+1.0		
Q5-E (J2-Pin 8)	+0.8	+0.23 to 0.47		
Q5-B	+1.0	+1.0		
Q5-C	+5.0	+5.0		

- 3. Reconnect W5.
- 4. Check 60 to 110 MHz Low Frequency Loop input to Frequency Multiplier Assembly at W3 with W3 disconnected. The level should be -7 dBm ± 2.0 dB
- 5. Reconnect W3.
- 6. Table 2 shows power levels at various points and the conditions for measurement. Verify that each level is within the required range.

Table 2. RF Power Levels

Odial	RF Power Levels (dBm) at Measurement Locations					
Conditions	W10	TP3	TP2	TP1	Filter Output	
All Cables Connected	+7 to +1	+8 to +2	+8 to +2	-20 to -14	+8 to +2	
W10 Not Connected	+9 to +5	+9 to +5	+9 to +5	-	-	
Jumper Removed		_	_	-14 to -10	-	
Filter Not Connected	-	-	_	-	+7 to +3	

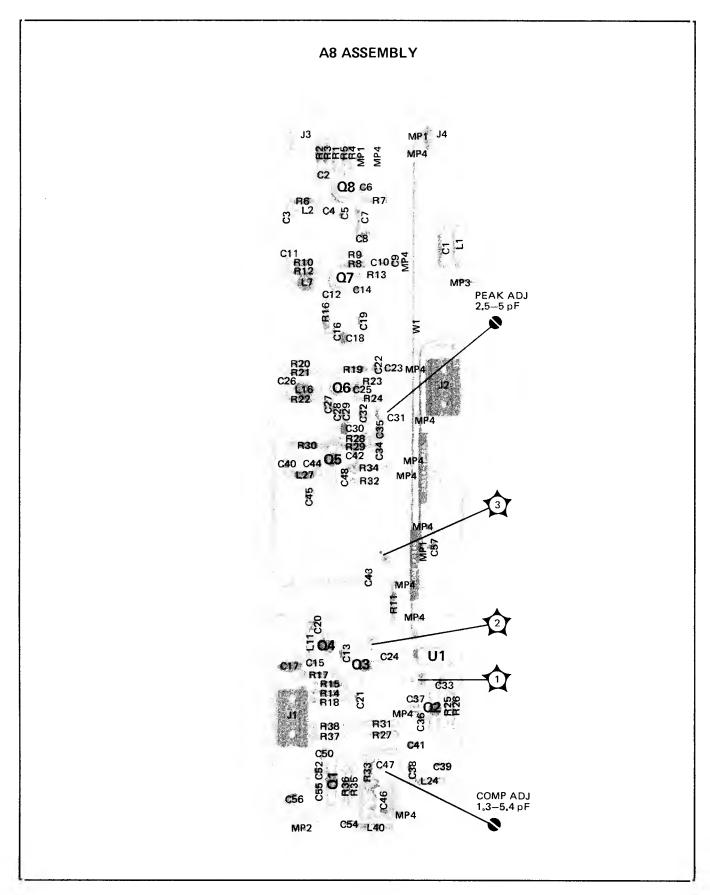
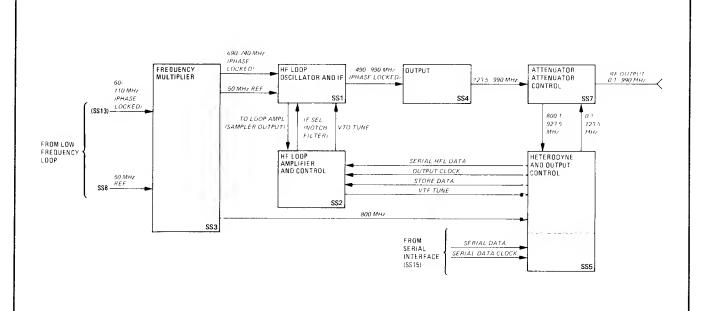


Figure 8-44. Frequency Multiplier Component Locations






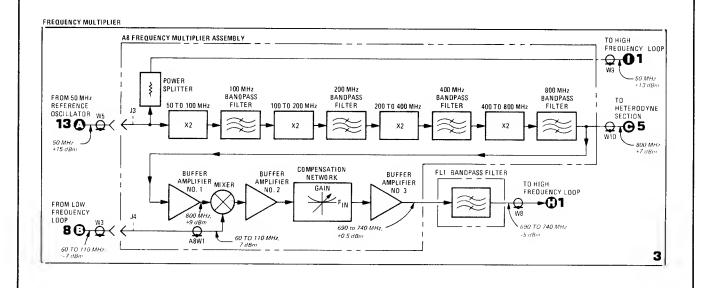


Figure 8-45. Frequency Multiplier Block Diagrams

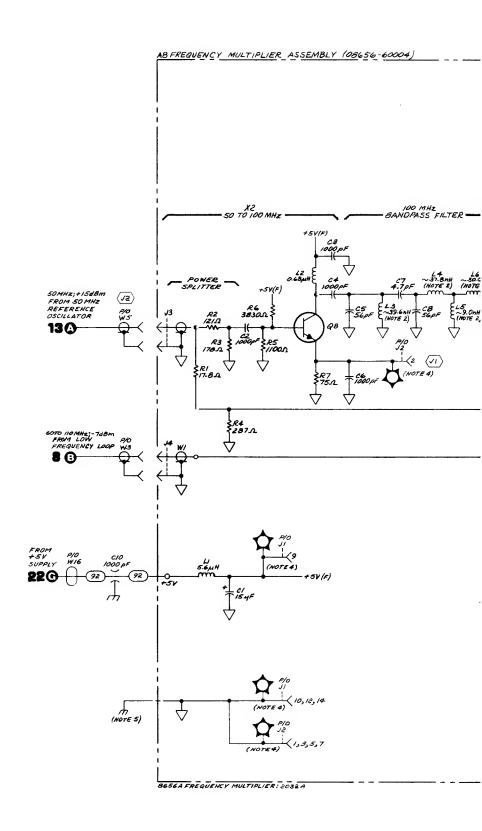

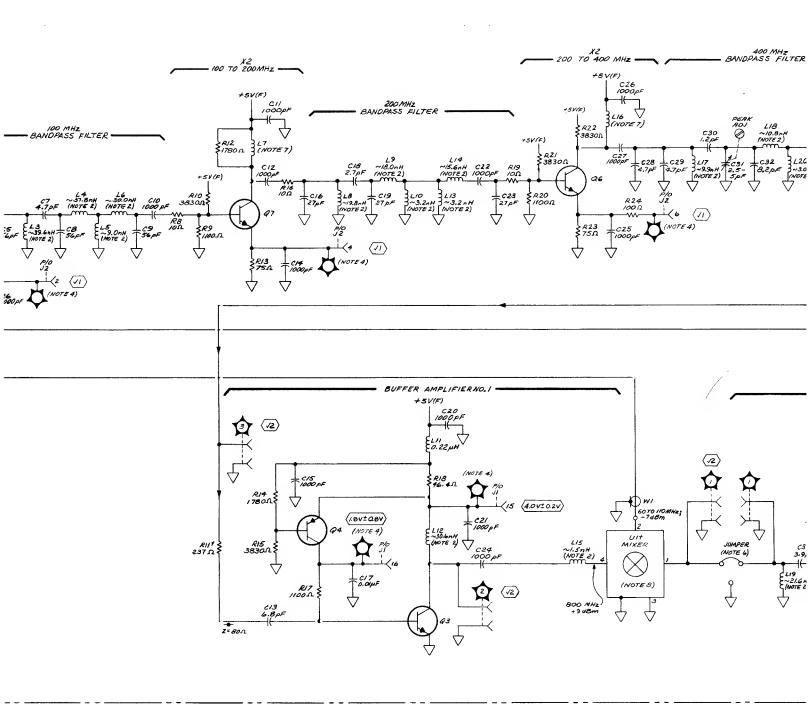

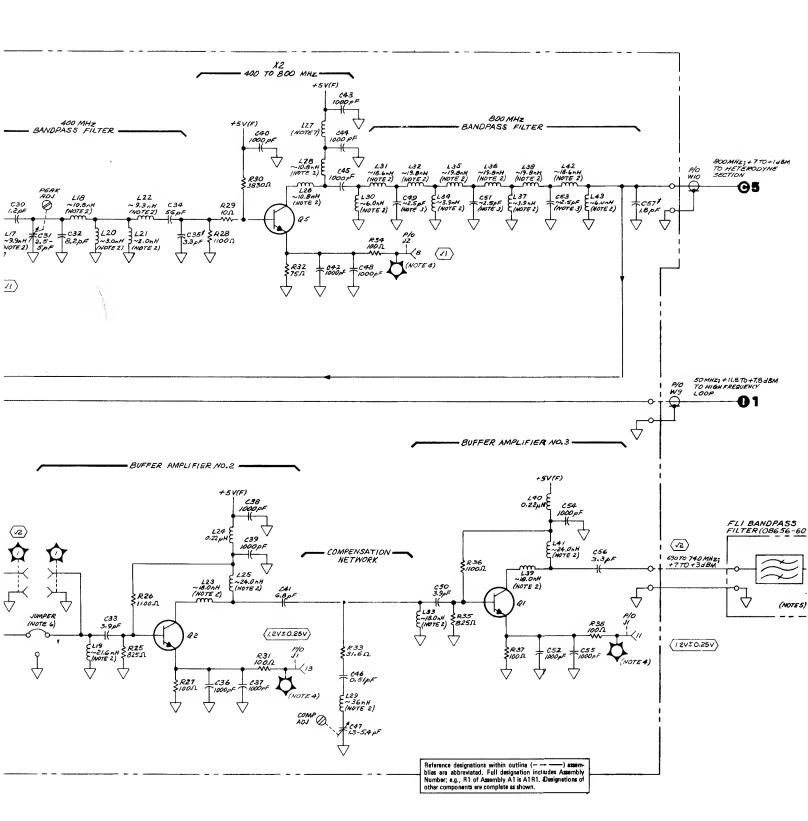

Figure

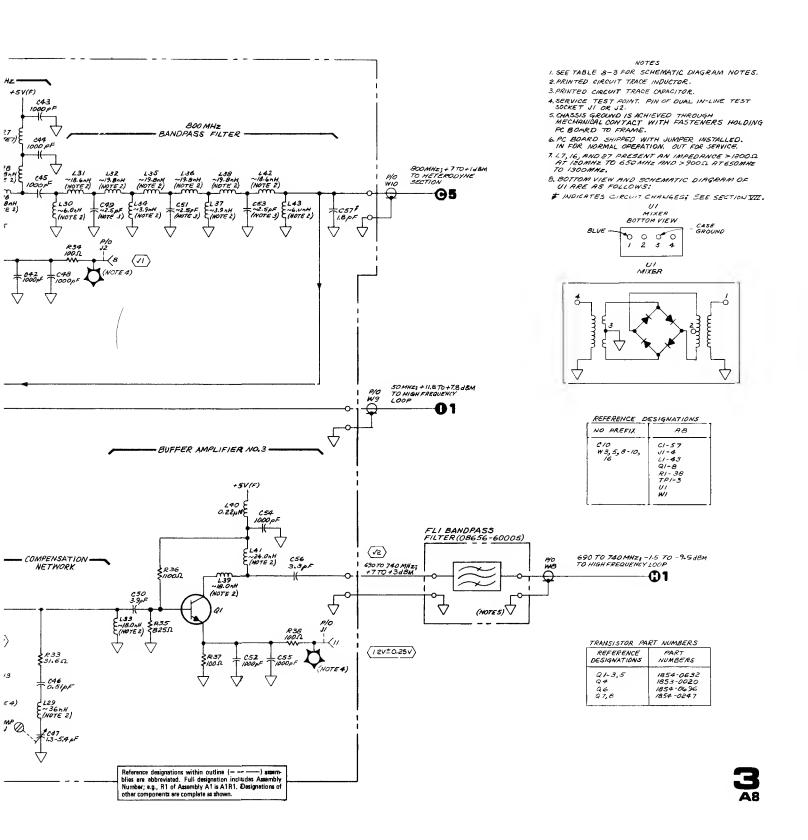


Figure 8-46. Frequency Multiplier Schematic Diagram

Service Model 8656A

SERVICE SHEET 4 (Cont'd)

Table 2. RF Divider Chip Inputs

Signal Generator	Voltages (Vdc) on		
Frequency (MHz)	U1-pin 3	U2-pin 9	
500	+4.0	+5.0	
300	+3.3	+5.0	
200	+3.3	+1.0	

√2 Voitage-Tuned Filter

- 1. Set the Signal Generator to -10 dBm without modulation.
- 2. Check the voltages in Table 3 for each front panel frequency setting. If loop is not locked, the signal will be a triangular wave.
- 3. Set the Signal Generator to -10 dBm without modulation.
- 4. Connect a power meter to test point 2 and check the levels listed in Table 4.

5. Set switch S1 to open position and measure the dc voltage at TP2. It should be -2.0 ± 0.5 Vdc.

$\sqrt{3}$ High Band Output Ampiifier

- Check bias voltages on transistors Q2, Q3, Q6, and Q7.
- 2. Set the Signal Generator to -10 dBm at 500 MHz without modulation.
- 3. Check the power level at W14 using the adaptor probe. The power level should be $-3.5 \, dBm \pm 3.0 \, dB$.
- 4. Change the RF amplitude to +13 dBm.
- 5. Check the power level at W14. The power level should be $\pm 9.0 \text{ dBm } \pm 3.0 \text{ dB}$.
- 6. Verify that the frequency at W14 is 500.000 MHz ±2 kHz.

ALC Ampiifier

Set the Signal Generator to 500 MHz without modulation.

Table 3. Voltage Tuned Filter Control Voltages

Signal		VTF TUNE Voltage (Vdc)	
Generator Frequency (MHz)	123.5 to 247 MHz	247 to 494	494 to 990 MHz
900	-0.5	-0.5	+14.0
600	-0.5	-0.5	+8.5
350	-0.5	+12.9	-0.5
300	-0.5	+8.5	-0.5
200	+14.2	-0.5	-0.5
150	+8.5	-0.5	-0.5

Table 4. ALC Loop Level Measurements

Test	ALC Loop	Cleanit	Power Le	vel (dBm)
Point	Switch S1	Circuit Opened By*	Closed	Opened
TP2	Closed	Disconnect C24	−11 to −21	-14 to -18
TP2	Open	Disconnect C24	-5 to −10	-6 to −10
TP3	Closed	Disconnect C33,R34	−21 to −31	+1 to −1
TP3	Open	Disconnect C33,R34	−11 to −21	-7 to -11

SERVICE SHEET 4 (Cont'd) TROUBLESHOOTING

Procedures for checking part of the circuits of the A6 Output Assembly are given below. The area or points to check are marked on the schematic by a hexagon with a checkmark and a number inside, e.g. $\sqrt{3}$. Fixed voltages are shown on the schematic inside a hexagon, e.g. $(2V\pm0.2V)$. Transistor bias voltages are shown without tolerances.

Test Equipment

Digital Multimeter	.HP	3465A
Oscilloscope	HP	1222A
Power Meter	HP	436 A
Power Sensor	HP	8482A
Frequency Counter	HP	5328A
Adapter Probe	.HP	1250-1598
Adapter-Type N(male) to		
BNC(female)	.HP	1250-0780
Cable BNC (male) to SMC (female)	.HP	08662-60080

$\langle \sqrt{1} \rangle$ RF Dividers

- 1. Set the Signal Generator to -10 dBm without modulation.
- 2. Check the voltages and levels as shown in Tables 1 and 2 for each front panel frequency setting.

Divider Voitages (Vdc) Voltages at Q1 (Vdc) Signai at TP1 Signai Generator Freq Freq. C (MHz) В Levei (dBm) ÷4 SEL Ε (MHz) ÷1 SEL ÷2 SEL 500 500 +0.2 +4.8+4.8 +4.4 +5.1 +8.6+3.0 to -3.0 600 +8.0 +5.1 +8.6 +3.0 to -3.0+8.0 +0.2 +4.4300 800 +0.2 +4.4 +5.1 +8.5+3.0 to -3.0200 +14 +14

Table 1. RF Divider Voitages

capacitor C40. The total voltage gain of the Output Amplifier is approximately 24 dB from the input of Q2 to the collector of Q7.

The Output Amplifier is ac coupled by C42 to the attenuator (through R53) and to the Detector of the ALC Loop. Resistor R53 approximates a 50 ohm output impedance. The 34.8Ω of the resistor and 5Ω of loss in associated circuitry account for an output impedance of 40 ohms which is not enough of a mismatch to cause a standing wave problem. This will reduce the power loss of the signal applied to the attenuator or to the heterodyne mixer for output frequencies from $100\,\mathrm{kHz}$ to $123.5\,\mathrm{MHz}$. The power level of -7 to $+15\,\mathrm{dBm}$ from the Output Amplifier is measured on the output side of R53.

ALC Loop

The Output Detector of the ALC Loop detects the RF voltage at the output of the High Band Output Amplifier. The level of the detected voltage is forced by the gain of the ALC Loop to be identical to the loop's reference voltage. Therefore, the Output Amplifier must be an RF voltage source and have zero ohms impedance. Resistor R50 provides a small amount of isolation between the detector diode CR39 and the Output Amplifier and rolls off the detector output by about 2 dB over the frequency range 123.5 to 990 MHz. The gain of the Output Amplifier increases about 2 dB and the attenuator losses increase about 2 dB over this range. This helps to keep the output flat without correction. Capacitor C37 couples the RF to detector diode CR39 and stores the dc charge. Inductor L33 and capacitor C36 filter out the RF present on the dc voltage.

Detector Blas. Transistors Q8 and Q12 bias on diodes CR38 and CR39. The transistors are biased on by the resistor divider network of R40, R41 and R42. Q8 biases on CR38 and is the current source for CR38. Q12 biases on CR39 and sinks the current from both CR38 and CR39 to the -15 Vdc supply. The Detector Adjustment (Det Adj) R35 is adjusted for identical currents flowing through CR38 and CR39. When the Detector Adjustment is adjusted correctly there is a voltage difference of approximately 54 mV between the cathodes of the two diodes. This is the ideal offset voltage for the diode detector when the detector is operating linearly. Diode CR38 also temperature compensates the detector.

ALC Amplifier. The dc voltage at the collector of Q8 is equal to the peak voltage of the RF output of the Output Amplifier except for the roll off of R50 and C37. This dc voltage is the positive input to the ALC Amplifier, U6. The voltage to the negative input is the dc level correction voltage and the amplitude modulation voltage when AM modulation is selected from the Audio/Power Supply, A10. The negative input voltage is shaped by resistors R27, R30, R31 and diodes CR31 and CR37. For very low levels, the input voltage characteristic should approximate the square law region of the detector. (The square law region is the non-linear portion of the detector's current-versus-voltage curve. In this region the change in current is proportional to the square of the change in voltage.) If the voltages to the inputs are the same, there is very little distortion.

problem if the filter selected is tuned to its highest frequency before the Voltage Controlled Oscillator reaches its highest frequency.

The VTF Drivers turn on the selected input and output diodes of the VTF. These are CR20 and CR36, CR19 and CR35 or CR21 and CR34. The current that biases on the input and output diodes is returned to the -15 volt supply by the VTF input resistors R21 and R98 and output resistor R29.

When a Voltage-Tuned Filter is not selected, the varactor diodes and parallel diodes at the input and output are forward biased by the current through R24, R25 or R26. This tends to increase the isolation of the unused filters. Note that the input and output diodes are biased off. Inductors L22, L23 and L24 are RF chokes.

The tune voltage of +3 to +15 volts will vary the capacitance of the varactors approximately 7 to 32 pF in the divide-by-2 and divide-by-4 filters and approximately 3.5 to 8 pF in the divide-by-1 filter.

Output Amplifier

The output of the Voltage Tuned Filters is ac coupled to the two stage Output Amplifier by capacitors C30 and C33. Capacitors C28 and 31 are distributed along the connecting transmission line to match the output of the Voltage Tuned Filters to the input of the Output Amplifier. The amplifier's input resistor R34 and inductor L31 give an input impedance of approximately 50 ohms at the low frequencies. At the high frequencies feedback in the Output Amplifier provides a 50 ohm input impedance.

The Output Amplifier is a two stage amplifier consisting of transistors Q2 and 7. Transistor Q3 provides active bias for Q2 and Q6 does the same for Q7. Transistor Q3 is biased on by +10.6 Vdc (+15 Vdc divided by resistors R10 and R11). The emitter voltage is then approximately +11.2 Vdc and current flow through Q2 will influence this emitter voltage. A current flow increase through Q2 decreases the emitter voltage. This reduces the current through Q3 thus reducing the bias voltage at the base of Q2. Therefore the current through Q2 is reduced. The net effect is that Q3 and Q6 provide negative feedback to Q2 and Q7 respectively. The emitter of Q2 has four resistors R39, R43, R44 and R47 in parallel and a bypass capacitor C39. All are used to reduce the inductance at the emitter. Resistor R45, inductor L32 and capacitor C34 provide an RF shunt feedback path from the collector to the base of Q2. At low frequencies, (100 to 500 MHz) the input impedance of Q7 is zero ohms and there is no RF voltage at the collector of Q2 and no shunt feedback. At the higher frequencies the input impedance of Q7 increases above zero ohms and there is an RF voltage feedback from collector to base of Q2. This feedback helps keep the input impedance of Q2 at approximately 50 ohms as the reactance of L31 masks the 50Ω resistor R34. Masking the 50 ohm input resistor increases the input to Q2 by approximately 3 dB and therefore the amplifier's output increases the same amount. The last amplifier Q7 is a grounded emitter shunt feedback amplifier. RF feedback is by resistor R51, inductor L35 and

U1 is applied to Q1 which can no longer function as an emitter follower with CR9 turned off. The output is coupled from the collector of Q1 to the input of the second divider U2 by C11. Divider U2 is activated when CR11 is turned on so U2 pin 9 is pulled low. RF Divider U2 is always biased at the right voltage by R12 and R13 (+3.6 Vdc). U2 is temperature compensated by CR8 and CR10. The output of U2 is coupled by C21 and C22 to the PIN Modulator.

Inductors L14, L15 and L16 are RF chokes and resistor R15 biases the output of divider U2. Resistor R1 and inductor L1 supply dc bias voltage from CR3, CR5 and CR7 and block the RF signal.

PIN Modulator

The PIN Modulator consists of three series PIN diodes CR13, CR14 and CR18. There is a 20Ω transmission line between CR13 and CR14 and between CR14 and CR18. PIN diodes function as current controlled RF resistors where the RF resistance is inversely proportional to the current through the diodes. Approximately 50 mA current through the diodes will cause them to appear as shorts and the 20Ω transmission lines will cause a small mismatch resulting in an insertion loss of about 2 dB between the modulator's input and output.

With less than 50 mA, the diodes appear as resistors of several hundred ohms. The transmission line appears as a large capacitance. In this condition the frequency response would roll off at 6 dB/octave for a total of 18 dB for the three octaves. The input inductor L17 and resistor R16, the output inductor L18, resistor R19 and capacitor C23 function to compensate the frequency response by increasing the input and output impedance at the higher frequencies. At the lower frequencies the impedance is a few hundred ohms with a small reactance in series which decreases the gain at the lower frequencies. The modulator flatness over the three octaves is reduced to approximately ± 3 dB.

The PIN Modulator is enclosed in a waveguide-beyond-cutoff filter that isolates the input from the output and provides 70 dB of dynamic range.

Voltage-Tuned Filters

Three voltage-tuned low pass filters pass the 123.5 to 990 MHz output of the PIN Modulator to remove the harmonics generated by the dividers and oscillator. Each filter covers one octave of the frequency range; therefore the harmonics are not passed to the Output Amplifier. The tune voltages for all the filter's are derived from the VTF TUNE line of the A4 Assembly's Loop Amplifier (refer to Service Sheet 2). This tune voltage is dependent on the frequency selected and is offset, amplified, and applied to the correct VTF by the VTF Drivers (part of the A6 Assembly; refer to Service Sheet 5). The +3 to +15 volts that tunes each Voltage Tuned Filter, tracks the tune voltage for the VCO as the oscillator is tuned from 494 to 990 MHz. Since the Voltage Tuned Filters are low pass filters, it is not a

SERVICE SHEET 4 P/O A6 OUTPUT ASSEMBLY P/O A7 RFI ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD2 Table 4-1. Abbreviated Performance Tests Table 5-2. Post-Repair Adjustment Procedures

PRINCIPLES OF OPERATION

General

The 494 to 990 MHz signal from the High Frequency Oscillator is input to the RF Dividers. The signal is divided by one, two or four depending on the frequency selected at the front panel. The signal passes through the PIN Diode Modulator to the inputs to the Voltage-Tuned Filters. The signal is passed through one of the three filters as determined by the selected frequency. The filter output is amplified and coupled to the output attenuator and the Automatic Level Control (ALC) Loop.

In the ALC loop, the RF signal level is detected and compared to the dc component of the AM Ref Level input. The difference is amplified and coupled back to the PIN Modulator which acts as a current controlled attenuator. The loop serves to hold the output at a constant level.

RF Dividers

The 494 to 990 MHz oscillator output signal from the High Frequency Loop Amplifier (-3 to +4 dBm) is applied to the Output Assembly. The signal is ac coupled by C1 into the RF Dividers where they are divided by one, two or four depending on the Output Frequency selected at the front panel. The RF Dividers divide-by-one when an output frequency from 494 to 990 MHz, or less than 123.5 MHz is selected. The RF Divider divides-by-two when an output frequency from 247 to 494 MHz is selected. It divides-by-four when an output frequency from 123.5 to 247 MHz is selected.

When the RF Divider is configured to divide-by-one, the logic output of the Band Select Dividers for divide-by-one is set low by the third bit of RF Word 2, (refer to Service Sheet 5). With the divide-by-one control line low, diodes CR5 and CR7 are turned on and the signal is coupled by C13 to the PIN Modulator.

In the divide-by-two configuration, the second bit of RF Word 2 sets the divide-by-two control line low and diodes CR2, CR3 and CR9 are turned on. With diode CR3 turned on, C2 couples the input signal to U1 where it is divided by two. The output of U1 is dc coupled to Q1 which functions as an emitter-follower. The output of Q1 is coupled to the PIN (diode) Modulator by C12. Inductor L7 supplies bias voltage for U1.

Diodes CR4 and CR6 along with either CR1 or CR2 (depending on which is selected) provide voltage offsets from +5 Vdc and ground to the bias resistors R2 and R4. The result is a bias voltage of about +2.7 Vdc at the input to U1. This ensures proper triggering on the RF signal in the divide-by-two or divide-by-four modes. Diodes CR4 and CR6 are also used for temperature compensation. Inductors L2, L6 and L7 are RF chokes that pass the dc control voltages and block the RF voltages.

In the divide-by-four configuration, the first bit of RF Word 2 sets the divide-by-four control line low and diodes CR1, CR3, CR11 and CR12 are turned on. The input signal is applied to U1 which functions the same as in the divide-by-two mode. The output of

Model 8656A Service

SERVICE SHEET 4 (Cont'd)

- 2. Check the voltages at the stated locations and for the various output amplitudes listed in Table 5.
- 3. Set the Signal Generator to -10 dBm at 500 MHz with 50% AM depth and an Internal 1 kHz rate.

4. Check the waveforms and the Logic Level as indicated in Figure 1.

Table 5. ALC Amplifier Voltage Levels

A man like da	Test Point Measurement (Vdc)			
Ampiitude (dBm)	J3-pin 3	J3-pin 15 and J3-pin 16	J3-pin 4*	
+13	-1.4 to -6.4	+1.97 to +1.87	L	
+10	−1.1 to −4.1	+1.45 to +1.35	${f L}$	
+5	−1.5 to −4.0	+0.85 to +0.75	${f L}$	
0	−1.2 to −3.7	+0.49 to +0.39	${f L}$	
-4	−1.1 to −3.6	+0.33 to +0.23	L	
-5	-1.5 to −4.0	+0.84 to +0.74	L	

Test Point	Waveform
J3 Pin 15 and J3 Pin 16	+1.1Vdc +0.7Vdc +0.3Vdc
J3 Pin 3	-1.76Vdc -2.0Vdc -2.24Vdc
J3 Pin 4	Logic level high >2.0 Vdc, K1 should be open

Figure 1. ALC Amplifier Waveforms and Logic Level

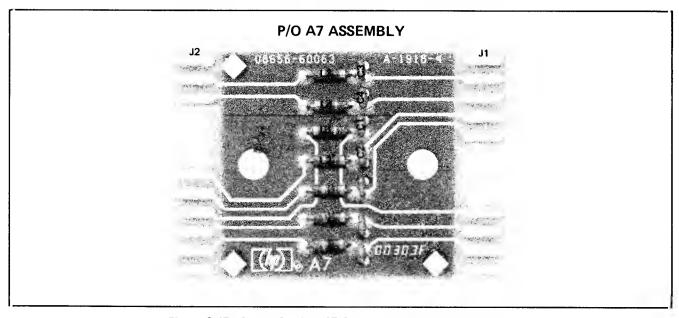


Figure 8-47. Output Section (A7 Assembly) Component Locations

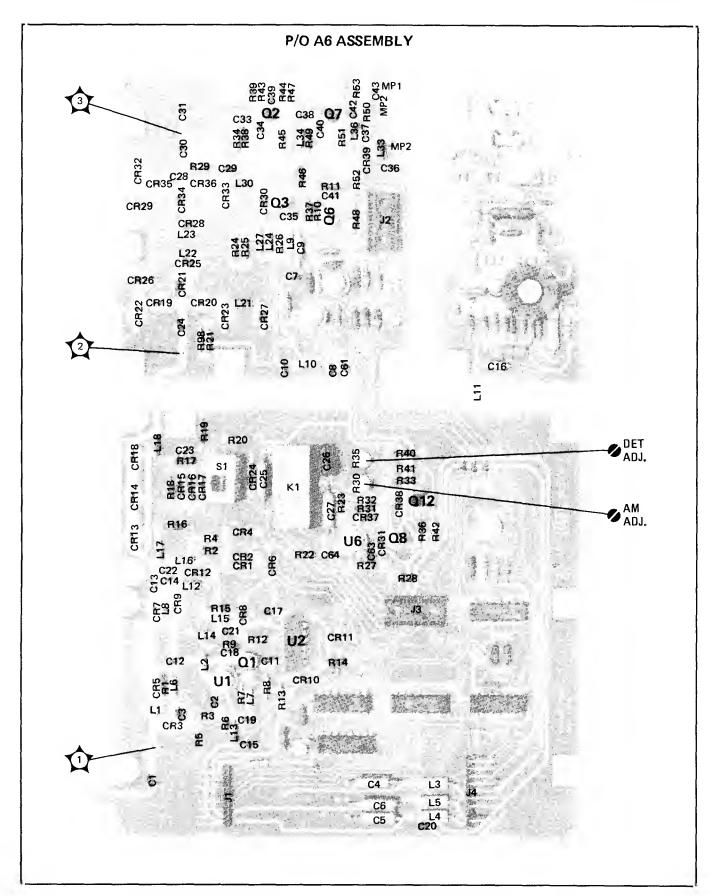


Figure 8-48. Output Section (A6 Assembly) Component Locations

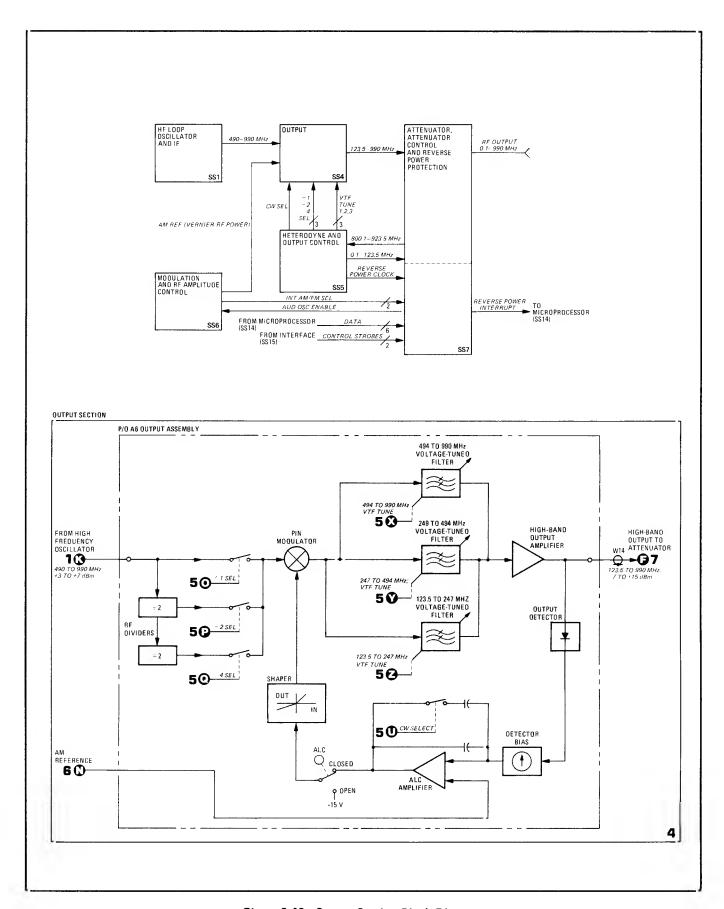
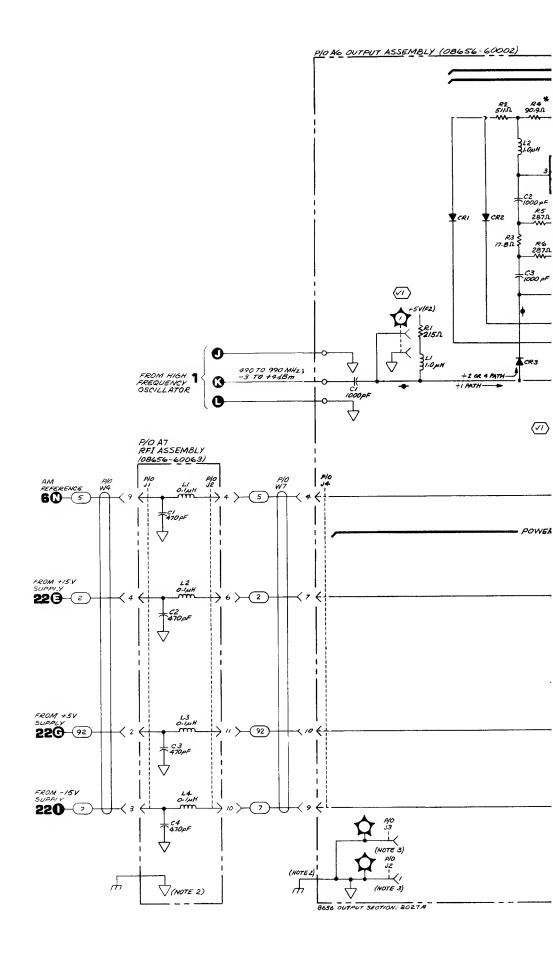
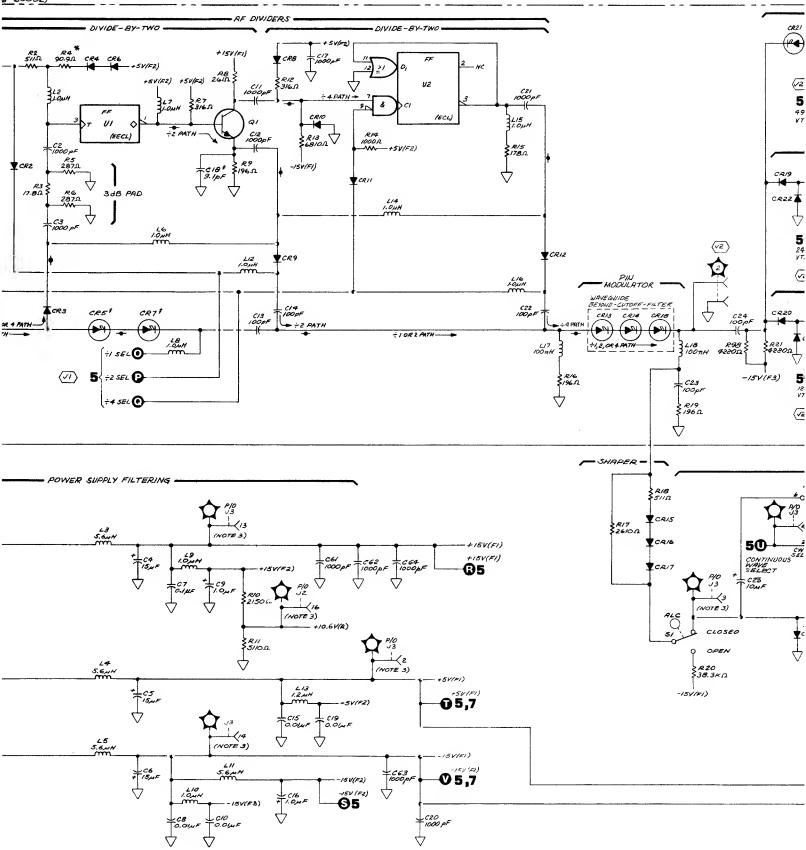
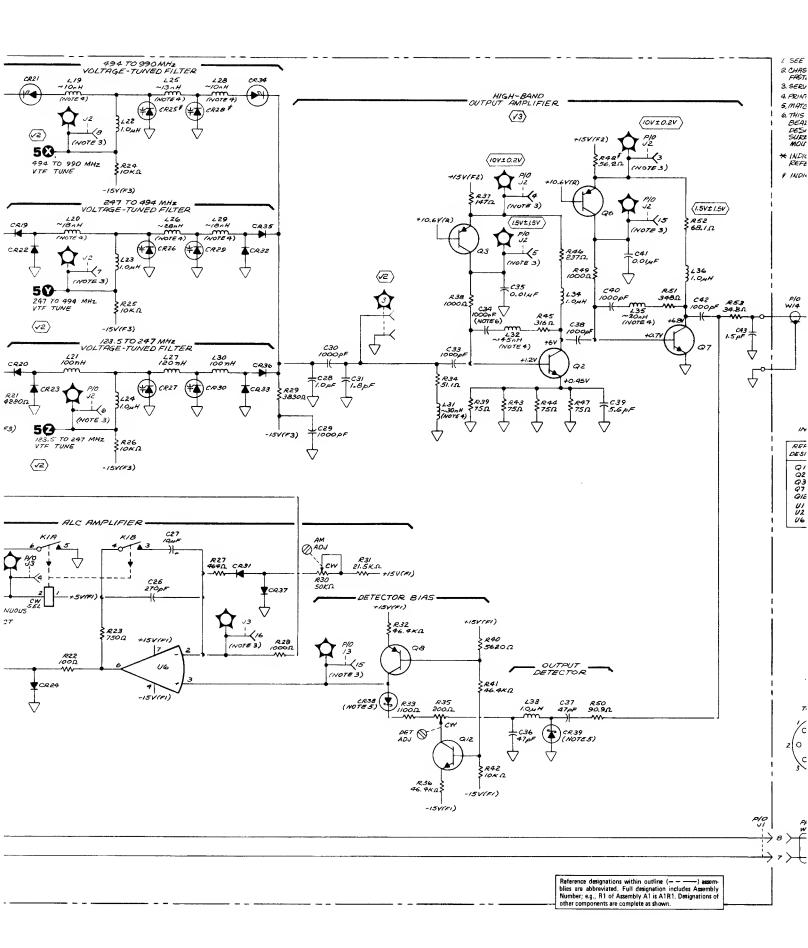


Figure 8-49. Output Section Block Diagrams







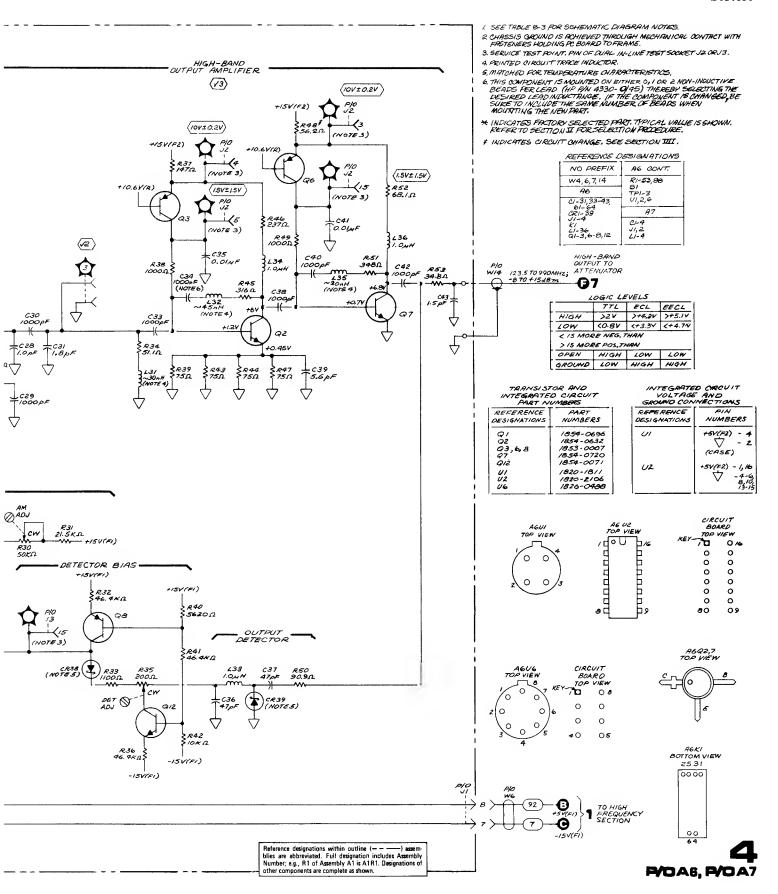


Figure 8-50. Output Section Schematic Oiagram



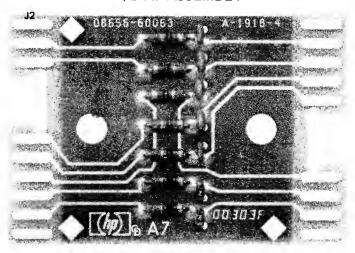


Figure 8-51. Heterodyne and Output Control (A7 Assembly) Component Locations

Purpose. Verify correct data transfer from the Microprocessor to the Output Assembly.

Setup. Connect the signature analyzer as follows:

- 1) GND to GND A11TP2
- 2) CLK to SA4 A11TP7
- 3) START to SA5 A11TP9
- 4) STOP to SA5 A11TP9

Set the signature analyzer controls as follows:

- 1) START-IN
- 2) STOP-OUT
- 3) CLK-IN

Set up the Signal Generator as follows:

- 1) On the A6 Output Assembly board, short TP5 and TP6 to TP4 (ground).
- Set the LOGIC/RAM switch P/O A11S1 to LOGIC.

initialize. Briefly short A11TP3 NMI to ground.

NOTE

With careless probing it is possible to get the Microprocessor into a program sequence other than that portion intended for signature analysis. If the +5V signature is incorrect, this has probably happened. Restart the test by setting the RST/RUN switch to RST and then RUN. Briefly touch the NMI test point to ground.

Probe. Connect the probe to the node indicated in Table 4. Verify that the signature at each node is correct and stable.

Table	Δ	Rand	Select	Shift	Renister	Signatures
10016	7.	Dalla	CUILCU	UIIIII	HUUHOLUI	Olumului co

Node	Correct Signature	Comments
+5V	F84P	
*U7#3	F84P	SIPO CLK
U7#2	6UPP	DATA IN
U7#4/U4#2	P9C5	÷4 BND
U7#5/U4#4	74 HA	÷2 BND
U7#6/U4#6	3 A 6H	÷1 BND
U7#7/U4#15	9H36	CW BIT
U7#14/U4#12	029U	RF OFF

^{*}This signature is the same as the +5V signature but the signature analyzer's probe should blink.

Remove the jumpers between ground, TP5 and TP6. Reset the LOG-IC/RAM switch to the RAM position. Set the front panel RESET-STBY-ON switch to STBY and back to ON.



Front Panel Frequency (MHz)		J2-		
	123.5 to 247 MHz	247 to 494 MHz	494 to 990 MHz	Pin 13 (Vdc)
900	-0.5	-0.5	+14.3	+14.4
600	-0.5	-0.5	+ 8.5	+ 8.6
494	-0.5	-0.5	+ 4.9	+5.0
350	-0.5	+12.9	-0.5	+13.0
300	-0.5	+ 8.5	-0.5	+ 8.6
200	+14.3	-0.5	-0.5	+14.4
150	+8.6	-0.5	-0.5	+86

Table 3. Voltage Tuned Filter TUNE Voltages

3. Remove the tune voltage to the A5 Assembly. The loop is unlocked. The waveforms shown in Figure 1 should occur on the stated connector and pin.

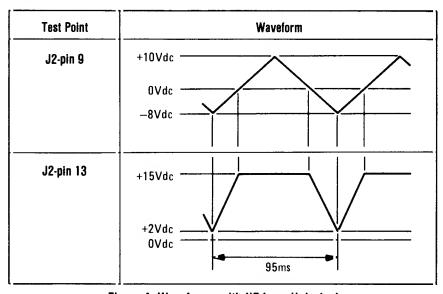


Figure 1. Waveforms with HF Loop Unlocked

TROUBLESHOOTING USING SIGNATURE ANALYSIS

This is an alternate method of troubleshooting the Service Sheet 5 (and Service Sheet 2) circuits. If the signatures for these circuits are correct, the problem may be in the controlled (analog) circuits. In this case, continue with the preceding troubleshooting information. Remember that a malfunction could be on the control (digital) circuits of Service Sheet 2. If the problem is definitely in the Output or High Frequency Loop circuits, you may wish to refer to BD2.

NOTE

The signatures are not valid for Signal Generators with serial number prefixes of 2018A and below.

Test Equipment (Cont'd)

$\sqrt{1}$ Heterodyne Section

- 1. Set the Signal Generator to -10 dBm at 100 MHz without modulation.
- 2. Measure power level and frequency as shown in Table 1 using the adapter probe.

Table 1. Heterodyne Section Power Levels

Test Point	Power Level (d8m)	Frequency (MHz)		
W10	+6.5 to +3.5	800.00		
W13 C59	-2.5 to -4.5 -3.0 to -4.0	900.00		

$\left<\sqrt{2}\right>$ Output Section Data Storage/Driver

- 1. Set the Signal Generator to $-10~\mathrm{dBm}$ at $500~\mathrm{MHz}$ without modulation (cw mode).
- 2. Check CW SEL at J3-pin 4. It should be +0.2 Vdc (low).
- 3. Set the Signal Generator to 50% AM at the internal 1 kHz rate.
- 4. Check CW SEL at J3-pin 4. It should be +5.0 Vdc (high).
- 5. Check voltages on the J3 test points at the front panel Frequency settings as indicated in Table 2.

Table 2. Band Select Shift Register and Driver Voltages

Front Panel	Vol	itage Measured at J3 (V	/dc)
Frequency (MHz)	÷1 SEL at Pin 8	÷2 SEL at Pin 5	÷4 SEL at Pin 7
500	+0.2	+4.8	+4.8
300	+8.4	+0.2	+8.4
200	+14.0	+14.0	+0.2

6. Check J3-Pin 12. It should measure less than or equal to $+0.2\,\mathrm{Vdc}$ with the Signal Generator set to ON and $+15.0\,\mathrm{Vdc}$ in the STBY mode.

$\left\langle\!\!\!\sqrt{3}\right angle$ VTF Drivers

- 1. Set the Signal Generator to -10 dBm without modulation.
- 2. Check the voltages shown in Table 3 for the front panel frequency indicated. If the High Frequency Loop is not locked the voltage will be a triangular wave.

The output of Q14 is dc coupled to the base of Q15. Resistors R69 and R84 provide dc voltage for the collector of Q15. Inductors L52 and L53 are RF chokes. The emitter circuit components R77, R78, R81, R82, and C47 have the same function as those components of Q14. Resistor R85 and capacitor C49 are a low Q series resonant circuit used to increase the gain of Q15 at the higher frequencies.

The output of Q15 is ac coupled to the Attenuator Assembly by capacitor C59. The 383Ω resistor, R65, lowers the Q of the Diplexed Filter. The Low Band Output Amplifier provides 30 dB of gain ± 0.5 dB to restore the RF signal to the same level as input but at the lower frequency.

VTF Drivers and Band Select

The VTF TUNE voltage from the A4 Assembly's Loop Amplifier is applied through voltage divider R71 and R73 to the negative input of U3. This variable tune voltage, -7.5 to +12 volts, is dependent on the frequency selected. The resistors, which act as a voltage divider, offset the input voltage. Operational amplifier U3, transistor Q5 and their associated components, further offset the input voltage. The resulting VTF TUNE voltages vary between +3 and +15 volts. The voltage at the negative input of U3 (the collector voltage of Q5 divided by resistors R75 and R76) is compared to the positive input of U3. Transistor Q5 is a power amplifier that increases the current capability, providing enough current to turn on the input and output diodes of the VTF selected.

Resistors R90 and R91, R86 and R87, and R79 and R80 provide dc bias for transistors Q9, Q10 and Q11 respectively. Transistors Q9, Q10, and Q11 are biased on by bits 5,6, and 7 of High Frequency Word 2. This control signal is received from the Microprocessor by the Band Select Shift Register and Drivers. When the fifth, sixth or seventh bit of the frequency word selects 0 Vdc, diodes CR42, CR41, or CR40 will be forward biased. This turns on transistor Q9, Q10, or Q11, selects the VTF and supplies the tune voltage. These three bits also select one of the three Voltage Tuned Filters on Service Sheet 4, thereby determining the RF Divider mode.

TROUBLESHOOTING

Procedures for checking the circuits of the A6 Output Assembly are given below. The area or points to check are marked on the schematic by a hexagon with a checkmark and a number inside, e.g. $\sqrt{3}$. Fixed voltages are shown on the schematic inside a hexagon, e.g. $\sqrt{2V\pm0.2V}$. Transistor bias voltages are shown without tolerances.

Test Equipment

Digital Multimeter	HP 3465A
Oscilloscope	HP 1222A
Power Meter	HP 436A
Power Sensor	HP 8482A
Frequency Counter	HP 5328A
Adapter Probe	HP 1250-1598

SERVICE SHEET 5 P/O A6 OUTPUT ASSEMBLY P/O A7 RFI ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD2 Table 4-1. Abbreviated Performance Tests Table 5-2. Post-Repair Adjustment Procedures

PRINCIPLES OF OPERATION

General

When the RF OUTPUT frequency is between 0.1 and 123.5 MHz, the Divide-by-1/Heterodyne mode is selected. The High Frequency Loop's oscillator frequency, in this case between 800.1 and 923.5 MHz, is mixed with the 800 MHz reference signal. The difference frequencies from the Mixer are those that fall within the required RF output frequency band.

The VTF TUNE input is translated by the VTF Drivers to voltages that will tune each of the three VTF filters. The filter selected determines the RF divider mode.

Serial Output Data is clocked into the Band Select Shift Register and on to the register found among the circuits shown on Service Sheet 2. The output of U7 enables the appropriate VTF and the cw mode of operation.

Heterodyne Section

A Frequency input between 0.1 and 123.5 MHz selects the Divide-by-1/Heterodyne mode. The RF signal from the Output Assembly to the A9 Attenuator Assembly (between 800.1 and 923.5 MHz) is switched to the Output Assembly. Switching occurs at front panel frequencies of 123.5999 MHz when incrementing up and 123.4000 MHz when incrementing down. After mixing with the 800 MHz reference, the Diplexed Filter passes the difference frequencies while attenuating the other mixing products. The 0.1 to 123.5 MHz signal is applied to the step attenuator in the A9 Assembly before being coupled to the front panel RF OUTPUT connector.

A frequency from 800.1 MHz to 923.5 MHz at a level from +15 to -7 dBm, vernier dependent, is switched to the Output Assembly and applied to the Mixer A6U10 through an adjustable pad. The pad, consisting of resistors R55, R56, R57, R58 and C56, is adjustable from 20 to 24 dB. The pad reduces the signal into the mixer to a maximum of -7 dBm which prevents spurious signal generation. The LO input to the Mixer is a fixed frequency of 800 MHz at +6 dBm. The 800 MHz enters the Output Assembly through an 800 MHz Bandpass Filter where it is coupled to the Mixer. The difference output frequencies (0.1 to 123.5 MHz) are passed by the Diplexed Filter to the Low Band Output Amplifier. The input of the filter is diplexed by C57 and R59 to give a good match at all frequencies and to reduce spurious signals, primarily the summed mixing product. The output of the filter is ac coupled to the Low Band Output Amplifier by capacitor C52. The value of C52 provides the best signal coupling while preventing amplifier transistors Q14 and Q15 from being reverse biased when the instrument is turned on.

Resistors R64, R62, and R60 form a voltage divider used to dc bias Q14. The voltage divider also contains RF choke L50. Resistors R67, R70, and R72 in the emitter of Q14 provide series feedback. By using these three resistors, the inductance in the emitter current path is reduced. Resistor R68 completes the emitter's dc return and capacitor C55 is the ac path to ground.

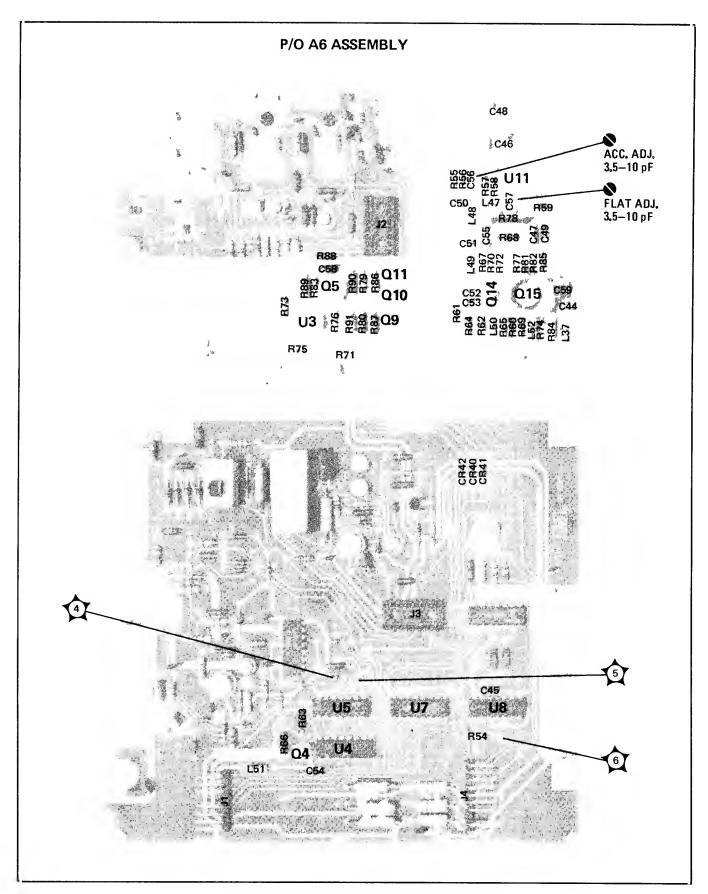


Figure 8-52. Heterodyne and Output Control (A6 Assembly) Component Locations

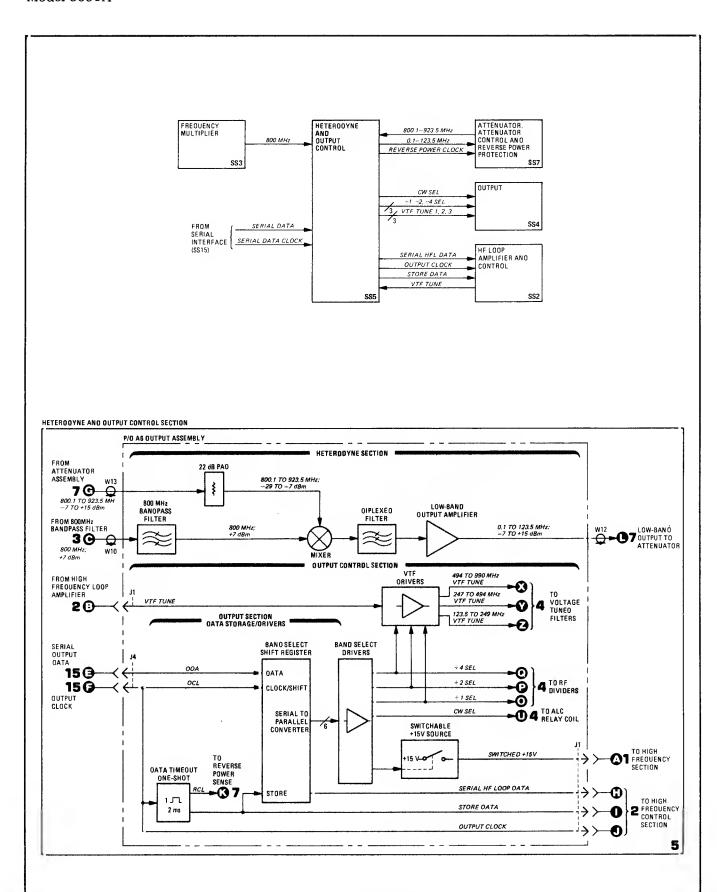
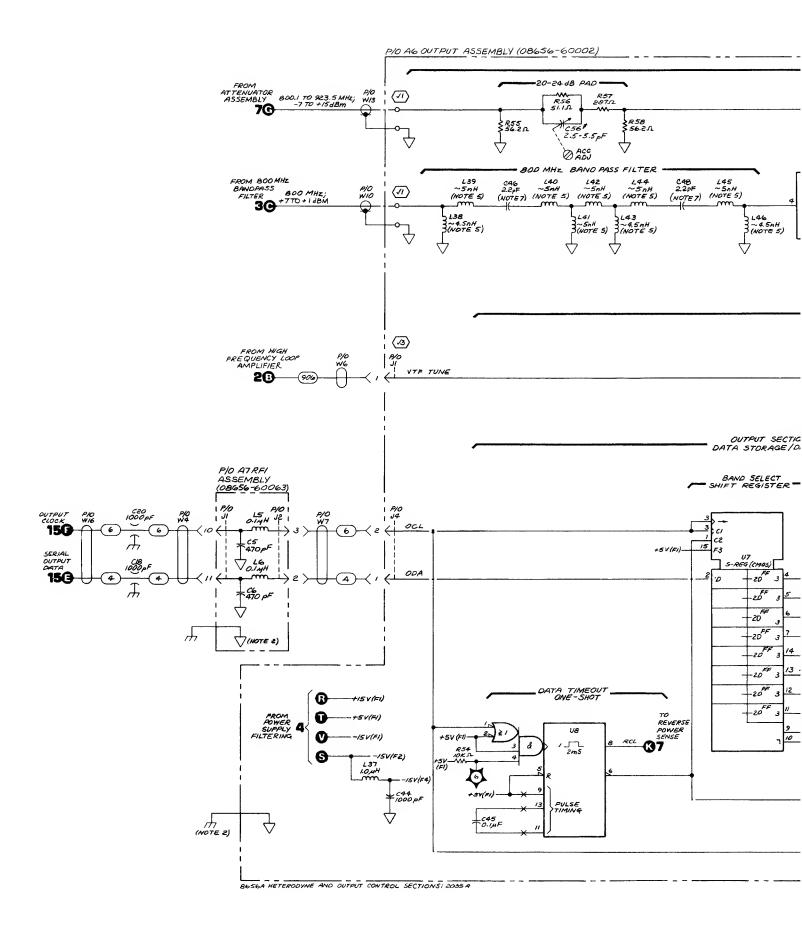


Figure 8-53. Heterodyne and Output Control Block Diagrams



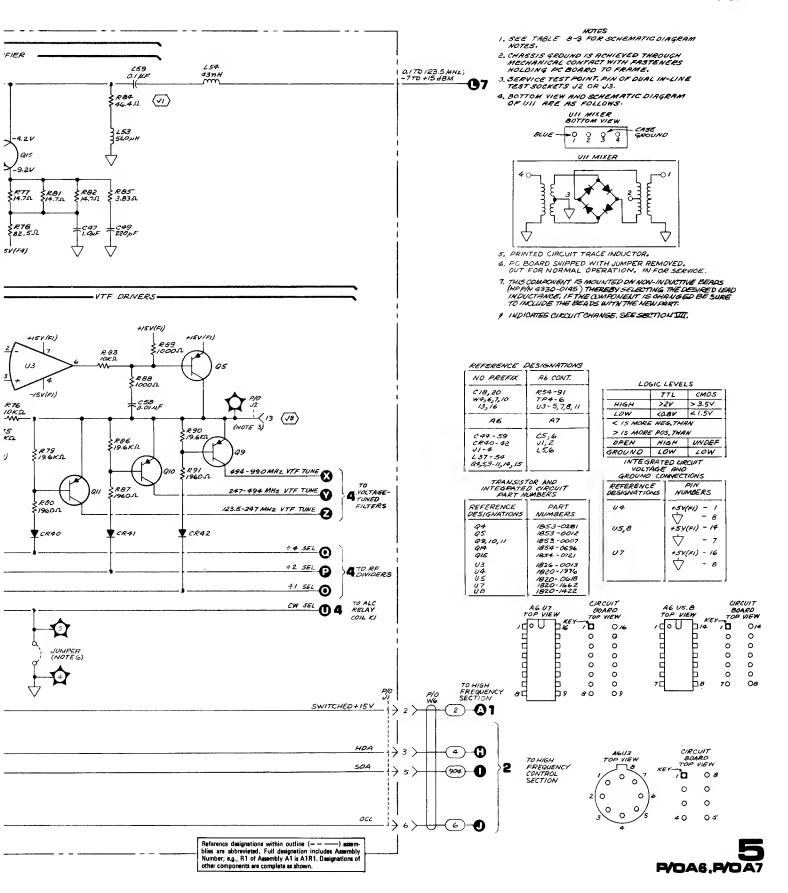


Figure 8-54. Heterodyne and Output Control Schematic Diagram

Service Model 8656A

SERVICE SHEET 6 (Cont'd)

√3 P/O Modulation Control Latches, FM Deviation DAC

- 1. Set the Signal Generator to -10 dBm at 500 MHz with a 1 kHz source in FM mode.
- 2. Set FM kHz as indicated in Table 5 and make the indicated voltage checks.

P/O Modulation Control Latches, Comparators, and FET switches

- 1. Set the Signal Generator to -10 dBm at 500 MHz without modulation.
- 2. Set the function as indicated in Table 6 and make the indicated voltage checks.

TROUBLESHOOTING USING SIGNATURE ANALYSIS

This is an alternate method of troubleshooting the circuits of Service Sheet 6. If these signatures are incorrect, recall that the data strobes are decoded on the circuitry of Service Sheet 15 and the data is output from the Microprocessor which is on Service Sheet 14. If these signatures are correct, and the problem does not seem to be related to modulation, return to Service Sheet BD4 for further digital troubleshooting. If the problem seems to be related to a modulation problem, continue troubleshooting on this service sheet or refer to Service Sheet BD2.

Test Equipment

Signature Analyzer HP 5004A

Purpose. To verify correct transfer of encoded data and strobe information from the Microprocessor to the modulation control latches.

Setup. Connect the signature analyzer as follows:

- 1) GND as close to the circuitry being probed as possible. (Bad grounding can cause unstable signatures.)
- 2) CLK to 'E' A11TP11
- 3) START to 'SA1' A11TP6
- 4) STOP to 'SA2' A11TP6

Set the signature analyzer controls as follows:

- 1) START-OUT
- 2) STOP-IN
- 3) CLK-IN

Set up the Signal Generator as follows:

- 1) Disconnect the attenuator cable W17 from the power supply board to the attenuator.
- 2) Set the LOGIC/RAM switch P/O A11S1 to LOGIC.

NOTE

If the Signal Generator's address switch has been set to other than 07, the signatures taken in this test will be incorrect. In this case, reset the address switches to A1=1, A2=1, A3=1, A4=0 and A5=0. Then set the front panel RESET-STBY-ON switch to RESET and back to ON.

Table 5. FM	neviation	Control	Voltage	Leveis
-------------	-----------	---------	---------	--------

Front Panei		Measure the voitage* as indicated at												
FM (kHz)		U	13				Test Point							
	12	15	16	19	2	5	6	9	12	15	J6-pin 8 (Vrms)			
1	L	L	L	L	Н	Н	Н	Н	L	Н	0.2407			
5	L	Н	L	L	H	Н	L	L	Н	L	1.205			
10	H	L	L	Н	Н	L	L	H	L	н	2.423			
20	L	L	L	Н	Н	Н	H	L	Н	H	0.485			
50	L	Н	L	L	Н	Н	L	L	Н	L	1.209			
80	L	Н	Н	Н	Н	L	Н	L	Н	L	1.935			
99	H	L	L	Н	L	Н	Н	Н	Н	н	2.400			

Table 2. Level Control Voltage Levels versus Frequency

Front Panel Frequency				(U	9	Test Point				
(MHz)	2	5	6	9	12	15	16	19	2	5	J6-pin 12 (Vdc)
0.100	L	Н	L	Н	L	L	Н	Н	L	$\begin{bmatrix} - \\ H \end{bmatrix}$	0.387
100	L	Н	L	L	Н	Н	Н	L	Н	L	0.365
200	L	Н	Н	L	L	Н	Н	Н	Н	L	0.481
300	L	Н	H.	L	L	Н	L	Н	L	L	0.470
400	L	Н	Н	L	L	L	Н	L	Н	H	0.459
800	L	Н	L	Н	Н	L	L	L	L	L	0.409
990	L	Н	L	Н	L	L	L	L	L	н	0.373

Table 3. Level Control Voltage Levels versus Front Panel Amplitude

Amplitude (dBm)	ļ			l	U9		Test Point				
	2	5	6	9	12	15	16	19	2	5	J6-Pin 12 (Vdc)
0.0	L	Н	L	Н	H	Н	Н	H	Н	L	0.444
+5.0	H	L	H	L	Н	L	L	Н	Н	Н	0.790
+10.0	L	Н	Н	L	L	L	L	L	L	L	1.396
+13.0	Н	L	L	L	L	Н	Н	Н	Н	L	1.974

Table 4. AM% Control Voltage Levels

Front		Measure the voltage* as indicated at											
Panel AM%			ι	jg				U	13	Test Point			
	6	g	12	15	16	19	2	5	6	9	J6-Pin 12 (Vdc)		
1	L	L	L	L	L	L	L	Н	L	L	0.0033		
5	L	L	L	L	L	Н	L	L	Н	Н	0.015		
10	L	L	L	L	Н	L	L	Н	Н	L	0.031		
20	L	L	L	Н	L	L	Н	Н	L	L	0.063		
50	L	L	Н	L	Н	Н	Н	Н	Н	Н	0.162		
70	L	Н	L	L	L	L	Н	L	Н	Н	0.228		
99	L	Н	L	Н	Н	Н	Н	L	Н	L	0.323		

External Modulation. The amplitude at the external MOD INPUT connector must be set at the Source and is monitored by the Over/Under Modulation Comparators U22C and D. When the modulation input signal is too high, comparator U22C switches its output from -15 Vdc to 0.0 Vdc and the monostable multivibrator U1A is enabled. The active-high output, pin 13 goes high for 0.45 s. As long as the input is enabled by the modulation signal, the multivibrator will continue to output the pulse.

The pulse from the multivibrator is applied to the Status Register A11U10 (refer to Service Sheet 14). The Microprocessor receives this status bit over the data bus when the inputs to the Status Register are clocked in by the status strobe (the HI EXT LED is turned on). When the output is too low, neither of the comparators are switched (outputs are low) and neither monostable is enabled. The active-high output of U1A is low and the active-low output of U1B is high. The high level is applied to the Status Register and the LO EXT LED is turned on. When the input is one volt peak, comparator U22D's output is switched high which sets U1B (that is, the active-low output returns low). The LO EXT LED is turned off. If the level goes too high, U1A is set which outputs a high on HI(H). As long as the level is high enough, the comparator(s) will switch at the modulation rate.

TROUBLESHOOTING

Procedures for checking the circuits of the A10 Audio/Power Supply Assembly are given below. The areas or points to check are marked on the schematic by a hexagon with a checkmark and a number inside, e.g., $\sqrt{1}$. Fixed voltages are shown on the schematic inside a hexagon, e.g. $(2V \pm 0.2V)$. Transistor bias voltages are shown without tolerances.

Test Equipment



$\left(\sqrt{\mathsf{1}}\, ight)$ P/O Modulation Control Latches, Level DAC

- 1. Set the Signal Generator to -10 dBm without modulation.
- 2. Set the frequency as shown in Table 2 and check the levels at U5 and U9.
- 3. Set the Signal Generator to 500 MHz without modulation.
- 4. Set the RF output level as shown in Table 3 and check the following levels at U5 and U9.

$\langle \sqrt{2} \rangle$

$\sqrt{f 2}$ P/O Modulation Control Latches, AM% DAC

- 1. Set the Signal Generator to $-10~\mathrm{dBm}$ at $500~\mathrm{MHz}$ with a 1 kHz source in the AM mode.
- 2. Set AM% as indicated in Table 4. Make the indicated voltage checks.

Internal FM Select. Internal FM is selected when the data bit latched into pin 6 of U19 is high. The high output switches the output of Internal FM select comparator U21D to approximately 0.0 Vdc and FET switch Q7 is turned on. Both U21D and Q7 are shown on Service Sheet 12.

Internal Modulation. When internal modulation only is selected, the data bits latched into pin 2 of U19 Audio Osc Out is high. The high output switches the output of Audio Oscillator Out comparator U22B to 0.0 Vdc. FET switch Q10 is turned on and the 400 Hz or 1 kHz Internal Audio Oscillator output of buffer amplifier U20B is applied to MOD INPUT/OUTPUT connector on the front panel.

The internal Audio Oscillator is enabled by a high at either the INT AM SEL or INT FM SEL data bits. These two bits are each applied to A10U7 one of the control drivers shown on Service Sheet 7. The output of U7 enables the Internal Audio Oscillator U20A on this service sheet.

The internal Audio Oscillator's frequency of 400 Hz or 1 kHz is selected by the data bit latched into pin 8 of U19, FREQ SEL. For 1 kHz FREQ SEL is low; for 400 Hz it is high. The high output switches the output of Audio Frequency select comparator U22A to approximately 0.0 Vdc. FET switch Q11 is turned on and capacitor C1 is bypassed. This increased capacitance switches the Audio Oscillator's frequency to 400 Hz. If 1 kHz is selected, Q11 is open and C1 is left in the oscillator's feedback circuit. The peak output of the Audio Oscillator is approximately 7.5 volts as determined by VR1, CR2 and 3. These components form the feedback path for the positive input of U20A.

External AM Select. External AM is selected when the data bit latched into pin 16 EXT AM SEL of U19 is high. The high output switches the output of External AM select comparator U21A to approximately 0.0 Vdc to switch FET Q8 on. The external modulation signal from the External Modulation Buffer U23 is applied to the AM% Summing Amplifier through R25, a 20.4 k Ω resistor.

External FM Select. External FM is selected when the data bit latched into pin 18 EXT FM SEL of U19 is high. The high output switches the output of External FM Select comparator U21C to approximately 0.0 Vdc. FET switch Q6 is turned on and the external modulation signal from the External Modulation Buffer U23 is applied to the FM Deviation Summing Amplifier U17A. (U21C, Q6 and U17A are all shown on Service Sheet 12.)

Modulation Calibration. Internal and external modulation is calibrated only if the modulation signal from the internal Audio Oscillator or external MOD INPUT is equal to 1.00 ± 0.05 Vpeak. The amplitude from the internal Audio Oscillator is adjusted by R16 Osc Adi.

Table 1. RF Amplitude Ranges

Over-	Amplite	ude Range	Vernier	10 dB Step Attenuator	
Range	Normal	Extended	Output Level (dBm)	Pads in Use	
Yes	+17.0 to -3.5	+17.0 to -4.0	+17.0 to4.0	None	
No	−3.6 to −13.5	-3.0 to -14.0	+7.0 to -4.0	10	
No	-13.6 to -23.5	-13.0 to -24.0	+7.0 to −4.0	20	
No	-23.6 to -33.5	-23.0 to -34.0	+7.0 to -4.0	30 A	
No	-33.6 to -43.5	-33.0 to -44.0	+7.0 to -4.0	30 A ,10	
No	-43.6 to -54.5	-43.0 to -54.0	+7.0 to -4.0	30 A ,20	
No	-54.6 to -64.5	-53.0 to -64.0	+7.0 to -4.0	30 A ,30 B	
No	-64.6 to -74.5	-63.0 to -74.0	+7.0 to -4.0	30A,30B,10	
No	-74.6 to -84.5	-73.0 to -84.0	+7.0 to -4.0	30A,30B,20	
No	-84.6 to -94.5	-83.0 to -94.0	+7.0 to -4.0	30A,30B,30C	
No	-93.6 to -103.5	-93.0 to -104.0	+7.0 to -4.0	30A,30B,30C,10	
No	-103.6 to -113.5	-103.0 to -114.0	+7.0 to -4.0	30A,30B,30C,20	
Yes	-113.6 to -123.5	-113.0 to -127.0	+7.0 to -7.0	30A, 30B,30C,20,10	

AM Control. The ten data bits, Y0-Y9, are clocked into Modulation Control Latches U9 and U13 by MSTB2 and MSTB3 strobes from Address Decoder U1 (refer to Service Sheet 15). These ten bits are applied to the AM% DAC U8. The digitally controlled output level of the AM% DAC adjusts the input modulation signal from the AM% Summing Amplifier U18C to the level that will modulate the RF signal to the depth selected. The output signal is ac coupled by C11 to Unity Gain AM Offset Buffer U15. The Offset Adjustment nulls any dc offset of the modulation signal. The amplitude modulation signal is then summed with the level voltage at U18A as discussed above.

FM Control. The ten data bits, Z0-Z9, are clocked into Modulation Control Latches U13 and U16 by MSTB3 and MSTB4 strobes from the Address Decoder U1 (refer to Service Sheet 15). These ten bits are applied to the FM Deviation DAC U14 (refer to Service Sheet 12). The digitally controlled output level of the FM Deviation DAC adjusts the input modulation signal from the FM Deviation Summing Amplifier U17A (refer to Service Sheet 12) for the amplitude level that frequency modulates the RF output to the deviation level selected.

Internal AM Select. Internal AM is selected when the data bit latched into pin 5 of Modulation Control Latch U19 is high. The high output to the positive input of Internal AM Select comparator U21B, being more positive than the +2 volts at the negative input, switches its output to 0.0 Vdc. FET switch Q9 is turned on. When Q9 is on, the output of U20A is ac coupled by C7 through the 20.4 k Ω resistor R22 to the AM% Summing Amplifier.

SERVICE SHEET 6 P/O A10 AUDIO/POWER SUPPLY ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD2

Table 4-1. Abbreviated Performance Tests

Table 5-2. Post-Repair Adjustment Procedures

PRINCIPLES OF OPERATION

General

Encoded data output from the Microprocessor is input to Modulation Control Latches. This data is used to control the RF amplitude level fine steps and RF amplitude level versus frequency correction. The data also controls the amplitude and frequency modulation signals.

Amplitude Control

Output data from the Microprocessor controls 1) the 0.1 dB steps of output amplitude level across 10 dB (the range selected by each step of the 10 dB Step Attenuator) with an extended range of 11 dB, 2) the overrange of about +10 dB added to the highest range and the overrange of –3 dB added to the lowest range and 3) the level correction for frequency. The latter uses the extended 11 dB range. This means that the amplitude range (attenuator step of 10 dB) is never changed for level correction. Refer to Table 1.

When an output amplitude level is selected, the Microprocessor controls the change so the final level is always approached from a lower level. For example, if the vernier level is at its minimum and the output level is decreased by 1 dB, the 10 dB Step Attenuator will increase attenuation by 10 dB. The vernier level then increases the level input to the attenuator by 9 dB. The 9 dB increase will never occur first. For the same reason, a 1 dB increase with the vernier set to maximum causes a 9 dB decrease in level followed by a 10 dB decrease in attenuation in the step attenuator. After the amplitude is changed, the correction for frequency is made.

The ten bits of Microprocessor data, X0-X9, are strobed into Modulation Control Latches U5 and U9 by MSTB1 and MSTB2 from Address Decoder U2 (refer to Service Sheet 15). These ten data bits are applied to the Level Digital-to-Analog Converter (DAC) U4. The digitally controlled output of the Level DAC adjusts the reference voltage input from the unity gain Level Buffer U18B. This dc voltage controls the Vernier Output Level. The output voltage is applied to the AM Reference Summing Amplifier U18A.

When amplitude modulation is selected, the amplitude level voltage is summed with modulation voltage, and applied to U6 of the Automatic Level Control (ALC) Amplifier (refer to Service Sheet 4).

The Microprocessor determines when the Vernier Output Level is greater than +7.0 dBm. At this time the Level Range Sel bit is set high and the output of U18D goes to approximately -15 Vdc. FET switch Q4 opens thereby increasing the gain of Summing Amplifier U18A. This allows the higher output levels. At -127 dBm the amplitude level vernier's range is extended to -7 dB.

Modulation Control

Data from the Microprocessor selects AM, FM or both, internal modulation sources of 400 or 1000 Hz, and/or external modulation. The data also controls the AM depth and FM deviation levels.

Model 8656A Service

SERVICE SHEET 6 (Cont'd)

initialize. Briefly short A11TP3 NMI to ground.

NOTE

With careless probing it is possible to get the Microprocessor into a program sequence other than that portion intended for signature analysis. If the +5V signature is incorrect, this has probably happened. Restart the test by setting the RST/RUN switch to RST and then RUN. Briefly touch the NMI test point to ground. **Probe.** Connect the probe to each node indicated in Tables 7 through 11. Verify that the signature is correct and stable.

NOTES

Disconnect any external modulation from the BNC jack.

In case of unstable or incorrect signatures, ground the data probe as close as possible to the node being tested.

Table 6. Function Control Voltage Levels

Function Selected	Control Latch	Pin No.	Logic* State	Comparator	Comparator Output (Vdc)	FET Switch	Open/ Closed
Int 1 kHz AM	U19	5	Н	U21B	0.0	Q9	Closed
Int 400 Hz	U19	9	Н	U22A	+1.0	Q11	Closed
Int Mod	U19	2	Н	U22B	+5.0	Q10	Closed
Int FM	U19	6	Н	U21D (SS12)	0.0	Q7 (SS12)	Closed
Ext AM	U19	16	Н	U21A	0.0	Q8	Closed
Ext FM	U19	19	Н	U21C (SS12)	0.0	Q6	Closed
Amplitude +10 dBm	U16	19	Н	U18D	-13	Q4	Open
Ext AM No Input	_	_	_	U22D	-14	J6 Pin 4 J6 Pin 15	L H
Ext AM 1V-pk Input		_		U22D	-14	J6 Pin 14 J6 Pin 15	H L

Service Model 8656A

SERVICE SHEET 6 (Cont'd)

Table 7. AM/Level Control Signatures

Node	Correct Signature	Comments
+5V	H6H5	
U5 #2	5713	Lev DAC
U5 #5	3UA1	
U5 #6	PF25	
U5 #9	8953	
U5 #12	U314	
U5 #15	28HU	
U5 #16	1PCP	
U5 #19	P5H2	
U9 #2	C33C	
U9 #5	UCUU	

Table 8. AM% Control Signatures

Node	Correct Signature	Comments
U9 #6	48U0	AM DAC
U9 #9	H934	
U9 #12	5449	
U9 #15	H3CA	
U9 #16	6U7U	
U9 #19	37P1	
U13 #2	5869	
U13 #5	05A7	
U13 #6	PU57	
U13 #9	P580	
U16 #19	7H7C	AM Range
		Select

Table 9. FM Deviation Control Signatures

Node	Correct Signature	Comments
+5V	H6H5	
U13 #12	50P3	FM DAC
U13 #15	3P3 A	
U13 #16	681U	
U13 #19	6U79	
U16 #2	15 A 4	
U16 #5	0 AU 5	
U16 #6	5599	
U16 #9	F65U	
U16 #12	9467	
U16 #15	U761	1

Table 10. Audio Oscillator Control Signatures

Node	Correct Signature	Comments
+5 V	H6H 5	
U19 #2	1821	OSC OUT
U19 #5	52HC	INT AM
U19 #6	7P3H	INT FM
U19 #9	3CU7	OSC FRQ
U19 #16	7FCP	EXT AM
U19 #19	4HFF	EXT FM

Incorrect signatures could be due to:

- 1) data to latch problem (data bus)
- 2) strobe to latch problem
- 3) latch problem
- 4) test point 'TO2' A2TP13 shorted to "GND" on the display board.

Table 11. Modulation Strobe Signatures

Node	Correct Signature	Comments
+5V	H6H5	
U5 #11	58AP	U5 Strobe
U9 #11	57F4	U9 Strobe
U13 #11	97CC	U13 Strobe
U16 #11	A5FP	U16 Strobe
U19 #11	P1H1	U19 Strobe

Model 8656A

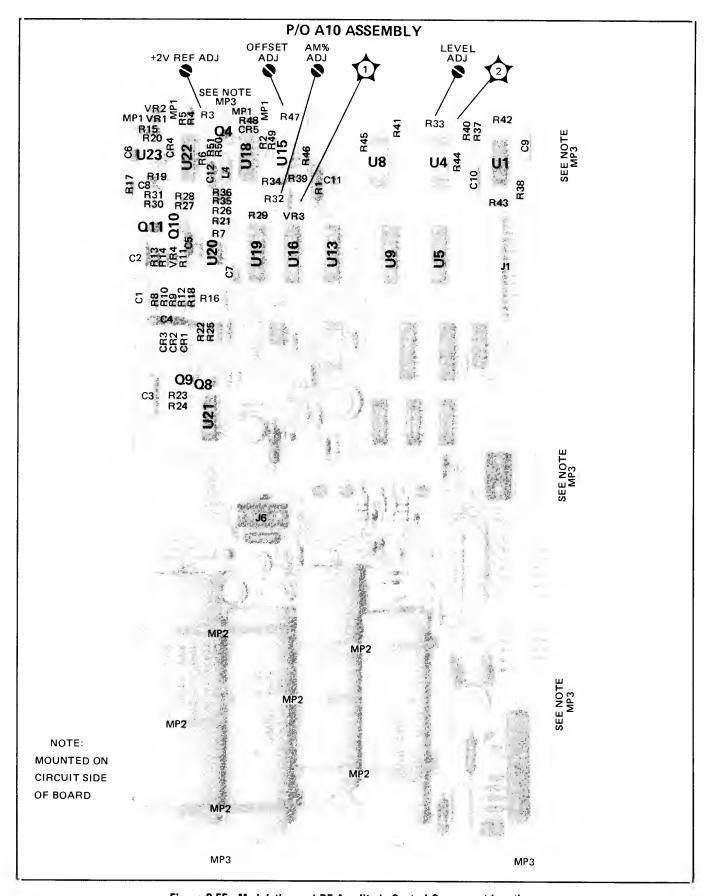
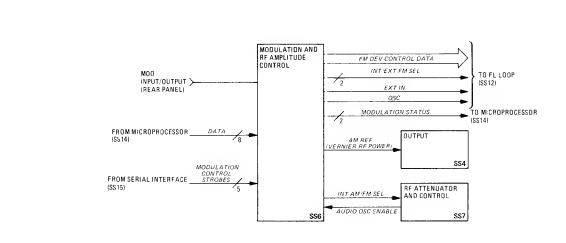


Figure 8-55. Modulation and RF Amplitude Control Component Locations



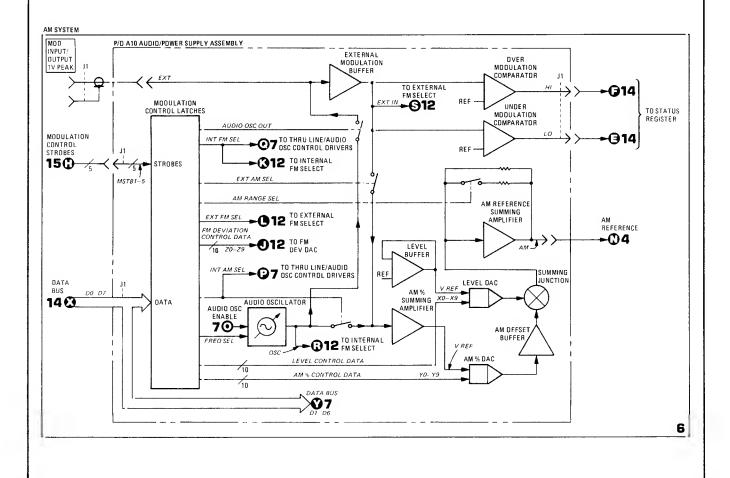
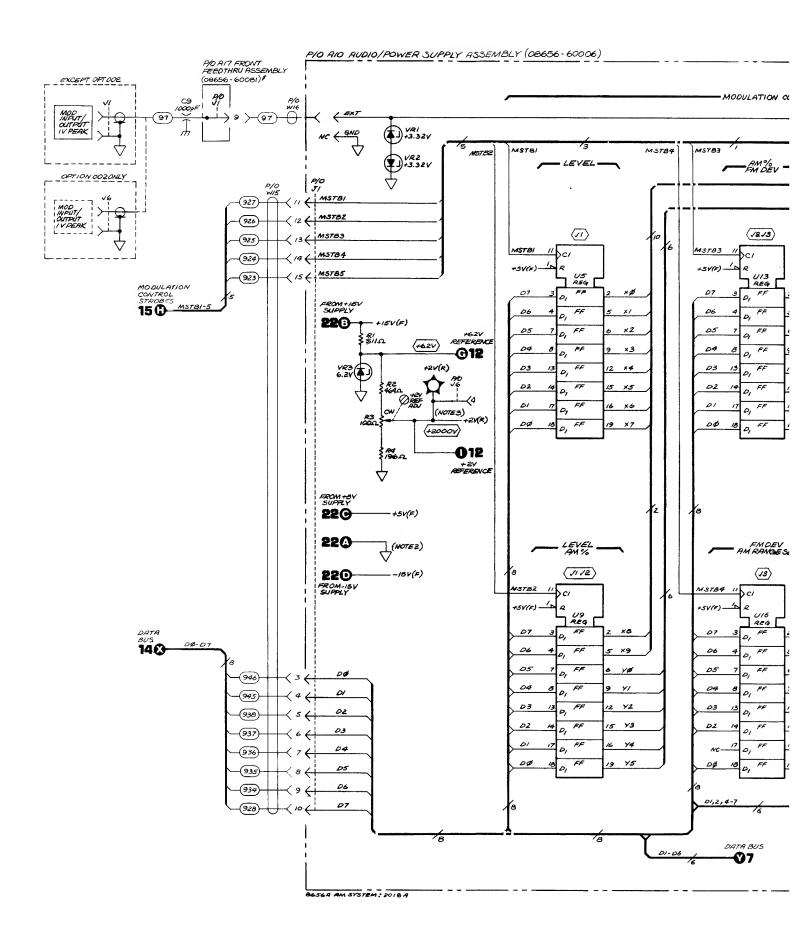
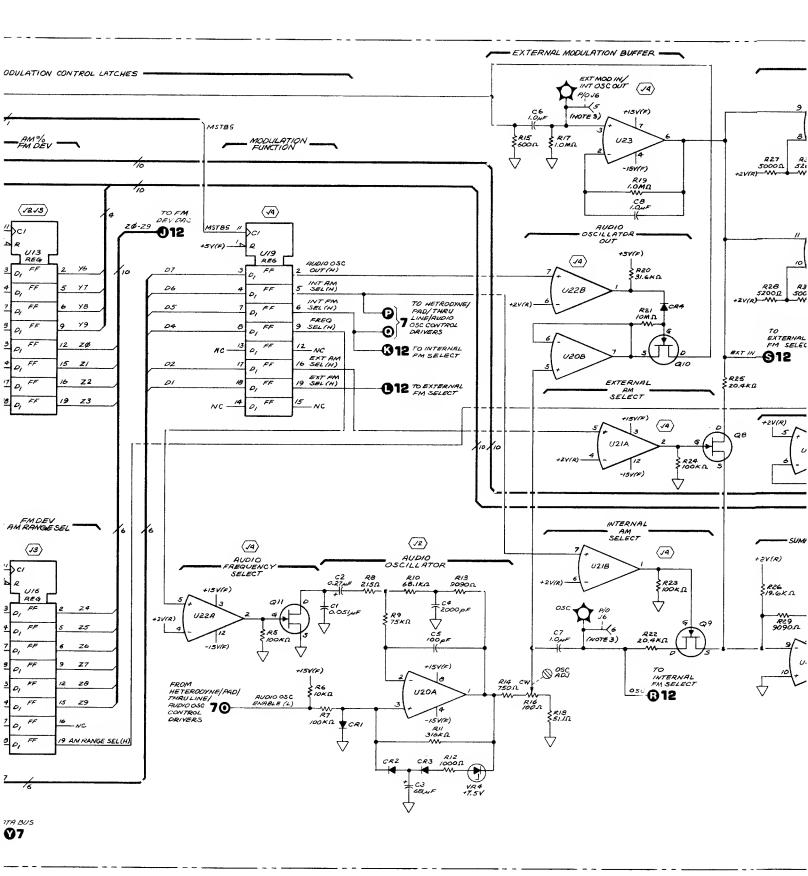
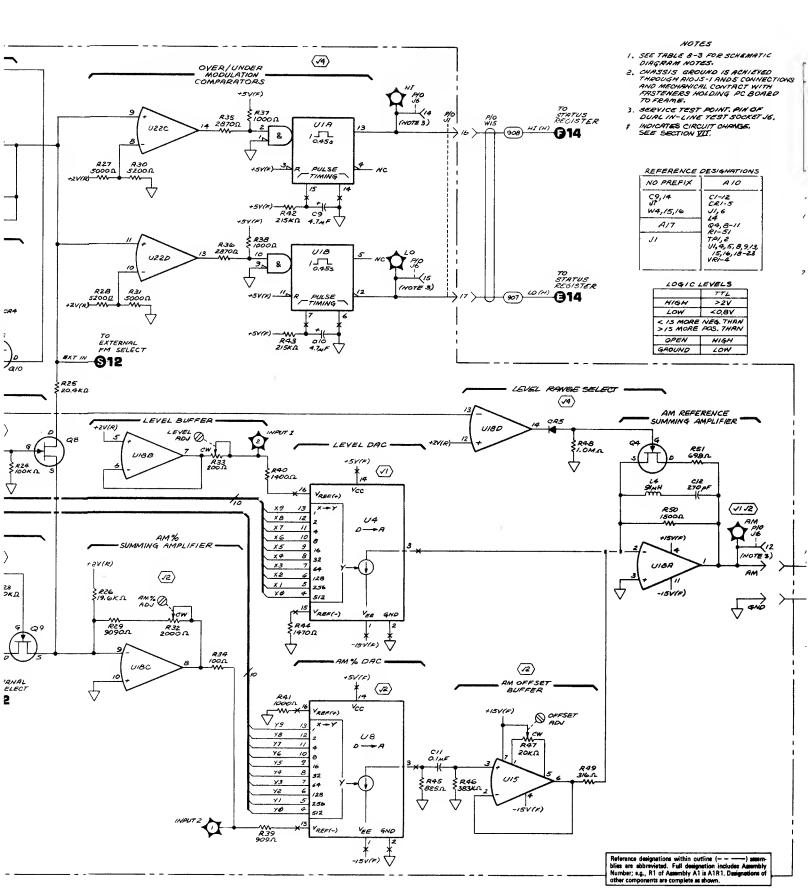


Figure 8-56. Modulation and RF Amplitude Control 8lock Diagrams







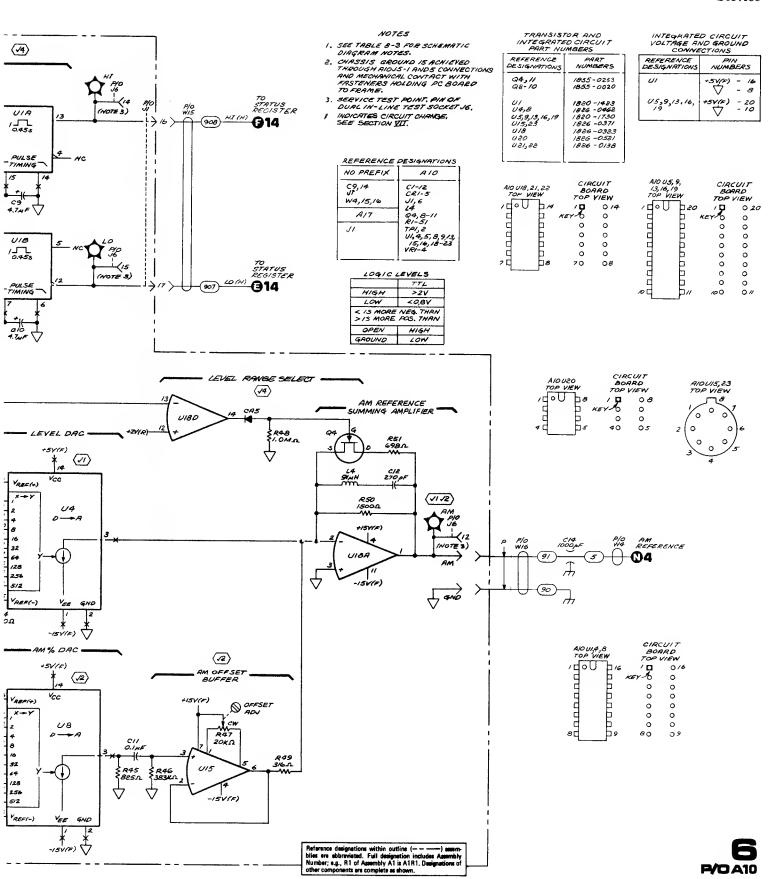
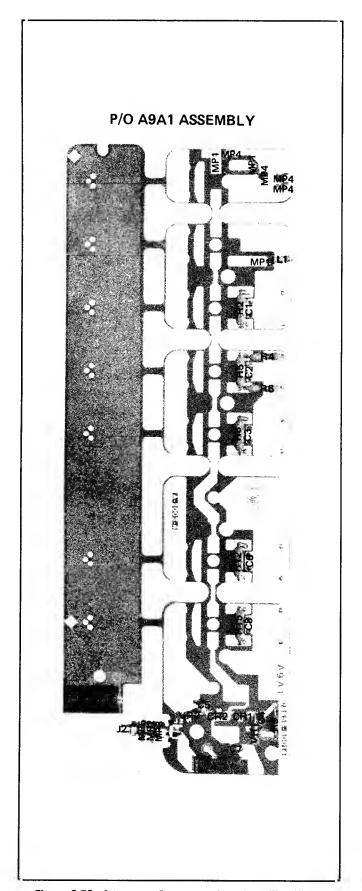


Figure 8-57. Modulation and RF Amplitude Control Schematic Diagram

Service Model 8656A



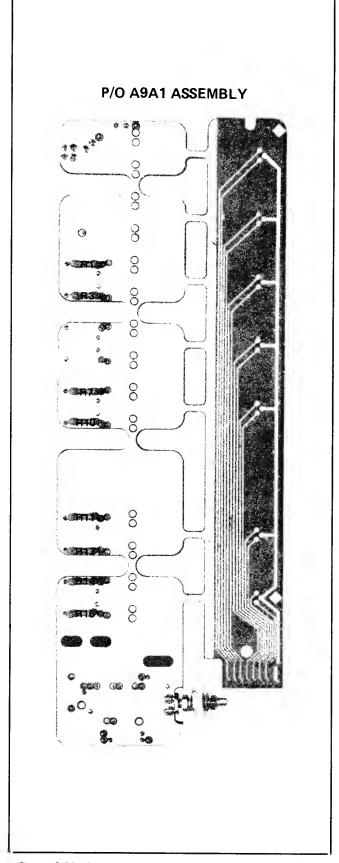


Figure 8-58. Attenuator Component Locations (Top View)

Figure 8-59. Attenuator Component Locations (Bottom View)

Probe. Connect the probe to each node in Tables 4 and 5. Verify a correct and stable signature at each node.

NOTE

In case of unstable or incorrect signatures, ground the data probe as close as possible to the node being tested.

Table 4. Heterodyne/Pad and Thru Line Control Signatures

Node	Correct Signature	Comments
+5V	H6H5 FP66	HET/PAD
U10 #2 U10 #5	U274	Control
U10 #6	PCH2	Latch
U10 #9	7 A 42	
U10 #12	8301	
U10 #15	8FFP	
+5V	H6H5	
U6 #2	0P73	THRU LINE
U6 #5	3793	Control
U6 #6	U75P	Latch
U6 #9	63H2	
U6 #12	7418	
U6 #15	4F66	

An incorrect signature could be due to:

- 1) data to latch problem (data bus)
- 2) strobe to latch problem
- 3) latch problem
- 4) TO2 A2TP13 shorted to GND on the display board.

Table 5. Heterodyne/Pad and Thruline Strobe Signatures

Node	Correct Signature	Comments
+5V U10 #11 U6 #11	H6H5 8685 CF57	U10 STROB U6 STROB

Reset the LOGIC/RAM switch to the RAM position. Reconnect the attenuator cable W17.

Reverse Power Clock toggles the J-K Flip-Flop biasing Q13 and closing the Reverse Power Relay.

TROUBLESHOOTING USING SIGNATURE ANALYSIS

This is an alternate method of troubleshooting the circuits of Service Sheet 7. If these signatures are incorrect, recall that the data strobes are decoded on the circuitry of Service Sheet 15 and the data comes from the Microprocessor on Service Sheet 14. If these signatures are correct and the problem does not seem to be related to 10 dB step attenuation or a 0.1 to 123.5 MHz RF output signal, you may want to return to Service Sheet BD4 for further digital troubleshooting. If the previously mentioned problems require further investigation, continue to troubleshoot on this service sheet or refer to Service Sheet BD2.

Purpose. To verify correct transfer of encoded data and strobe information from the Microprocessor to the attenuator control latches.

Setup. Connect the signature analyzer as follows:

- 1) GND as close to circuitry being probed as possible. (Bad grounding can cause unstable signatures.)
- 2) CLK to E A11TP11
- 3) **START SA1 A11TP5**
- 4) STOP to SA2 A11TP6

Set the signature analyzer's controls as follows:

- 1) START-OUT
- 2) STOP-IN
- 3) CLK-IN

Set up the Signal Generator as follows:

- 1) Disconnect the attenuator cable from the power supply board to the attenuator.
- 2) Set the LOGIC/RAM switch P/O A11S1 to LOGIC.

NOTE

If the Signal Generator's address switch has been set to other than 07, the signatures taken in this test will be incorrect. In this case, reset the address switches to A1=1, A2=1, A3=1, A4=0 and A5=0. Then set the front panel RESET-STBY-ON switch to RESET and back to ON. Refer to Service Sheet 17 for the location of the address switches.

Initialize. Briefly short A11TP3 NMI to ground.

NOTE

With careless probing it is possible to get the Microprocessor into a program sequence other than that portion intended for signature analysis. If the +5V signature is incorrect, this has probably happened. Restart the test by setting the RST/RUN switch to RST and then RUN. Briefly touch the NMI test point to ground.

$\sqrt{1}$ Attenuator Control

- 1. The data word is latched into A10U10 by ASTB1 and A10U6 by ASTB2. The outputs of the latches are applied to the Control Drivers where the active-low outputs are connected to the attenuator solenoids.
- 2. High data bits to control latch U10 will select the attenuator pad; high data bits to control latch U6 will remove the attenuator pad.
- 3. The high data bits at the control latches and active low outputs of the drivers must be checked using an oscilloscope. They will appear as pulses.
- 4. The pulses will be approximately 60 ms controlled by monostables U3A and B. Each monostable is triggered by the strobes and resets the control latch after 60 ms when the active high output goes low.
- 5. The attenuator pads are selected as shown in Table 2.

Ampiitude Entered at Front Panei	Attenuator Pads Selected	
-5 dBm	10 dB	
$-15\mathrm{dBm}$	20 dB	
−25 dBm	30 dB (A)	
−55 dBm	30 dB (A) and (B)	
-85 dBm	30 dB (A), (B) and (C)	

Table 2. Step Attenuator Switching

$\sqrt{2}$ Reverse Power Limiter/Detector, Reverse Power Sense

- 1. Set the Signal Generator to -10 dBm at 500 MHz without modulation.
- 2. Check the voltages shown in Table 3.

Table 3. Reverse Power Protection Operating Voltages

Reverse	U10 Test Point Test P		Test Point	Q1 (Vdc)		
Power Relay	Pin 6	J3 Pin 11	J3 Pin 10	E	В	C
Closed Open	+4.5Vdc +4.5Vdc*	+4.5Vdc +4.5Vdc*	+0.2Vdc +5.0Vdc		+4.3 +5.0	

^{*}The output of comparator U10A-pin 6 will be low only for the time required to open Reverse Power Relay K1.

3. After reverse power has been removed, enter an amplitude at the front panel and check for the Reverse Power Clock at U9 pin 12. The

Reverse Power Protection

The Reverse Power Limiter/Detector prevents reverse power levels from damaging the Attenuator or Output Amplifiers. The two zener diodes VR1 and VR2 limit the maximum voltage on the transmission line to ±5Vpk. Diodes CR1 and CR2 detect the positive and negative voltage on the transmission line and store the detected voltage on C4 and C5. The voltage stored on C4 is coupled to the negative input of A6U10A in the Reverse Power Sense circuits by resistor divider A9A1R9 and A6R92. U10A functions as a voltage comparator where the positive input reference voltage is about +2.5 volts dc. Resistors A6R93 and 94 divide the +5V(F) supply voltage for the reference voltage. When the negative input to comparator A6U10A becomes more positive than the +2.5 volt reference, which is a detected voltage greater than +2.75V, the output of A6U10A switches to approximately -15 Vdc. The current through A6R95 fixes the voltage at J-K Flip-Flop A6U9 at approximately 0 volts which resets the flip-flop. The active low output of A6U9 is high and biases transistor A6Q13 off and removes the current through A9K1. This opens the relay contacts in the transmission line removing the external overvoltage level. When the output of A6U9 opens relay A9K1, the active high output of A6U9 provides a reverse power interrupt, RP1, to the Microprocessor. The Microprocessor services the interrupt causing the Amplitude display to flash. The keyboard is locked up except for the Amplitude controls thus alerting the operator of a Reverse Power condition. Relay A9K1 will remain open until a new output level is entered. The output clock from the Microprocessor clocks the Data Time Out One-Shot A6U7 generating a 2 ms Reverse Power Clock, RPCL, which toggles (sets) A6U9. The active high output removes the Reverse Power Interrupt and the active low output turns on A6Q13 energizing relay A9K1. If the reverse power condition was not removed, the detector will detect the condition as before, re-opening the relay.

Table 1. A6U9 Operation

Set	Reset	CLK (RPCL)	Out	outs
00.		To J-K	Active High Active L	
H	L	X	L	Н
Н	Н	t	Toggle	Toggle

TROUBLESHOOTING

Procedures for checking the circuits of the A6 Output Assembly, A9 Attenuator Assembly and A10 Audio/Power Supply Assembly are given below. The areas or points to check are marked on the schematic by a hexagon with a checkmark and a number inside, e.g., $(\sqrt{1})$. Fixed voltages are shown on the schematic inside a hexagon, e.g. $(2V\pm0.2V)$. Transistor bias voltages are shown without tolerances.

Test Equipment

Digital Multimeter	 .HP 3465A
Oscilloscope	 .HP 1222A

SERVICE SHEET 7 P/O A6 OUTPUT ASSEMBLY A9 ATTENUATOR ASSEMBLY P/O A10 AUDIO/POWER SUPPLY ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD2
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

General

Encoded data from the Microprocessor is clocked into the Heterodyne/Pad Control and Thru Line Control Latches. The data is held in the latches for approximately 60 ms after the last clock pulse. At this time, U3A or U3B resets which clears the latches. The control signals enable the heterodyne mode (at frequencies from 0.1 to 123.5 MHz) and add or remove attenuation from the RF signal depending on the front panel setting of RF amplitude.

If excessive power from an external source is connected to the RF Output connector, the Reverse Power protection circuits cause a relay in series with the output to open.

Attenuator Control

Frequencies of 123.5 to 990 MHz and levels of -7 to +15 dBm from the Output Assembly, A6 are applied to the Attenuator Assembly, A9. The first two relays switch the input signal out to the Output Assembly and return the signal to the attenuator in the Heterodyne mode when output frequencies of 0.1 to 123.5 MHz are selected. The attenuator has five attenuator pads, one each of 10 and 20 dB and three each of 30 dB for a total of 120 dB. The correct attenuator pads are selected by the Data Word from the Microprocessor. The Data word is latched into A10U10 or A10U6 by strobes ASTB1 or ASTB2 respectively. The strobes trigger the Heterodyne/Pad Data Timeout One-shot U3B and the Thru Line Data Timeout One-shot U3A. The monostable multivibrator outputs are set high. At timeout, about 60 ms, the multivibrator is reset low which resets the control latch. During the 60 ms interval, the attenuator relay pads or heterodyne relays are selected and latched. The outputs of the latches are applied to the control drivers where the active low outputs are connected to the attenuator's relay solenoids.

The center of each solenoid is connected to +24 Vdc. In the case of the attenuator relays, each low output of the drivers will switch the relay so the output will either pass through an attenuator pad or be connected directly to the next section. If the connection is through a pad, a ground is connected to that section of the stripline bypassed. This greatly increases the isolation between the input and the output. The heterodyne mode and any combination of attenuator pads can be selected by the data from the Microprocessor which is dependent on the frequency and output level selected at the front panel.

Capacitors A9A1C1, C2, C3, C6 and C8 represent the capacitance between the adjustment wire loop and the associated resistors A9A1R2, R5, R8, R12 and R15. Each one is adjusted by coupling 990 MHz at +10 dBm into the attenuator. Each pad is individually adjusted to the preset power meter reference level minus the attenuation of the selected pad. The output of the last attenuator section passes through a five section printed circuit board filter that matches the attenuator to the Reverse Power Limiter and Detector.

Model 8656A Service

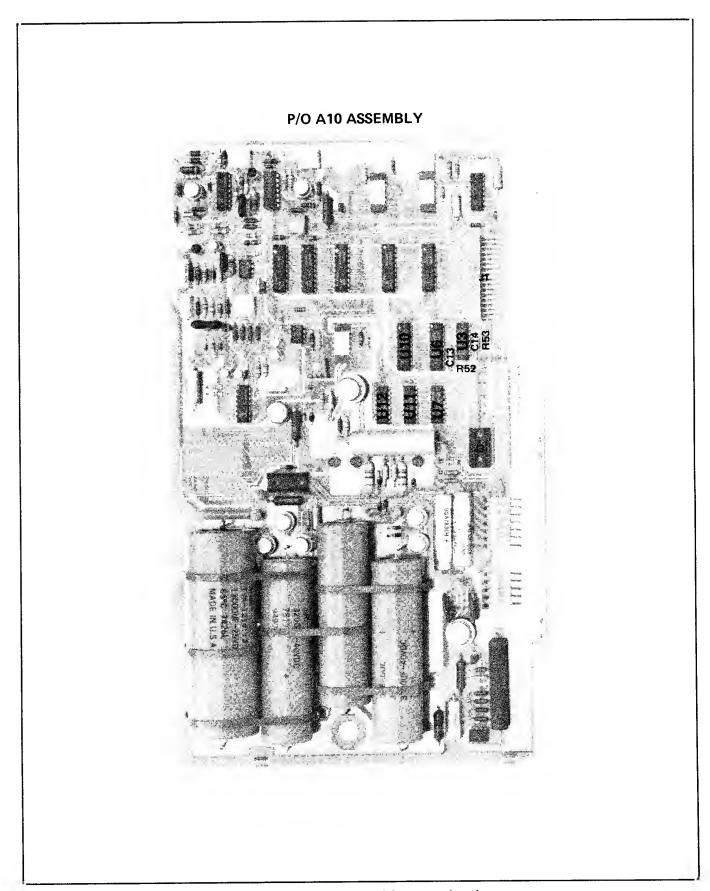


Figure 8-60. Attenuator Control Component Locations

Service Model 8656A

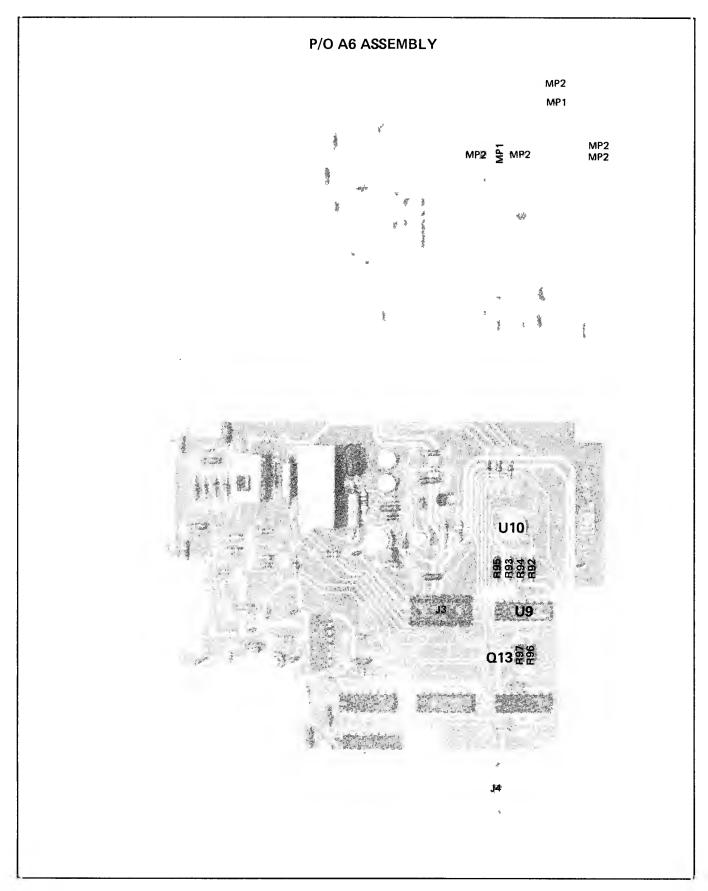


Figure 8-61. Reverse Power Protection Component Locations

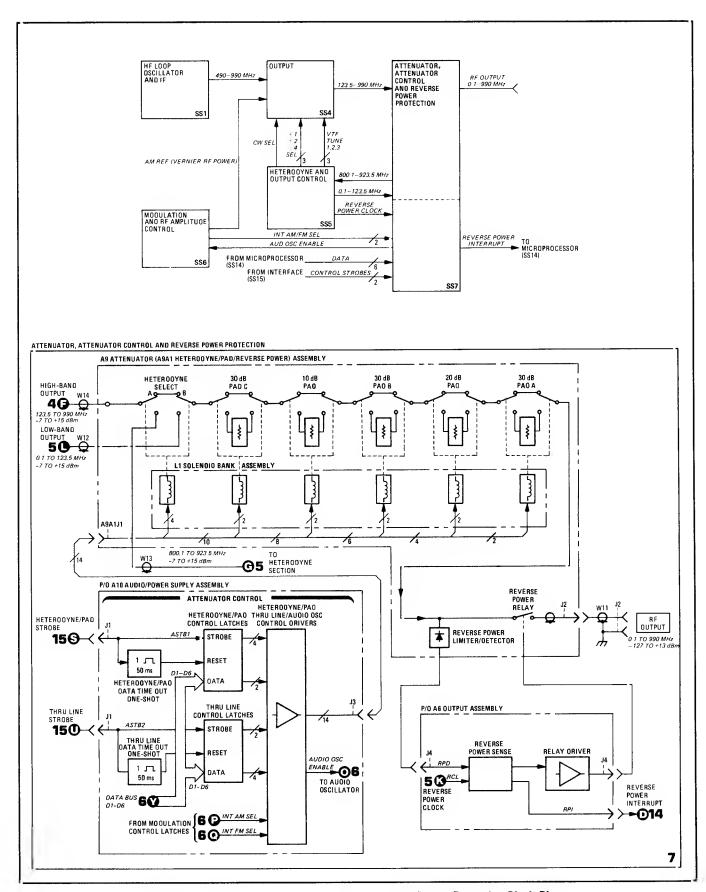
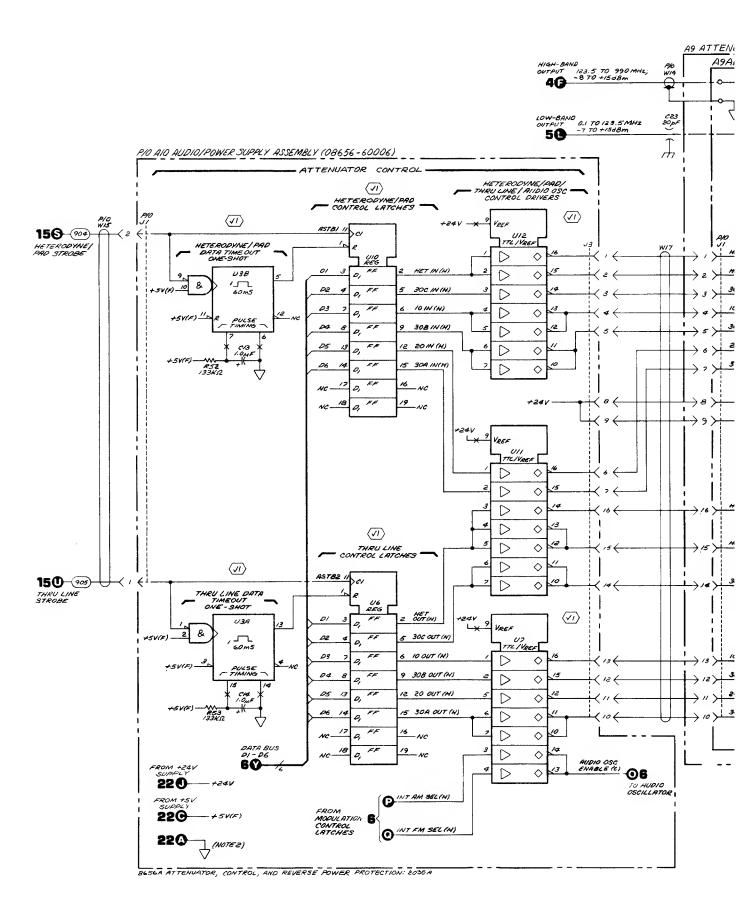


Figure 8-62. Attenuator, Attenuator Control and Reverse Power Protection Block Diagrams



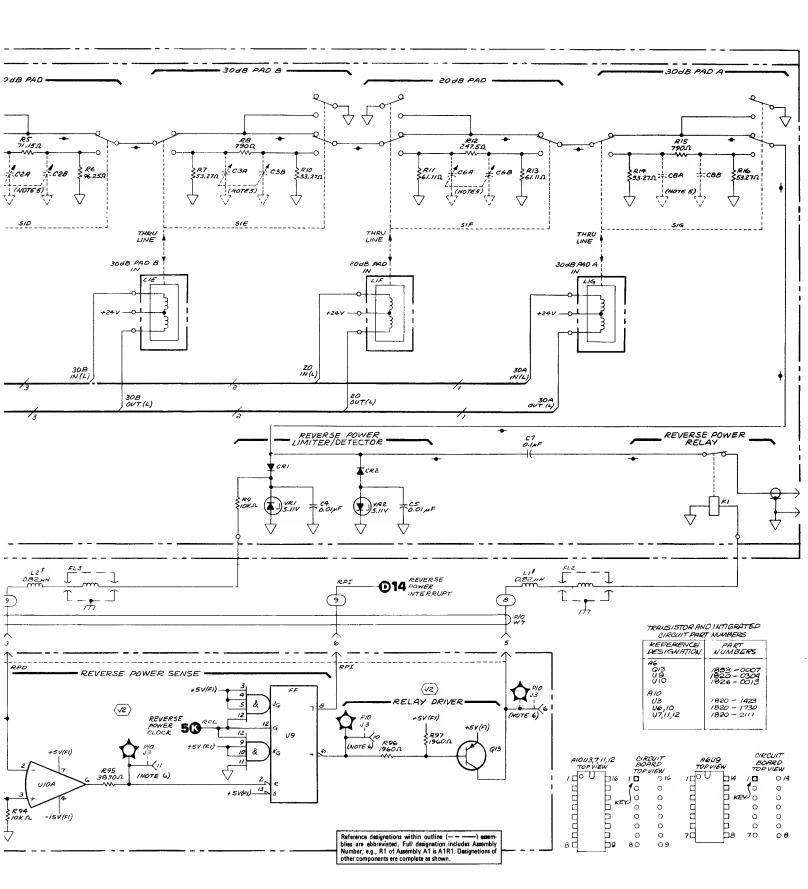


Figure 8-63. Attenua

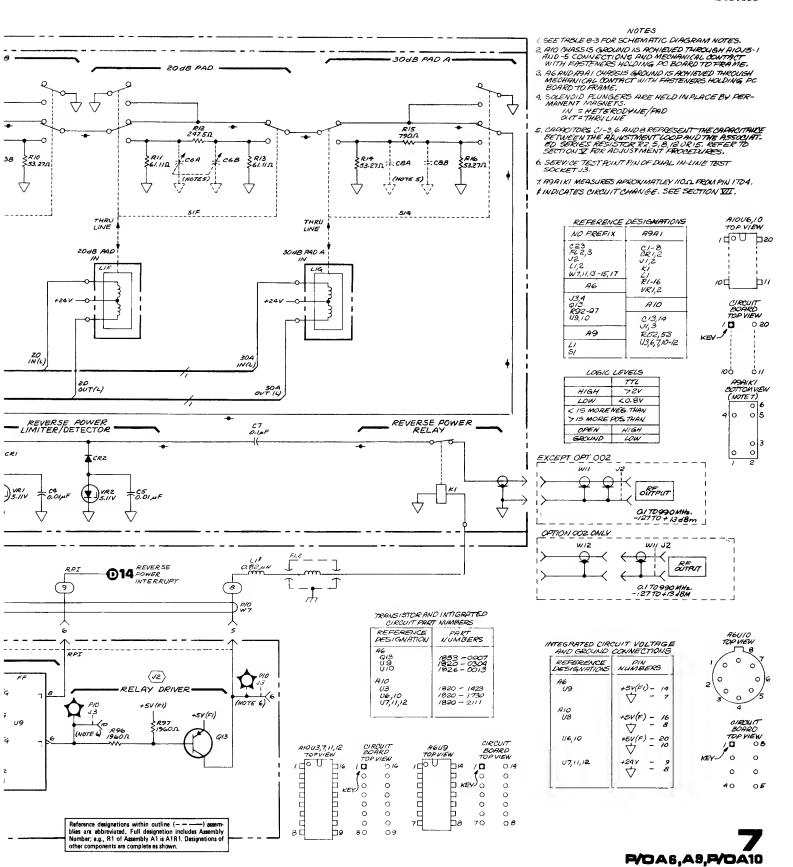


Figure 8-63. Attenuator, Attenuator Control and Reverse Power Protection Schematic Diagram

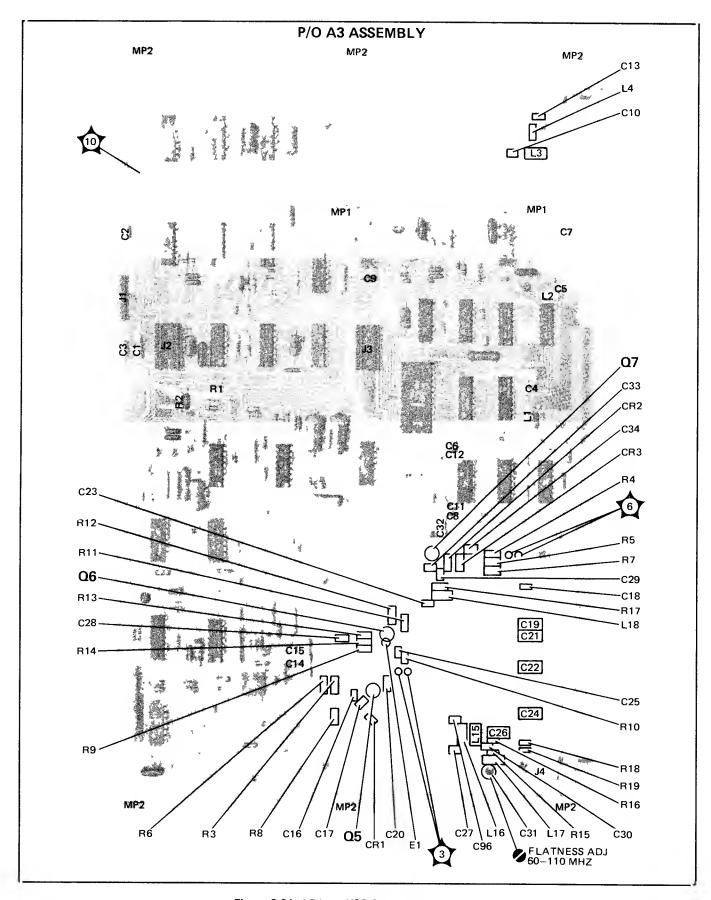


Figure 8-64. LF Loop VCO Component Locations

of the A3 Low Frequency Loop reas or points to check are marked with a checkmark and a number re shown on the schematic inside a stor bias voltages are shown with-

HP 436A
HP 8482 A
HP 5328A
HP 1250-1598
to BNC male HP 1250-0077
BNC femaleHP 1250-0080

SERVICE SHEET 8 (Cont'd)

Voltaged Controlled Oscillator, Limiter Amplifier and 110 MHz Low-Pass Filter

- 1. Set the Signal Generator to $-10~\mathrm{dBm}$ at $80~\mathrm{MHz}$ with no modulation.
- 2. Change the frequency to 90 MHz. This ensures the frequency of the Low Frequency Loop VCO will be 60 MHz.
- 3. Check the following levels at the frequencies indicated in Table 1.

NOTES

When probing the oscillator with the covers removed, a frequency shift may be introduced.

Covers for the oscillator must be installed so that the lip on the bottom cover makes a good contact with the ground plane on the printed circuit board.

Table 1. VCO Frequency, Power Output and TUNE Voltage

	NOO T	Power Level (dBm)				
tput '6)	VCO Tune Voltage (Vdc)	at TP6	at J4			
,	+11.0 to +9.0	+6.8 to +4.8	-7.7 to -9.7			
)	+10.0 to +8.0	+7.0 to +5.0	−7.5 to −9.5			
)	+9.0 to +7.0	+7.0 to +5.0	-7.3 to −9.3			
,	+9.0 to +5.0	+7.2 to +5.2	−7.3 to −9.3			
·	+8.0 to +4.0	+6.5 to +4.5	−7.1 to −9.1			
	+7.0 to +3.0	+6.2 to +4.2	-7.0 to −9.0			
	+6.0 to +2.0	+5.9 to +3.9	−7.0 to −9.0			
1	+6.0 to 0.0	+5.7 to +3.7	-7.2 to -9.2			
	+5.0 to -1.0	+6.0 to +4.0	−7.8 to −9.8			
	+4.0 to -2.0	+6.2 to +4.2	-8.0 to -10.0			
	+2.5 to -3.5	+5.8 to +3.8	-8.4 to -10.4			

SERVICE SHEET 8 P/O A3 LOW FREQUENCY LOOP ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD3
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

General

The Low Frequency Voltage Controlled Oscillator (VCO) and Limiter Amplifier generate, amplify and limit the 60 to 110 MHz signal that is mixed with 800 MHz on the Multiplier Assembly. The TUNE voltage to the VCO is controlled by data from the Microprocessor. The VCO is phase locked to the reference oscillator.

Voltage Controlled Oscillator

The VCO, Q5, is a Hartley Oscillator. The amount of positive feedback from the collector to the emitter is predetermined by the taps on the inductors. The inductors are spiral printed circuit board traces. The ± 13 Vdc is a clean stable voltage to bias the VCO and Limiter Amplifier circuits.

The base of Q5 is biased by resistor R6 and R8, and the emitter by resistor R9. Inductor L8 suppresses any high frequency oscillations and capacitors C16 and C20 ac couple the signal to the base and emitter of Q5. Capacitors C16 and C23 are by-pass capacitors.

The 60 to 110 MHz output is dependent on the TUNE voltage. The output is ac coupled by C25 to Linear Amplifier Q6.

Linear Amplifler

The base of Q6 is biased by resistors R10 and R11, and the emitter by R13 and R14. R13 supplies some negative feedback but R14 does not since it is by-passed by C28. The inductive bead E1 reduces gain at high frequencies.

The output of Q6 is dc coupled to buffer amplifier limiter Q7. The bias voltages of Q7 are set by Q6. Feedback from the collector to base of Q7 is by diodes CR2 and 3 and capacitor C29. The diodes limit the feedback and restrict the collector voltage swing to ± 0.6 V to provide a constant output level.

The output of the Limiter Amplifier is ac coupled by capacitor C32 to the VCO Buffer Q8 shown on Service Sheet 9 and by capacitor C34 to the 110 MHz Low-Pass Filter. Resistors R4, R5 and R7 form a 2 dB pad whichs isolates the amplifier from the 110 MHz Low-Pass Filter. This makes the filter impedance nearer 50Ω at all VCO frequencies.

110 MHz Low-Pass Filter

Capacitor C31 and inductor L17 form a series resonant circuit. At resonance, R15 and R16 reduce the series impedance for increased output. This is tuned to vary the output level at 110 MHz (flatness). The filter passes 60 to 110 MHz and rejects 120 MHz and above.

SERVICE SHEET 8 (C TROUBLESHOOTING

Procedures for checking Assembly are given below on the schematic by a linside, e.g. (VI). Fixed v hexagon e.g. (2V±0.2V) out tolerances.

Test Equipment

Digital Multimeter
Power Meter
Power Sensor
Frequency Counter
Adapter Probe
Adapter, Coaxial Type-
Adapter, Coaxial BNC
Cable BNC male to SM

Frequence Front Pane Setting

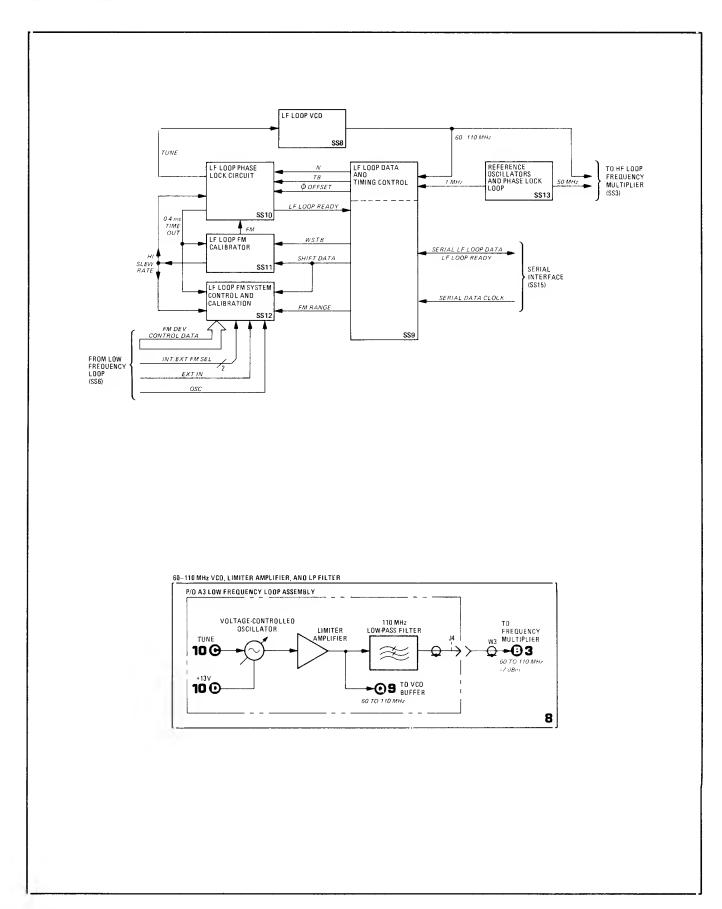
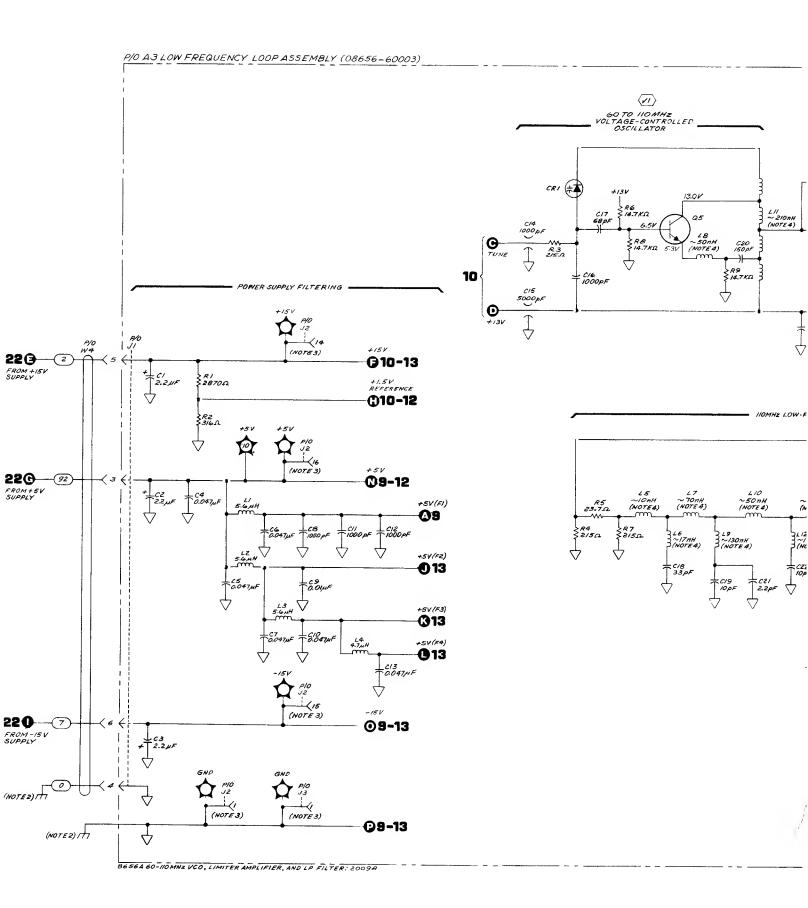


Figure 8-65. LF Loop VCO Block Diagrams



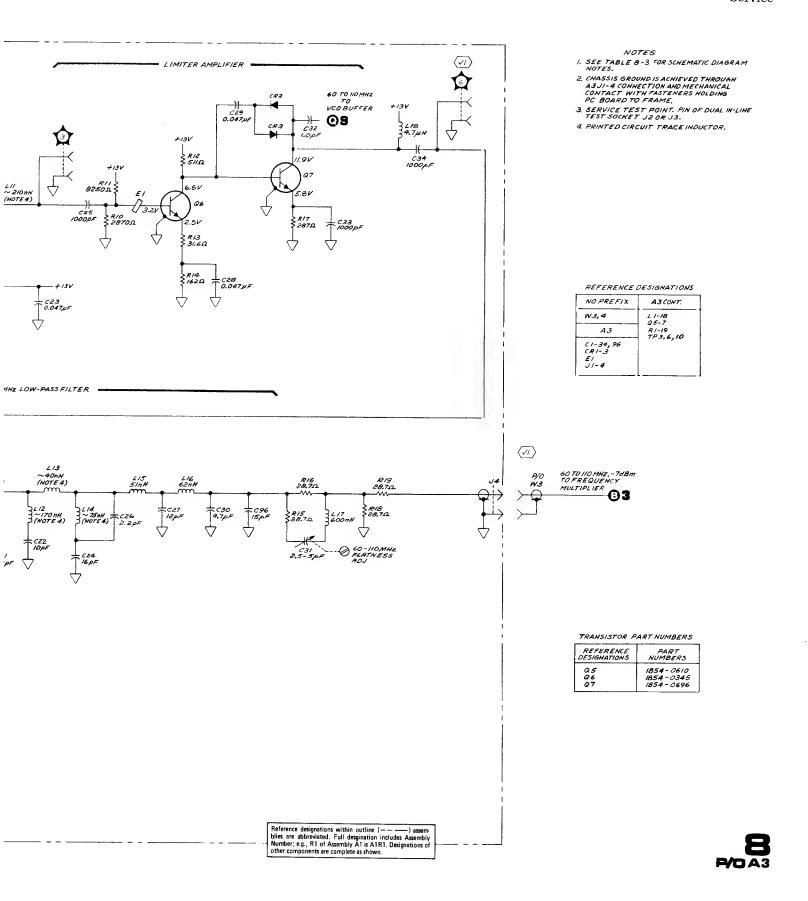


Figure 8-66. LF Loop VCO Schematic Diagram

Service Model 8656A

SERVICE SHEET 9 (Cont'd)

by-16 cycle. One input to U30D is high when bit eight of Counter No. 1 goes high. The other input is set low since a low-to-high transition input to U26A sets the active-high output low. The activehigh output will remain low until U26A is set by the ÷N terminal count. With one input to U30D high, the output at pin 15 is low and at pin 9 is high. The inputs are coupled to the base and emitter of ECL-to-TTL Translator Q10. The emitter of Q10 will be at approximately +4.2 Vdc, an ECL high, and the anode of CR4 will be at approximately +3.3 Vdc. CR4 will be biased on and the base of Q10 will be at approximately +2.7 Vdc, also on. With Ql0 turned on heavily, its collector voltage will approximately equal the emitter voltage. When the output of Counter No. 1 goes low, the input to pin 13 of U30D goes low and its outputs change to +3.3 Vdc at pin 9 and +4.2 Vdc at pin 15. Therefore, the anode of CR4 will be approximately +4.2 Vdc (biased on) and the base of Q10 will be +3.6 Vdc. The emitter of Q10 will be at approximately +3.3 Vdc and Q10 is biased off. (With Q10 biased off the collector will go to approximately 0 Vdc.) The ECL 3.3 Vdc low and 4.2 Vdc high has been changed to a TTL level (+0.8 Vdc low and +2.0 Vdc high). The signal at J3 pin 2 is a poorly shaped square wave whose frequency is the VCO frequency divided-by-16.

Counter No. 2. ECL-to-TTL Translator output is the clock for Counter No. 2, for Reload Blanking Flip-Flop No. 2, and for Terminal Count Reset Flip-Flop U28A. Refer to Tables 8 and 9 for operation of Counter No. 2 and the Reload Transient Blanking Flip-Flop No. 2.

Table 8. U27 Counter No. 2 Operation

R	Enable P	Enable T	Load	Cik	Counter Mode	
H H	H H	H H	H L	†	Count Load Data	

Counter No. 2 is a synchronous programmable binary counter. When pin 9 is low data is loaded. When it is high the counter is counted up on each clock pulse low-to-high transition. The counter output at pin 15, the ripple carry output, goes high at binary 15. Therefore, when pin 9 is low the four most significant bits latched into U24B are clocked into Counter No. 2. On each successive low to high transition of the clock the counter counts up by one.

The ripple carry output is pulsed high for approximately $20~\mu s$ when the counter reaches 15. Therefore, the counter divides-by-16 except on the first count cycle after the input data has been loaded. Data is loaded every 10~or~4~ms. The output pulses from the counter are clocked through the Reload Transient Blanking Flip Flop No. 2.

Table 9. U31A Reload Transient Blanking Flip-Flop No. 2 Operation

R	S	D1	С	Pin 5	Pin 6
L	Н	X	X †	L	H
H	Н	L		L	H
H	Н	H		H	L

Counter 0. The output pulses of U31A clock the Triple Programmable Counter's Counter 0 on the low-to-high transition (positive going edge of pulse). The output of this counter triggers the Terminal Count Flip-Flop at a 100 Hz or 250 Hz rate. This sets a window for the ÷N pulse from Counter No. 2. The ÷N signal is compared with the TB 100 Hz or 250 Hz output of Triple Programmable Counter's Counter 1. TB is 1 MHz divided from the 50 MHz reference oscillator shown on Service Sheet 13.

With the reset input high, the 100 Hz or 250 Hz clock from Counter 0 clocks U31B on the low-tohigh transition setting the active-high output high and the active-low output low. Refer to Table 10. The active-low output resets the Reload Transient Blanking Flip-Flop No. 2 and prevents it from being clocked. The active-high output high enables U14A every 10 or 4 ms which allows the output of Counter No. 2 to be gated to the ÷N output. This pulse is applied to U17B of the Phase to Charge Converter shown on Service Sheet 10 where it is compared to TB. The pulse is also coupled to the D input of U28A. The D input low is clocked to the active-high output by the output of Q10 which is equivalent to the output of Counter No. 1. When the active-high output of U28A is set low it resets U31B. The active-low output of U31B being high enables U31A to be clocked again. During this time the low output of U14A sets U27-Pin 9 Counter No. 2 low and it is reloaded on the same clock pulse that clocked U28A. The low output of Ul4A is coupled to the TTL-to-ECL Translator of VRI, CR7, R28 and R29 changing the input to U30B and C to a ECL high (greater than +4.2 Vdc). This changes the set input to U26A to a high

the outputs are never changed. The LF Loop will not enter the High Slew Rate mode since it is also dependent on the active-low output, that is WSTR(L), being low.

Divide-By-N Circuits

Counter No. 1. The 60 to 110 MHz signal from the VCO is applied to VCO Buffer Q8 to isolate the VCO from Reset Enable Reclock Flip-Flop U26B (refer to Table 5) and Counter No. 1 U23. The wired OR to the D2 input U26B pin 10 are traces on the PC board. Any high from the active-low output of U26A, B or terminal count output U23 pin 4 will provide a high to the D2 input of U26B. Therefore, when U26B is clocked by the VCO input, the active-high output goes high and the active-low output low. The active-high output's high to Counter No. 1 pin 5 enables the counter to count. Counter No. 1 (refer to Table 6) is a binary counter and divides the VCO clock frequency by 16. The terminal count at pin 4 goes low when the counter has counted to binary 15 (HHHH). The divide-by-16 output from Counter No. 1 is applied to the Reload Transient Blanking Flip-Flop No. 1 U26A (refer to Table 7) and to Counter No. 2 (refer to Table 8) through the level translator U30D and Q10.

Table 5. U26B Reset Enable Reclock Flip-Flop Operation

R	S	C2	Cc	D2	Pin 15	Pin 14
L	L	†	L	L	L	H
L	L		L	H	H	L

Table 6. U23 Counter No. 1 Operation

CE	PE	MR	СР	Remarks
L	L	L	†	Load Parallel
L	H	L		Count

Table 7. U26A Reload Transient Blanking Flip-Flop No. 1

R	S	C1	Cc	D1	Pin 2	Pin 3
L	L	†	L	L	L	H
L	H	X	L	L	H	L

On the VCO clock pulse to Counter No. 1 that clocks the binary 15 Count, the terminal count at pin 4 goes low. The active-low output of U26B is also low but the active-low output of U26A is high so the D2 input of U26B remains high. The active-high output remains high and disables the parallel load of U23 of the data bits in Shift Register U24A. At this point, the divide-by-16 cycle starts over. When the output of Counter No. 1 goes high, it will be high for half the divide-

9 and 10, A0 and A1. The high at U28B's active-high output is coupled back to U21A-Pin 1. The pulse passes through the differentiator C37 and R25. This shortens the pulse to about 1 μ s. At this time (between LF Data Words) U21A-Pin 2 is high. This means that U21A is set immediately. 75 μ s later U21A returns to the reset condition which again clocks and resets U28B. This action ends the Triple Programmable Counter load enable and WSTR(L) signal. This process is repeated for each data word that is written to the Triple Programmable Counter.

					•	
R	S	C	D	Pin 9	Pin 8	Remarks
Н	Н	t	Н	Н	L	Frequency change passes 25.6 kHz band edge.
H	H	t	L	L	H	
L	Н	X	X	L	Н	Frequency change does not pass 25.6 kHz band edge

Table 4. U28B Operation

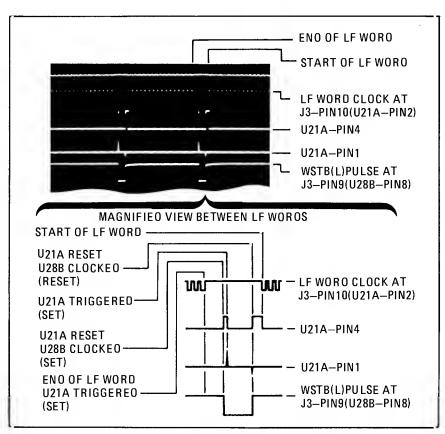


Figure 1. Write Strobe Generator Timing

If data is not to be written to the Triple Programmable Counter, U20, data bit 11 is not set high and the reset input of U28B is held low and

Table 2. Low Frequency Loop Data and Control Words

LF Word	Function	Written to Counter(s)
1	Time Base Control	U20 Counter 1
2	Time Base Data	U20 Counter 1
3	Phase Offset Control	U20 Counter 2
4	Phase Offset Data	U20 Counter 2
5	Divide-by-N Control	U20 Counter 0
6	Divide-by-N Data	U20 Counter 0
7	Divide-by-N Data	U20 Counter 0
8	Divide-by-N Data	Counters No.1 and 2

Counter and triggers the High Slew Rate Monostable U2lB shown on Service Sheet 11. Bits 9 and 10, A0 and A1, select which counter of U20 receives the data.

Write Strobe Generator

The Write Strobe Generator U21A and U28B is used to enable the Triple Programmable Counter when data is to be written to one of the counters and to enable the LF Loop circuits for the coming frequency change. The Generator is triggered if a LF Loop frequency change is greater that 25.6 kHz, if the LF Loop frequency crosses into another 25.6 kHz band and when the Signal Generator is reset or first connected to line power. Refer to Tables 3 and 4 and Figure 1.

The LF Loop Clock clocks in each of the 16 bit serial data words and triggers the Write Strobe Generator monostable U21A with the active-high output going high and the active-low output going low. About 75 μ s after the last clock pulse of each word, U21A returns to its inactive state, active-high low and active-low high.

Table 3. U21A Operation

Pin 3	Pin 1	Pin 2	Pin 13	Pin 4
Н	L	1	7	
Н	Ţ	Н		

The inactive state of the U28B is active-high output low and active-low high which places a high on the D-input. Thus U28B is ready to be clocked high as soon as the low on the Reset input pin-13 is removed. Whenever data is to be written to the Triple Programmable Counter U20 (the Signal Generator is RESET, frequency resolution changes or the LF Loop frequency crosses a 25.6 kHz bandedge), data bit 11 from register U25A is high and the reset input to U28B is removed. When U21A returns to its inactive state, 75 μs after the data word ends, the U21A active-low output's low to high transition clocks U28B with the active-high output going high and the active-low output going low. The active-low output enables the LF Word data stored in the registers to be written to the Triple Programmable Counter. Which counter receives the data is determined by data bits

holds the input high. When the terminal count of Counter No. 1 is reached, the low at U26B-Pin 10 is transferred to U26B-Pin 15 which reloads Counter No. 1. The $\div N$ terminal count pulse is cut short when the low at the D input to the Terminal Count Reset Flip-Flop U28-Pin 2 is clocked through to reset the Terminal Count Flip-Flop U31B. The output of Counter No. 2 is switched back to the input of Counter 0.

The high used to set U26A is removed when the $\div N$ terminal count pulse ends. This enables the clock to Counter No. 2. When Counter No. 1 was reloaded, the output at pin 4 goes high replacing a high at U26B-Pin 10. The active-high output of U26B goes high on the first clock pulse which allows Counter No. 1 to begin counting on the second pulse. The counters again count up to the $\div N$ terminal count and the cycle repeats.

LF Loop Shift Registers

The serial LF Loop Data bus is pulsed low for approximately 0.5 ms every 10 ms or 4 ms (depending on the frequency resolution, l00 Hz or 250 Hz). This tells the Microprocessor that the Low Frequency Loop is ready to receive data. If the Microprocessor has data to write to the LF Loop Assembly, 9.5 ms is the time allowed in the 100 Hz frequency resolution mode and 3.5 ms in the 250 Hz frequency resolution mode starting at the termination of the LF Loop Ready pulse.

Serial LF Loop Data written to the LF Loop consists of control and data words for the Triple Programmable Counter U20 and data words for Counters No. 1 and No. 2, U23 and U27. Refer to Table 2. There are eight sixteen bit control and data words that are written to the Low Frequency Loop Assembly. They are clocked into U24A, B and U25A by the LF Loop Clock. Only the last twelve bits of each sixteen bit words are used. Each word consists of 4 blank, 4 control and 8 data bits. All eight words are written to the LF Loop when the instrument is RESET or when line power voltage is connected to the Signal Generator and it goes through the power up routine. In all other cases, control words 1, 3, and 5 are not written to the LF Loop Assembly. Data words 2 and 4 are written whenever the frequency resolution is changed from 100 Hz to 250 Hz or 250 Hz to 100 Hz. Data words 6 and 7 are written when the LF VCO frequency goes beyond the 25.6 kHz band edge. LF Loop data word 8 is left latched into shift registers U24A, B and U25A. The four most significant data bits (from U24B) are loaded into U27 Counter No. 2 and the four least significant bits (from U24A) are loaded into U23 Counter No. 1. Counters No. 1 and No. 2 and Counter 0 of the Triple Programmable Counter are all part of the ÷N Counter. These circuits are used to divide the LF Loop VCO to provide an output with 100 and 250 Hz resolution. This output is phase compared with the time base TB signal to phase lock the Low Frequency Loop.

Control bits 9 through 12 are clocked into U25A. These select special functions and the counter within the Triple Programmable Counter that is to receive data. Bit 12 of LFWRD 8 selects the FM range of 0 to 10 kHz or 11 to 99 kHz. Bit 11 resets D Flip Flop U28B whose active-low output, when low, lets data be written into the Triple Programmable

SERVICE SHEET 9 P/O A3 LOW FREQUENCY LOOP ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD3

Table 4-1. Abbreviated Performance Tests

Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

General

Inputs to the divider circuits shown on Service Sheet 9 are from the Low Frequency Loop Voltage Controlled Oscillator (VCO) output and the 1 MHz reference signal (divided from 50 MHz). The 60 to 110 MHz VCO signal is divided-by-N to 100 or 250 Hz. The 1 MHz signal is divided to 100 or 250 Hz in Counter 1 of the Triple Programmable Counter. These signals, +N and TB, are phase compared in circuits shown on Service Sheet 10.

Counter No. 1 divides the 60 to 110 MHz VCO signal by 16. For each 100 Hz change in the LF Loop output frequency, the data bits to U23 change by 1. Counter No. 2 divides the output of Counter No. 1 by 16. For each 1600 Hz change in the LF Loop output frequency, the data bits to U27 change by 1. Changes in steps of 25.6 kHz ($16 \times 16 \times 100$ Hz) do not affect Counters No. 1 and 2. For a 25.6 kHz frequency step, data is written to Counter 0 (P/O U20) only. Because of the RF divider circuits in the Output Section (refer to Service Sheet 4), the RF output frequencies do not seem to correlate with the output of the Low Frequency Loop. Refer to Table 1 for more information.

	RF Frequencies					LF Loop Frequencies					
Output Divider Mode	Output	LF Loop	High Slew Rate	Counter Reso- lution		Dutput	LF Loop	High Slew Rate	Counter Reso- lution		Counter Data Change
	(MHz)	Band (MHz)	Band kHz)	#1 (kHz)	#2 (kHz)	(MHz)	Band (MHz)	Band (kHz)	#1 (kHz)	#2 (kHz)	
	.\	(11112)		(K112)	(*****)	ļ	(17112)	(KIIZ)	(KIIZ)	(KIIZ)	
÷1/Heterodyne	0.1-123.5	50	25.6	0.1	1.6	60-110	50	25.6	0.1	1.6	1
÷4	123.5-247	12.5	6.65	0.1	1.6	60-110	50	25.6	0.4	6.4	4
÷2	247-494	25	13.3	0.1	1.6	60-110	50	25.6	0.2	3.2	2
÷1	494-990	50	25.6	0.1	1.6	60-110	50	25.6	0.1	1.6	1

Table 1. RF Output Versus LF Loop Output Frequencies

At the end of the $\div N$ count cycle, a pulse is output from Counter 0. This pulse clocks the Terminal Count Flip-Flop. The resulting output enables the terminal count gate Ul4A with a high at pin 2 and resets U31A with a low at pin 1. This allows the next clock transition from Counter No. 2 to be gated to the $\div N$ output instead of the input to Counter 0. Therefore, a 0.5 ms window is opened every 10 ms (100 Hz) or 4 ms (250 Hz) which allows Counter No. 2's terminal count to become the terminal count of the entire $\div N$ Counter.

The ÷N pulse is used to load Counter No. 2 U27 directly. It also passes through level translator U30B and C to set the Reload Transient Blocking Flip-Flop No. 1 U26A which halts the clock pulse to Counter No. 2. The effect of setting U26A tries to place a low at U26B-Pin 10. The terminal count output of Counter No. 1 U23-Pin 4 overrides this and

Model 8656A Service

SERVICE SHEET 9 (Cont'd)

which changes the active-high output to a high and the active-low output to a low. This enables the D input to U26B so that when the carry output of Counter No. 1 goes low, Counter No. 1 is reloaded with the data stored in shift register U24A on the next VCO clock pulse.

Table 10. U31B Terminal Count Flip-Flop Operation

R	S	0	C	Pin 9	Pin 8
L	Н	X	X	L	Н
Н	Н	Н	†	Н	L

Triple Programmable Counter's Counter 2 is clocked by the same 1 MHz as the Counter 1 and supplies a 20 μ s pulse every 10 ms or 4 ms to U13D of the Phase to Charge Converter (refer to Service Sheet 10).

TROUBLESHOOTING

Procedures for checking the circuits of the A3 Low Frequency Loop Assembly are given below. The areas or points to check are marked on the schematic by a hexagon with a checkmark and a number inside, e.g., $\sqrt{1}$. Fixed voltages are shown on the schematic inside a hexagon, e.g., $\sqrt{2V\pm0.2V}$. Transistor bias voltages are shown without tolerances.

Test Equipment

Digital Multimeter	HP 3465A
Frequency Counter	HP 5328A
Oscilloscope	
Storage Mainframe	HP 181A
Vertical Amplifier	

No. 1 Reset Enable Reclock Flip-Flop, Counter

- 1. Set the Signal Generators frequency to 80 MHz.
- 2. Set the Signal Generator to -10 dBm at 90 MHz without modulation.

NOTE

It is necessary to include step 1 so that the Low Frequency Loop frequency will be set to 60 MHz.

- 3. Check the frequencies and voltage levels shown in Table 11.
- 4. Check the waveforms for TP4, TP5 and J3-pin 2. Refer to Figures 2, 3 and 4. The frequency of the Signal Generator is 90 MHz and the VCO frequency is 60 MHz. Measurements are made using a 1:1 probe.

Table 11. Counter No. 1 Signals versus LF Loop Frequency

	Frequency (MHz)	TTL Level at				
Signal Generator	LF Loop VCO Output	Output of Counter No. 1	U23-Pins			
Output	at A3TP4	at A3TP5 or J3-Pin 2	11	10	9	7
90.0000	60.0000	3.7500	L	L	L	Н
80.0000	70.0000	4.3750	L	L	L	Н
60.0000	90.0000	5.6250	L	L	L	Н
50.0000	100.0000	6.2500	L	$\mathbf L$	L	Н
49.5000	100.5000	6.2813	Н	L	L	Н
49.0000	101.0000	6.3125	L	L	L	Н
46.5555	103.4445	6.4653	L	H	L	L
46.5000	103.5000	6.4688	Н	L	L	Н
46.0555	103.9445	6.4966	Н	Н	L	L
46.0055	103.9945	6.4997	Н	L	L	L
46.0050	103.9950	6.4997	L	L	Н	Н

SERVICE SHEET 9 (Cont'd)

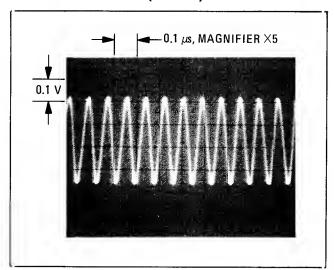


Figure 2. Dscilloscope Display of LF Loop VCO Output at TP4 (with ac coupling and internal triggering)


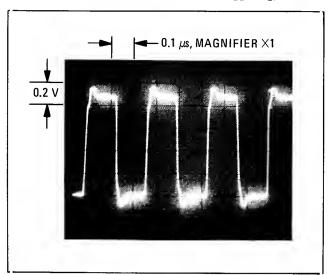


Figure 3. Dscilloscope Display of Counter No. 1 Output at TP5 (with ac coupling and internal triggering)

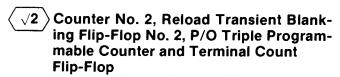

- l. Set the Signal Generator's frequency to 80 MHz. This allows 90 MHz to be set from a lower frequency.
- 2. Set the Signal Generator to -10 dB at 90 MHz without modulation.
- 3. Check the frequencies and voltage levels shown on Table 12. The frequency at J3-Pin 3 may be hard to count due to pulse width. If it is, measure the time of the period and calculate the frequency.

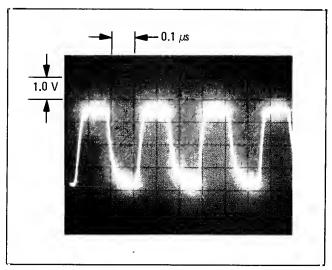


Figure 4. Oscilloscope Display of Counter No. 2 Input at J3-pin 2 (with ac coupling and internal triggering)

Table 12. Counter No. 2 Signals versus Signal Generator Frequency

FREQUEN	FREQUENCY (MHz)					
Signal Generator Output	nerator Input at		Level at U27-Pin no.			
		6	5	4	3	
90.0000	234.4	L	Н	L	Н	
80.0000	273.5	Н	L	Н	Н	
60.0000	351.5	L	Н	Н	Н	
50.0000	390.5	Н	Н	L	Н	
49.5000	392.6	L	Н	L	L	
49.0000	394.5	Н	Н	L	L	
46.5555	404.0	L	L	L	Н	
46.5000	404.3	L	L	L	Н	
46.0555	406.0	L	L	L	Н	
46.0055	406.2	L	L	L	L	
46.0050	406.2	L_	Н	H	L	

- 4. Check the waveform for J3-Pin 3 as shown in Figure 5. The frequency of the Signal Generator is 90 MHz. Measurement is made using a 1:1 probe.
- 5. The Counter 0 output, Out 0, measured at test point J3-Pin 4 of Triple Programmable Counter U20 is a 100 Hz square wave for a Signal Generator frequency of 90 MHz (refer to Figure 6) and a 250 Hz square wave for a Signal Generator frequency of 90.00025 MHz.

Model 8656A Service

SERVICE SHEET 9 (Cont'd)

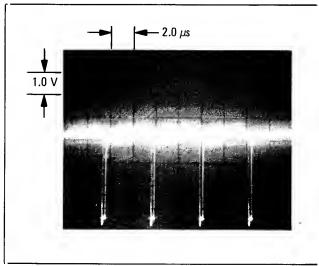


Figure 5. Dscilloscope Display of Counter D Input at J3-Pin3 (with ac coupling and internal triggering)

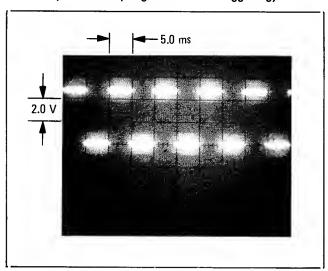


Figure 6. Dscilloscope Display of Counter D Dutput at J3-Pin 4 (with dc coupling and internal triggering)

6. The 100 or 250 Hz output of U20 clocks the Terminal Count Flip-Flop U31B to provide a time interval so the output of Counter No. 2 is gated to the ÷N line. Refer to Figure 7 for a display of the ÷N Terminal Count.

$\sqrt{3}$ P/O Triple Programmable Counter

- 1. The TB (Time Base) output at J3-Pin 7 of Triple Programmable Counter U20 is a 100 Hz square wave for a Signal Generator output frequency of 90 MHz and a 250 Hz squarewave for an output of 90.00025 MHz.
- 2. The square wave display at J3-Pin 7 will be the same as J3-Pin 4.

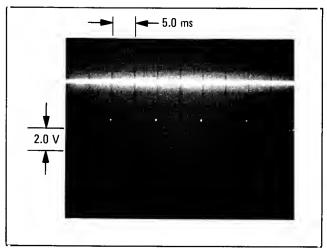


Figure 7. Dscilloscope Display of ÷N Counter Dutput at U14 Pin 3 (with dc coupling, internal triggering and a persistance display)

3. View the ϕ Offset waveform at J3-Pin 6 of Triple Programmable Counter U20 (refer to Figure 8). It is a 20 μ s pulse at a 100 Hz rate for a Signal Generator output frequency of 90 MHz and a 20 μ s pulse at a 250 Hz rate for a frequency of 90.00025 MHz.

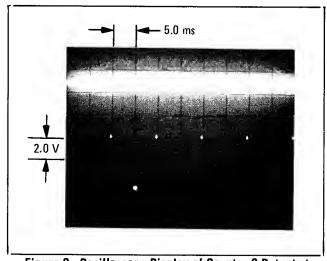


Figure 8. Dscilloscope Display of Counter 2 Dutput at J3-Pin 6 (with dc coupling and internal triggering)

4. Check the 1 MHz clock inputs for Counters 1 and 2 of Triple Programmable Counter. The clock is a 0 to 5 volt 200 ms pulse at the 1 MHz rate and can be checked at J3 pin 5.

LF Loop Shift Registers, Write Strobe Generator

1. Check the waveform of Figures 9, 10 and 11 when all eight of the low frequency words are writ-

SERVICE SHEET 9 (Cont'd)

ten to the Low Frequency Loop (at power up or when the instrument is reset at the front panel).

NOTE

This action triggers the high slew rate and lets all seven data words be written to the Triple Programmable Counter. The remaining word is held in the shift registers.

2. Set the Signal Generator's output frequency to 500 MHz. Increment the frequency up 10 MHz. Three words are written to the LF Loop. Figure 12 shows that 16 bits are written for each word (only 12 bits are used). Figure 13 shows the write strobe signal WSTB(L).

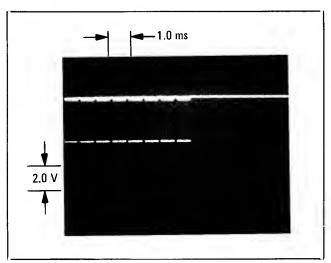


Figure 9. Oscilloscope Oisplay of LF Loop Clock at J3-Pin 10 (with dc coupling and external triggering at J3-Pin 10)

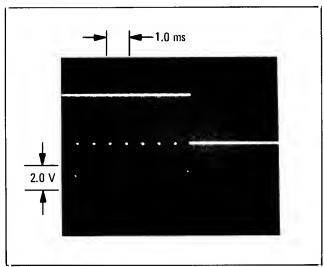


Figure 10. Oscilloscope Oisplay of Shift Oata Pulse at U21-Pin 13 (with dc coupling; external triggering from U21-Pin 13)

NOTE

The high slew rate is triggered which lets two data words be written to the Triple Programmable Counter. The third word is held in the shift registers.

3. Set the Signal Generator's frequency to $500~\mathrm{MHz}$. Increment the frequency up $1.00025~\mathrm{MHz}$ to select $250~\mathrm{Hz}$ resolution (TB and $\div\mathrm{N}$ are $250~\mathrm{Hz}$). Four words are written to the LF Loop. Refer to Figures 14 and 15.

NOTE

High slew rate is triggered which lets three data words be written to the Triple Programmable Counter. The fourth word is held in the shift registers.

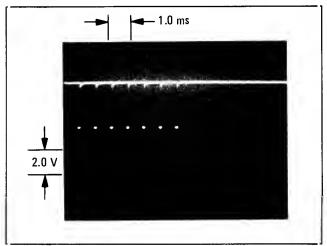


Figure 11. Oscilloscope Oisplay of WSTB (L) at J3-Pin 9 (with dc coupling; external triggering from U21-Pin 13)

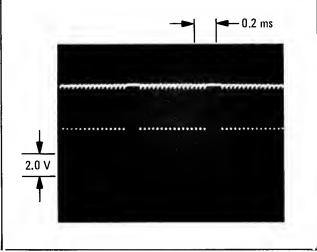


Figure 12. Oscilloscope Oisplay of LF Loop Clock with 3 Oata Words and a 10 MHz change at J3-Pin 10 (coupling is dc; triggering is external from J3-Pin 10)

Model 8656A Service

SERVICE SHEET 9 (Cont'd)

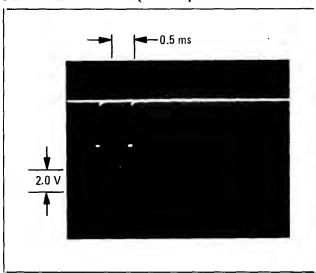


Figure 13. Oscilloscope Display of WSTB (L) at J3-Pin 9 (with dc coupling; external triggering from U21-Pin 13)

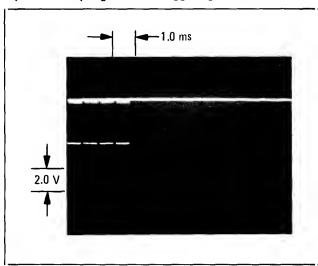


Figure 14. Oscilloscope Display of LF Loop Clock for 4 Data Words at J3-Pin 1D (with dc coupling; external triggering is from J3-Pin 10)

4. Set the Signal Generator to 250 MHz. Increment the frequency up 25 MHz. The LF Loop does not change frequency because U28B does not change state and no new data is stored in the shift registers for Counter Nos. 1 and 2. Only U21A changes state and then returns to its inactive state.

TROUBLESHOOTING USING SIGNATURE ANALYSIS

This information provides an alternate method of troubleshooting Service Sheet 9 circuits. Service Sheet BD4 which leads to this information is used to troubleshoot from the digital (control) standpoint. If the signatures on these circuits are correct, the problem is probably in the controlled circuits. In this case, continue with the preceding troubleshooting information on this page. You may also refer to Service Sheet BD3. If the signatures are incorrect, recall that the digital signals pass through the circuits of Service Sheet 15 before arriving here.

NOTE

Signatures are not valid for Signal Generators with serial number prefixes of 2018A and below.

Purpose. Verify correct data transfer from the Microprocessor to the Low Frequency Loop.

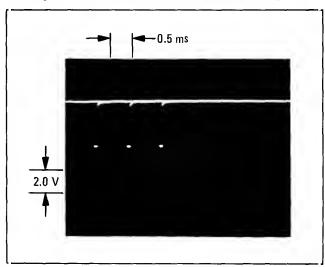


Figure 15. Oscilloscope Display of WSTB (L) at J3-Pin 9 (with dc coupling; external triggering is from U21-Pin 13)

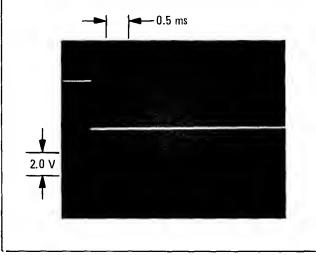


Figure 16. Oscilloscope Display of Shift Data (H) pulse (with dc coupling; external triggering from U21-Pin 13)

SERVICE SHEET 9 (Cont'd)

Setup. Set up the signature analyzer as follows:

- 1) GND to GND (close to the circuits being measured).
- 2) CLK to SA4 A11TP7
- 3) START to SA5 A11TP9
- 4) STOP to SA5 A11TP9

Set the signature analyzer controls as follows:

- 1) START IN
- 2) STOP OUT
- 3) CLK IN

Set up the Signal Generator as follows:

- 1) Set the LOGIC/RAM switch A11S1 to the LOGIC position.
- 2) Connect A3TP8 to A3TP9.

Initialize. Briefly short A11TP3 NMI to ground.

NOTE

With careless probing it is possible to get the Microprocessor into a program sequence other than that portion intended for signature analysis. If the +5V signature is incorrect this has probably happened. Restart the test by setting the RST/RUN switch to RST and then RUN. Briefly touch the NMI test point to ground. **Probe.** Connect to the node indicated in Table 13. Verify that each signature is correct and stable.

Table 13. LF Loop Shift Register Signatures

Node	Correct Signature	Comments
+5V	F84P	
U24-Pin 7	FUC5	SIPO DATA
U24-Pin 9	F84P *	LF CLK
U24-Pin 5	081F	LF D0
U24-Pin 4	040P	LF D1
U24-Pin 3	0207	LF D2
U24-Pin 10	F6AA	LF D3
U24-Pin 13	0895	LF D4
U24-Pin 12	044A	LF D5
U24-Pin 11	0225	LF D6
U24-Pin 2	0112	LF D7
U25-Pin 5	0089	LF A0
U25-Pin 4	0044	LF A1
U25-Pin 3	0022	WRT STROB
U25-Pin 10	F7C8	FM RANGE

Remove the jumper between A3TP8 and A3TP9. Reset the LOGIC/RAM switch to the RAM position. Reset the Signal Generator by setting the front panel RESET-STBY-ON switch to RESET and back to ON.

Model 8656A

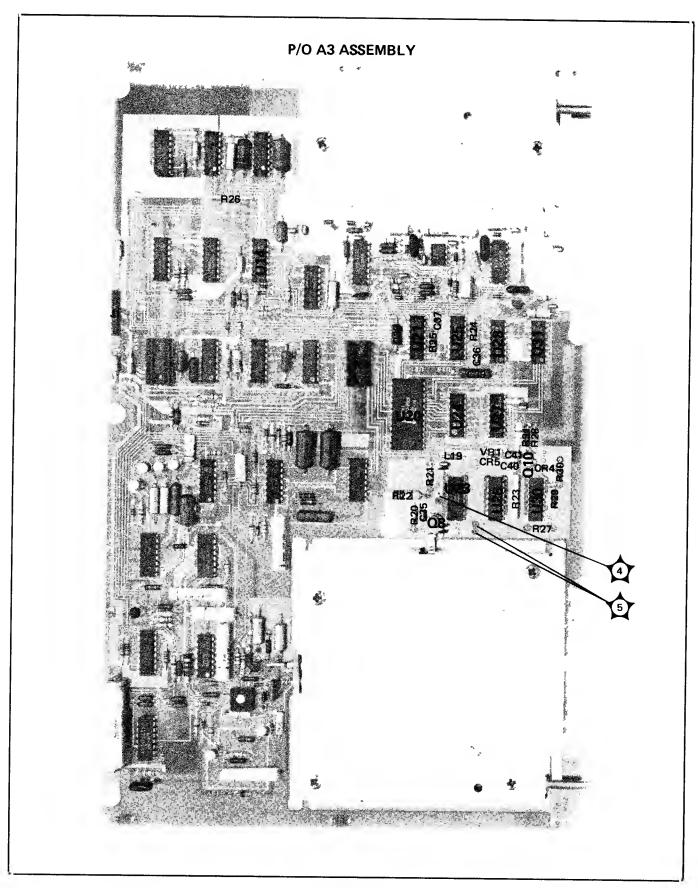


Figure 8-67. LF Loop Data and Timing Control Component Locations


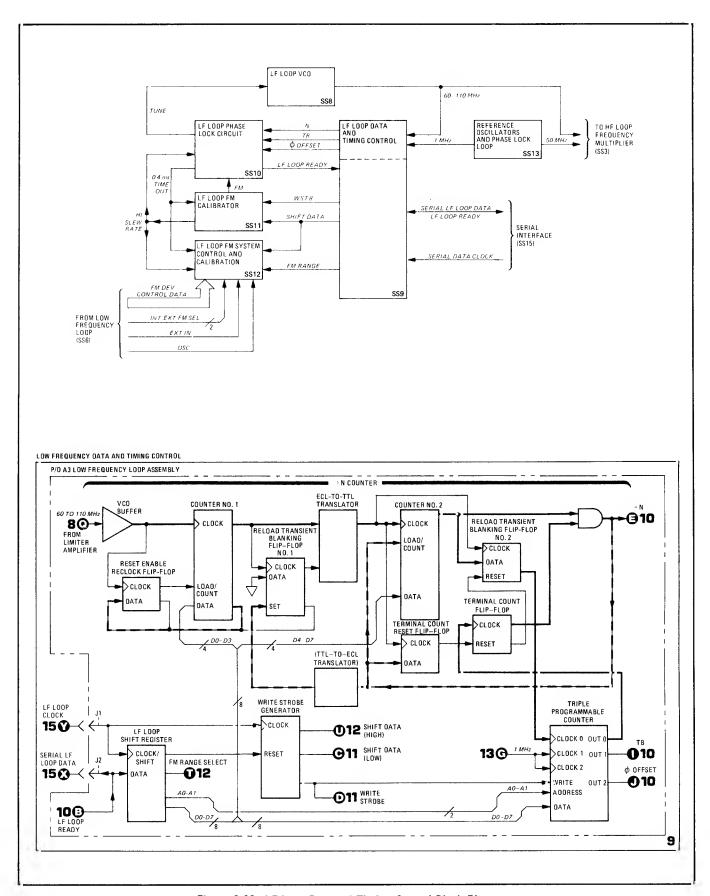


Figure 8-68. LF Loop Data and Timing Control Block Diagrams

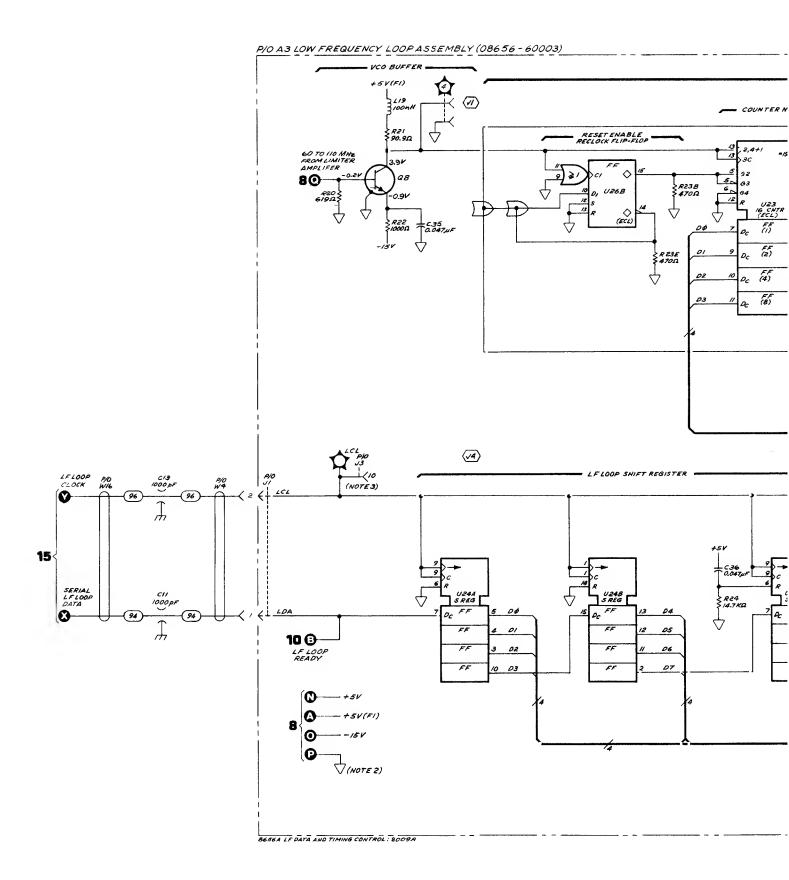


P/O J3 (NOTE 3)

WST B (L)

U28B

012

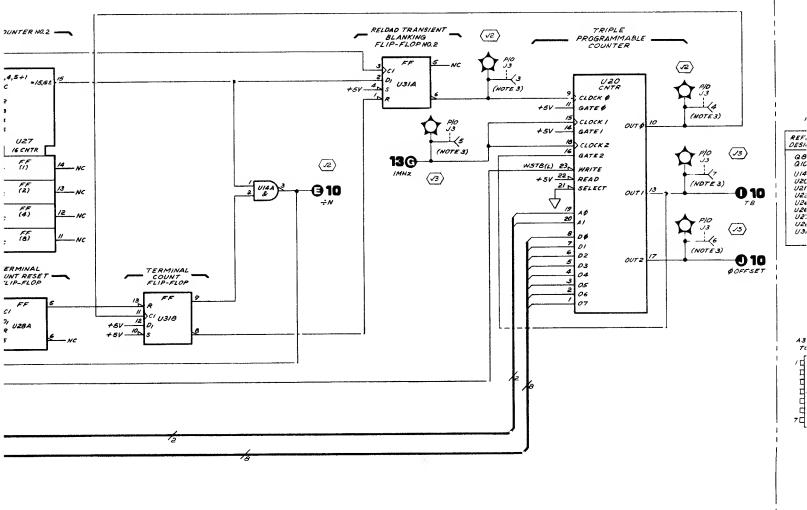

4377 (00000000

Reference designations within outline (----) assemblies are abbreviated. Full designation includes Assembly Number; 2, R1 of Assembly A1 is A1R1. Designations of other components are complete as shown.

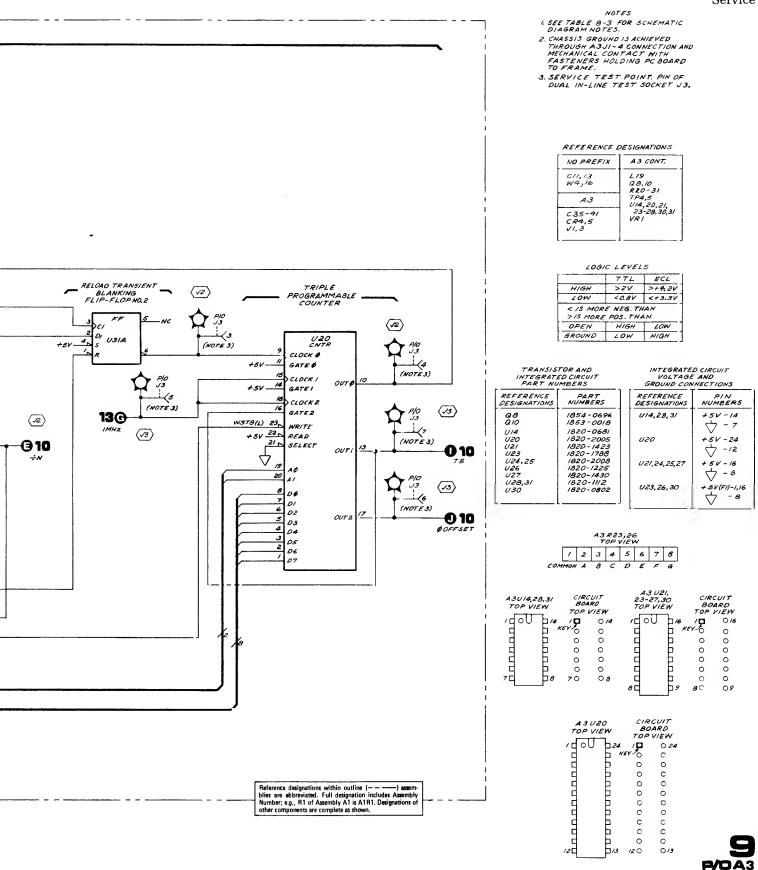


Figure 8-69. LF Loop Data and Timing Control Schematic Diagram

SERVICE SHEET 10 (Cont'd)

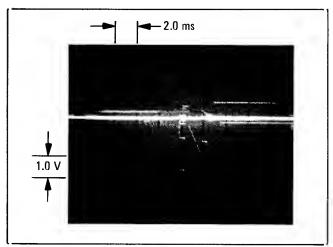


Figure 4. Display of J3-Pin 12 Signal with the LF Loop Locking (with dc coupling; external triggering from J3-Pin 4)

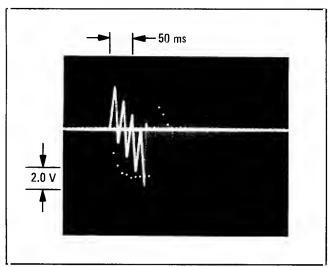


Figure 5. Display of J3-Pin 11 Signal during FM Calibration
With LF Loop Locking (with dc coupling;
external triggering from U2-Pin 7 SAR CLK)

Tune Sample Monostable, Tune Voltage Sample Control, Phase Detector Reset Monostable, Phase Detector Reset Control

- 1. Set the Signal Generator to $500\,\text{MHz}\,(\div N \text{ will be}\ 100\,\text{Hz}).$
- 2. The Tune Sample Monostable will be triggered at the 100 Hz rate to store the correction voltage on the Tuning Voltage Sample and Hold Capacitor C51.
- 3. When the output pulse of the Tune Sample Monostable is completed, the active-high output goes low which triggers the Phase Detector Reset Monostable.

4. Verify that the signals are the same as those of Figures 6 and 7.

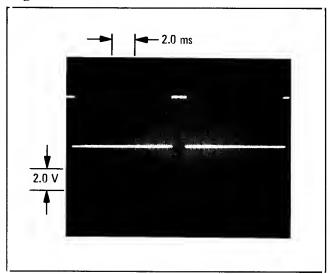


Figure 6. Display of U15B Output Pulse (with dc coupling to J2-Pin 8; external triggering from J3-Pin 4)

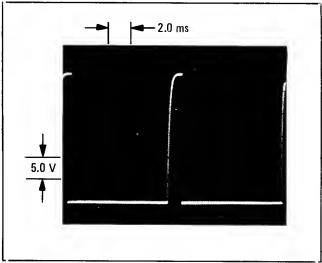


Figure 7. Display of Comparator Output Used To Close FET Switch U3B (dc coupling to J2-Pin 4; external triggering from J3-Pin 4)

$\langle \sqrt{3} \rangle$ Slew Rate Control

- 1. Set the Signal Generator to 500 MHz.
- 2. Increment the frequency 10 MHz.
- 3. Verify that the output of comparator U16C Pin 13 is pulsed from -15 Vdc to +15 Vdc closing FET switches Q13, U7A and Q2.

Loop Integrator, Switchable Attenuator, High Impedance Buffer

1. Set the Signal Generator to 500 MHz.

3. Increment the frequency up 10 MHz and check Figures 2 through 5 as the LF Loop locks.

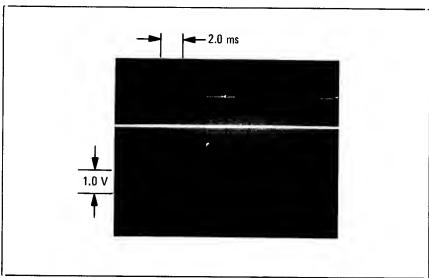


Figure 2. Display of Signal at J2-Pin 12 as the LF Loop is Locking (with dc coupling; external triggering to J3-Pin 4)

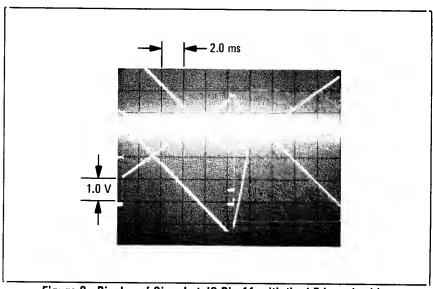


Figure 3. Display of Signal at J2-Pin 11 with the LF Loop Locking (with dc coupling; external triggering from J3-Pin 4)

TROUBLESHOOTING

Procedures for checking the circuits of the A3 Low Frequency Loop Assembly are given below. The areas or points to check are marked on the schematic by a hexagon with a checkmark and a number inside, e.g. $\sqrt{3}$. Fixed voltages are shown on the schematic inside a hexagon, e.g. $\langle \overline{2V\pm0.2V} \rangle$. Transistor bias voltages are shown without tolerances.

Test Equipment

Digital MultimeterHI	² 3465 A
Frequency Counter	² 5328 A
Oscilloscope	
Storage MainframeHI	P 181A
Vertical Amplifier	P 1801 A
Time BaseHI	P 1820C

Phase-to-Charge Converter, Charge-to-Voltage Converter

- 1. Set the Signal Generator to 500 MHz without modulation.
- 2. Check the following voltages in Table 4 and the waveforms of Figure 1 with the Low Frequency Loop locked.

Table 4. Phase-To-Charge Converter Voltages

Test Point	Voltage (Vdc)
J2 Pin 11	+2.6 to +3.2
J2 Pin 12	+0.6 to +1.2

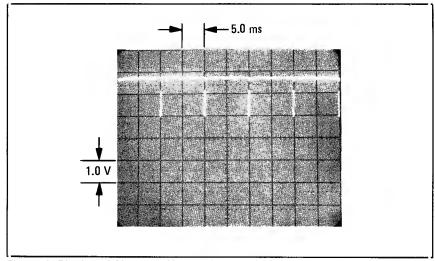


Figure 1. Display of Signal at J3-Pin 12 with LF Loop Locking (with dc coupling; external triggering to J2-pin 8)

high for 1.5 ms to change the output of the Phase Detector Reset Control comparator U9C from -15 to +15 Vdc. Capacitor C44 introduces a small delay of the voltage charge. This change in voltage turns on FET switch U3B to discharge the integrator capacitor C49.

Table 3. U15B Operation

Pin-11	Pin-9	Pin-10	Pin-5	Pin-12	Pulse Duration
Н	.	Н	7		1.5 ms

Slew Rate Control

The other control of Charge-to-Voltage Converter U8C is FET switch Q13. Q13 is closed when the Low Frequency Loop is in the High Slew Rate Mode and is activated by Slew Rate Control Comparator U16C. The comparator turns the FET switch on when the frequency of the Low Frequency Loop VCO passes the 25.6 kHz band edge. The output of High Slew Rate Monostable U21B (refer to Service Sheet 11) controls this operation. The High Slew Rate Mode lasts for approximately 500 ms. During this time the loop response is quicker than normal in order to reduce the time required for a large frequency change. This is accomplished by decreasing the gain of USC and U6B while decreasing the attenuation of the signal into Q4. Q13 is turned on which places additional capacitance in parallel with C49 thereby reducing the gain. U7A is turned on which places additional resistance across R49, thus reducing the gain of U6B. Q2 is also turned on which places a low resistance in parallel with R52 to reduce the attenuation of the signal into Q4. The total reduction in gain equals the reduction in attenuation.

Summary

Every 10 or 4 ms (100 or 250 Hz resolution), any phase change between the ÷N and TB signals is sampled and held on CS1 to correct the VCO frequency. This voltage is applied to Loop Integrator U8B where the voltage is changed in the direction to correct the VCO's frequency (or to achieve lock if a frequency change has occurred). This action corrects for the VCO's frequency drift. The output of the Loop Integrator is applied to the Switchable Attenuator and then to the High Impedance Buffer Q4. FET switches Q3, U7A and Q2 are controlled by the Slew Rate Control Comparator U16C and are closed the same as Q13 when the VCO frequency change passes the 25.6 kHz band edge. When U7A is closed, R50, 31.6 k Ω is in parallel with R49, 18 M Ω , increasing the slew rate of the tune voltage. This moves the VCO to the correct frequency quicker. When FET switch Q2 is closed, the attenuation to the High Impedance Buffer Q4 is decreased to 1/500 of its previous value by paralleling R54 with R52. The reduced attenuation of the switchable attenuator compensates for the lower gain of integrator U8C (1/500th normal) during high slew rate. This keeps the overall gain of the loop constant. CR13, VR4, CR15, VR5 prevent the output from going too negative.

output to take the form of a linear "ramp" voltage. If the $\div N$ pulse had clocked U17B the output going low turns off CR8 which turns on CR10, thus drawing current from C49 and the output of U8C is a "ramp" in the positive direction. When U17B is reset, its active-high output goes high and CR10 is reversed biased.

When both U17A and B are clocked simultaneously, there is no voltage change on C49. The other current source for integrator U8C is the ϕ Offset which is a low pulse for 20 μ s. When the ϕ Offset is pulsed low, Exclusive-Or gate U13D's output is low for the 20 μ s duration of the pulse. With U13D's output low and with 0.6 Vdc across CR12, CR11 is turned on and the integrator voltage is a positive "ramp". This small offset in voltage prevents the phase detector from operating in the non-linear zero region. The output of U8C is applied to the unity gain Loop Summing Amplifier and applied to the Tuning Voltage Sample and Hold Capacitor C51 by FET switch U7B.

Tune Sample Control

The output of gate U14B resets U17A and B and triggers the Tune Sample Monostable U15A on the high to low transition. Refer to Table 2.

Pin-3	Pin-1	Pin-2	Pin-13	Pin-4	Pulse Duration
Н	+	Н	Н	L	0.4 ms

Table 2. U15A Tune Sample Monostable Operation

The active-high output is set high for 0.4 ms. The low active-low output is gated at U10B with the End of Conversion EOC(L) from the Successive Approximation Register (refer to Service Sheet 11). The EOC(L) is low unless the loop is calibrating the FM sensitivity of the VCO. During calibration it is high thus preventing the tune voltage from being sampled. With both inputs to U10B low, the output goes high. This allows the Tune Voltage Sample Control Comparator U9A to switch its output for 0.4 ms to +15 Vdc. This turns on FET switch U7B. Capacitor C50 introduces a small delay of the voltage charge. When U7B is on, the tune voltage is sampled for 0.4 ms.

The active-high output of U15A is inverted by U4A. This output is \emptyset applied to the serial data input from the Microprocessor to signal the Microprocessor when the Low Frequency Loop is ready to have data written to it.

Phase Detector Reset Control

The active-high output from U15A is coupled to U15B Phase Detector Reset Monostable. It triggers U15B on the high-to-low transition of the pulse. Refer to Table 3. The active-high output of U15B goes

SERVICE SHEET 10 P/O A3 LOW FREQUENCY LOOP ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD3
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

General

The difference in phase between the ÷N and the TB signals is detected by the Phase-to-Charge Converter. The charge on C46 is converted to a voltage by U8C which is summed with the In-Band FM Correction Voltage by U12C. The Tune Voltage Output is sampled periodically and stored to tune the Low Frequency Loop VCO. If there is no change in phase, the sampled voltage remains constant and the VCO frequency does not change. The Tune Sample Monostable sets the tune sample duration of 0.4 ms. The rate is controlled by the signals that are phase compared, TB and ÷N. The Phase Detector Reset resets U8C, that is, the charge across C49 set by the Phase-to-Charge Converter output is discharged. A frequency change that passes the 25.6 kHz band edge enables the High Slew Rate mode. The HIGH SLEW RATE SEL signal to U16C controls a reduction in the gain of U8C and U6B that matches the reduction in attenuation into Q4. The effect of the attenuation decrease allows quicker response of the Tune Voltage change while the gain remains constant through the amplifier chain.

Phase-to-Charge Converter

The two D-type Flip-Flops U17A and B are clocked by the 100 Hz or 250 Hz time base pulse TB and the ÷N input respectively. The set and D inputs of U17A and B are tied high (+5 volts), therefore U17A and B are controlled by the reset and clock inputs. When reset is low it overrides the clock input. With the reset high, a low-to-high clock pulse clocks the active-high output high and the active-low output low (D1 is high). Depending on which pulse arrives first, either U17A or B is clocked first. After the second clock arrives both active-high outputs will be high and gate U14B output will go low resetting U17A and B. (Refer to Table 1.) Any phase difference between the TB and ÷N inputs will result in a correction voltage being applied to the VCO via the TUNE output. When the TB pulse arrives first, it clocks U17A active-high output high. This biases CR6 off. Current flows through CR9 to the input of the Charge-to-Voltage Converters.

Set	Reset	D	Clock	Pins- 5/9	Pins- 6/8
+5V(+5V(L H	+5V(H) +5V(H)	X	L H	H L

Table 1. U17A and B operation

Charge-To-Voltage Converter

The current from CR9 is applied to the negative input of integrator U8C. This causes the output to change in the negative direction. The effect of charging C49 causes the

- 2. Verify that the voltages and VCO output frequencies shown in Table 5 are correct.
- 3. Increment the frequency from 500 MHz in 10 MHz steps. Verify that the waveforms of Figures 8 and 9 are correct.

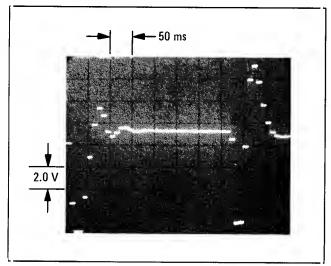


Figure 8. Display of Signal at U6B-Pin 6 (with dc coupling; external triggering from J2-Pin 7)

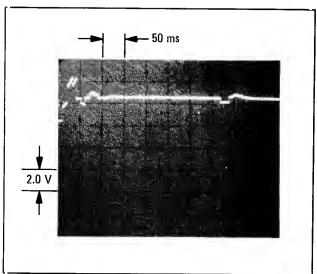


Figure 9. Display of Signal at J3-Pin 9 (with dc coupling; external triggering from J2-Pin 7)

Table 5. Loop Integrator and VCD Tune Voltage and Frequency Dutput

Frequen	cy (MHz)	Check Volta	age (Vdc) at
Front Panel Setting	LF Loop VCO Output	J3 pin 14	TP2
500	100	0.0 to + 0.4	+0.4 to + 0.8
510	90	+2.3 to + 2.7	+2.6 to + 3.0
520	80	+5.0 to + 5.4	+5.0 to + 5.4
530	70	+7.3 to + 7.7	+7.5 to + 7.9
540	60	+9.8 to +10.2	+9.8 to +10.2
550	100	+0.0 to + 0.4	+0.4 to + 0.8

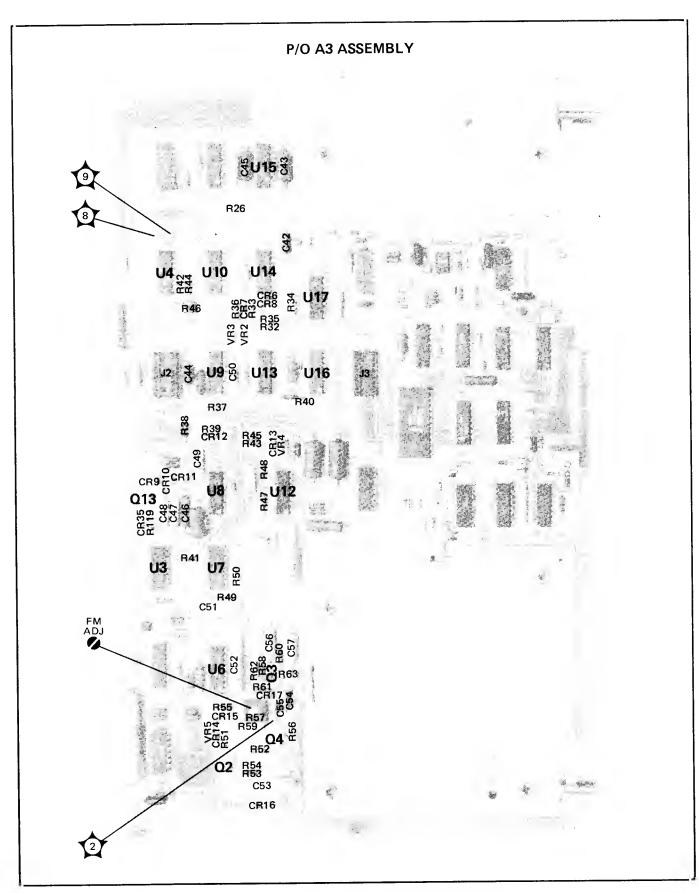


Figure 8-70. LF Loop Phase Lock Circuit Component Locations

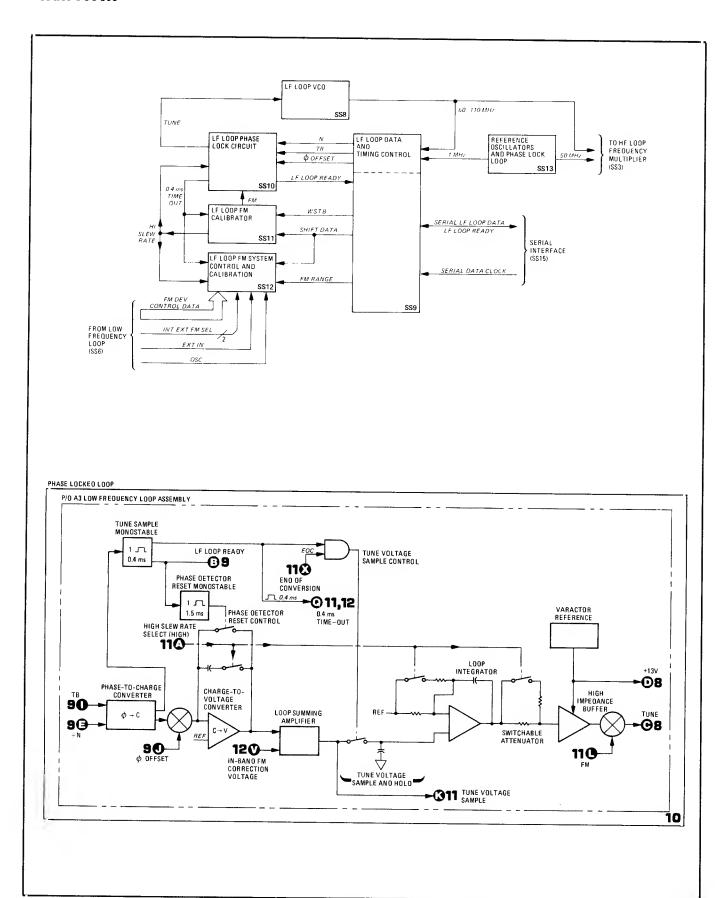
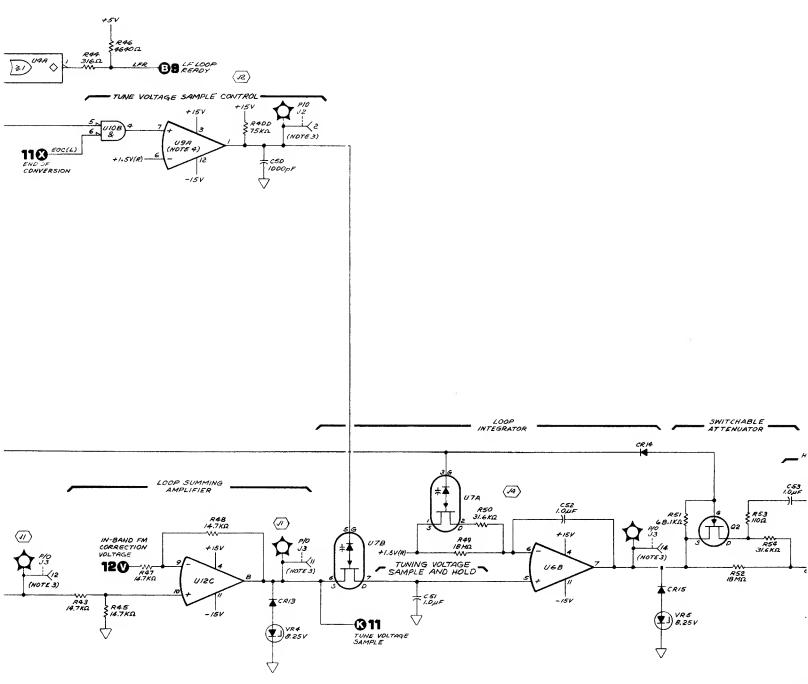


Figure 8-71. LF Loop Phase Lock Circuits Block Diagrams

8656A PHASE LOCKED LOOP: 2009A



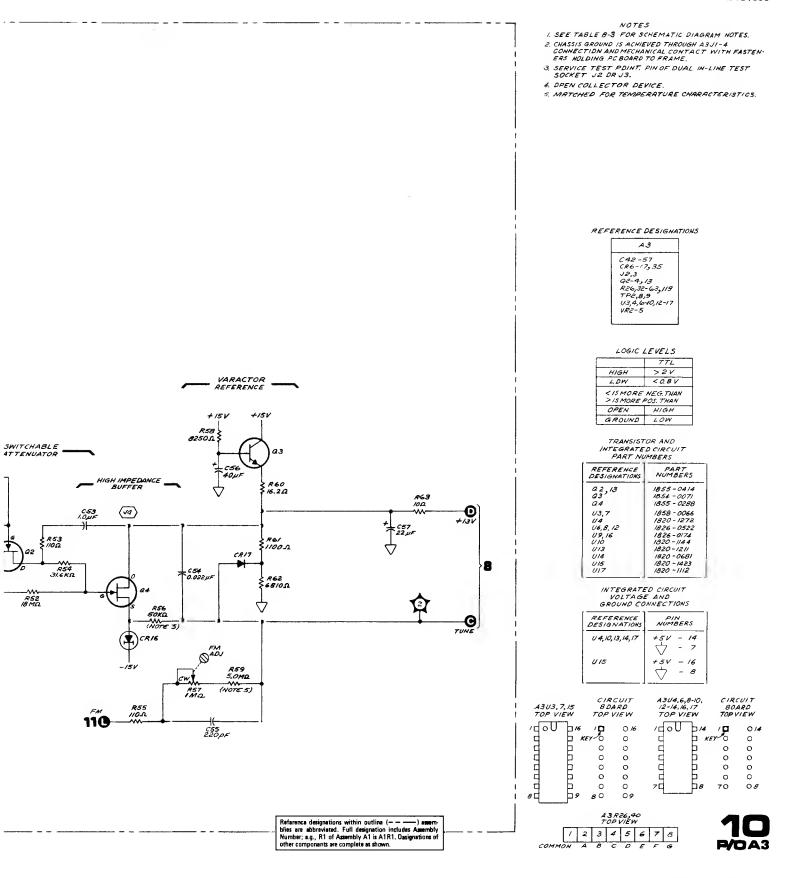


Figure 8-72. LF Loop Phase Lock Circuits Schematic Diagram

SERVICE SHEET 11 (Cont'd)

During FM calibration the two FET switches are closed and the gate goes to near +15 Vdc when the SAR receives a clock pulse to input data. This effectively grounds the input to U6C during the time data is input to the SAR. The new SAR bit settings are loaded into the FM CAL DAC and then the FET switches are opened to let the adjusted FM cal signal be applied to the VCO thereby adjusting the VCO's FM sensitivity.

TROUBLESHOOTING

Procedures for checking circuits of part of A3 Low Frequency Loop Assembly are given below. The areas or points to check are marked on the schematic by a hexagon with a checkmark and a number inside, e.g., $\sqrt{3}$. Fixed voltages are shown on the schematic inside a hexagon, e.g. $\sqrt{2V\pm0.2V}$. Transistor bias voltages are shown without tolerances.

Test Equipment

Digital Multimeter	HP 3465A
Oscilloscope	
Storage Mainframe	HP 181 A
Vertical Amplifier	
Time Base	HP 1820C

√1 High Siew Rate Monostable, Pre-Cal Settling Monostable, Start Conversion Monostable

1. Set the Signal Generator's frequency to 500 MHz without modulation.

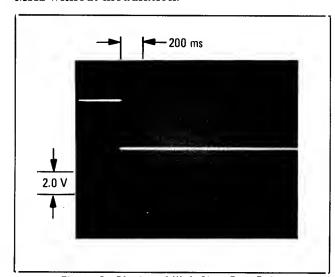


Figure 2. Display of High Slew Rate Pulse (coupling is dc toJ2-Pin 7; external trigger is from U21B-Pin 9)

2. Increase the frequency in 10 MHz steps. Verify that the waveforms are the same as those of Figures 2, 3 and 4. The loop is being phase locked.

NOTE

When the frequency change of the LF Loop passes a 25.6 kHz band edge, the high slew rate mode is triggered.

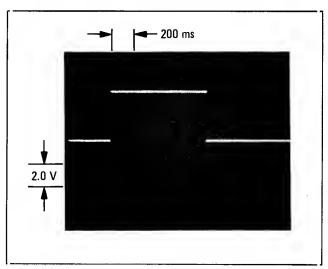


Figure 3. Display of Pre-Cal Settling Pulse (coupling is dc to J2-Pin 9; external trigger is from U21B-Pin 9)

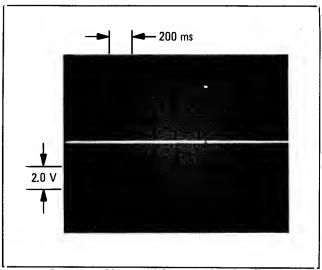


Figure 4. Display of Start Conversion Pulse (coupling is dc to J2-Pin 10; external trigger is from U21B-Pin 9)

NOTES

Pin 10 of the Successive Approximation Register U2 will be high until the activehigh output pulse of the Pre-Cal Settling Monostable goes low.

The EOC(L) input to U14D is low except during the FM calibration period. The 0.4 ms Time Out is high and pulses low for 0.4 ms every 4 or 10 ms. With the EOC(L) input high, the output is high for 0.4 ms. The high input to the positive input of comparator U16D means the output is near +15 volts. The +15 volts controls the gate of FET switches U18B and C causes them to be closed. The positive input to the Low Offset Comparator is connected to ground. U12B becomes a unity gain amplifier because U18B shorts the output to the negative input and removes any offset voltage stored on C68. At this point, assume the frequency of the LF VCO is changed by selecting a new output frequency. Assume also that the VCO's frequency passes a 25.6 kHz band edge. The LF Loop will go into high slew rate mode for 500 ms moving the VCO frequency close to the correct frequency. The loop then enters the Pre-Cal Settling mode for 1.1 s to complete locking the LF VCO at the correct frequency. Then the LF Loop enters the FM Calibration mode for 80 ms. It is in this mode that the SAR is set. This, in turn, sets the FM Cal DAC to calibrate the FM modulation drive of the VCO. When FM calibration is started, the EOC(L) goes high until all bits of the SAR have been set. The EOC(L) input to U14D is high and the 0.4 ms Time Out is high except for the 0.4 ms pulses every 10 ms. Therefore, the output of U14D will be pulsed low. With the output low, comparator U16D's output is near -15 Vdc opening FET switches U18B and C. During this time the Tune Voltage to the LF VCO is fixed and the VCO frequency does not change. The VCO is frequency modulated by the FM Calibration Generator signal which is a function of the SAR Data Control. Any Tune Voltage Sample input to Low Offset Comparator U12B which is not ac grounded is applied to the positive input. Now the Tune Voltage Sample from the Loop Summing Amplifier U12C will control the Low Offset Comparator U12B. The output of the comparator and the SAR Data Control from J-K Flip-Flop U5B, part of FM Calibration Signal Generator, are the inputs to Exclusive-Or gate U13A. The output of U13A is the data input to the SAR which calibrates the FM sensitivity of the VCO by nulling the input to comparator U12B.

The output of the Low Offset Comparator is switched from near +15 to 0 Vdc and is connected through R68 to U13A. The output of U13A is the data input to the SAR whose output sets the FM CAL DAC. The SAR bits are set to control the DAC (which acts as a variable attenuator) to achieve a null on the Tune Voltage Sampler input during the FM calibration cycle.

FM Cal DAC, Converter, and Sample and Hold Buffer

The FM Reference input to the FM CAL DAC is the signal to FM the VCO using internal or external modulation signals or the FM calibration signal during the FM calibration cycle. The FM input signal is attenuated for VCO sensitivity and applied to the current to voltage converter U6A. The signal then is applied to the DAC Offset Sample and Hold Buffer U6C. The ac voltage from U6C is applied to the VCO Tune Voltage bus shown on Service Sheet 10. FET switches U7C and D are open (biased off) except during FM calibration.

cally. The data input to the SAR is the calibration input and sets the SAR's output. The SAR's output is used to set the FM CAL DAC U1. The FM CAL DAC is set to compensate for the FM sensitivity of the VCO. The End of Conversion EOC(H) output-Pin 11 of the SAR U2 goes high when the conversion is complete. The EOC(H) is normally high and is set low during the 80 ms calibration cycle. The EOC(L) from Nor gate U10C is normally low and is high during the calibration cycle. When EOC(L) goes low, the high-to-low transition clocks J-K Flip-Flop U5A which outputs a high at the active-low output. The clock gate U10D is inhibited which disables the SAR clock generator.

Low Slew Rate Mode

If the frequency of the VCO is changed so that the 25.6 kHz band edge is not reached, the Signal Generator does not enter the high slew rate mode. (High Slew Rate Monostable U21B does not get triggered). The Shift Data Output (low) of the Write Strobe Generator Monostable U21A (refer to Service Sheet 9) is set low for 75 μs . This input is applied to U4B. U4B stays low because the other input (from the active-low output of U5A) stays high. Therefore, the LF Loop stays in the low slew rate mode and FM calibration does not take place.

Data Entry During FM Calibration

If new frequency data is entered into the LF Loop while the LF Loop is in the FM calibration phase, the FM calibration is terminated. The shift Data Low output of Write Strobe Generator Monostable (shown on service sheet 9) is gated by Nor gate U4B. The active-low output of U5A is low during the FM Calibration of the LF Loop which enables U4B. When Shift Data (L) goes low for 75 μs, the output will go high for 75 µs. The high-to-low transition of U4B's output triggers the Pre Cal Settling Monostable U11B setting the active-high output high and the active-low output low. The activehigh output of U11B to NOR gate U13B sets its output high since the other input is low. The high output of U13B to Feed Forward input of Successive Approximation Register U2 terminates and prevents conversion from taking place. This terminates the FM Calibration of the LF Loop until the active-high output of U11A Start Conversion Monostable goes low 35 ms after the Pre Cal Settling Monostable U11B goes low.

Low Offset Comparator Circuits

The Low Offset Comparator is enabled by the Low Offset Comparator Control during the Low Frequency Loop's FM Calibration Cycle. The Low Offset Comparator converts the difference between the VCO phase deviation and the integrated FM modulation drive signal (In-band FM Correction Voltage) to a digital input to the SAR. U13A controls the timing of the data input to the SAR based on the input from the FM Calibration Signal Generator. U5B, U9D of the SAR clock Generator and U16D of the Low Offset Comparator Control are all triggered by the 0.4 ms Time Out from the active-low output of Tune Sample Monostable U15A. The output is pulsed low for 0.4 ms every 4 or 10 ms.

Table 3. U11B Pre-Cal Settling Monostable Operation

Pin-9	Pin-10	Pin-11	Pin-5	Pin-12	Pulse Duration
L ↓	† H	+5V +5V	7	7	1.1s 1.1s

Calibration Cycle

At the end of the Pre-Cal Settling cycle, the active-high output of U11B goes low. The active-high output of U11B is applied to U13B and U11A. The output from U13B goes low which enables the Feed Forward input of U2. The Start Conversion Monostable U11A is triggered by the high-to-low transition of the output of U11B. With a high at the Start Conversion Monostable's output, the Successive Approximation Register's conversion cycle is started.

Table 4. U11A Start Conversion Monostable Operation

Pin-1	Pin-2	PIn-3	Pin-13	Pin-4	Pulse Duration
1	+5V	+5 V		7	25 ms

The active-low output of Pre-Cal Settling Monostable is low for 1.1s. This is connected to the K input of the J-K Flip-Flop that is part of the SAR Clock Generator U5A. U5A's active-low output is set lowby the low active-low output of U21B during the high slew rate mode. The set input returns high after 500 ms at the end of high slew rate mode.

Table 5. U5A (P/O SAR Clock Generator) Operation

S	R	G	J	K	Pin-5	Pin-6	
L H H	Н Н Н	X ↓	X L L	X H L	H L T	L H T	
T-Toggles to next state.							

At the end of the 1.1s Pre-Cal Settling time, U11B changes state making the K input to U5A high. U5A's active-low output will remain low forcing the input to U10D low. Every 10 or 4 ms, U10D-Pin 11 is pulsed low for 0.4 ms by the active-low output of Tune Sample Monostable U15A (shown on service sheet 10). The positive input to comparator U9D-Pin 9 will be pulsed high for 0.4 ms every 10 or 4 ms, and the output of U9D-Pin 14 switches from approximately -15 to +15 volts clocking the Successive Approximation Register on the positive edge of each pulse after the start conversion pulse is received from U11A. The calibration data to the SAR is clocked for eight successive clock pulses (about 80 ms). Calibration of the SAR takes place each time the frequency is changed if the 25.6 kHz band edge is passed. Since the FM sensitivity of the VCO is not precisely predictable with frequency it must be calibrated electroni-

EOC output from the SAR goes low. Serial data is input at U2-pin 6 and converted to the parallel data that drives the DAC.

High Slew Rate Mode

When the Low Frequency Loop VCO's frequency is changed so that the 25.6 kHz band edge is passed, the Microprocessor word written to the LF Loop Shift Register (refer to Service Sheet 9) contains a high bit at register U25A-Pin 3. This allows the Write Strobe Generator D Flip-Flop U28B to be set when it is clocked by monostable U21A's active-low output low-to-high transition. (Refer to Table 1). The low output of U28B then triggers the High Slew Rate Monostable U21B placing the instrument in the high slew rate mode for approximately 500 ms. Refer to Table 2.

Table 1. U28B (P/O Write Strobe Generator) Operation (refer to Service Sheet 9)

8	R	С	D	Pin-9	Pin-8	Remarks
H H	L H	X	X H	L H	H L	Change passes
Н	Н	t	L	L	Н	25.6 kHz band edge.

Table 2. U21B High Slew Rate Monostable Operation

Pin-9	Pin-10	Pin-11	Pin-5	Pin-12	Puise Duration	
†	+5V	+5 V		۲	500 ms	

The 500 ms pulse duration is determined by R26C 75 k Ω and C58 15 μ F. The active-high output pulse is applied to the Slew Rate Control comparator U16C(shown on Service Sheet 10) to close the High Slew Rate FET switches. The active-high output is also applied to Exclusive-Or gate U13B whose output goes high since the other input is low. The high input to the Successive Approximation Register's Feed Forward input stops a conversion which may have been started or prevents a conversion from taking place.

Pre-Cal Settling Monostable

The active-low output (low) of U21B is applied to Pre-Cal Settling Monostable U11B-pin 10. U11B is triggered on the low-to-high transition of the 500 ms pulse. The active-high output goes high and the active-low output low for 1.1s. Refer to Table 3. It is during this time that the LF Loop finishes locking in the low slew rate mode. The active-high output of U11B is the second input to Exclusive-Or gate U13B. The first input (from the High Slew Rate Monostable) has just gone low. Therefore, U11B's active-high output being high keeps U13B's output high. The high input to the Feed Forward input of the Successive Approximation Register terminates and/or prevents conversion as noted.

SERVICE SHEET 11 P/O A3 LOW FREQUENCY LOOP ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD3
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

General

The voltage-to-frequency sensitivity of the Signal Generator's VCO is non-linear. To guarantee calibrated frequency modulation, the gain of the audio modulation drive signal is varied by the FM Calibration circuits. Refer to Figure 1 for a simplified diagram of the calibration circuits. The FM Calibration Signal Generator (found on Service Sheet 12) provides the FM reference signal and the VCO modulation signal required to calibrate the modulation drive level. Passing the FM calibration signal through an integrator U12D (found on Service Sheet 12) provides the same signal as passing the frequency modulated VCO signal through the phase detector (found on Service Sheet 10). These signals are input to the Loop Summing (difference) Amplifier (of Service Sheet 10). This difference signal is input to the Low Offset Comparator. The output tells the SAR whether the DAC should increase or decrease in attenuation to cancel the signal from the Loop Summing Amplifier. In successive steps the signal is reduced until after 8 steps the DAC attenuation is calibrated with the data being held in the SAR, U2.

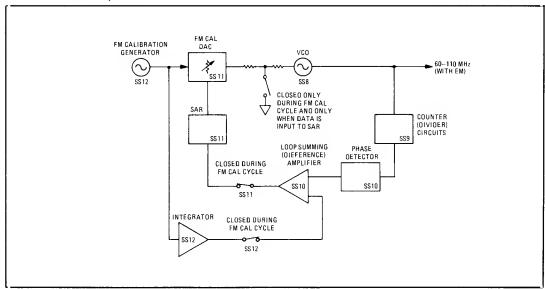


Figure 1. FM Calibration Simplified Block Diagram

If the Signal Generator's frequency is changed so the 25.6 kHz band edge is passed, WSTB(L) triggers the High Slew Rate Monostable U21B. The outputs of U21B inhibit the FM calibration circuits and enable the SAR Clock Generator by causing U5A to be set. At the end of the high slew rate mode, the Pre-Cal Settling Monostable is triggered. During the Pre-Cal Settling time the LF Loop is phase locked. When the settling time ends, the SAR Clock Generator's K input to U5A is set high and the Successive Approximation Register is enabled. The two lows to U13B cause a low to be output to the SAR's Feed Forward Input. The Start Conversion Monostable is triggered which couples a high to the Start Conversion input. The Conversion Cycle begins and the

Model 8656A Service

SERVICE SHEET 11 (Cont'd) NOTES (Cont'd)

The Successive Approximation Register's conversion cycle is started when the active-high output pulse of the Start Conversion Monostable is terminated, high to low.

$\sqrt{2}$

SAR Clock Generator, Successive Approximation Register

NOTES

The Successive Approximation Register's conversion cycle is started when the active-low output of J-K Flip-Flop U5A is low. A 0.5 ms clock pulse is generated every 10 or 4 ms by the Tune Sample Monostable's active-low output pulse.

On each clock pulse to the SAR, the SAR's outputs are set high or low depending on the Data in. As each of the bits are set, the FM Cal DAC gets set.

A total of eight clock pulses are required to set the Output of the SAR (to calibrate the system). Total time is approximately 80 ms.

Clock pulses are generated from the time the High Slew Rate Monostable's active-low output sets the active-low output of the J-K Flip-Flop U5A low.

- 1. Set the Signal Generator to 500 MHz without modulation.
- 2. Increment the frequency up 10 MHz and compare the displayed waveforms to those shown in Figures 5 and 6. Refer to $\sqrt{3}$ to verify SAR Data input during the FM calibration cycle.

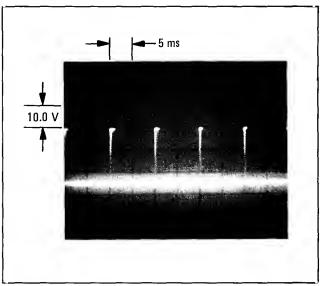


Figure 5. Display of SAR Clock Generator Pulse (coupling Is dc to U9D-Pin 14; external trigger from J2-Pin 10)

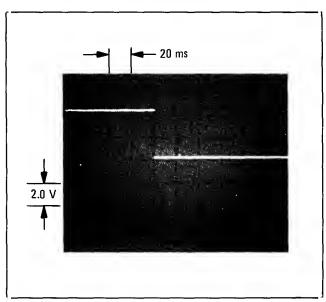


Figure 6. Display of SAR End of Conversion EOC(L) Level (coupling is dc to J2-Pin 6; external trigger from J2-Pin 10)

SERVICE SHEET 11 (Cont'd)

Low Offset Comparator Control, Low Offset Comparator

NOTES

The correction Tune Voltage Sample input to the Low Offset Comparator will control the comparator's output.

The comparator's output is Exclusive-Or'ed with the integrated FM calibration signal to set the SAR bits high or low.

1. Increment the frequency up 10 MHz and check the oscilloscope displays, Figures 7 and 8 for typical FM calibration data.

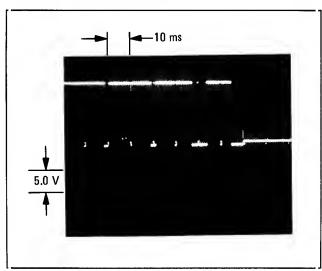


Figure 7. Display of Cffset Comparator Output during FM Calibration Cycle (coupling is dc to J3-Pin 16 with external trigger from J2-Pin 10)

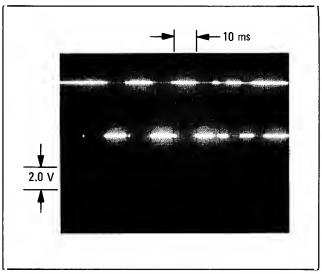


Figure 8. Display of SAR Data Input during FM Calibration Cycle (coupling is dc to U13A-Pin 3; external trigger from J2-Pin 10)

FM Cal DAC, Current-to-Voltage Converter, DAC Offset Sample and Hold Buffer

- 1. Set the Signal Generator frequency to 500 MHz, modulation source Internal 1 kHz, FM mode and 50 kHz deviation.
- 2. Check the following.
 - a. J2-Pin 13, FM Reference, for a 1 kHz signal approximately 4.0 Vp-p.
 - b. U6A-Pin 1 for a 1 kHz signal approximately 2.5 Vp-p.
 - c. J3-pin 13 for a 1 kHz signal approximately 2.5 Vp-p.

Model 8656A Service

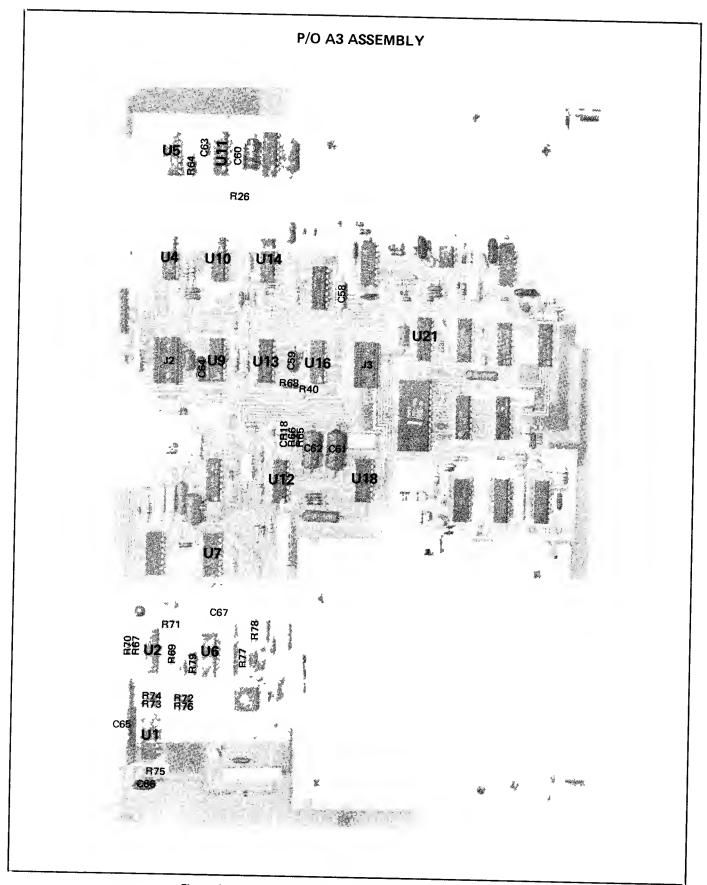


Figure 8-73. LF Loop FM System Calibrator Component Locations

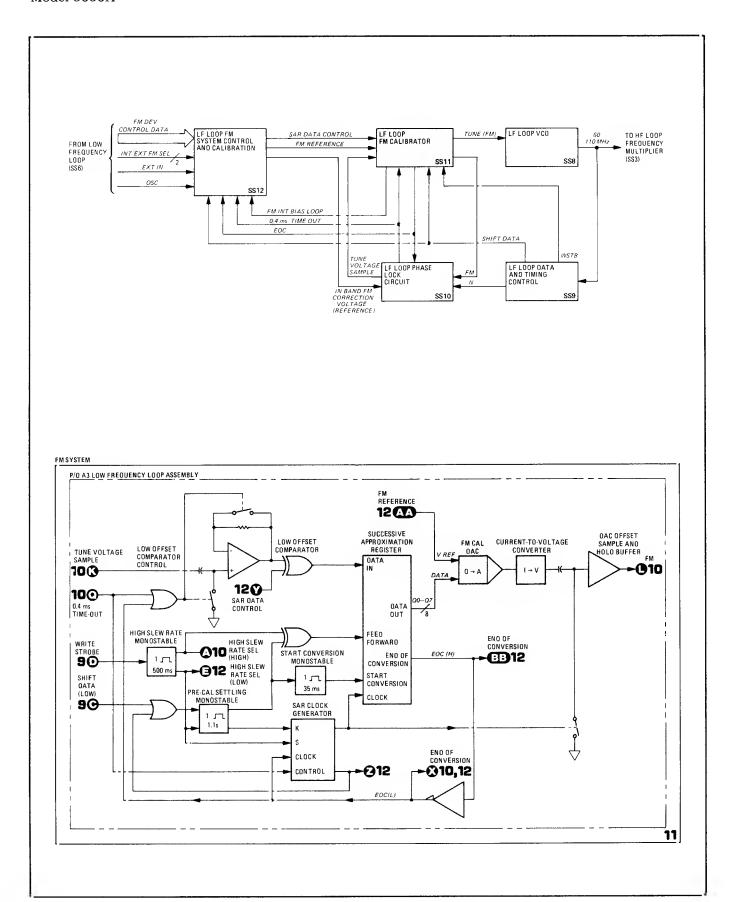
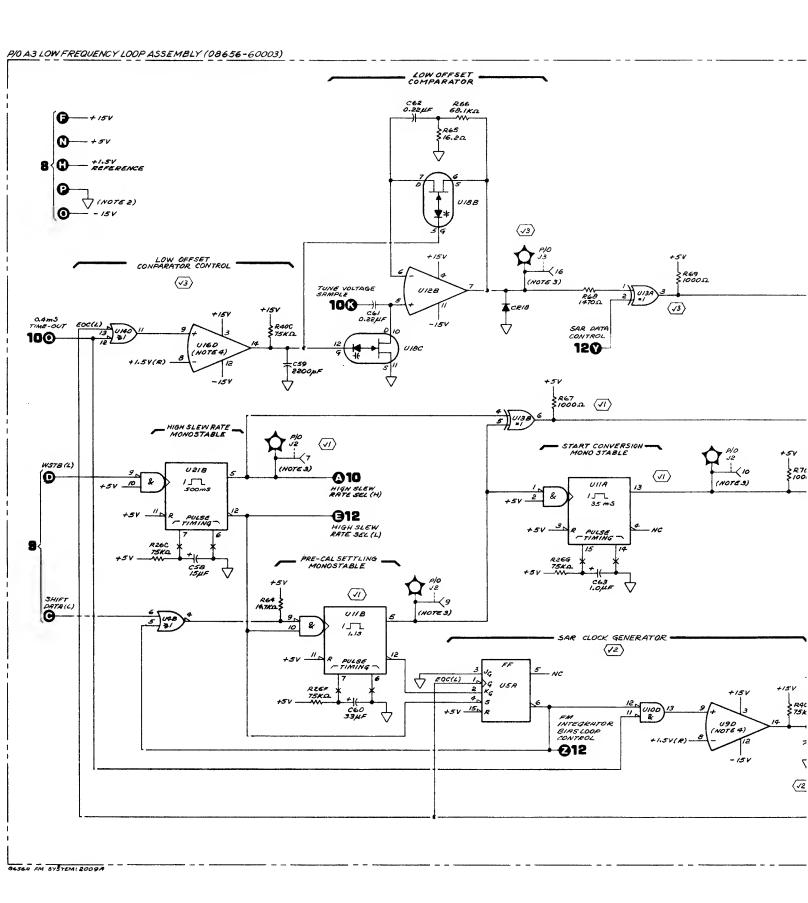
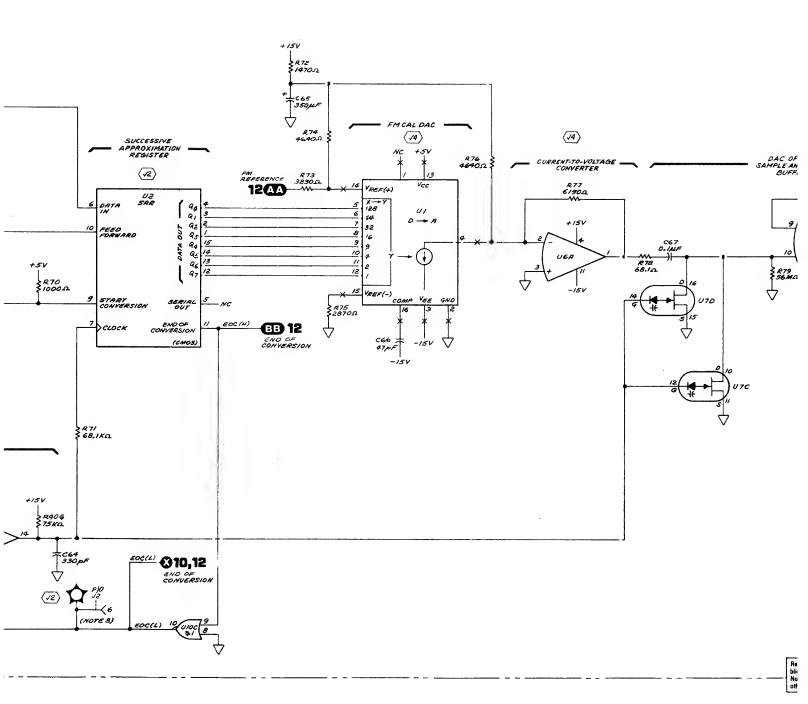


Figure B-74. LF Loop FM System Calibrator Block Diagrams





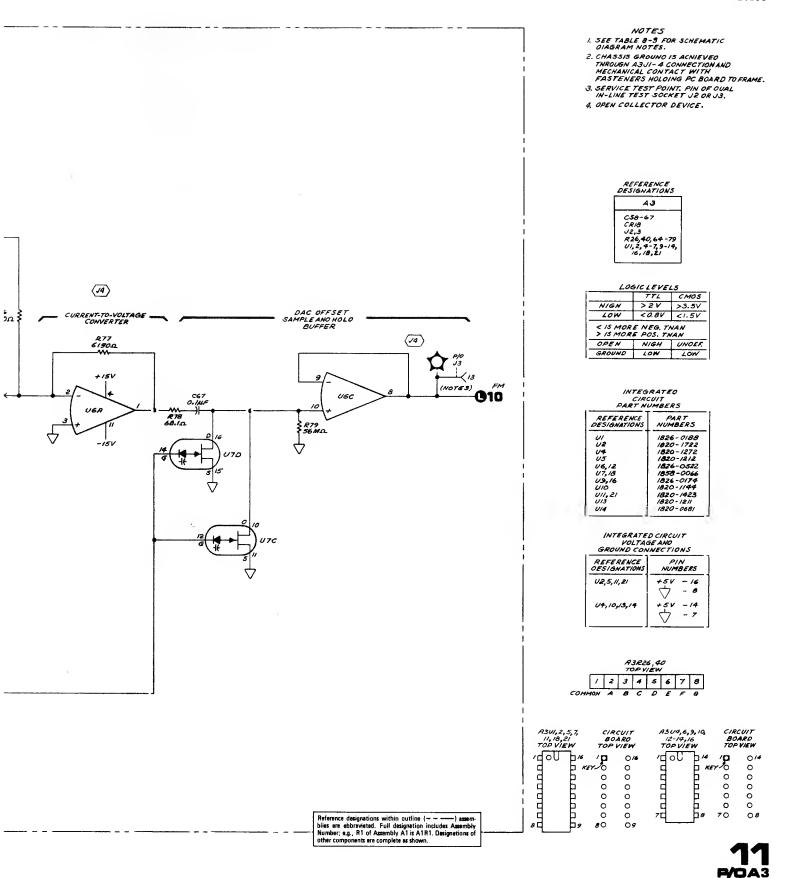


Figure 8-75. LF Loop FM Calibrator Schematic Diagram

Service Model 8656A

SERVICE SHEET 12 (Cont'd)

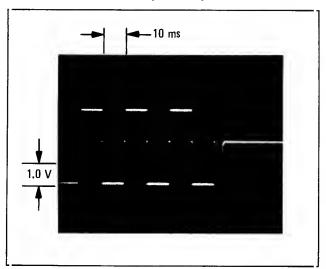


Figure 3. Oscilloscope Display at J2-Pin 13 during FM Calibration (dc coupling to J2-Pin 13; external triggering is from U5-Pin 7)

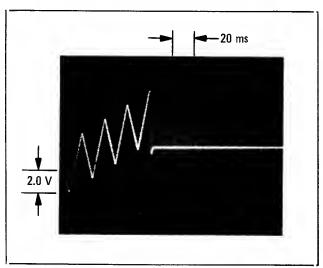


Figure 4. Oscilloscope Display of J3-Pin 15 during FM Calibration (dc coupling to J3-Pin 15; external triggering from U5-Pin 7)

$\langle \sqrt{5} \rangle$

> FM Integrator Bias Loop

- 1. Set the Signal Generator to 500 MHz without modulation.
- 2. Check the output at U16B-Pin 2, the Slow Response Control comparator. It should be approximately +15 Vdc. FET switch U18A is closed.
- 3. Check the output of the Fast Response Control comparator U16A-Pin 1. It should be approximately—15 volts dc. FET switch U18D is open.
- 4. Increment the frequency up 10 MHz and check that U16B-Pin 2 goes to -15 Vdc during FM calibration approximately 80 ms. Check that U16A-Pin 1 goes to approximately +15 Vdc approximately 50 ms after FM calibration is terminated. Externally trigger the oscilloscope at U5-Pin 7. 50 ms is the time it takes to change the voltage at U16A from -4 to +0.6 Vdc.

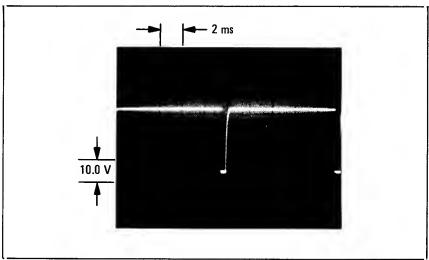


Figure 1. Dscilloscope Display of FM Integrator Sample and Hold Control (dc coupled to J2-Pin 3; internally triggered)

$\sqrt{4}$ FM Calibration, FM Integrator Sample and Hold Buffer

- 1. Set the Signal Generator to 500 MHz in the CW mode.
- 2. Increment the frequency up 10 MHz. Figures 2, 3 and 4 show the correct signals for FM Calibration of the LF Loop's VCO.

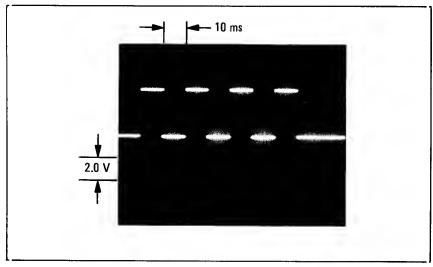


Figure 2. Dscilloscope Display of SAR Data Control Generated during FM Calibration (dc coupling to U5-Pin 7; external triggering from U5-Pin 13)

SERVICE SHEET 12 (Cont'd) TROUBLESHOOTING

Procedures for checking circuits of the A10 Audio Power Supply Assembly and the A3 Low Frequency Loop Assembly are given below. The areas or points to check are marked on the schematic by a hexagon with a checkmark and a number inside, e.g., $\sqrt{1}$. Fixed voltages are shown on the schematic inside a hexagon, e.g. $(2V\pm0.2V)$. Transistor bias voltages are shown without tolerances.

Test Equipment

Digital Multimeter	HP 3465A
Oscilloscope	
Storage Mainframe	HP 181A
Vertical Amplifier	HP 1801A
Time Base	HP 1820C

√1 FM Deviation Amplifier

- 1. Set the Signal Generator to 500 MHz, modulation source to 1 kHz Internal, FM mode and 50 kHz deviation.
- 2. Check A10J6-Pin 8 for a 1 kHz signal of approximately 3.0 Vp-p.

$\sqrt{2}$ FM Range Select, FM Reference Summing Amplifier

- 1. Set the Signal Generator to $500~\mathrm{MHz}$, modulation source 1 kHz Internal, FM mode and $50~\mathrm{kHz}$ deviation.
- 2. Check A3J2-Pin 13 for a 1 kHz signal at approximately 3.2 Vp-p.
- 3. Change the FM deviation to 5 kHz.
- 4. Check J2-Pin 13 for a 1 kHz signal approximately 0.32 Vp-p.

FM Integrator, FM Integrator Sample and Hold Control, FM Integrator Sample and Hold Buffer

- 1. Set the Signal Generator's frequency to 500 MHz, modulation source 1 kHz internal, FM mode and 50 kHz deviation.
- 2. Verify that the waveform shown in Figure 1 is correct.

NOTE

The FET Switch is opened for 0.4 ms every 10 ms. This stores the FM Integrator's output on capacitor C73.

- 3. The FM Integrator Sample and Hold Buffer's output, checked at J3-Pin 15, should be approximately 0.1 Vp-p. The cosine of the FM Integrator input is seen at J2-Pin 13. Externally trigger the oscilloscope at J2-Pin 13 to see the phase difference.
- 4. External trigger the oscilloscope on the FM Integrator Sample and Hold Control (J2-Pin 3) to lock the sample and hold pulse for 0.4 ms every 10 ms.

the FM calibration cycle is completed. For approximately 1.60 s both inputs to U10A will be low and the output high. This is from the time data is written until the FM calibration cycle begins. At this time the EOC(L) goes high and remains high until the FM Calibration is complete. The high-to-low transition of the EOC(L) clocks the activelow output of J-K Flip-Flop U5A high. Therefore, when data is written to the LF Loop (during the time both inputs to U10A are low and its output is high) FET switch U18D will be closed which enables the fast response mode. When the FM calibration is started the EOC(L) goes high for approximately 80 ms setting the output of U10A low. The Shift Data (H) input to Exclusive-Or gate U13C is low and the EOC(L) is now high. The high output of U13C drives the negative input of comparator U16A to approximately +15.0 Vdc. This keeps the fast response loop open. The slow response FET switch U18A is open when the EOC(H) input is low during the FM calibration time.

The FM Calibration Signal Generator is activated only during FM calibration of the LF Loop. The High Slew Rate Sel (L) from the High Slew Rate Monostable (refer to Service Sheet 11) is low for approximately 500 ms while the instrument is in the high slew rate mode. The low resets the J-K Flip-Flop U5B active-high output low and the activelow output high. One input to gate U4D will be high so the output is low. One input to gate U4C will be low and the other from U14C will be high so its output is low. J-K Flip-Flop U5B will not change until High Slew Rate Monostable U21B's active-low output goes high releasing the Reset input. U5B can not be gated until the EOC(L) goes high when the FM Calibration cycle is started. The outputs of the J-K Flip-Flop are controlled by the output of U14C. The EOC(L) being high will enable the output of U14C to be controlled by the 0.4 ms high-to-low transition of the output of Tune Sample Monostable U15A shown on Service Sheet 10. The monostable's active low output is pulsed low for 0.4 ms every 10 or 4 ms. On the high-to-low transition at the gate, the output of U5B is set with the active-high output going high and the active-low output going low. Refer to Table 1. The J input is low and the K input is high. Therefore, the Flip-Flop will toggle when the gate goes high and repeat the cycle on each of the 0.4 ms pulses during the FM calibration. The common inputs to U4C and U4D enable the gates each time U5B is toggled (every 10 or 4 ms). The phase relationship between the pulses output from U5B to the remaining inputs to U4D and U4C is 180°. The pulse outputs of U4C and U4D are input to amplifier U8C. The output of U8C will be +15V or -15V and is used for the FM Calibration Cycle.

Table 1. U5B Operation

S	R	G	J	K	Pin-9	Pin-7
н	L	X	X	X	L	Н
H	Н	↓	Н	L	Н	L
Н	Н	Н	L	H	Т	Т
T-Toggle	es to next s	tate.		-		

U3A opened every 10 or 4 ms for 0.4 ms by the Tune Sample Monostable active-low output to comparator U0B.

The FM Integrator Bias Loop Fast and Slow response are to zero the dc offset to the FM Integrator. The bias circuit looks at the output of the FM Integrator U12D to adjust out the dc drift and therefore keeps the negative input and output at 0.0 Vdc, the same as the positive input. The bias loop takes the output of the integrator and feeds it back to the input of U6D. Although the input of the integrator is held at 0.0 Vdc, there can still be a dc current at the input and voltage at the output. This is accomplished in the slow response mode by limiting the bandwidth to less than 1.0 Hz. The output of the integrator U12D is applied to the negative input of amplifier U12A through filter R92, 93 and C72. FET switch U18A is biased on by comparator U16B in the slow response mode. The End-of-Conversion EOC(L) from the SAR (shown on Service Sheet 11) is high (approximately +5.0 Vdc) setting the output to approximately +15.0 Vdc which turns the FET switch on. FET switch U18D is biased on or off by Fast Response Control comparator U16A. In the fast response mode, the output of integrator U12D is not filtered but connected directly to the input of amplifier U12A. Under both fast and slow response U12A will try to keep the negative input, pin 2, at 0.0 Vdc, the same as the positive grounded input pin 3. This will keep the output of U12D at 0.0 Vdc, the same as the input to U12A. The circuit would do the same for the audio modulation signals except that the narrow loop bandwidth will not let the circuit respond fast enough.

The fast response state is entered when the instrument's frequency is changed. For any change in frequency, the dc voltage from the FM Deviation DAC will change which forces a change at the output of the integrator U12D. The need to remove this voltage quickly from the integrator results in the use of the wider bandwidth of the fast response mode.

The negative input of Fast Response Comparator U16A is normally fixed at approximately 0.6 Vdc by diode CR19. The end-ofconversion, EOC(L), from U10C SAR (Service Sheet 11) is low except during the FM calibration of the LF Loop. The Shift Data (H) output of Write Strobe Generator U21A (Service Sheet 9) is low except when serial data is being written to the LF Loop. The FM Integrator Bias Loop Control active-low output of SAR clock generator J-K Flip-Flop U5A (Service Sheet 11) is high except during the FM calibration of the LF loop. When data is written to the Low Frequency Loop, Shift Data (H) goes high and the negative input to comparator U16A is driven to approximately -4.0 Vdc. The output of the comparator changes to approximately +15.0 Vdc and FET switch U18D is closed. During this time both FET switches U18A and D are closed. $75 \,\mu s$ after the last data bit has been written to the LF Loop, the Shift Data (H) goes low. If the high slew rate mode has been activated, the low active-low output of High Slew Rate Monostable U21B sets the J-K Flip-Flop U5A's active-low output low (refer to Service Sheet 11). This output from U5A will remain low for approximately 1.85s until

SERVICE SHEET 12 P/O A3 LOW FREQUENCY LOOP ASSEMBLY P/O A10 AUDIO/POWER SUPPLY ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD3
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

General

The FM drive signals from internal or external sources are input to the FM Deviation Summing Amplifier. The signal level applied to the VCO may be varied in output level as it passes through the FM Deviation Digital-to-Analog Convertor (DAC). This allows setting the FM deviation of the RF output signal.

Some of the circuitry on the A3 assembly forms part of the FM Calibration circuits. Refer to Service Sheet 11 for a general discussion of these circuits. More specific information is included in the following paragraphs.

FM Deviation Circuits

The Internal 400 or 1000 Hz modulation signal and the External modulation signal are switched to the negative input of FM Deviation Summing Amplifier A10U17A by FET switches A10Q7 and Q6. The FET switches are biased off or on by comparators U21C and D. The comparators are controlled by data bits from the Microprocessor input to the Modulation Control Latches (refer to Service Sheet 6). The FM drive signal output of the FM Deviation Summing Amplifier is the positive Reference input to the FM Deviation DAC A10U14. This audio frequency modulation signal is attenuated by the DAC to the level required to frequency modulate the output signal to the deviation selected at the front panel. The FM Deviation DAC resistance ladder is set by the Microprocessor bits stored by the Modulation Control Latches (refer to Service Sheet 6). The output from the DAC is amplified by the FM Deviation Amplifier A10U17B. Any dc or ac output of the amplifier is connected to the FM Reference Summing Amplifier U6D. The gain of amplifier U6D is either 10 or 1 as determined by the FET switch Q1. The amplifier has a gain of one for the FM deviation range 0 to 9.9 kHz and 10 for the range 10 to 99 kHz. The FET switch is biased on or off by comparator U8A. U8A is controlled by a data bit from the Microprocessor latched in LF Loop Shift Register U25A (refer to Service Sheet 9).

The output of the FM Reference Summing Amplifier U6D is applied to the FM Cal DAC U1 shown on Service Sheet 11. This signal is the FM signal for modulation or the FM signal for calibration of the Low Frequency Oscillator's FM sensitivity. The other output of the amplifier is coupled to FM Integrator U12D. U12D integrates the FM signal to provide a reference for comparing with the detected FM VCO signal during the FM Calibration Cycle. The LF Loop has a narrow bandwidth, therefore, the Low Frequency Loop VCO must be modulated within the loop bandwidth. The output of the integrator is sampled by unity gain FM Integrator Sample and Hold Buffer U8D and C73. The output of the buffer is summed with the output of the Phase-to-Charge Converter shown on Service Sheet 10. The two voltages are out of phase and cancel the In-band FM Correction Voltage to the VCO. During FM Calibration, this voltage is summed with the phase-to-charge voltage and the difference is made equal to 0 by setting SAR bits (refer to Service Sheet 11). The sampling is controlled by FET switch

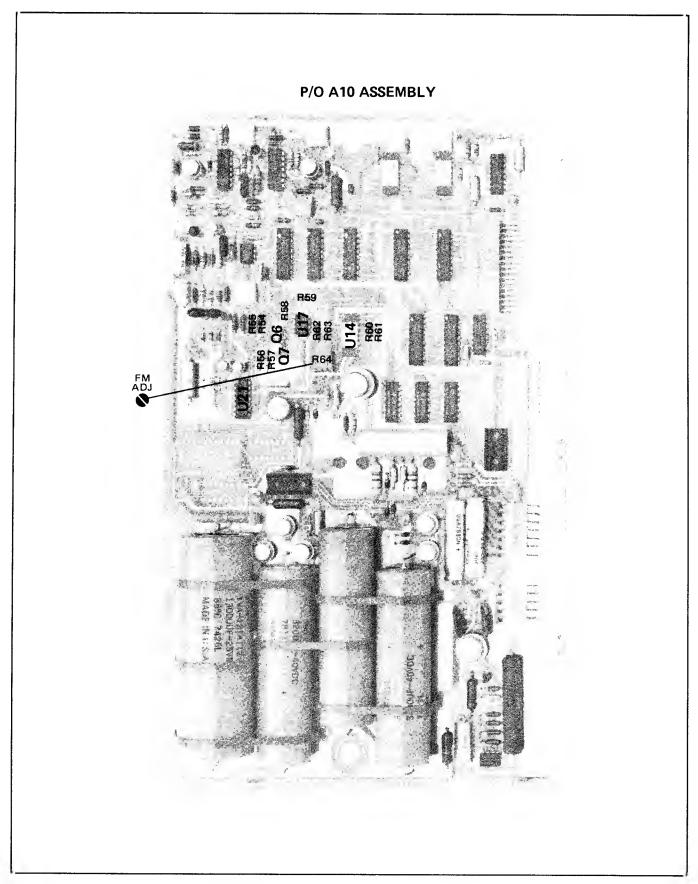


Figure 8-76. LF Loop FM System Control Component Locations

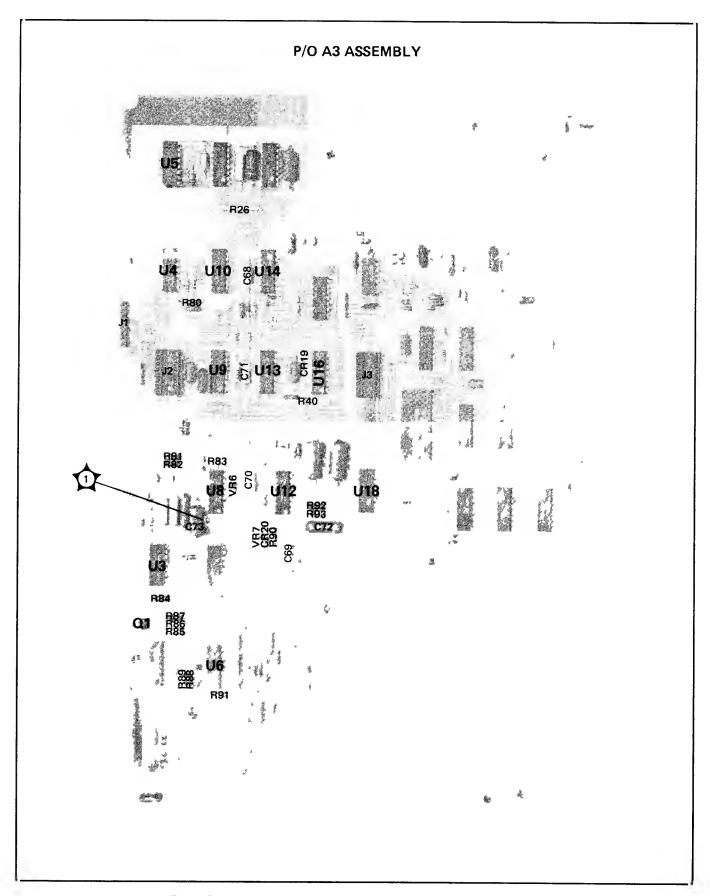


Figure 8-77. LF Loop FM System and Calibrator Component Locations

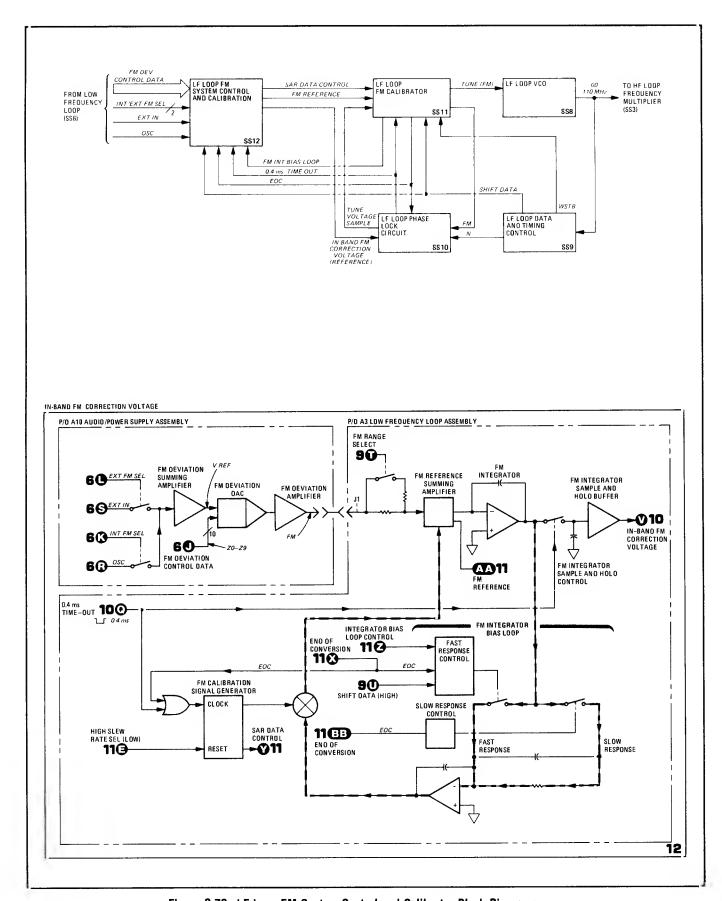
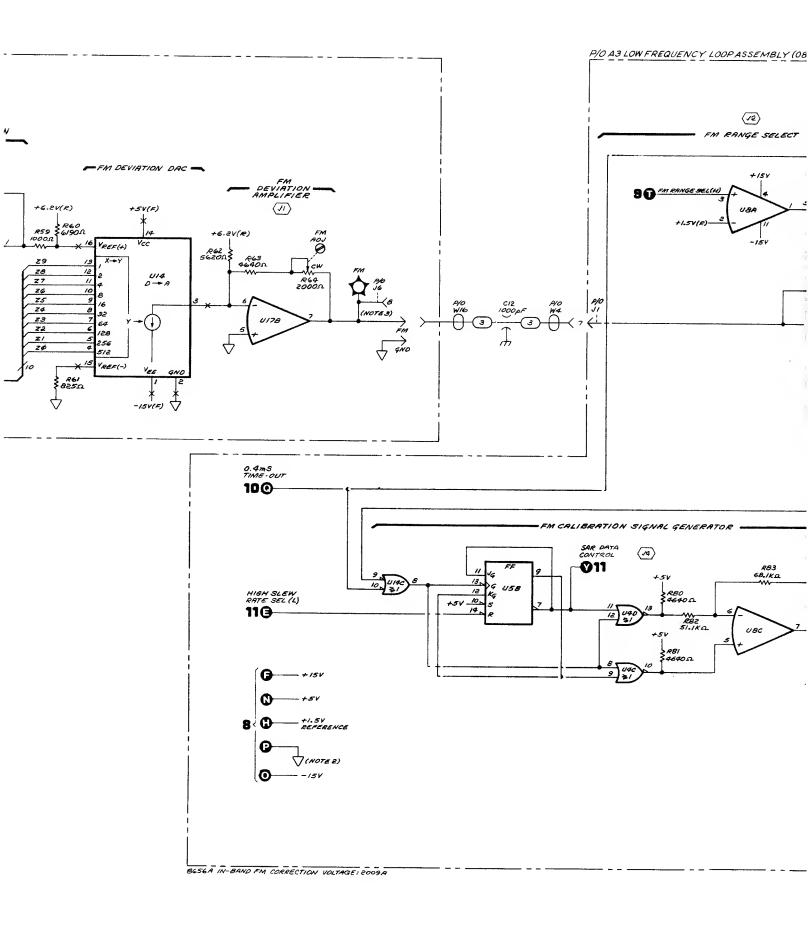
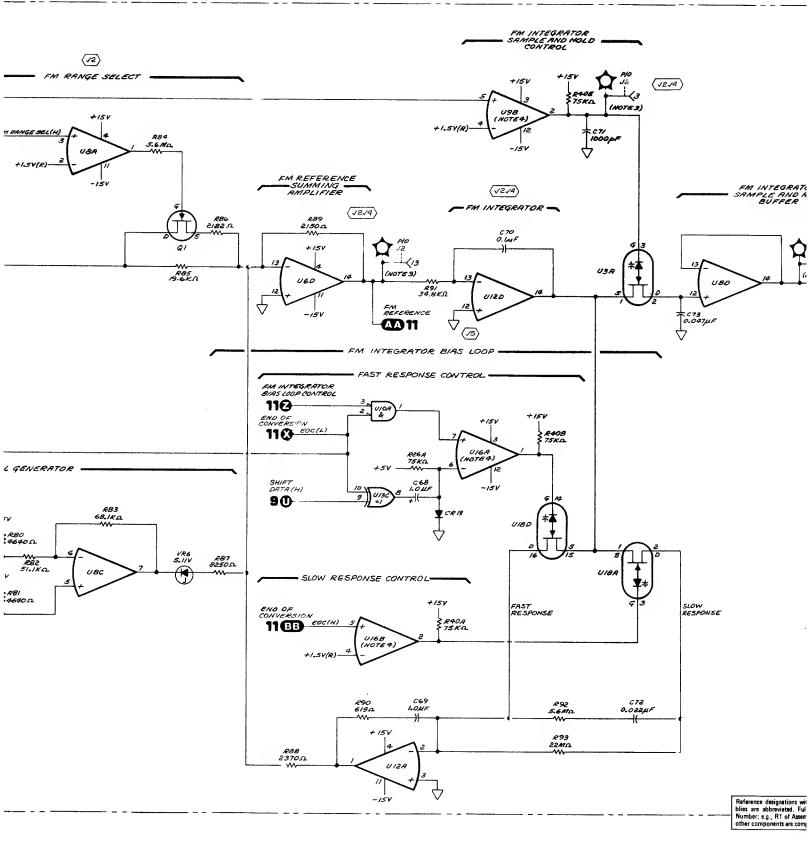


Figure 8-78. LF Loop FM System Control and Calibrator Block Diagrams





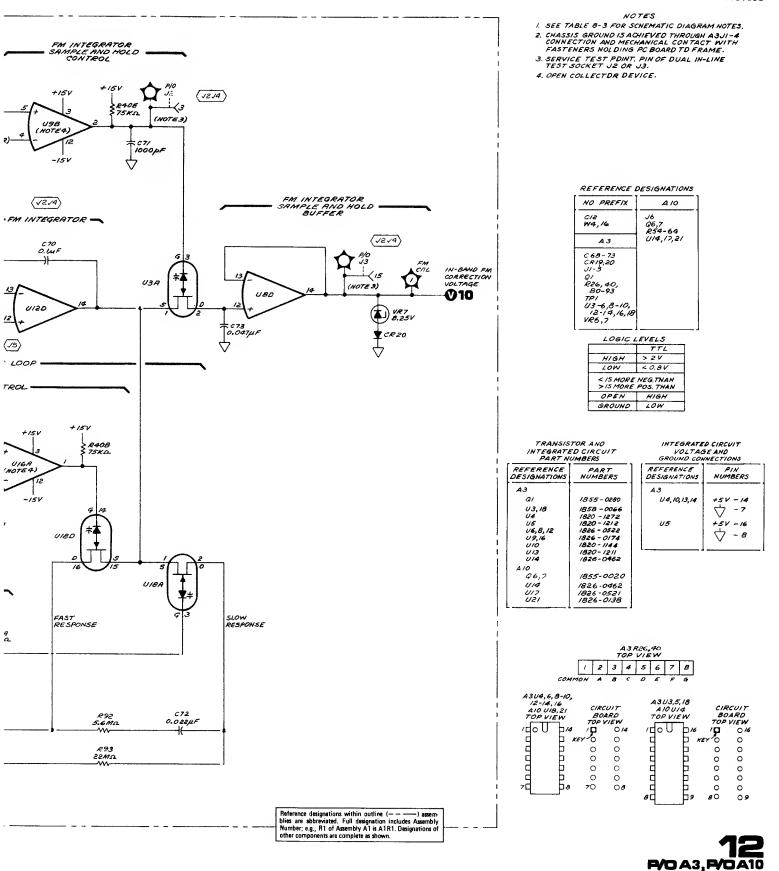


Figure 8-79. LF Loop FM System Control and Calibrator Schematic Diagram

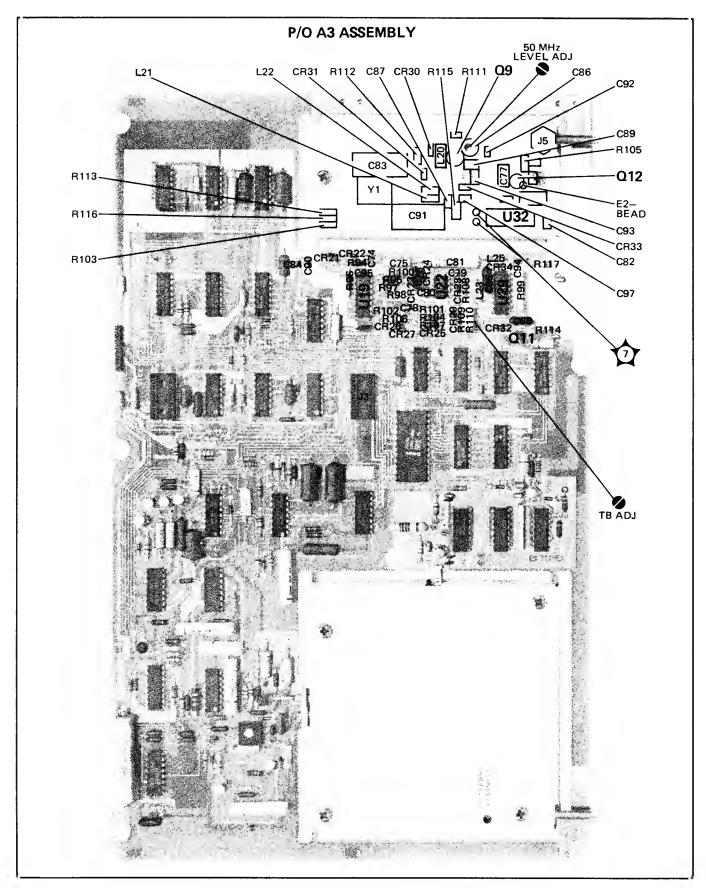


Figure 8-80. Reference Osciliator and Phase Lock Loop Component Locations

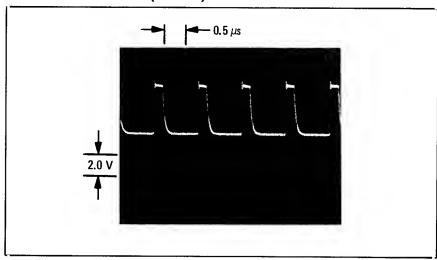


Figure 1. Display of 1 MHz Reference Signal (dc coupling to J3-Pin 5; internal triggering)

NOTE

A residual FM problem at the RF output may be due to residual FM from the 50 MHz Reference Oscillator. Measuring residual FM of the Reference Oscillator using the test setup found in Section IV may be inconclusive. The residual FM of the measuring instrument (HP 8901A Modulation Analyzer) is normally greater than that of a Reference Oscillator that is operating properly. Therefore the measurement would be meaningless.

√1 Crystal Phase Lock Circuit

Measure the voltage shown in Table 1. With an external reference oscillator connected to the Time Base Input or with the internal reference oscillator installed, the 50 MHz oscillator should be phase locked.

Table 1. Crystal Phase Lock Circuit Voltages

0		Voitages (dc and ac) on									
Operatin Mode			119-Pin U228-Pin		in	U22A-Pin		in			
		7	5	2	3	5	6	7	3	2	1
Phase	Vdc	+3.8	+3.8	+3.8	+4.0	+4.0	+3.7	+13	+4	+4	-10
Locked	Vpk	0.4	0.4	0.4	0.4	0.01	0.01	0.01	0.08	0	0.02
Not	Vdc	+3.8	+3.8	+3.8	+3.8	+3.5	+3.7	-13	+4	+3	+14
Phase Locked	Vpk	0.02	0.4	0.2	0.05	0.01	0.01	0.005	0.02	0	0.008

$\sqrt{2}$ 50 MHz Reference Oscillator

- 1. Verify that Q9's bias voltages are correct.
- 2. Measure the oscillator output at TP7.

$\sqrt{3}$ Divided Time Base Signals

- 1. Measure the signals at J3-Pin 8 and J4.
- 2. Verify that the waveform shown in Figure 1 is correct.

The time base output is applied to pin 11 of Exclusive-or gate U19. Its other input is tied to +5 Vdc. The output from pin 14 is the input phase shifted 180 degrees. The signal is then detected by diode CR34 and accoupled to the Time Base Output J4.

Crystal Phase Lock Circuit

The Time Base Input signal is ac coupled by C95 to resistor R94 and the positive and negative peak limiting diodes of CR21 and 22. The input is then ac coupled by capacitor C74 to pin 7 of Exclusive-Or gate U19. The input goes to ac ground by resistors R95 and 96 and capacitor C75. The output of the gate is connected to the input to bias on the ECL gate. The output is also connected through the resistor R98 to resistor R99D and diode CR23. CR23 detects the Time Base Input signal and applies the voltage to the positive input of comparator U22B. The positive input is increased so it is more positive than the negative input and the output of U22B switches to +15 Vdc, detecting the presence of a Time Base Input. When the output of U22B switches to +15 Vdc the phase lock operational amplifier U22A is activated by turning off diode CR25 and turning on diode CR29. The inputs of comparator U22B are connected to U19-Pin 3 the Exclusive-Orgate output. Diode CR24 temperature compensates CR23.

The Time Base Input signal from U19-Pin 3 is connected to U19-Pin 4. The other input, pin 5, is the divided output of the 50 MHz Reference Oscillator. The signal is divided to 10, 5 or 1 MHz depending on the Time Base Input frequency and the subsequent jumper placement. This Exclusive-or gate serves as a phase detector with its change in output voltage being proportional to the phase difference of the two inputs. The output is coupled to the 50 MHz Reference Oscillator which serves to phase lock the oscillator to the Time Base Input signal. The correction voltage to U22A is amplified and applied to the oscillator tank circuit through diode CR28. CR28 is turned on when comparator U22B turns CR25 off and the negative input of U22B changes to approximately +3 Vdc. The positive input is fixed and the output goes from +15 Vdc to approximately -7 Vdc. CR28 is turned on as are diodes CR26 and 27 when the phase difference is large enough. Resistor R106 is bypassed which moves the reference oscillator to the correct frequency.

TROUBLESHOOTING

Procedures for checking the circuits shown on Service Sheet 13 are given below. The area or points to check are marked on the schematic by a hexagon with a check mark and a number inside, e.g. $\sqrt{3}$. Fixed voltages are shown on the schematic inside a hexagon, e.g. $\sqrt{2V\pm0.2V}$. Transistor bias voltages are shown without tolerances.

Test Equipment

Digital Miltimeter	P 3465A
OscilloscopeH	P 1222A

SERVICE SHEET 13 P/O A3 Low Frequency Loop Assembly P/O A16 10 MHz Reference Oscillator

TROUBLESHOOTING HELP

Service Sheet BD3
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

General

50 MHz Reference Oscillator

The 50 MHz Reference Oscillator, Q9, is a common base crystal controlled oscillator. The amount of positive feedback is predetermined by the taps on the inductors. The inductors are spiral printed circuit board traces.

The base of Q9 is biased by resistor R111 at approximately 0 Vdc. The emitter is biased by resistors R112 and 113. Resistor R113 is connected to the -15 Vdc supply which biases on diodes CR30 and 31. This closes the dc current path for the emitter current of Q9 and also closes the tank circuit. The tank circuit consists of the crystal Y1, varactor diode CR33, the printed circuit board inductors and C86 and C89. The output frequency can be adjusted by the TB Adj R110 which controls the voltage across the varactor diode thereby changing the capacitance of the tank circuit. This tune voltage is applied through resistors R109, 115 and RF chokes L21 and 22. The output level is peaked by the 50 MHz Level Adj capacitor C86. Capacitors 83, 84, 90, 91, 92 and 97 are bypass capacitors.

Time Base Divider

The output of the Reference Oscillator is ac coupled by C93 to the Frequency Multiplier Assembly shown on Service Sheet 3. The output is also ac coupled by capacitor C77 to common base Time Base Buffer Q12. The output of Q12 clocks the Divide-by-5 circuit U32A. Note that the set and reset inputs are all tied low. The output, 10 MHz at pin 4, is taken from bit 2. This provides two outputs for every ten clock pulse inputs.

The output of U32A clocks the Divide-by-ten circuit U29B. This divider is made up of a divide-by-2 and a divide-by-5 circuit. Like U32, the set and reset inputs are tied to ground. The outputs are 5 MHz at pin 15 and 1 MHz at pin 4.

One of the three divided output frequencies, 10, 5, or 1 MHz may be selected to phase lock the reference oscillator to an internal (Option 001) or external time base. The resistor jumper is shipped in the 10 MHz position and must be moved to the 5 or 1 MHz position depending on the frequency of the external time base. The Time Base Output follows the frequency selected by the jumper.

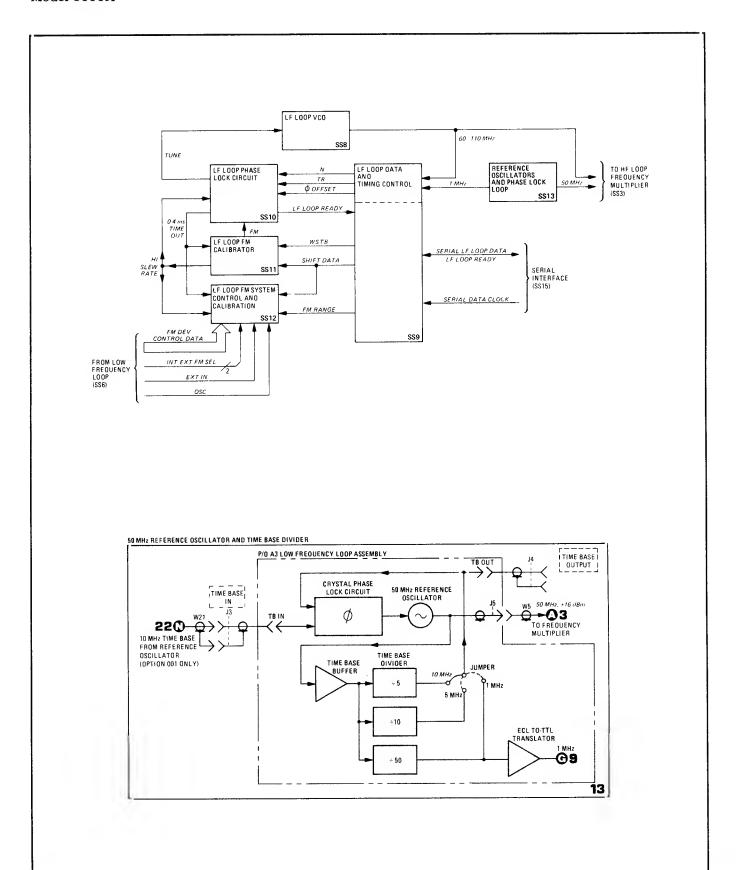
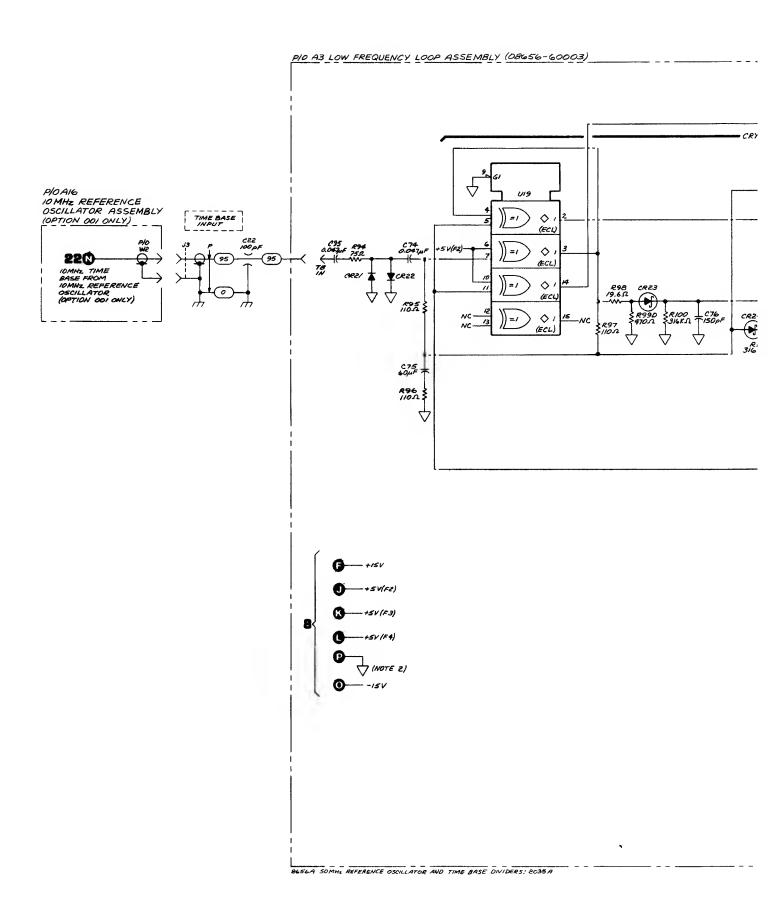
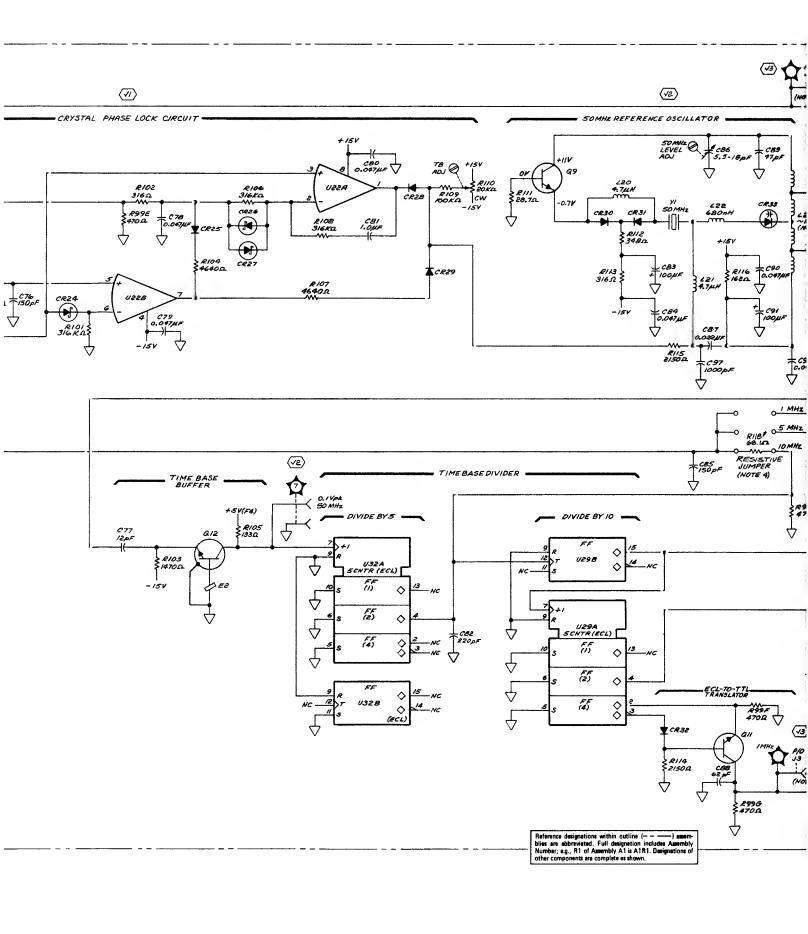


Figure 8-81. Reference Oscillator and Phase Lock Loop Block Diagrams





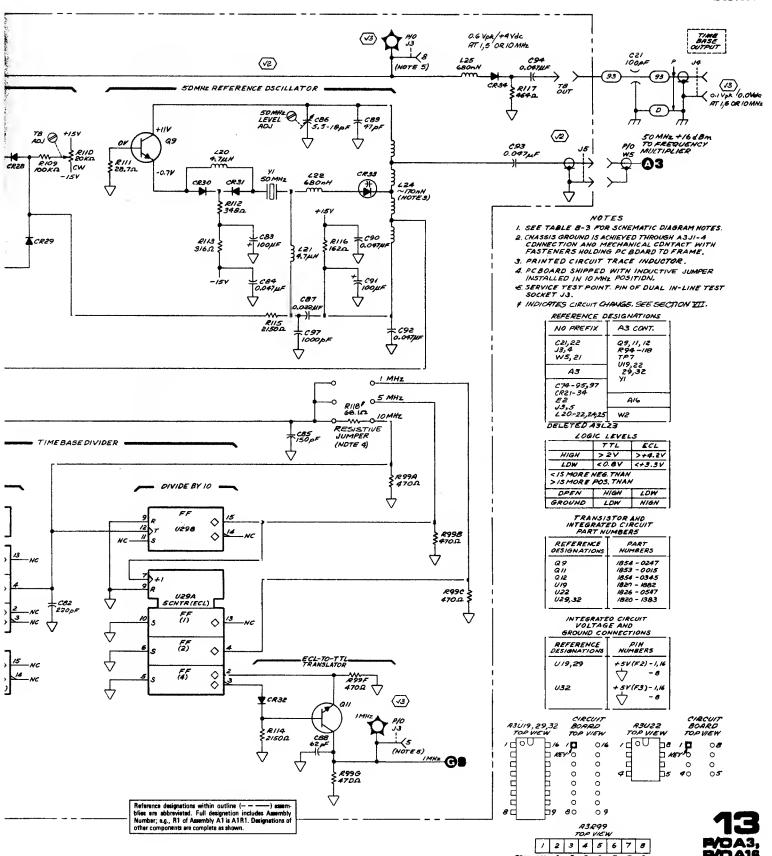


Figure 8-82. Reference Oscillators and Phase Lock Loop Schematic Diagram

Service Model 8656A

SERVICE SHEET 14 (Cont'd)

(IRQ). U31B is enabled at pin 4 through the opencollector driver U21B as long as rocker switch S1D is set for normal (NRM) operation.

Sequence Interrupt. A sequence interrupt (SQI) occurs when an active low switch closure is applied through the rear panel connector J5 and feedthrough capacitor A14C8 to connector A11J5 pin 3. This interrupt is handled in much the same manner as the keyboard interrupt. Normally with no interrupt present, U25B pin 4 will be pulled high through resistor R5. A 33 ms delay is produced by the RC network of R3 and C4 to debounce the leading edge of SQI. When a sequence interrupt occurs, it is gated through U25B pin 4 to direct-set flip-flop U29A causing the output at pin 6 to go low. This flip-flop latches the occurrence of the sequence interrupt. The latched sequence interrupt is gated through U25C and the enabled, 3state buffer U31B to generate an interrupt request (IRQ). U31B is enabled at pin 4 through the opencollector driver U21B as long as rocker switch S1D is set for normal (NRM) operation.

When the switch closure is removed, U25B pin 4 will be pulled high as soon as capacitor C4 charges. The delay produced by the RC network of R5 and C4 debounces the trailing edge of SQI. Once the sequence interrupt is processed, the Microprocessor, will issue and decode hexidecimal address 01FB to clock U29A clear. Clearing U29A clears the sequence interrupt.

The Non-Maskable Interrupt signal (NMI) input to the Microprocessor (pin 6) is normally pulled high through resistor R10. During signature analysis troubleshooting, this edge-triggered line is momentarily grounded to abort normal program execution and to direct program execution to the non-maskable interrupt subroutine.

In addition to buffering the three maskable interrupts, the Status (Service Request) Register U10 also buffers five status lines which monitor various instrument conditions. These conditions include the setting of the front panel RESET/ST-BY/ON switch (refer to Service Sheet 18), the state of the LF Loop Ready (LFR) line (refer to Service Sheet 10) the state of the HI and LO lines from the Over and Under Modulation Comparators (refer to Service Sheet 6), and the state of the HP-IB Interrupt Request (IBI) line (refer to Service Sheet 17). During normal program execution, the Microprocessor issues and decodes hexidecimal address

01FC to strobe the contents of U10 onto the data bus. If one of these five conditions is active when the Microprocessor strobes U10, it will execute the necessary instructions to service that condition.

+5V Supply Filtering

Capacitors C1, C3, C6 through C9, C11 through C15, and C17 through C19 are used to filter the +5V supply to the Microprocessor/Memory/HP-IB-A11 circuitry.

TROUBLESHOOTING USING SIGNATURE ANALYSIS

Troubleshooting is done on the circuits of Service Sheet 14 when a defect seems to be related to the Microprocessor. The only troubleshooting information provided is signature analysis. If nothing definite is discovered in performing these checks, refer to Service Sheet 16 (ROM and RAM test) or consider the other possiblities listed on Service Sheet BD4.

Test Equipment

Signature AnalyzerHP 5004A

Test 1. Address Check

Purpose. Verify ability of the Microprocessor to run through entire address range.

Setup. Connect the signature analyzer as follows:

- 1) GND to 'GND' A11TP2
- 2) CLK to 'E' A11TP11
- 3) START to 'ADR 15' A11TP4
- 4) STOP to 'ADR 15' A11TP4

Set the signature analyzer's controls as follows:

- 1) START-IN
- 2) STOP-OUT
- 3) CLK-IN

Set up the Signal Generator as follows:

- 1) The TEST/NRM switch P/O A11S1 to TEST.
- 2) The ROM/NRM switch P/O A11S1 to ROM.

Probe. Connect the probe to the node indicated in Table 1. Verify that each signature is correct and stable.

After the signatures are taken, reset the TEST/NRM switch to NRM and the ROM/NRM switch to NRM position.

Microprocessor will finish executing its current instruction before program execution is directed to the respective interrupt subroutine.

Maskable interrupts occur whenever a key on the keyboard is pressed, a reverse power condition is detected, or an active low switch closure is applied through the rear panel sequence connector J5. Whenever one of these conditions is detected and latched the Interrupt Request signal input to the Microprocessor (IRQ at pin 4) will be forced active (low). The Microprocessor will then issue and decode hexidecimal address 01FC so that it can examine the contents of the Status (Service Request) Register U10 via the data bus to determine which one of the three maskable interrupts has occurred. U10 is hard-wired (pin 11 tied high) to function as a 3-state buffer. During program execution of the maskable interrupt subroutine, the Microprocessor first checks for a reverse power interrupt (D7 active low), then a sequence interrupt (D1 and D2 active low), and finally a keyboard interrupt (D2 active low). The methods used to detect and latch the three maskable interrupts are discussed in the following paragraphs.

Keyboard Interrupt. Whenever one of the keys on the Keyboard Assembly - A1 is pressed, a keyboard interrupt (KIN) is detected by the circuitry on the Display Assembly - A2 and issued to the Microprocessor/Memory/HP-IB Assembly - A11 (refer to Service Sheet 18). This active low interrupt is applied to connector J5 at pin 14. It is gated through U25D and U25B to direct-set flip-flop U29A causing the output at pin 6 to go low. This Flip-Flop debounces the leading edge of KIN and latches the occurrence of the keyboard interrupt. The latched keyboard interrupt is gated through U25C and the enabled, 3-state buffer U31B to generate an interrupt request (IRQ). U31B is enabled at pin 4 through the open-collector driver U21A as long as rocker switch S1D is set for normal (NRM) operation.

When the key is released, KIN will be high and U25D pin 12 will be pulled high by resistor R1. After an approximate 33 ms delay produced by the RC network of R2 and C2, capacitor C2 will charge to pull U25D pin 13 high. This delay debounces the trailing edge of KIN. Once the keyboard interrupt is processed, the Microprocessor will issue and decode hexidecimal address 01FB to clock U29A clear. Clearing U29A clears the keyboard interrupt.

Reverse Power Interrupt. A reverse power interrupt (RPI) occurs when a reverse power condition is detected and latched by the reverse power sense circuitry on the Output Assembly - A6 (refer to Service Sheet 7). This active low interrupt is applied through the LC filter of L7 and C7 on the RFI Assembly - A7 and the feedthrough capacitor C16 to connector A11J5 pin 10. Normally with no interrupt present, U25C pin 10 is pulled high through resistor R8. When a reverse power interrupt occurs, it is gated through U25C and the enabled tri-state buffer U31B to generate an interrupt request

tion, the two enable inputs of U18 (pins 1 and 19) will be pulled high to disable its outputs. During ROM testing, S1D is set to ROM to enable the outputs of U18 which places the hard-wired NOP instructions on the data bus. U14 is disabled during this time because its enable input (pin 19) is pulled high through resistor R9D and the input to U21A is pulled low. Disabling U14 inhibits the NOP instruction from being transferred to any circuitry but the Microprocessor.

Restart Circuitry

Three methods are employed to reset or halt the Microprocessor. They occur:

- 1. During power-up initialization.
- 2. During manual operation via the front panel RESET/STBY/ON switch A1S49.
- 3. During service via rocker switch S1A.

During normal operation, rocker switch S1A is set to RUN. With S1A in this position, the RC network of R4 and C5 will begin to charge as soon as Mains power is applied and the +5V supply comes up. Zener diode VR1 will begin to conduct as soon as the charge across C5 reaches +4.22V. When VR1 conducts, transistor Q1 will be biased on to pull the input to the monostable U28 (pin 1) low. Resistors R6 and R7 set the bias conditions for Q1. With U28 pin 1 low, the output at pin 6 will go low for 30 ms to reset the Microprocessor. Capacitor C10 is used to set the pulse timing for U28. When the Microprocessor is reset, it will enter its power-up subroutine to initialize the instrument. The Schottky diode CR1 across R4 causes the RC network to quickly discharge in the event of a power supply transient. Once the power supply has recovered, another reset will be issued to initialize the instrument. Similarly, if the +5V supply voltage drops below +4.22V, Q1 will be biased off to halt the Microprocessor through the open-collector inverter U21E.

The Microprocessor can also be manually halted and reset by the front panel RESET/STBY/ON switch A1S49 (refer to Service Sheet 18). When A1S49 is momentarily set to RESET, the base of Q1 will be forced low. This will bias Q1 off to halt the Microprocessor through U21E. When A1S49 is released, Q1 is again biased on to initiate another 30 ms Microprocessor restart operation.

In much the same manner, rocker switch S1A can be manually set to cause the Microprocessor to halt. When S1A is set to the HLT/RST position, Q1 will be biased off to halt the Microprocessor through U21E. When S1A is set to RUN, Q1 will be biased on to initiate another 30 ms Microprocessor reset operation.

Interrupt Processing

As previously mentioned, there are two methods employed to interrupt normal program execution, namely maskable, and non-maskable interrupts. When either type of interrupt is detected, the

is used for the signature analyzer's signature analysis subroutine. For additional information on how this line is controlled, refer to the discussion on Interrupt Processing.

Maskable Interrupt Request. The Maskable Interrupt Request signal input to the Microprocessor (IRQ at pin 4) is the other signal used to interrupt program execution. When IRQ is active (low) and the interrupt mask bit of the internal condition code register is not set, the Microprocessor will finish executing its current instruction. Then its internal program counter will be loaded with the contents of hexidecimal memory locations FFF8 and FFF9. These contents direct program execution to the maskable interrupt subroutine. For additional information on how this line is controlled, refer to the discussion on Interrupt Processing.

Data Bus Buffering

Data is transferred positive-true to and from the Microprocessor on the bidirectional, 8-bit data bus. Information on the data bus is buffered as it leaves or enters the Microprocessor. The 3-state, bidirectional Data Bus Buffers U14 provides this asynchronous, two-way communication between the data bus and the Microprocessor. During normal operation, rocker switch S1D is set to NRM. With S1D in this position, the enable input of U14 (pin 19) will be pulled low through the open-collector inverter U21A. The enable input of the 3-state buffer U31B is also pulled low through U21A (refer to the discussion on Interrupt Processing).

The direction of data transfer through U14 is controlled by the state of the buffered read/write line from the Microprocessor. When the direction input of U14 (pin 1) is high, information will be transferred from the data bus to the Microprocessor (a "read" operation). When this input is low, information will be transferred from the Microprocessor to the data bus (a "write" operation).

Sixteen bits of serial keyboard data are transferred from the storage registers on the Display Assembly - A2 to the Microprocessor via bit 0 of the data bus (refer to Service Sheet 18). During program execution of the keyboard read subroutine, the Keyboard Serial Data Bus Buffer U31D will be enabled to couple the serial keyboard data to the bit 0 input of U14. Buffer enabling occurs when the Microprocessor issues and decodes hexidecimal address 01FA (refer to Service Sheet 15).

One of the service features of this instrument is the hard-wired NOP (no operation) instruction. This 8-bit instruction is used to step the Microprocessor through its ROM addresses during ROM testing or troubleshooting. When the Microprocessor receives a NOP instruction, its program counter will be advanced once for each clock cycle without affecting any other operations. The eight inputs to the 3-state buffer U18 are hard-wired in a configuration to provide the NOP instruction to the Microprocessor, that is, bit D0 is tied high and bits D1 through D7 are tied low (00000001). During normal operation, rocker switch S1D is set to NRM. With S1D in this posi-

System Clock. An external 4 MHz crystal Y1 is directly connected to the Microprocessor (pins 38 and 39). An internal divide-by-4 circuit is used to develop the 1 MHz system clock E (pin 37). Capacitors C16 and C22 are used to keep the clock frequency stable. This clock signal is buffered by one of the Microprocessor Control Line Buffers U16 to enable the decoding of those addresses that produce the level and modulation, attenuator, and serial I/O control strobes (refer to Service Sheet 15). In addition, this buffered clock signal enables the decoding and selection of ROM and RAM memory locations (refer to Service Sheet 16) and clocks the HP-IB General Purpose Interface Adapter U19 (refer to Service Sheet 17).

Memory Ready. The Memory Ready signal input to the Microprocessor (MR at pin 3) is tied high to enable the 1 MHz system clock rate.

RAM Enable. The RAM Enable signal input to the Microprocessor (RE at pin 36) is directly tied to the +5V supply to power the 128 bytes of internal RAM. These bytes are addressed at hexidecimal memory locations 0000 through 007F.

Standby. The Standby signal input to the Microprocessor (STBY at pin 35) is directly tied to the +5V supply to separately power the first 32 bytes of internal RAM. These bytes are addressed at hexidecimal memory locations 0000 through 001F.

Halt. The Halt signal input to the Microprocessor (HALT at pin 2) is used to halt program execution. When HALT is active (low), the Microprocessor will finish executing its current instruction, the address bus will remain fixed at the address of the next instruction, and all 3-state lines will go to their high impedance state (including the data bus). Program execution will continue when HALT goes inactive (high). For additional information on how this line is controlled, refer to the discussion on Restart Circuitry.

Reset. The Reset signal input to the Microprocessor (RESET at pin 40) is used to start the Microprocessor from a power-down condition. This condition exists during initial start-up of the instrument, after a power failure has occurred and when the front panel switch has been momentarily set to RESET. When RESET is active (low), the Microprocessor becomes inactive. When RESET is inactive (high), the internal program counter will be loaded with the contents of hexidecimal memory locations FFFE and FFFF. These contents direct program execution to the power-up subroutine. For additional information on how this line is controlled, refer to the discussion on Restart Circuitry.

Non-Maskable Interrupt. The Non-Maskable Interrupt signal input to the Microprocessor (NMI at pin 6) is one of two signals used to interrupt program execution. When NMI is active (low), the Microprocessor will finish executing its current instruction, save its current status, and then its internal program counter will be loaded with the contents of hexidecimal memory locations FFFC and FFFD. These contents direct program execution to the non-maskable interrupt subroutine. For this Signal Generator, the non-maskable interrupt

SERVICE SHEET 14 P/O A11 MICROPROCESSOR/MEMORY/HP-IB ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD4
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

Microprocessor

Instrument functions are controlled by the Microprocessor U13 as it executes the program instructions stored in ROM (read only memory). The function of the Microprocessor's data bus, address bus, and each of its input/output lines is discussed in the following paragraphs.

Data Bus. The data bus (D0 through D7) consists of eight bidirectional lines which are used to transfer an 8-bit positive-true data byte to and from the Microprocessor (pins 26 through 33). The 3-state lines can be high, low, or at the high impedance state depending on the individual data bit or its buffering conditions. The Microprocessor reads data from memory, the keyboard, its HP-IB interface, and so forth under program control via the data bus. Data is written onto the data bus for the displays, RF and modulation circuitry, and so forth. Information on the data bus is buffered as it enters or leaves the Microprocessor. For additional information, refer to the discussion on Data Bus Buffering.

Read/Write Control. The Read/Write signal from the Microprocessor (R/W at pin 34) is used to control the direction of data transfer on the data bus. When the Microprocessor is halted or available to accept data, this signal will be high indicating that the Microprocessor is in the "read" state. When data is being transferred out onto the data bus, this signal will be low indicating that the Microprocessor is in the "write" state. This signal is buffered by one of the Microprocessor Control Line Buffers U16 to control the direction of data transfer through the Data Bus Buffers U14, to or from RAM (Read/Write) memory (refer to Service Sheet 16), and to or from the HP-IB Interface Buffers U15 (refer to Service Sheet 17).

Address Bus. The address bus (A0 through A15) consists of sixteen unidirectional lines which are used to transfer a 16-bit positive-true address from the Microprocessor (pins 9 through 20 and 22 through 25). Information on the address bus is buffered as it leaves the Microprocessor. These buffered address bits are decoded to produce level and modulation, attenuator, and serial I/O control strobes (refer to Service Sheet 15). In addition, these buffered address bits are decoded to select one of 256 external RAM memory locations, one of 12,288 ROM memory locations (refer to Service Sheet 16), or one of the HP-IB General Purpose Interface Adapter U19 ports (refer to Service Sheet 17).

Valid Memory Address. The Valid Memory Address signal from the Microprocessor (VMA at pin 5) is used to indicate that a valid address is on the address bus. When VMA is active (high), the information on the address bus will be valid. This signal is buffered by one of the Microprocessor Control Line Buffers U16 to enable decoding of those addresses that produce the level and modulation, attenuator, and serial I/O control strobes (refer to Service Sheet 15). In addition, this buffered signal enables the decoding and selection of ROM and RAM memory locations (refer to Service Sheet 16).

SERVICE SHEET 14 (Cont'd)

Table 1. Microprocessor Address Signatures

Node	Correct Signature	Comments
+5V U13 #35	0001	Address
A0 U13 #9	5555	Lines
A1 U13 #10	CCCC	
A2 U13 #11	7F7F	
A3 U13 #12	5H21	
A4 U13 #13	0AFA	
A5 U13 #14	UPFH	
A6 U13 #15	52 F 8	
A7 U13 #16	HC89	
A8 U13 #17	2H70	
A9 U13 #18	HPPO	
A10 U13 #19	1293	
A11 U13 #20	HAP7	
A12 U13 #22	3C96	
A13 U13 #23	3827	
A14 U13 #24	755U	
*A15 U13 #25	0000	
+5V	0001	Buffered
A0 J4 #2	5555	Address
A 1 J 4 #3	CCCC	Lines
A2 J4 #4	7F7F	
A 3 J 4 #5	5H21	
A4 J4 #6	0AFA	
A5 J4 #7	UPFH	
A6 J4 #8	52F8	
A7 J4 #9	HC89	
A8 J4 #10	2H70	
A9 J4 #11	HPP0	
A10 J4 #12	1293	
A 11 J 4 #13	HAP7	
A12 J4 #14	3C96	
A13 J4 #15	3827	
A14 J4 #16	755U	
*A15 J2 #5	0000	

^{*}Even though the signature equals zero, the probe tip should blink.

Test 2. Data Bus Verification

Purpose. To test the Microprocessor and circuit board digital logic.

Setup. Connect the signature analyzer as follows:

1) GND as close to circuitry being probed as possible (bad grounding can cause unstable signatures).

- 2) CLK to 'E' A11TP11
- 3) START to 'SA1' A11TP5
- 4) STOP to 'SA2' A11TP6

Set the signature analyzer controls as follows:

- 1) START-OUT
- 2) STOP-IN
- 3) CLK-IN

Set up the Signal Generator as follows:

- 1) Disconnect the attenuator cable W17 from the power supply board to the attenuator.
- 2) Set the LOGIC/RAM switch P/O A11S1 to LOGIC.

NOTE

If the Signal Generator's address switch has been set to other than '07', the signatures taken in this test will be incorrect. In this case, reset the address switches to A1=1, A2=1, A3=1, A4=0 and A5=0. Then set the front panel RESET-STBY-ON switch to RESET and back to ON. Refer to Service Sheet 17 for location of the address switches.

Initialize. Briefly short A11TP3 'NMI' to ground.

NOTE

With careless probing it is possible to get the Microprocessor into a program sequence other than that portion intended for signature analysis. If the +5V signature is incorrect, this has probably happened. Restart the test by setting the 'RST/RUN' switch to 'RST' and then 'RUN'. Briefly touch the 'NMI' test point to ground.

Probe. Connect the probe to the node indicated in Table 2. Verify that each signature is correct and stable.

NOTE

If the signatures in the first portion of the following table are incorrect, the signatures for the second portion will also be incorrect.

SERVICE SHEET 14 (Cont'd)

Table 2. Microprocessor Data Bus Signatures

Node	Correct Signature	Comments
+5V	Н6Н5	
*D0 U13 #33	75HI	Data Bus
D1 U13 #32	2H55	Signatures
D2 U13 #31	197C	are
D3 U13 #30	0926	subject to
D4 U13 #29	4F62	setting of
D5 U13 #28	52U5	HP-IB
D6 U13 #27	088H	address
D7 U13 #26	3001	switches.
+5V	H6H5	Buffered
*D0 J2 #16	4U4A	Data Bus
D1 J2 #15	A132	Signatures
D2 J2 #14	1 A 47	are
D3 J 2 #13	4989	subject to
D4 J2 #12	5586	setting of
D5 J2 #11	307C	HP-IB
D6 J2 #10	0F11	address
D7 J2 #9	8130	switches.

^{*}This signature may vary from unit-to-unit due to differences in one-shot timing of A2U28B. If SA6 A11TP10 is connected to SA7 A2TP15, the signature should read the same as above.

Reset the LOGIC/RAM switch to the RAM position. Reconnect attenuator cable W17.

Model 8656A

NOTE

If the HP-IB address switch was changed, reset the address switch (Service Sheet 17) to the original address. Set the front panel RESET-STBY-ON switch to RESET and back to ON.

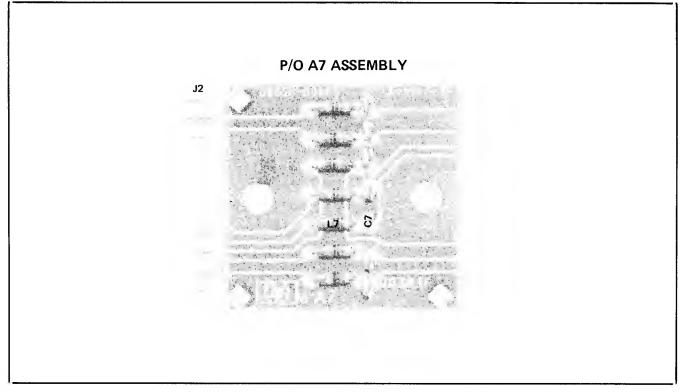


Figure 8-83. A7 Assembly Interrupt Input Component Locations

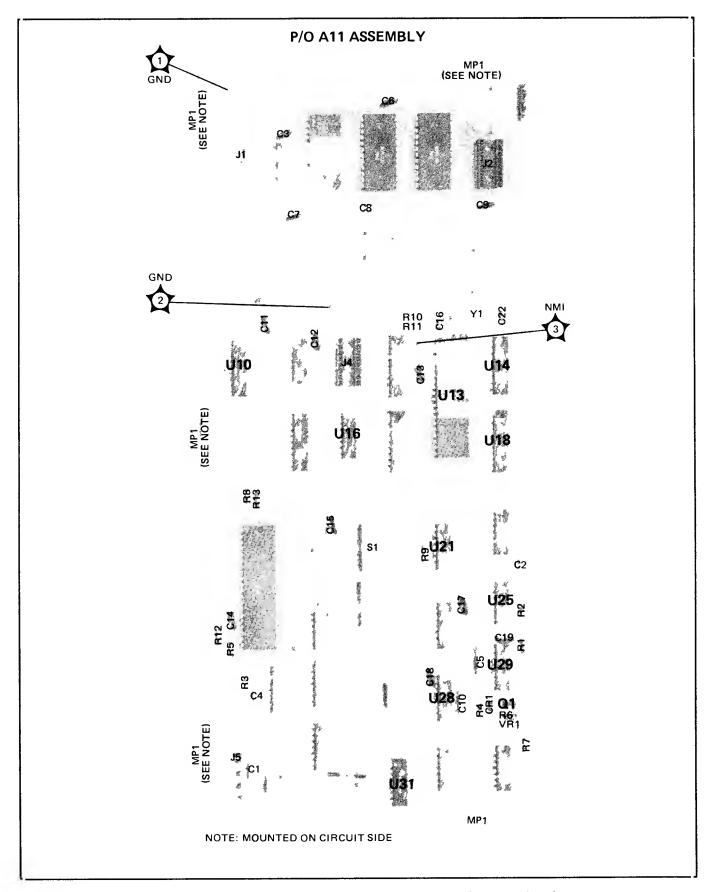


Figure 8-84. Microprocessor, Interrupt Processing and Restart Component Locations

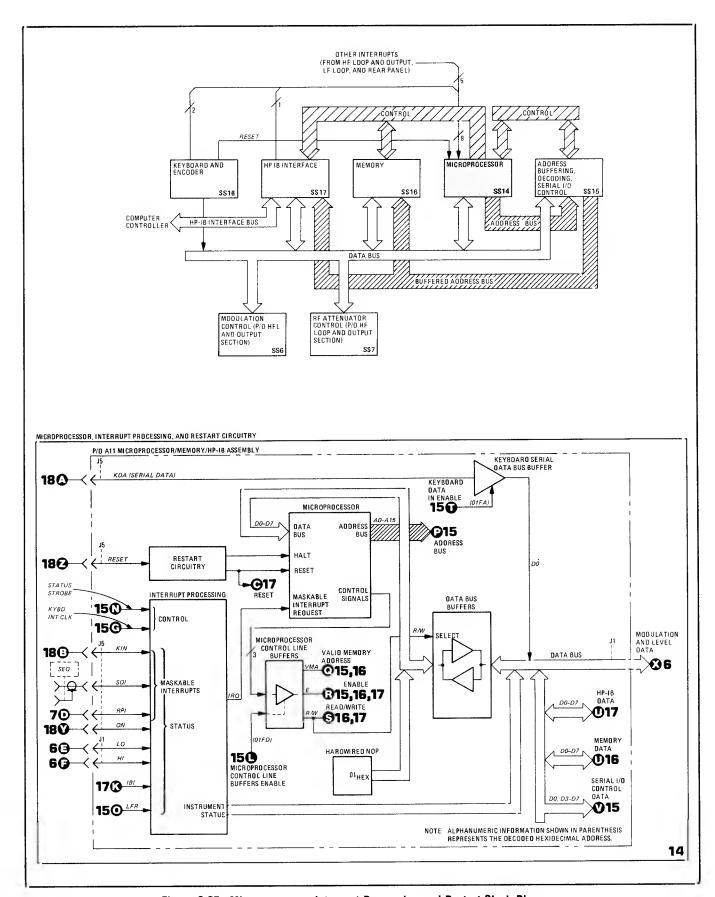
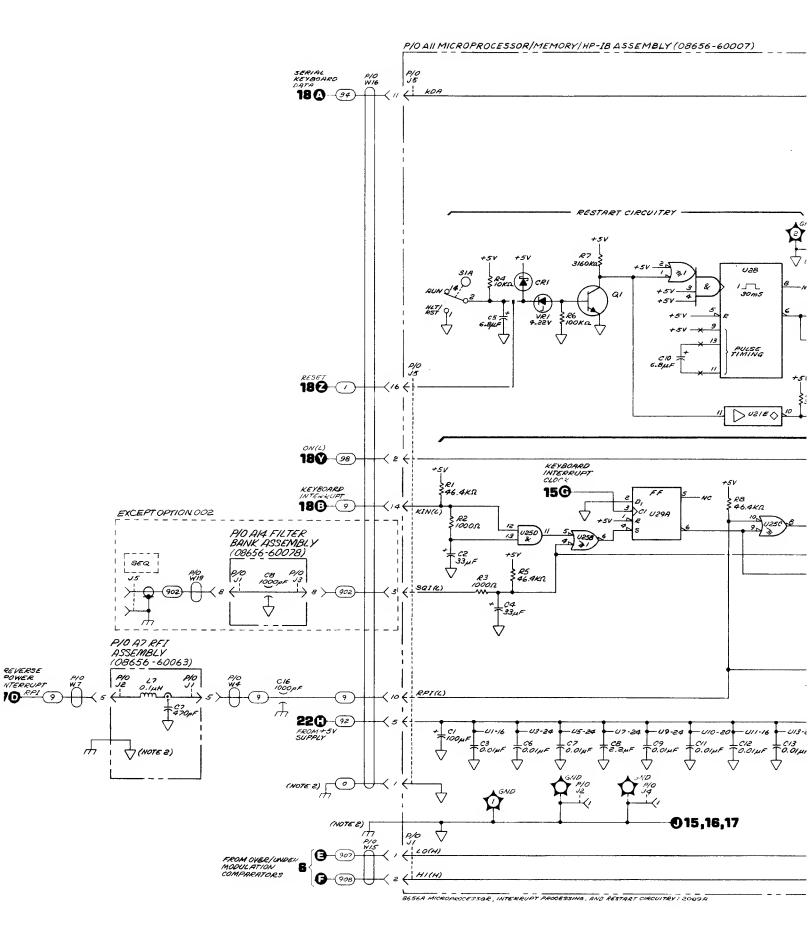
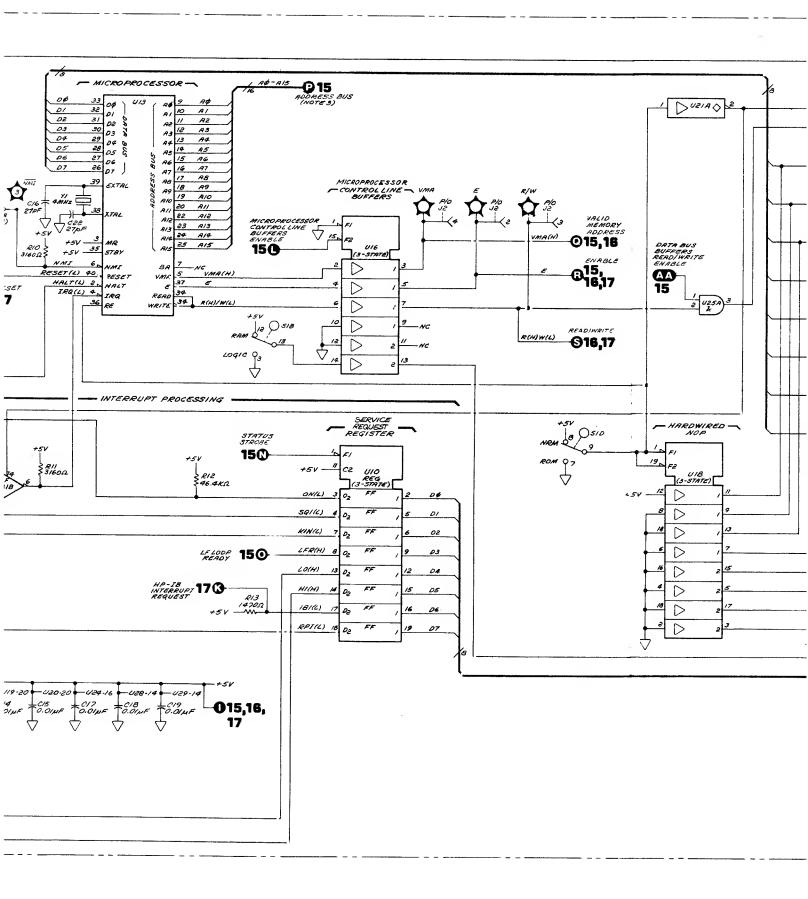


Figure 8-85. Microprocessor, Interrupt Processing and Restart Block Diagrams





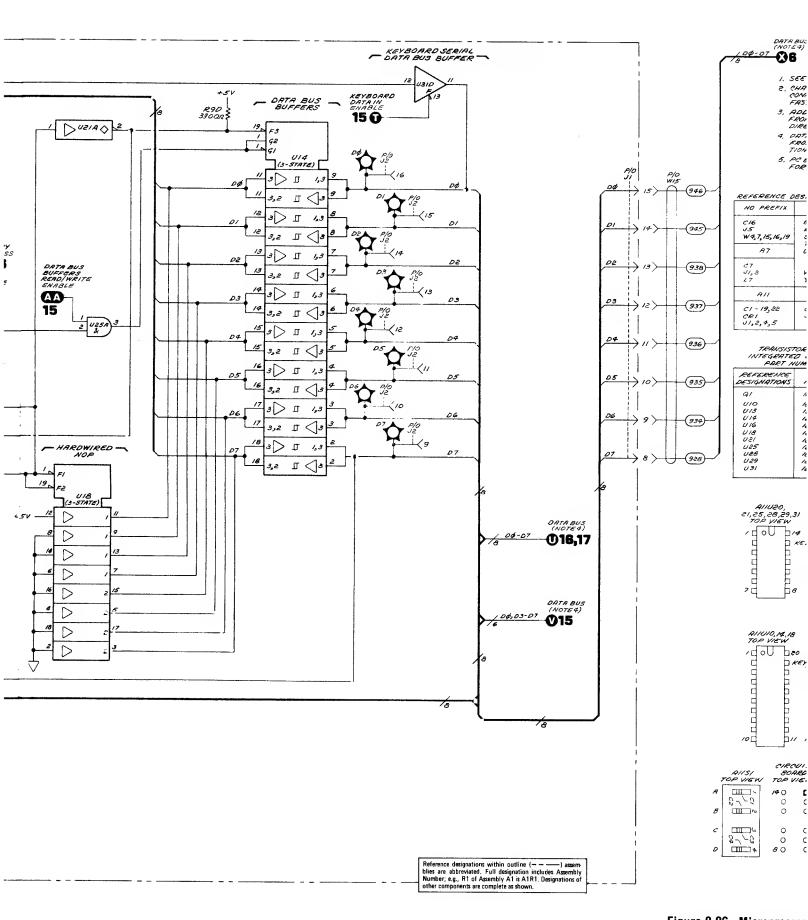


Figure 8-86. Microprocess

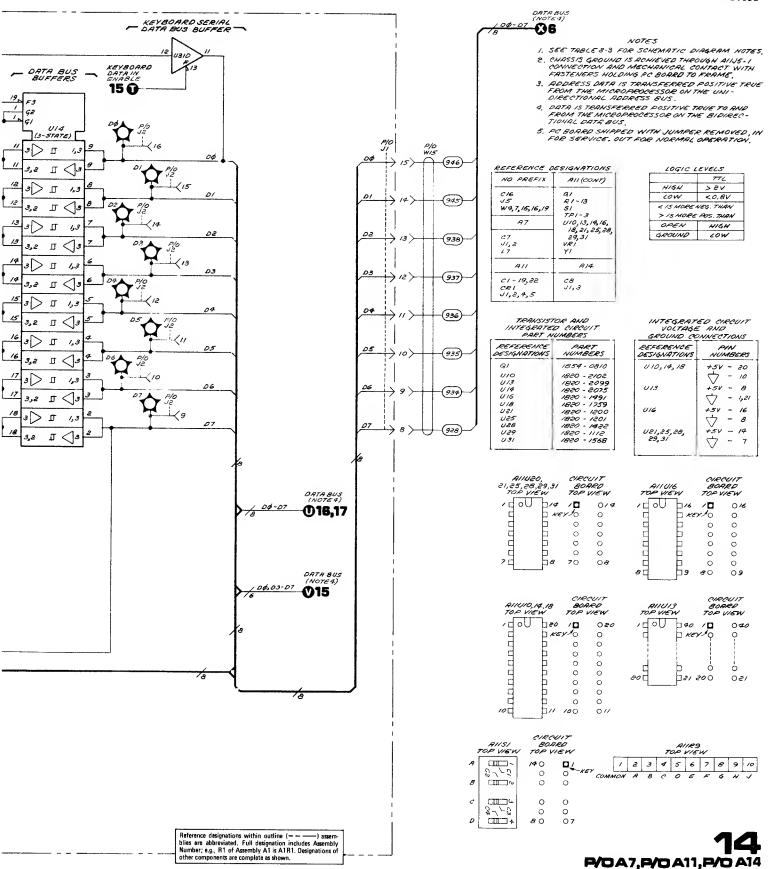


Figure 8-86. Microprocessor, Interrupt Processing and Restart Schematic Diagram

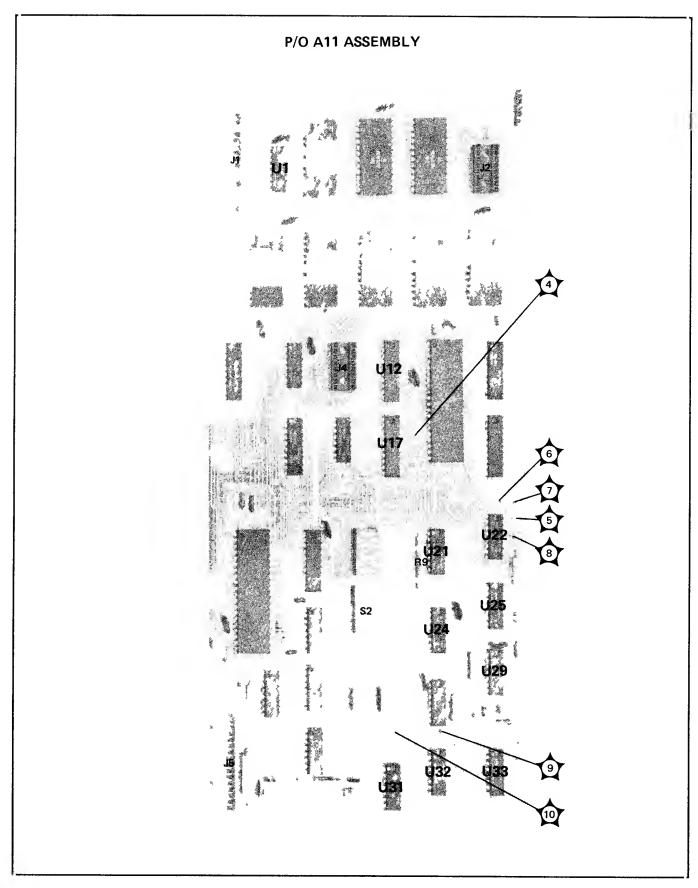


Figure 8-87. Address Buffering and Decoding, Serial I/D and Control Component Locations

Table 1. Interface Signatures

Node	Correct Signature	Comments
+5V	H6H5	
U22 #7	UA17	
*U22 #12	8690	SA CLK(RF)
U24 #7	330C	SER CLK EN
U24 #9	6H08	SER CLK EN
U29 #9	42H7	SER LATCH
U33 #11	6468	
U33 #12	6F77	
+5V	H6H5	
U33 #14	C45F	
U33 #15	2841	
U32 #2	5401	
U32 #5	UC8P	
U32 #7	9PPA	
U32 #10	75UP	
*U32 #15	7064	SA Strobe/
*U31 #8	FP00	Stop
*U31 #9	FP00	
+5V	H6H5	
U1 #15	58AP	U5 strobe
U1 #14	57F4	U9 strobe
U1 #13	97CC	U13 strobe
U1 #12	A5FP	U16 strobe
U1 #11	P1H1	U19 strobe

^{*}This node is only used to control the signature analyzer during the display and RF interface test.

Reset the LOG/RAM switch to the RAM position. Reconnect attenuator cable W17.

NOTE

If the HP-IB address switch was changed, reset the address switch (service sheet 17) to the original address. Set the front panel RESET-STBY-ON switch to RESET and back to ON.

If the signatures are incorrect, the circuits of Service Sheets 14, 16, 17 or 18 (the Microprocessor, ROM and RAM, the Keyboard or the HP-IB Interface) may be defective. As a last resort, return to Service Sheet BD4 or possibly Service Sheet BD1 and consider the other possiblities shown.

Test Equipment

Purpose. To verify transmission of encoded addresses and data from the Microprocessor through the decoders, strobe generators and registers.

Setup. Connect the signature analyzer as follows:

- 1) GND as close to the circuitry being probed as possible. Bad grounding can cause unstable signatures.
- 2) CLK to 'E' A11TP11
- 3) START to 'SA1' A11TP5
- 4) STOP to 'SA2' A11TP6

Set the signature analyzer's controls as follows:

- 1) START-OUT
- 2) STOP-IN
- 3) CLK-IN

Set up the Signal Generator as follows:

- 1) Disconnect the attenuator cable W17 from the power supply board to the attenuator.
- 2) Set the LOGIC/RAM switch P/O A11S1 to the LOGIC position.

NOTE

If the Signal Generator's address switch has been set to other than '07', the signatures taken in this test will be incorrect. In this case, reset the address switches to A1=1, A2=1, A3=1, A4=0 and A5=0. Then set the front panel RESET-STBY-ON switch to RESET and back to ON. Refer to Service Sheet 17 for location of the address switches.

Initialize. Briefly short A11TP3 'NMI' to ground.

NOTE

With careless probing, it is possible to get the Microprocessor into a program sequence other than that intended for signature analysis. If the +5V signature is incorrect, this has probably happened. Restart the test by setting the 'RST/RUN' switch to 'RST' and then 'RUN'. Briefly touch the 'NMI' test point to ground.

Probe. Connect the probe as indicated in Table 1. Verify that the signature is correct and stable as shown.

SERVICE SHEET 15 P/O A11 MICROPROCESSOR/MEMORY/HP-IB ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD4

Table 4-1. Abbreviated Performance Tests

Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

General

Control of the major functions of the Signal Generator are contained on the circuits of Service Sheet 15. Direct control is exerted on almost all of the analog functions of the instrument such as frequency, amplitude and modulation. Addresses from the Microprocessor are decoded and the accompanying data (either series or parallel) is manipulated to set various output modes, levels and frequencies. In addition, many purely digital functions such as control of keyboard, display and data bus are decoded here. The Address Bus Buffers U12 and U17 are always enabled during normal operation.

Address Decoders

U22 outputs the Data Bus Buffer Read/Write Enable signal, signature analyzer enable signals and enable signals for U1 and U24. A Valid Memory Address and a low on A14 are required to decode A7, A8 and A9.

U1 outputs strobes that control modulation and attenuation data. Series data contol strobes and Microprocessor related control signals are output by U24. Both U1 and U24 are enabled by the output from U22 and the enable E(H) clock. Address A3 determines which of U1 or U22 is active at a given time. Addresses A0, A1 and A2 are decoded to produce the individual control signals.

Serial I/O Control

The Serial I/O Control Clock/Strobe Enable Flip-Flop U29B provides an enable signal to the Serial I/O Control Clock/Strobe Generator U33. U33 controls the serial data flow from the keyboard, to the display and to the phase lock loops. Encoded data and strobes are received from the data bus by the Serial I/O Control Register U32. U32 passes the encoded information to the serial data lines and to U33.

TROUBLESHOOTING USING SIGNATURE ANALYSIS

Troubleshooting is done on the circuits of Service Sheet 15 when a defect seems to be related to the Display, Keyboard, or control of the other major sections of the instrument. Examples are the High Frequency Loop, the Output Section and the Low Frequency Loop. If the signatures shown in the tables are correct but the problem is related to another major section of this instrument, refer to:

- 1) Service Sheet BD2 for Output or High Frequency Loop problems
- 2) Service Sheet BD3 for Low Frequency Loop problems.

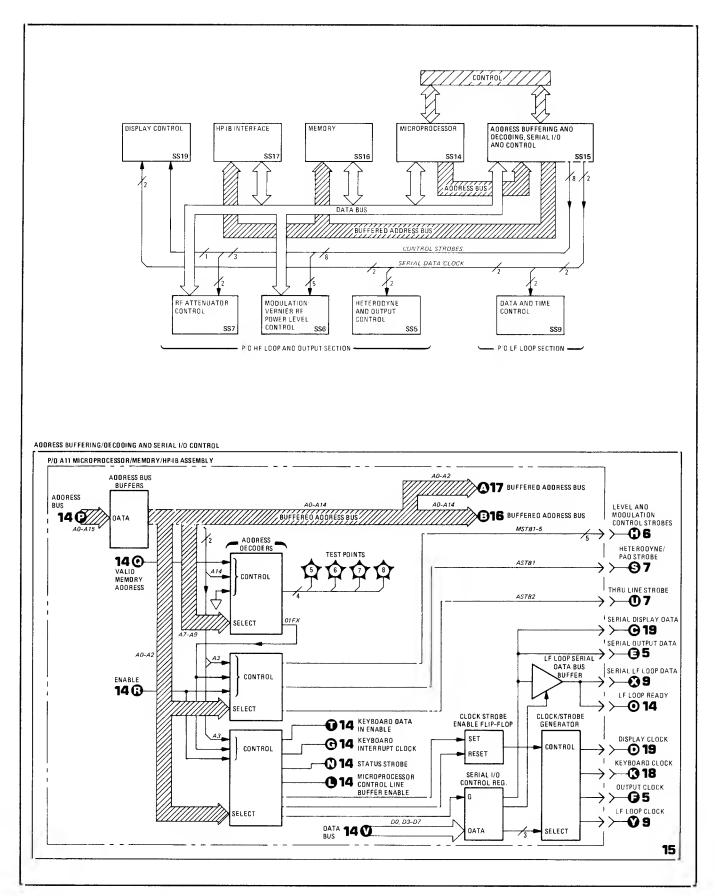
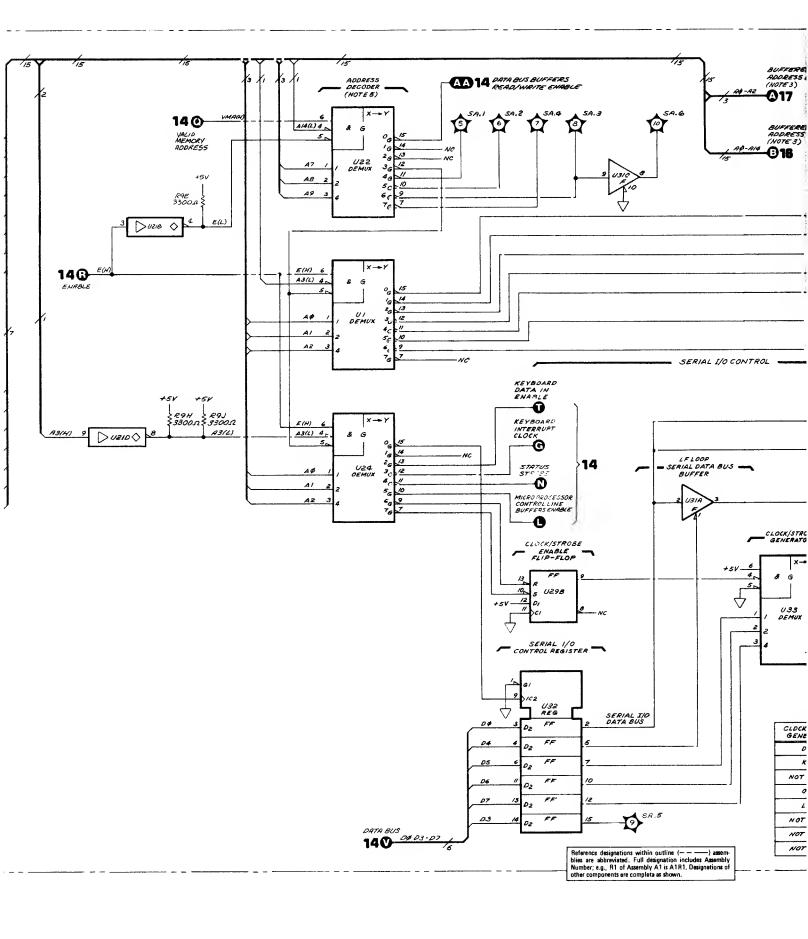


Figure 8-88. Address Buffering and Decoding, Serial I/O and Control Block Diagrams

140 V(NOTE 2)

8656A ADDRESS BUFFERING | DECODING AND SERIAL 1/0 CONTROL : 2022A



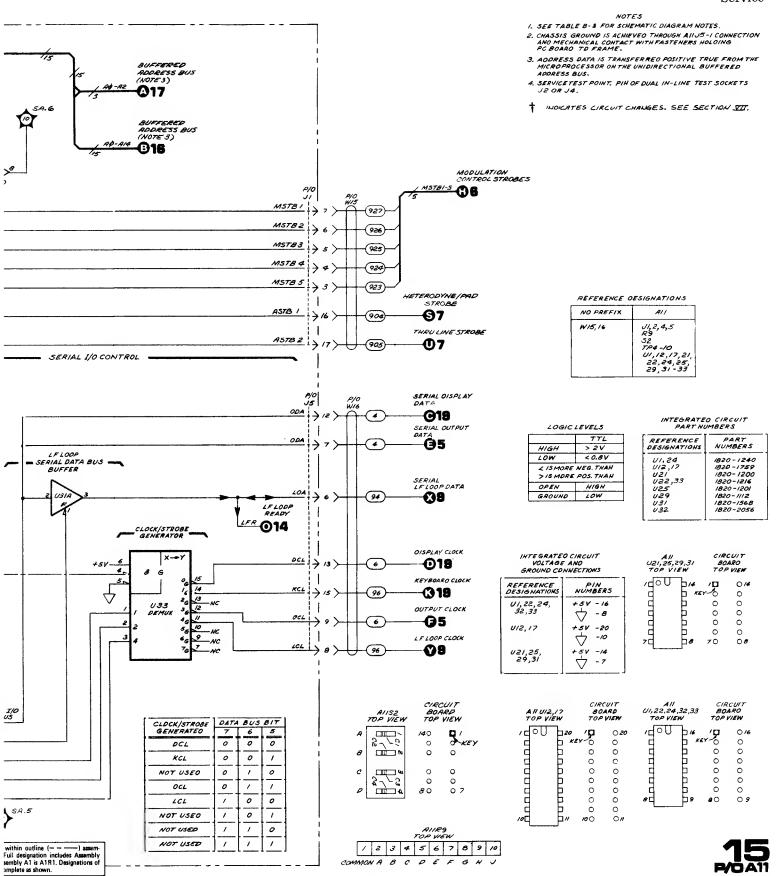


Figure 8-89. Address Buffering and Decoding. Serial I/O and Control Schematic Diagram

Service Model 8656A

SERVICE SHEET 16 (Cont'd)

Setup. Connect the signature analyzer as follows:

- 1) GND to 'GND' A11TP2
- 2) CLK to 'E' A11TP7
- 3) START to 'SA1' A11TP5
- 4) STOP to 'SA4' A11TP7

Set the signature analyzer's controls as follows:

- 1) START-OUT
- 2) STOP-IN
- 3) CLK-IN

Set up the Signal Generator as follows:

Disconnect the attenuator cable from the power supply to the attenuator.

Initialize. Briefly short the Microprocessor test point 'NMI' to ground.

NOTES

With careless probing it is possible to get the Microprocessor into a program sequence other than that portion intended for signature analysis. If the +5V signature is incorrect this has probably happened. Restart the test by setting the 'RST/RUN' switch to 'RST'; then back to 'RUN'. Briefly touch the 'NMI' test point to ground.

RAM 2 is only used for storing front panel settings. The Signal Generator should work even if RAM 2 is faulty. Only the store and recall related functions will not operate properly.

Probe. Connect the probe to data lines at J2. Verify that the data transfers as indicated by Table 5 are correct.

An incorrect signature may indicate:

- 1) improper setup
- 2) RAM program aborting
- 3) ROM program is incorrect (+5V signature is incorrect).
- 4) incorrect addressing to RAM
- 5) defective RAM.

NOTE

Go to Service Sheet 14 to test the addressing.

Table 5. RAM Data Transfer Signatures

Node	Correct Signature
+5V	C888
D0	3U02
D1	489H
D2	1560
D3	9 A 3 A
D4	58U6
D5	9038
D6	35C7
D7	98HF

- 1) If the ROM signatures are correct, then the program is correct.
- 2) If the +5V signature is correct, then the program is running.

Test 5. Microprocessor and Individual RAM Functional Check

Purpose. To test the data transfer of individual RAM.

Setup. Connect the signature analyzer as follows:

- 1) GND to 'GND' A11TP2
- 2) CLK to 'E' A11TP7
- 3) START to test point as indicated in the table
- 4) STOP to test point as indicated in the table.

Set the signature analyzer controls as follows:

- 1) START-OUT
- 2) STOP-IN
- 3) CLK-IN.

Set up the Signal Generator by disconnecting the attenuator cable W17 from the power supply board to the attenuator.

Initialize. Briefly short A11TP3 'NMI' to ground.

NOTE

With careless probing it is possible to get the Microprocessor into a program sequence other than that portion intended for signature analysis. If the +5V signature is incorrect, this has probably happened. Restart the test by setting the 'RST/RUN' switch to 'RST'; then 'RUN'. Briefly touch the 'NM1' test point to ground.

Table 4. Individual ROM Generated Data Bus Signatures

Node	Correct Signature	Comments
+5V D0 D1 D2 D3 D4 D5 D6 D7	826P HC6U F5FC FAU1 C149 8P66 P3P4 17F4 8FP1	ROM1 U2
+5V D0 D1 D2 D3 D4 D5 D6 D7	826P 665U 8C5H 2763 3CA7 38C1 9AC0 3487 84A2	ROM2 U9
+5V D0 D1 D2 D3 D4 D5 D6	826P PP18 AH74 93H6 A87F P428 5580 CHFC 08H9	ROM3 U8
+5V D0 D1 D2 D3 D4 D5 D6 D7	826P 1C4C 14U5 6389 7F04 F1A5 HAF5 1F62 C18U	ROM4 U7
+5V D0 D1 D2 D3 D4 D5 D6 D7	826P 46C1 8831 U30C 8UCU 4221 3AUP AA1P 2559	ROM5 U6
+5V D0 D1 D2 D3 D4 D5 D6 D7	826P HP67 FO46 323A 3U32 15FU 7FP8 9A4A 9F1A	ROM6 U5

The Data Bus Buffer should be in the high impedance state, that is, U14-pin 19 should be high.

If testing is complete, set the TEST/NRM switch to NRM and ROM/NRM to NRM.

Test 3. Microprocessor and Individual ROM Functional Checks

Purpose. Verify the functional operation of the Microprocessor and the data contents of the individual ROM.

Setup. Connect the signature analyzer as follows:

- 1) GND to 'GND' A11TP2
- 2) CLK to 'E' A11TP7
- 3) START to the individual ROM test points (refer to the schematic)
- 4) STOP to the individual ROM test points (refer to the schematic).

Set the signature analyzer's controls as follows:

- 1) START-IN
- 2) STOP-OUT
- 3) CLK-IN

Set up the Signal Generator as follows:

- 1) Disconnect the attenuator cable W17 from the power supply board to the attenuator.
- 2) Set the TEST/NRM switch P/O A11S1 to TEST.
- 3) Set the ROM/NRM switch P/O A11S1 to ROM.

NOTE

ROM signatures will change as firmware changes. Be sure the part number on ROM corresponds to part number in Table 2.

Probe. Connect the probe to the data bus of the ROM to check data contents. Use connector J2 (refer to Service Sheet 14). Verify that each signature as indicated in Table 4 is correct and stable.

After the signatures are taken, reset the TEST/NRM switch to NRM and the ROM/NRM switch to NRM. Reconnect the attenuator cable W17 if testing is complete.

Test 4. Microprocessor and RAM Functional Check

Purpose. To verify the ability to write and read to the three RAM. (RAM 3 is located in the Microprocessor U13; refer to Service Sheet 14.)

NOTE

An abbreviated RAM check is performed at power up or reset. Memory failute will result in all front panel LEDs staying lit until any key is pressed.

Set up the Signal Generator as follows:

- 1) Disconnect the attenuator cable from the power supply board to the attenuator.
- 2) Set the TEST/NRM switch P/O A11S1 to TEST.
- 3) Set the ROM/NRM switch P/O A11S1 to ROM.

NOTE

ROM signatures will change as firmware changes. Be sure the part number on each ROM corresponds to the part number in Table 2.

Table 2. ROM HP Part Number

ROM Number	HP Part Number
ROM 1	1818-1365
ROM 2	1818-1358
ROM 3	1818-1359
ROM 4	1818-1360
ROM 5	1818-1361
ROM 6	1818-1362

Probe. Connect the probe to the data bus of the ROM to check data contents. Use connector J2 (refer to Service Sheet 14). Verify that each signature is correct and stable as indicated in Table 3.

Table 3. ROM Generated Data Bus Signatures

Node	Correct Signature
+5V	1857
$\mathbf{D0}$	F5F2
D1	1758
D2	2719
D3	F177
D4	7 AA 2
D5	CA47
D6	U7U2
_ D7	5F72

An incorrect signature could be due to:

- 1) improper test setup
- 2) improper addressing to ROM
- 3) Bus fight on data bus
- 4) bad ROM
- 5) firmware has changed (refer to Table 2).

Recheck the test setup. The D0 to D7 should be set to 1000 0000. If incorrect, be sure the ROM/NRM switch P/O A11S1 is set to ROM (NOP).

Set the signature analyzer controls as follows:

- 1) START-IN
- 2) STOP-OUT
- 3) CLK-IN

Set up the Signal Generator as follows:

- 1) TEST/NRM switch P/O A11S1 to TEST.
- 2) ROM/NRM switch P/O A11S1 to ROM.

Probe. Connect the probe to the node indicated in Table 1. Verify that each signature is correct and stable.

Table 1. ROM Address Select Signatures

Node	Correct Signature	Comments
U21 #12	755P	A14
U11 #7	826U	Chip Sel
U11 #9	603C	_
U11 #10	54 F 5	i
U11 #11	A711	
U11 #12	AA6A	
U11 #13	A3UH	

Reset the TEST/NRM switch to NRM and ROM/NRM switch to NRM; reconnect attenuator cable W17 if testing is completed.

Test 2. Microprocessor and ROM Functional Check

Purpose. Verify the functional operation of the Microprocessor and the data contents of the ROM.

NOTE

The ROM checksum test is performed automatically during power up or at front panel RESET. Memory failure will result in all LEDs staying on until any key is hit.

Setup. Connect the signature analyzer as follows:

- 1) GND to 'GND' A11TP2
- 2) CLK to 'E' A11TP7
- 3) START to 'ROM1' A11TP13
- 4) STOP to 'ROM6' A11TP18

Set the signature analyzer's controls as follows:

- 1) START-IN
- 2) STOP-OUT
- 3) CLK-IN

SERVICE SHEET 16 P/O A11 MICROPROCESSOR/MEMORY/HP-IB ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD4

Table 4-1. Abbreviated Performance Tests

Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

General

The memory circuits, except for the Microprocessor's internal RAM (Read/Write Memory) are part of the circuits shown on Service Sheet 16. The individual RAM is selected by direct addressing. The ROM (Read Only Memory) is selected by direct addressing and by means of the ROM Select Decoder U11.

RAM

Valid Memory Address VMA and the enable (clock) E are the inputs that enable the RAM, U3 and U4. Address A14 must be low while A7 and A8 determine which RAM is selected. The Read/Write mode is selected by the control signal placed on pin 16. The memory location in each RAM is selected by addresses A0 through A6. The RAM input/output is connected directly to the data bus D0 through D7.

ROM Select Decoder

The Valid Memory Address VMA and enable (clock) E enable a ROM or the interface bus select IB SEL via the ROM Select Decoder U11. Address A14 (at the Buffered Address Bus) must be high while A11, A12 and A13 are decoded to select one of the six ROM or the interface bus select IB SEL(L).

ROM

Addresses A0 through A10 select the ROM memory location. The outputs of the ROM are connected to the Data Bus D0 through D7.

TROUBLESHOOTING USING SIGNATURE ANALYSIS

Troubleshooting is done to the circuits of Service Sheet 16 when a defect seems to be related to the ROM or RAM circuits. The only troubleshooting information provided is signature analysis. If nothing definite is discovered in performing these checks, refer to Service Sheet 14 or consider the other possibilities listed on Service Sheet BD4.

Test Equipment

Signature Analyzer HP 5004A

Test 1. ROM Address Select

Purpose. Verify the ability of the Microprocessor to select the correct ROM/RAM address.

Setup. Connect the signature analyzer as follows:

- 1) GND to 'GND' A11TP2
- 2) CLK to 'E' A11TP11
- 3) START to 'ADR 15' A11TP4
- 4) STOP to 'ADR 15' A11TP4

Model 8656A Service

SERVICE SHEET 16 (Cont'd)

Probe. Connect the probe to the data lines at J2. Verify that the individual RAMdata transfers are correct as indicated in Table 6.

Table 6. Individual RAM Data Transfer Signatures

r	1	- 1 - · · · · · · · · · · · · · · · · · ·
Node	Correct Signature	Comments
+5V	CU45	RAM1 (U2)
D0	30H4	
D1	C372	STRT- SA.2
D2	5 P 69	STP - SA.3
D3	A585	
D4	5846	
D5	875F	
D6	CCFC	
D7	HPFU	
+5V	A2FP	RAM2 (U3)
D0	4542	
D1	CU9P	STRT- SA.3
D2	1U1H	STP - SA.4
D3	F6P0	
D4	273C	
D5	AAU1	
D6	P5FA	
D7	669F	
+5V	1217	RAM3(U13
D0	66F4	internal)
D1	356C	STRT- SA.1
D2	6F15	STP - SA.2
D3	0 H4 3	
D4	4PC8	
D5	C2F6	
D6	17HU	
D7	C316	

Reconnect the attenuator cable W17. Reset the Signal Generator by setting the front panel RESET-STBY-ON switch to RESET and back to ON.

Service Model 8656A

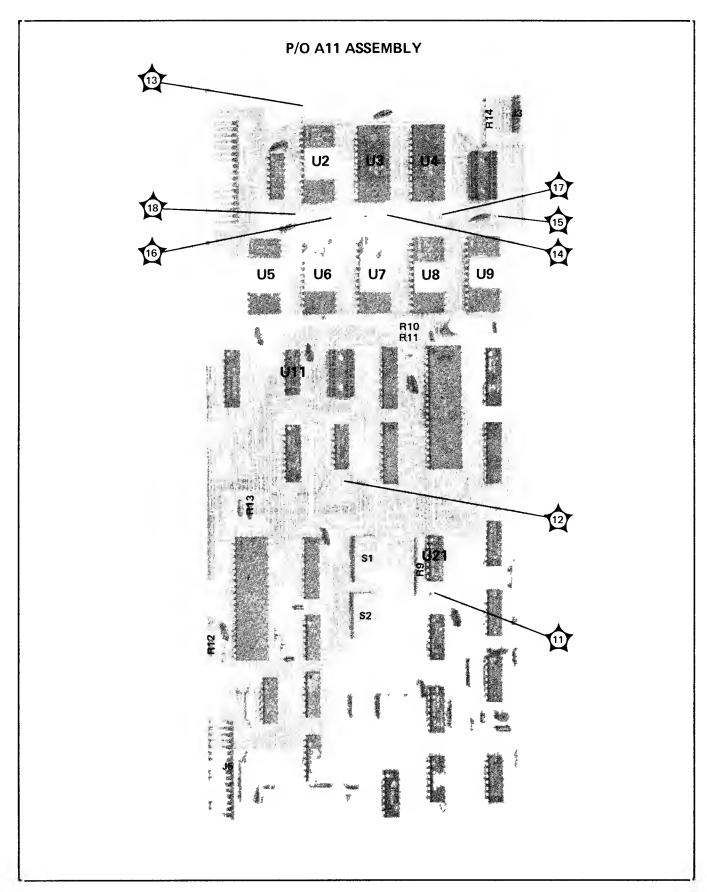
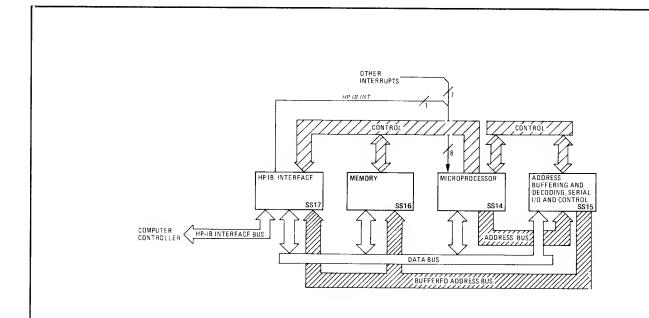


Figure 8-90. Memory Component Locations



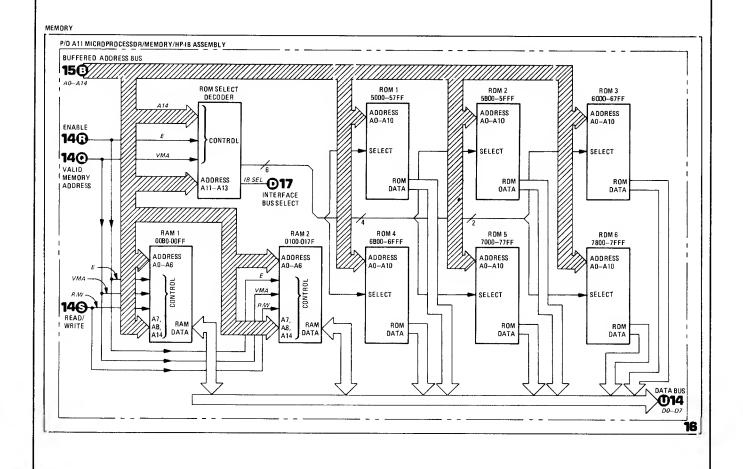
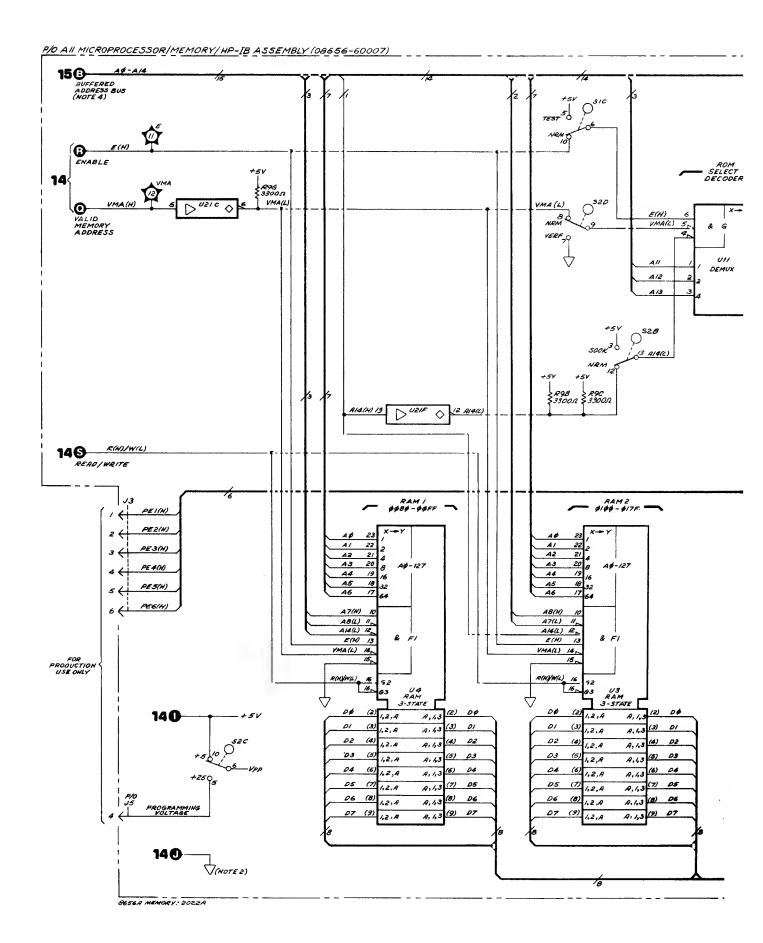
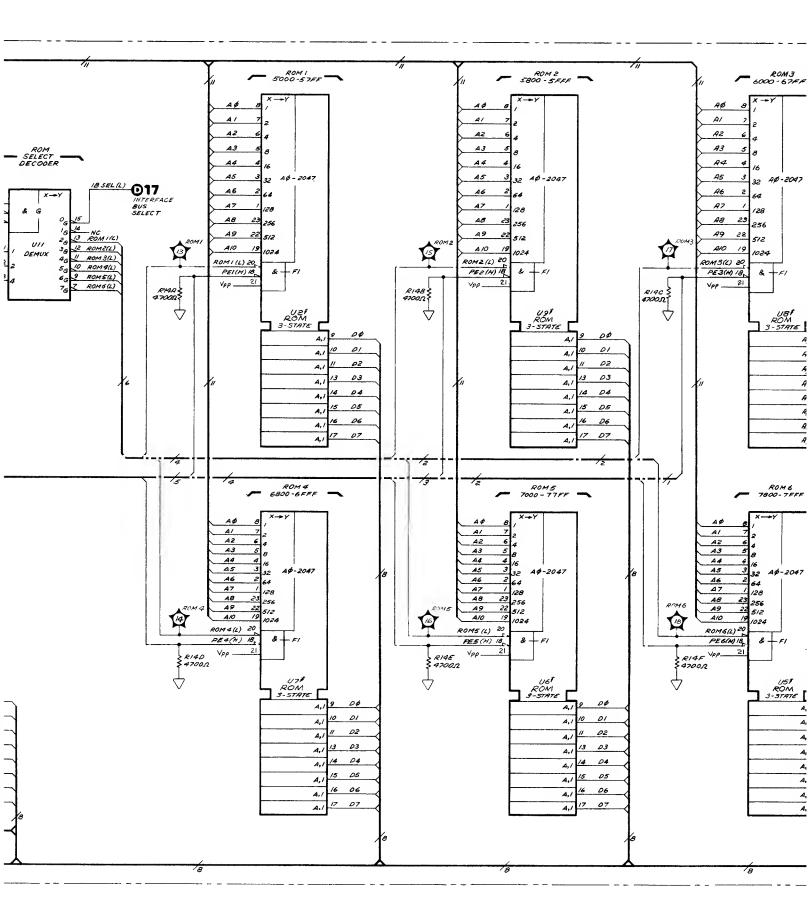


Figure 8-91. Memory Block Diagrams





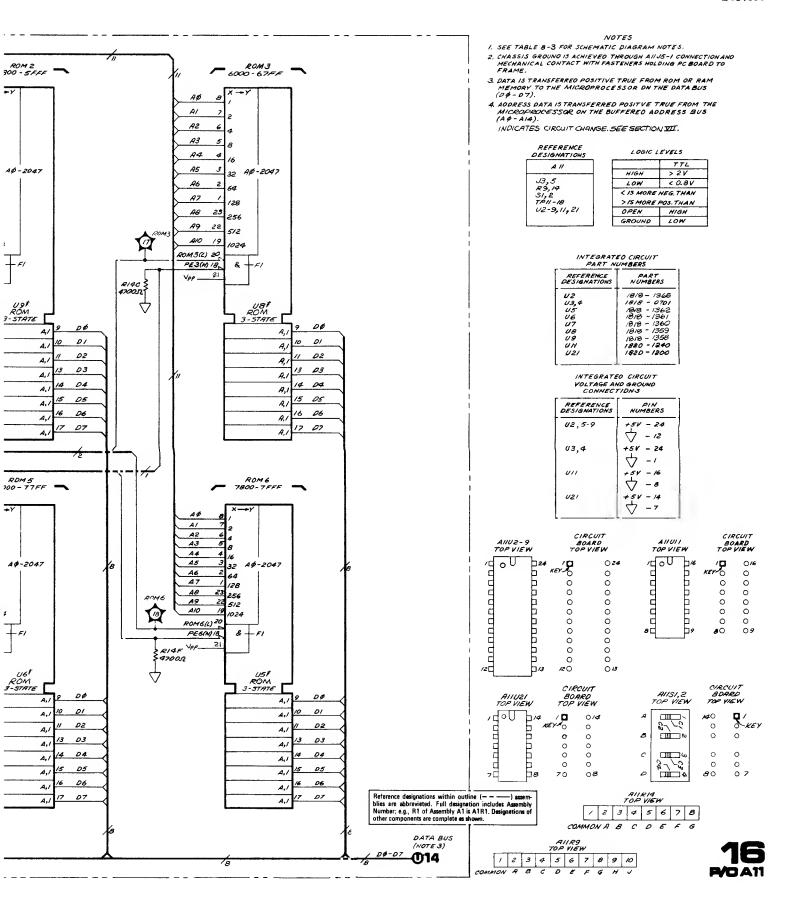


Figure 8-92. Memory Schematic Diagram

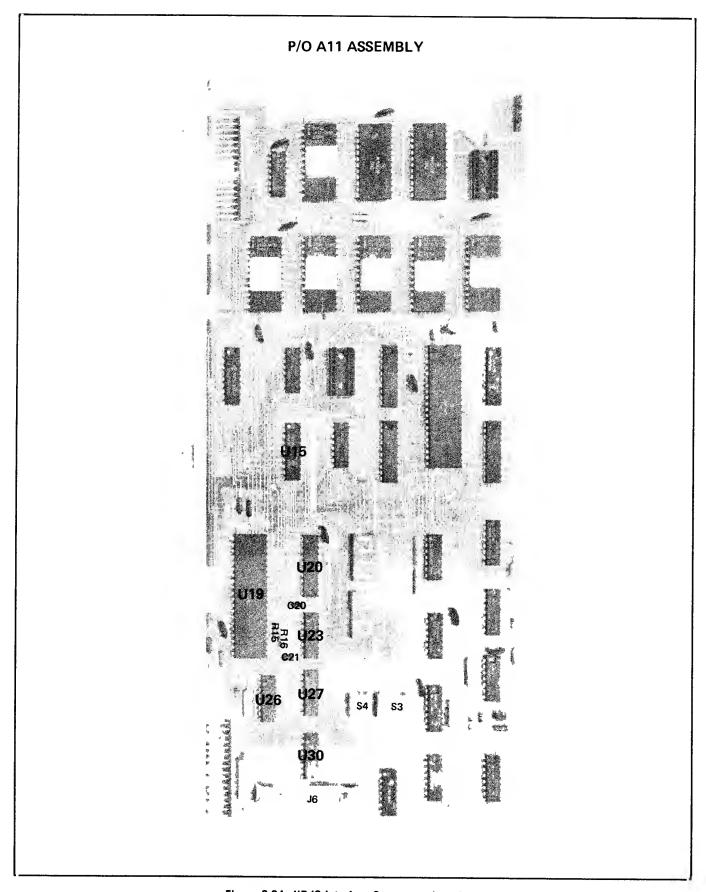


Figure 8-94. HP-I8 Interface Component Locations

Table 1. Interface Signatures

Node	Correct Signature
+5V	H6H5
U15 #19	39 A 7
U19 #4	6514
U19 #7	69F8
U19 #8	0444
U19 #9	36 A 9
U19 #10	FF2C
U19 #11	U939
U19 #12	P71U
U19 #13	FH9F
U19 #14	652F

Reconnect attenuator cable W17. Reset the LOGIC/RAM switch to the RAM position.

NOTE

If the HP-IB address switch was changed, reset the address switch to the original address. Set the front panel RESET-STBY-ON switch to RESET and back to ON.

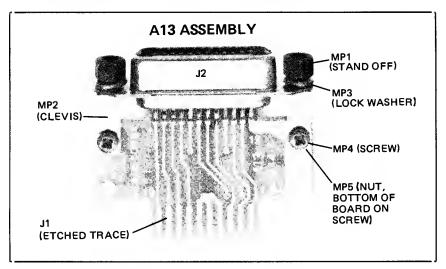


Figure 8-93. HP-IB Connector Component Locations



Checks in Section III to verify proper operation of the HP-IB interface circuits. This includes data, control and handshake connections to the computer controller. Do not overlook the possibility that the HP-IB address switches are set to an address other than what was expected. The address switch setting may be checked by pressing the front panel switch HP-IB ADRS. As a last resort return to Service Sheet BD4 and consider the other possibilities shown.

Purpose. To verify transmission of data from the Microprocessor to the HP-IB General Purpose Interface Adapter A11U19.

Setup. Connect the signature analyzer as follows:

- 1) GND as close as possible to the circuitry being probed. (Bad grounding can cause unstable signatures.)
- 2) CLK to 'E' A11TP11
- 3) START to 'SA1' A11TP5
- 4) STOP to 'SA2' A11TP6

Set the signature analyzer's controls as follows:

- 1) START-OUT
- 2) STOP-IN
- 3) CLK-IN

Set up the Signal Generator as follows:

- 1) Disconnect the attenuator cable W17 from the power supply board to the attenuator.
- 2) Set the LOGIC/RAM switch P/O A11S1 to LOGIC.

NOTE

If the Signal Generator's address switch has been set to other than '07', the signatures taken in this test will be incorrect. In this case, reset the address switches to A1=1, A2=1, A3=1, A4=0 and A5=0. Then set the front panel RESET-STBY-ON switch to RESET and back to ON.

Initialize. Briefly short A11TP3 'NMI' to ground.

NOTE

With careless probing it is possible to get the Microprocessor into a program sequence other than that portion intended for signature analysis. If the +5V signature is incorrect, this has probably happened. Restart the the test by setting the 'RST/RUN' switch to 'RST and then 'RUN'. Briefly touch the 'NMI' test point to ground.


Probe. Connect the probe to the node indicated in Table 1. Verify that each signature is correct and stable.

(U19-pin 23 and U27-pin 15). The only outgoing signals are the handshake control lines NRFD and NDAC. The buffers are permanently enabled by hardwire connections. Refer to Figure 1 for more information about the HP-IB Handshake Control.

HP-IB General Purpose Interface Adapter

The interface adapter U19 provides interfacing between the HP-IB connections to the controller and the Signal Generator's digital circuits. The address select ASE and HP-IB Interrupt Request IBI are generated as a result of inputs from the controller.

The Microprocessor, under the control of the HP-IB subroutines stored in ROM, outputs control and address signals to U19 to control the data input from the controller. IB SEL selects the HP-IB mode. Addressing is input to U19 on A0, A1 and A2. Read/Write determines if data is written onto the data lines D0 through D7 or if the internal address is read by U19. The internal address is compared with that input to the Signal Generator by U19.

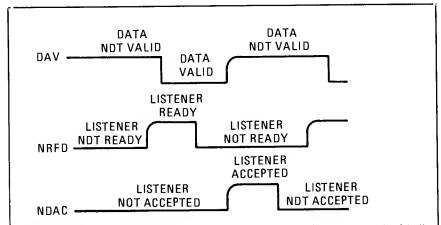

Start with the talker waiting for the listener to release NRFD (not ready for data) indidicating it is ready.

When the listener is ready, NRFD goes high (false). The talker then places valid data on DID1 through DIO8 and sets DAV (data valid) low (true).

NRFD then goes low (true) and the talker waits for the listener to indicate it has accepted the data (or ignored it) by releasing the NDAC (not data accepted) to a high (false, i.e., data is accepted).

The talker sets DAV high (false) and again waits for the listener to release NRFD.

(NOTE that if ATN is true, all instruments on the bus must handshake regardless of whether they are talkers, listeners, or bystanders. Being in remote or local has nothing to do with handshaking. If ATN is false, they only handshake if addressed).

Figure 1. Simplified HP-IB Handshake between a Talker (Computer Controller) and One Listener (Signal Generator)

TROUBLESHOOTING

Troubleshooting is done on the circuits of Service Sheet 17 when a defect seems to be related to the HP-IB circuits. If the signatures are all correct, the instrument interface circuits from U19 to the Microprocessor are probably functional. Refer to the HP-IB Functional

SERVICE SHEET 17 P/O A11 MICROPROCESSOR/MEMORY/HP-IB ASSEMBLY A13 HP-IB CONNECTOR ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD4
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

General

This Signal Generator may be connected to an external computer controller via the Hewlett-Packard Interface Bus (HP-IB). Encoded data and control information is passed between the two instruments on the interface bus.

NOTE

The Hewlett-Packard Interface Bus is Hewlett-Packard's implementation of the IEEE Standard 488 "General Purpose Interface Bus".

Inputs to the Signal Generator from the external controller are in the form of encoded control and data information. Control information is input to the Signal Generator via five control lines (four are used in this instrument) and three handshake lines. The control lines allow the controller to gain the Signal Generator's attention and impart other appropriate control information. The handshake lines provide asynchronous control information for data transfer between a talker (computer controller) and the listener (Signal Generator).


In the handshake mode, the Signal Generator first indicates when it is ready to listen (receive data). The controller responds by indicating when the data that appears on the data lines, DI01 through DI08, is valid. The Signal Generator then lets the controller know that the data has been accepted.

Data that is transferred to the Signal Generator contains all the information required to control each mode of operation. It also contains the level or frequency information for each mode. Examples are 50% AM depth, an RF amplitude of -10 dBm and a frequency of 100 MHz.

The HP-IB Address Switch Buffer U20 places the internally set address on the data lines when addressed by the HP-IB General Interface Adapter. The HP-IB Interface Buffers are enabled by the interface bus select IB SEL. The Read/Write mode determines if data is written onto or read from the Data Bus. Note that the Read/Write lines are tied in parallel to the Hewlett-Packard Interface Bus.

HP-IB Data Bus and Control/Handshake Buffers

The Signal Generator functions as a listener only, therefore there are no input connections to the Data Bus Buffers from the Data Bus. Also, there are no connections to and from the service request line SRQ

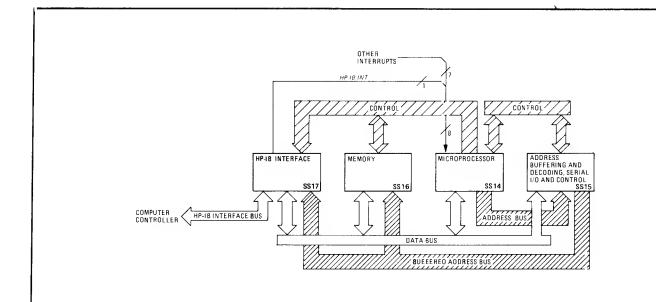

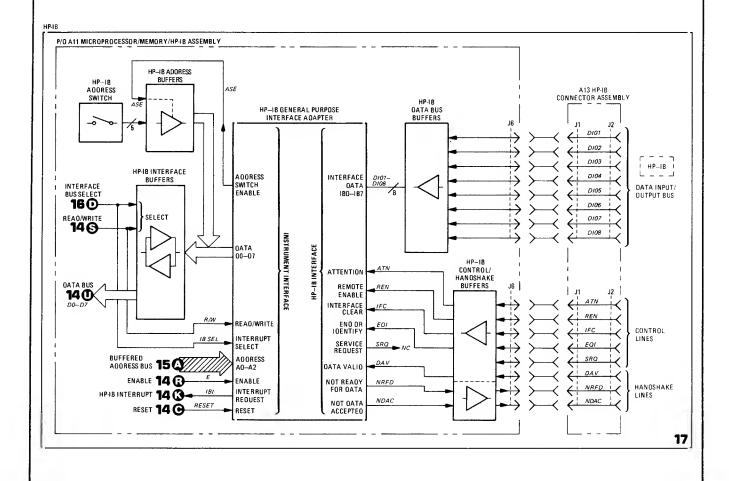
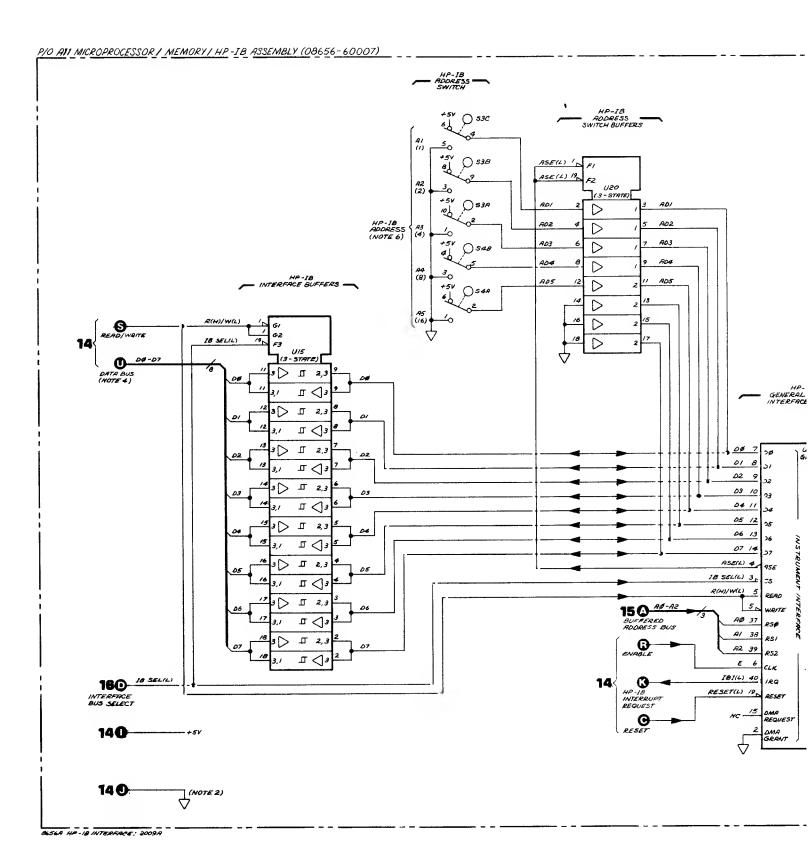
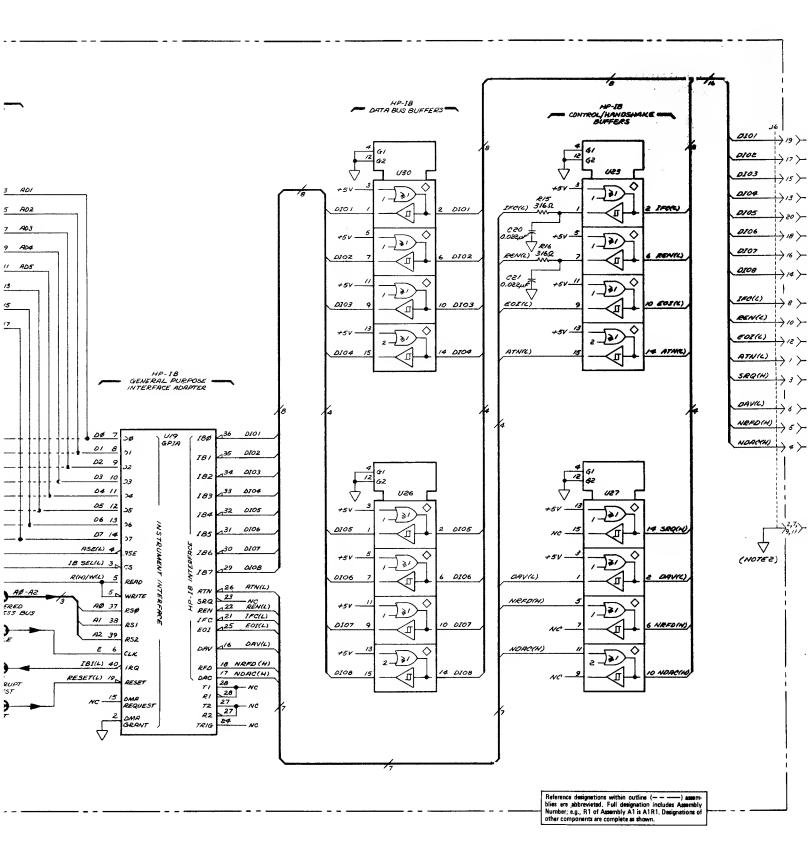


Figure 8-95. HP-IB Interface Block Diagrams





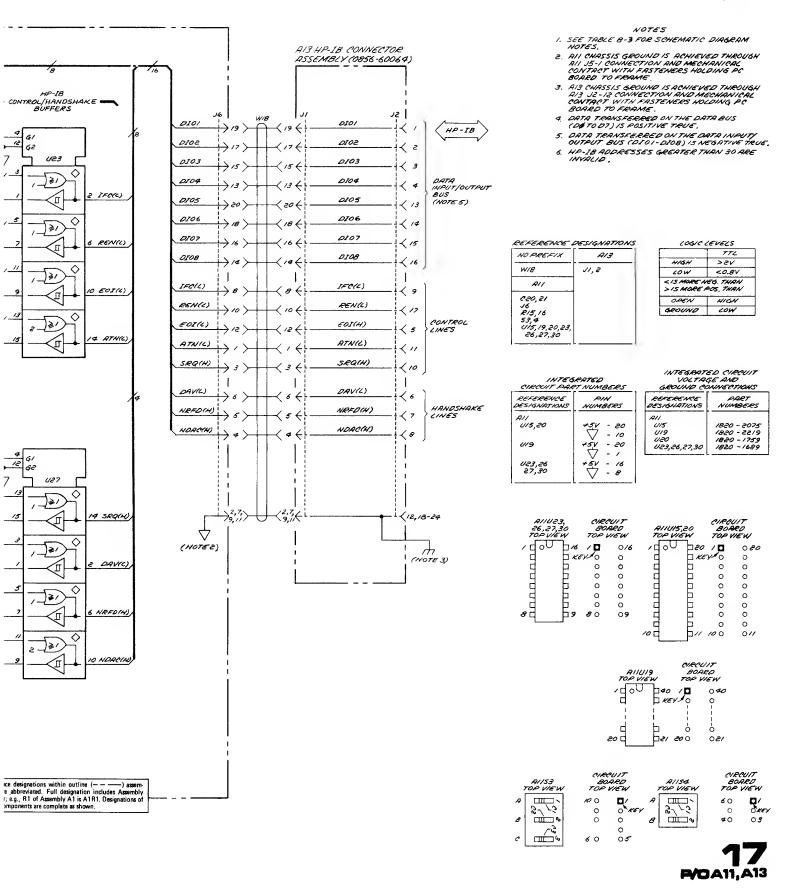
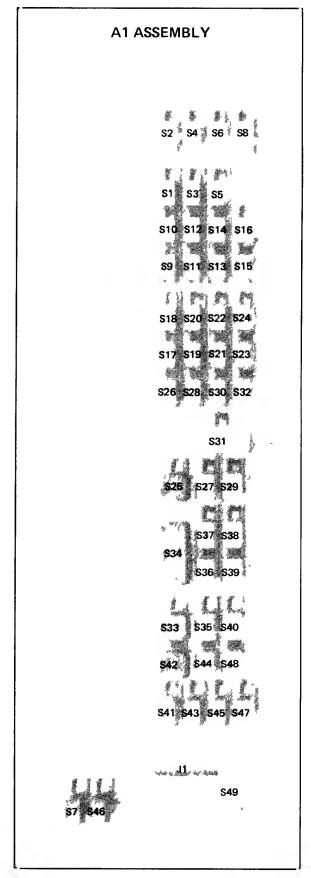


Figure 8-96. HP-IB Interface Schematic Diagram



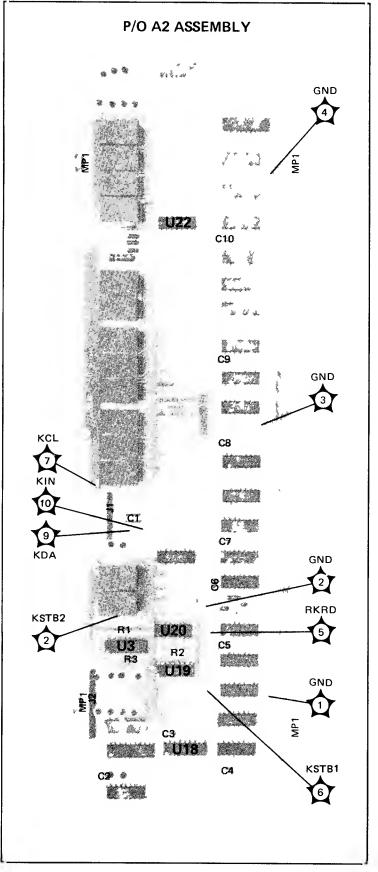


Figure 8-97. Keyboard Component Locations

Figure 8-98. Keyboard Encoder Component Locations

Table 3. Keyboard Signatures (Cont'd)

Key	Correct Signature
FREQ UP	36UA
FREQ DOWN	P914
AMPTD	A91A
AMP UP	PU19
AMP DOWN	U715
INCR SET	9727
7	94P4
4	18P2
1	28UC
0	03 A 2
8	2AF5
5	6FF6
2	74FA
NO KEY	3FUA
	14U8
9	173C
6	9C3H
3	AC24
	807H
MHz	2H7A
KHz	6C79
NO KEY	3FUA
%	7375
{ ←	1347
dBm	1084
dBf	9F82
dB	AF9C
EMF	87F2
V	2205
NO KEY	3FUA
mV	6406
μV	7F0A
SEQ	1UUC
STORE	93UH
RECALL	A3P4
DISPLAY	88CH

Remove the jumpers between A2TP '02' and ground and between A2TP1 'SA7' and A11TP10 'SA6'.

Reset the LOGIC/RAM switch P/O A11S1 to the RAM position.

NOTE

If the HP-IB address switch was changed, reset the address switch (Service Sheet 17) to the original address. Set the front panel RESET-STBY-ON switch to RESET and back to ON.



- 2) STOP-OUT
- 3) CLK-IN

Set up the Signal Generator as follows:

- 1) Set the LOGIC/RAM switch P/O A11S1 to the LOGIC position.
- 2) Short A2TP14 'T02' to ground.
- 3) Connect 'SA6' A11TP10 to 'SA7' A2TP1.

NOTE

If the Signal Generator's address switch has been set to other than '07', the signatures taken in this test will be incorrect. In this case, reset the address switches to A1=1, A2=1, A3=1, A4=0 and A5=0. Then set the front panel RESET/STBY/ON switch to RESET and back to ON.

initialize. Briefly short A11TP3 'NMI' to ground.

NOTE

With careless probing it is possible to get the Microprocessor into a program sequence other than that portion intended for signature analysis. If the +5V signature is incorrect, this has probably happened. Restart the test by setting 'RST/RUN' switch to 'RST' and then 'RUN'. Briefly touch the 'NMI' test point to ground.

Probe. Connect the probe to 'KDA' A2TP9. Verify that each signature as indicated in Table 3 is correct and stable.

Table 3. Keyboard Signatures

Key	Correct Signature				
+5V	F84P				
NO KEY	3FUA				
LOCAL	1F38				
HP-IB ADRS	89P3				
EXT	0802				
INT 400 Hz	4P01				
INT 1 kHz	560 H				
OFF	363U				
AM	35UF				
AM UP	C9UA				
AM DOWN	A2CA				
FM	68U5				
FM UP	2PU6				
FM DOWN	F24H				
FREQUENCY	550C				
COARSE TUNE	H90H				
FINE TUNE	56F8				

3. Verify that keyboard strobes appear on A2TP5, A2TP6 and A2TP8. Note that the signal on A2TP5 comes from the Amplitude Annunciator Latch A2U42 (shown on Service Sheet 21). The strobes for A2U42 as well as the strobes seen on A2TP6 and A2TP8 come from the strobe decoders A2U25 (shown on Service Sheet 19).

$\sqrt{\sqrt{3}}$ Key Column Data Lines

- 1. Press a front panel key.
- 2. Verify that the column data line which includes the pressed key is a positive-going pulse. The other column data lines should remain low.

√4 Key Row Data Lines

- 1. Press a front panel key.
- 2. Verify that the row data line that includes the pressed key is a negative-going pulse. The other row data lines should remain high.

TROUBLESHOOTING USING SIGNATURE ANALYSIS

Troubleshooting is done on the circuits of Service Sheet 18 when a defect seems to be related to the keyboard. If nothing definite is discovered in performing the signature analysis on this service sheet, consider the other possibilities shown on Service Sheet BD4. Remember that the serial data from the keyboard encoding circuits does pass through the data bus buffers on the way to the Microprocessor (refer to Service Sheet 14). Also, several of the strobes, clocks and control signals are decoded on the circuits of Service Sheet 15. The Load Keyboard Data Strobes are decoded on the circuits of Service Sheet 19. The Read Key Row Data Strobe is latched into A2U42 and is shown on Service Sheet 21.

Purpose. Verify transmission of encoded addresses from Keyboard to Microprocessor.

NOTES

The signatures shown on this service sheet are not valid for instruments with serial prefixes 2018A and below.

Refer to the paragraph entitled REPAIR in this section for front panel keyboard disassembly instructions.

Setup. Connect the signature analyzer as follows:

- 1) GND to 'GND' A11TP2
- 2) CLK to 'SA4' A11TP7
- 3) START to 'SA5' A11TP9
- 4) STOP to 'SA5' A11TP9

Set the signature analyzer's controls as follows:

1) START-IN

which the key was pressed. Once the row data is latched, the Microprocessor will clear RKRD.

A parallel-to-serial conversion takes place as the 16 bits of keyboard data are shifted from U3 and U18. As each row bit is shifted out of U3 (pin 9), a column bit is shifted out of U18 (pin 9) into U3 (pin 10). Sixteen keyboard clocks (KCL) later, all 16 bits of keyboard data will have been shifted to the Microprocessor. If the FREQUENCY key had been pressed, the resultant keyboard data sent to the Microprocessor would be as shown in Table 2.

Column Data **Row Data** 15* 14* 13 12 11 10 9 8 7 6 5 4 3 2 0 1 0 0 0 1 0 0 0 0 1 0 1 1 1 1 * Bits 14 and 15 are tied low.

Table 2. Keyboard Data (KDA) With Frequency Key Pressed

Capacitors C1 through C10 are used to filter the +5V supply to the Display Assembly circuitry.

TROUBLESHOOTING

Troubleshooting is done on the circuits of Service Sheet 18 when a malfunction seems to have occurred on the keyboard or display. Perform the Troubleshooting Using Signature Analysis on Service Sheets 14, 15, and 16 before attempting to troubleshoot these circuits using this procedure.

NOTE

This troubleshooting information is to be used instead of Troubleshooting Using Signature Analysis for Signal Generators with serial number prefixes 2009A, 2014A and 2018A. If preferred, this information may be used for all Signal Generators regardless of serial number prefix.

Test Equipment



$\sqrt{1}$ Keyboard Interrupt and Serial Keyboard Data Output to **Microprocessor**

- 1. Press any front panel key.
- Verify that a negative going pulse of about 5 volts occurs at A2TP10 each time a key is pressed.
- 3. Verify that at least one pulse train about 16-bits long occurs at A2TP9.

$\sqrt{2}$ Control Inputs from Microprocessor

- 1. Press any front panel key.
- Verify that a series of keyboard clock pulses appear on A2TP7.

SERVICE SHEET 18 A1 KEYBOARD ASSEMBLY P/O A2 DISPLAY ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD4

Table 4-1. Abbreviated Performance Tests

Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

Keyboard Encoding (A1 and A2)

The Keyboard Assembly (A1) is composed of forty-eight pushbuttons or keys. They are hard-wired in an eight row by six column matrix. With none of the keys pressed, the eight row lines will be pulled high (+5V) through a 1 k Ω resistor and the six column lines will be pulled low (0V) through a 10 k Ω resistor. The resultant keyboard data is shown in Table 1.

Column Data								Row	Data						
15*	14*	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1

Table 1. Keyboard Data (KDA) With No Keys Pressed

Whenever a key is pressed, a row line is connected to a column line through the dividing network of the 1 k Ω and 10 k Ω resistors which are located on the Display Assembly (A2). As long as the key remains pressed, the column line will remain high and the keyboard interrupt will remain issued to the Microprocessor by the Keyboard Interrupt Generator U19. U19 is hard-wired to function as a 6-input NOR gate because its three control lines (pins 11, 12, and 15) are tied low. Also, its output (pin 1) is always enabled because its enable line (pin 2) is tied high. Therefore, whenever a key is pressed, the control line associated with it will be pulled high as previously mentioned. This high will be sensed by U19 which in turn transfers a low to interrupt the Microprocessor (refer to Service Sheet 14).

When the Microprocessor is interrupted, it enters its keyboard read subroutine. A 5 μs keyboard strobe (KSTB1) is decoded (refer to Service Sheet 19) to strobe the column data into the Key Column Data Latch/Shift Register U18. The column data will consist of seven low bits (the two most-significant bits are hard-wired low) and one high bit. The high bit will be in the bit position that is associated with the column position in which the key was pressed.

Once the column data is latched, the Microprocessor issues a Read Key Row Data (RKRD) signal (refer to Service Sheet 21). This signal is inverted by U22G and applied to the six inputs of the Key Row Data Read Pull-Down U20 to force all six column lines low so that the row data can be read. When the column lines are all forced low, the row line associated with the pressed key will also be forced low. Forcing the column lines low will also disable the keyboard interrupt. Next, another 5 μ s keyboard strobe (KSTB2) is decoded (refer to Service Sheet 19) to strobe the row data into the Key Row Data Latch/Shift Register U3. The row data will consist of seven high bits and one low bit. The low bit will be in the bit position that is associated with the row position in

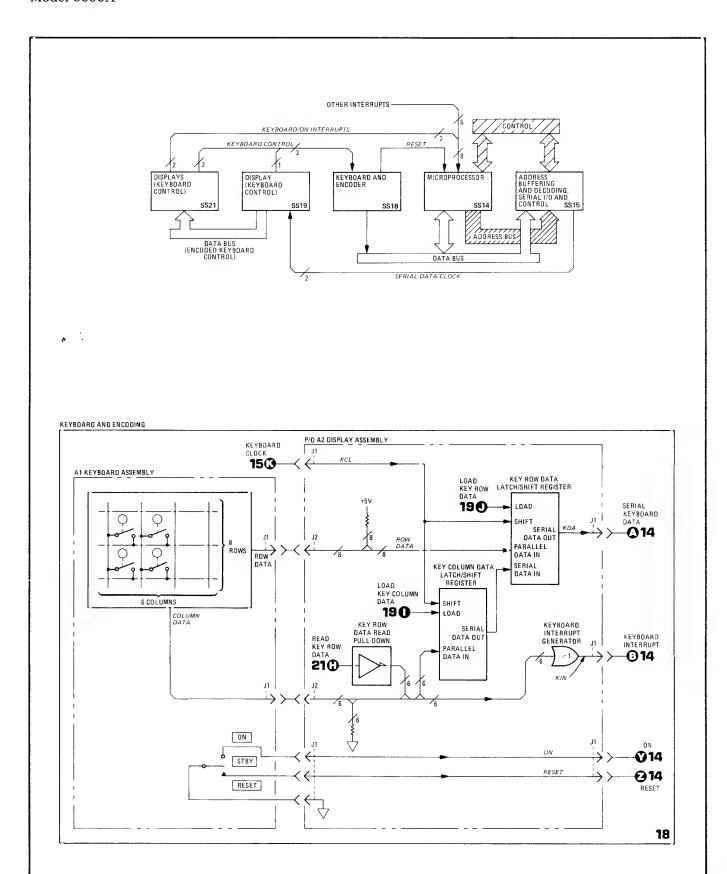
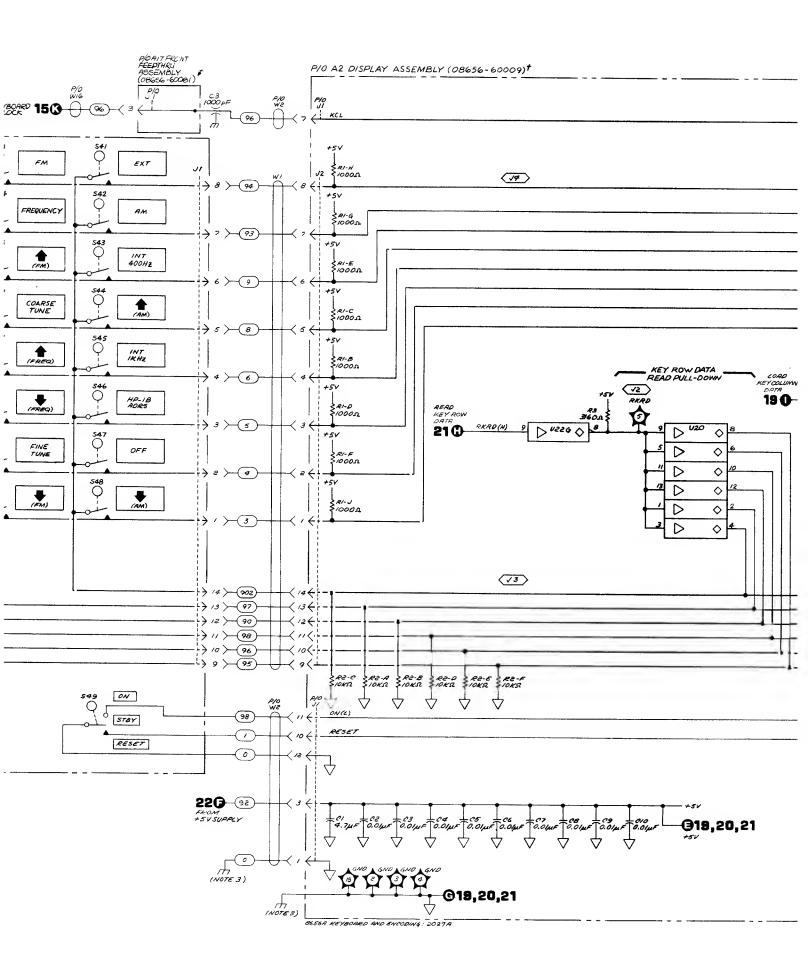
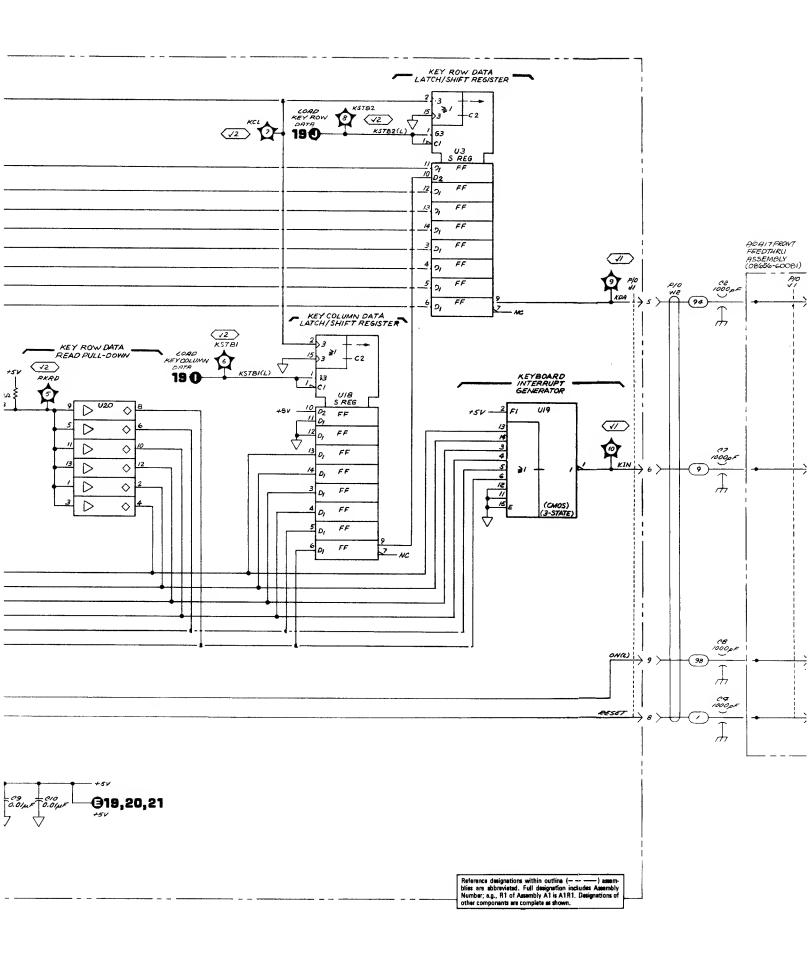


Figure 8-99. Keyboard and Encoder Block Diagrams





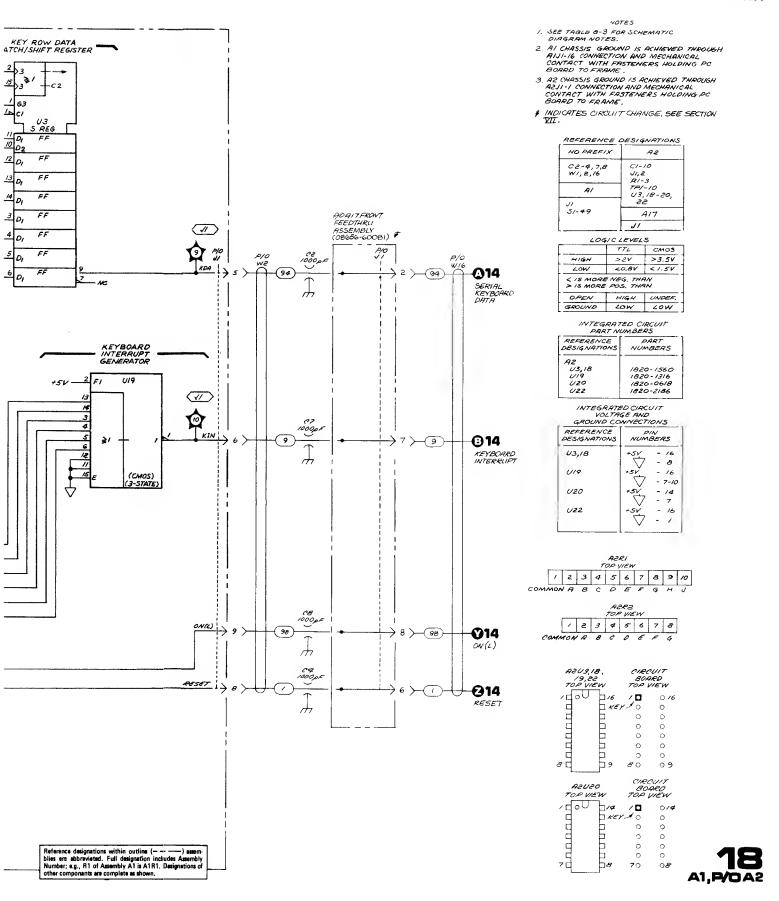


Figure 8-100. Keyboard and Encoder Schematic Diagram

Service Model 8656A

SERVICE SHEET 19 (Cont'd)

Table 2. Display and Keyboard Strobe Signatures

Node	Correct Signature*	Comments
+5 V	H6H5	
U26 #7	C524	
U26 #9	FU10	
U26 #10	66UF	
U26 #11	1F0 A	
U26 #12	5A73	
U26 #13	P 3 HA	
U26 #14	A128	
U26 #4	FP00	
U26 #6	H6H5	no blink
+5 V	H6H 5	
U25 #9	H161	
U25 #10	CP72	
U25 #11	93 AH	
U25 #12	PH45	
U25 #13	FF4P	
U25 #14	8H64	
U25 #4	FP00	
U25 #6	H6H5	no blink
*Probe tip should b	link.	1

Test 3. Decimal Point Data Transmission Check

Purpose. To verify transmission of encoded decimal point data from the Microprocessor to the Frequency Display Decimal Point Latch.

Setup. Connect the signature analyzer controls as follows:

- 1) GND to 'GND' A11TP2
- 2) START to SA5 A11TP9
- 3) STOP to SA5 A11TP9
- 4) CLK to SA4 A11TP7

Set the signature analyzer's controls as follows:

- 1) START-IN
- 2) STOP-OUT
- 3) CLK-IN

Set up the Signal Generator as follows:

- 1) Set the LOGIC/RAM switch to the LOGIC position.
- 2) Connect a jumper between A2TP14 'T02' and ground.

3) Connect a jumper between A11TP10 'SA6' and A2TP15 'SA7'.

NOTE

If the Signal Generator's address switch has been set to other than '07', the signatures taken in this test will be incorrect. In this case, reset the address switches to A1=1, A2=1, A3=1, A4=0 and A5=0. Then set the front panel RESET-STBY-ON switch to RESET and back to ON.

Initialize. Briefly short A11TP3 NMI to ground.

NOTES

With careless probing it is possible to get the Microprocessor into a program sequence other than that portion intended for signature analysis. If the +5V signature is incorrect, this has probably happened. Restart the test by setting the RST/RUN switch to RST and then RUN. Briefly touch the NMI test point to ground.

All LEDs should be cycling on and off rapidly.

Probe. Connect the probe to each node shown in Table 3. Verify that each signature is correct and stable.

Table 3. Decimal Point Signatures

Node	Correct Signature Comment	
+5V	F84P	
U30 #2	F9H9	FR DP 3
U30 #5	8C19	FR DP 2
U30 #7	54PH	FR DP 1
U30 #10	7903	FR DP 4
U30 #12	A44F	FR DP 5
U30 #15	5FC5	FR DP 6

Remove the jumpers between test points and a test point and ground. Reset the LOGIC/RAM switch to the RAM position.

If the HP-IB switch was changed, reset the address switch to the original address. Then set the front panel RESET-STBY-ON switch to RESET and back to ON.

Test 2. Display Strobe Data Transmission and Decoder Check

Purpose. To verify transmission of encoded display strobe data from the Microprocessor through the Display Strobe Decoders.

Setup. Connect the signature analyzer as follows:

- 1) CLK to 'E' A11TP11
- 2) START to 'SA1' A11TP5
- 3) STOP to 'SA2' A11TP6

Set the signature analyzer's controls as follows:

- 1) START-OUT
- 2) STOP-IN
- 3) CLK-IN

Set up the Signal Generator as follows:

- 1) Set the LOGIC/RAM switch P/O A11S1 to LOGIC.
- 2) Connect a jumper between A2TP14 T02 and ground.
- 3) Connect a jumper between A11TP10 SA6 and A2TP1 SA7.

NOTE

If the Signal Generator's address switch has been set to other than '07', the signatures taken in this test will be incorrect. In this case, reset the address switches to A1=1, A2=1, A3=1, A4=0 and A5=0. Then set the front panel RESET-STBY-ON switch to RESET and back to ON.

Initialize. Briefly short A11TP3 NMI to ground.


NOTES

With careless grounding of the test point, it is possible to get the Microprocessor into a program routine other than that portion intended for signature analysis. If the +5V signature is incorrect, this has probably happened. Restart the test by setting the RST/RUN switch to RST and then RUN. Briefly touch the NMI test point to ground.

All LEDs should be cycling on and off rapidly.

Probe. Connect the probe to each node shown in Table 2. Verify that each signature is correct and stable.

If troubleshooting is completed and the signatures are taken, remove the jumpers installed between test points and/or ground. Reset the LOGIC/RAM switch to the RAM position. Also, if the HP-IB switch was changed, reset the address switch (refer to Service Sheet 17) to the original address. Set the front panel RESET-STBY-ON switch to RESET and back to ON.

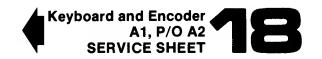

NOTE

If the Signal Generator's address switch has been set to other than '07', the signatures taken in this test will be incorrect. In this case, reset the address switches to A1=1, A2=1, A3=1, A4=0 and A5=0. Then set the front panel RESET-STBY-ON switch to RESET and back to ON.

initialize. Briefly short A11TP3 'NMI' to ground.

NOTE

With careless probing it is possible to get the Microprocessor into a program sequence other than that portion intended for signature analysis. If the +5V signature is incorrect, this has probably happened. Restart the test by setting the RST/RUN switch to RST and then RUN. Briefly touch the NMI test point to ground.

Probe. Connect the probe to each node shown in Table 1. Verify that each signature is correct and stable.

Node	Correct Signature	Comments
+5V	F84P	
*U24 #8	F84P	DISP CLK
U24 #1	6UPP	DISP DATA
U24 #3	8A0H	
U24 #4	HCH1	
U24 #5	F06F	
U24 #6	F672	
U24 #10	05C8	
U24 #11	2235	
U24 #12	6UH4	
U24 #13	37 PA	
U23 #3	2UAU	
U23 #4	7241	
U23 #5	P6U4	
U23 #6	A161	
U23 #10	890U	
U23 #11	FH 78	
U23 #12	C382	
U23 #13	7758	

Table 1. Display Data Signatures

If troubleshooting is completed, remove the jumpers and reset the LOGIC/RAM switch to RAM. Also, if the HP-IB address switch was changed, reset the address switch (Service Sheet 17) to the original address. Then set the front panel RESET-STBY-ON switch to RESET and back to ON.

$\sqrt{2}$ Serial Data Entry and Timing

- 1. Verify that U28B-Pin 5 goes high for 5 μ s but 72 μ s after the last clock pulse ends.
- 2. Verify that a clock pulse train occurs at A2TP11 for each keystroke.

TROUBLESHOOTING USING SIGNATURE ANALYSIS

Troubleshooting is done on the circuits of Service Sheet 19 when a defect seems to be related to the front panel displays or keyboard operation. The troubleshooting provided is signature analysis although looking at the various displays or realizing that the problem is due to a keyboard malfunction may provide more information about a possible defect. If all the signatures on this service sheet are correct, take another look at the symptoms which brought you to this service sheet. Determine if the problem may be related to circuitry contained on Service Sheets 18, 20 or 21. If any signatures on this service sheet are incorrect, recall that the data and strobes, clocks and other control signals are passed through circuitry of Service Sheet 15 before arriving here. As a last resort, return to Service Sheet BD4 and consider the other possibilities shown.

Test Equipment

NOTE

The signatures shown on this service sheet are not valid for Signal Generators with serial numbers prefixed 2018A and below.

Test 1. Display Data Transmission Check

Purpose. To verify transmission of encoded display data from the Microprocessor to the Display Address and Display Data Shift Registers.

Setup. Connect the signature analyzer as follows:

- 1) GND to 'GND'
- 2) CLK to 'SA4' A11TP7
- 3) START to 'SA5' A11TP5
- 4) STOP to 'SA5' A11TP9

Set the signature analyzer's controls as follows:

- 1) START-IN
- 2) STOP-OUT
- 3) CLK-IN

Set up the Signal Generator as follows:

- 1) Set the LOGIC/RAM switch P/O A11S1 to LOGIC.
- 2) Connect a jumper from A2TP14 T02 to ground.
- 3) Connect a jumper between A11TP10 SA6 and A2TP1 SA7.

Perform the Troubleshooting Using Signature Analysis on Service Sheets 14, 15, and 16 as well as the Troubleshooting on Service Sheet 18 before attempting to troubleshoot these circuits using this procedure.

NOTE

This troubleshooting information is to be used instead of Troubleshooting Using Signature Analysis for Signal Generators with serial number prefixes 2009A, 2014A and 2018A. If preferred, this information may be used for all Signal Generators regardless of serial number prefix.

_		_	_							_
Т	es	t	F	a	ŧıi	n	m	Δ	n	t
	~~		_	ч	u :	~		·		

$\langle \sqrt{1} \rangle$

Display Clock

1. Verify that the display changes and/or the correct strobe occurs with each keystroke as shown in Table 1.

Table 1. Active Display Strobe versus Change in Displayed Information

Display Strobe	Change in Displayed Information
DSTB1	HP-IB annunciators REMOTE or ADDRESS Modulation decimal point Modulation annunciators % or kHz Frequency digit 8.
DSTB2	Modulation annunciators: EXT AM, INT AM, EXT FM, INT FM, HI EXT, LO EXT, 400 Hz or 1 kHz.
DSTB3	Modulation digits 1 or 2
DSTB4	Frequency decimal point
DSTB5	Frequency digit 1 or 2
DSTB6	Frequency digit 3 or 4
DSTB7	Frequency digit 5 or 6
DSTB8	Frequency digit 7 or amplitude digit 2
DSTB9	Amplitude digit 3 or 4
DSTB10	Amplitude digit 1, amplitude digit decimal point or the amplitude sign (plus or minus).
DSTB11	Amplitude annunciators: dBm, dBf, dB, EMF, V mV, or µV or RKRD* (Read Key Row Data).
KSTB1	any key*
KSTB2	any key*

*DSTB11 (due to RKRD), KSTB1 and KSTB2 are strobed each time a key is pressed.

SERVICE SHEET 19 P/O A2 DISPLAY ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD4
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

Display Control

Sixteen bits of serial display data (DDA) are sent from the Microprocessor via the Serial I/O control circuits (refer to Service Sheet 15) to Data Shift Registers U24 and U23 respectively. Six of the eight bits stored in U24 are decoded to produce eleven display strobes (DSTB1 through DSTB11) and two keyboard strobes (KSTB1 and KSTB2). DSTB1 through DSTB3 are used to strobe medulation display data (refer to Service Sheet 21), DSTB4 through DSTB8 are used to strobe frequency display data (refer to Service Sheet 20), DSTB8 through DSTB11 are used to strobe amplitude display data (refer to Service Sheet 21), and the two keyboard strobes (KSTB1 and KSTB2) are used to strobe column and row data from the keyboard (refer to Service Sheet 18). Strobe decoding takes place in the Display and Keyboard Strobe Decoders U26 and U25. The decoder outputs remain high until all 16 bits of display data are shifted in and settled.

Display data is shifted into the two shift registers by the display clock (DCL). Each transition of the display clock triggers U28A which forms part of the Serial Data Entry Timing Control circuitry. This circuitry is used to ensure that the data has at least 72 μ s to settle after the last clock pulse clocks the sixteenth data bit into U24. When U28A times out, it clocks U28B which goes high for 5 μ s to cause the bits stored in U24 to be decoded. During the period that the strobe is active (low), the display data stored in U23 will be decoded and latched to drive the respective 7-segment display or LED annunciator (refer to Service Sheets 20 and 21).

Frequency display decimal point drive is developed when display data bits 2 through 7 are strobed into the Frequency Display Decimal Point Latches U30 by DSTB4. The Microprocessor ensures that only one of these bits is active (low) at any given time (except during the power-up subroutine). When one of these bits is active (low), the associated decimal point control line (U6 through U11-Pin 9) will be pulled high through the associated network resistor (R6A, R7A, R8A, R9A, R10A, and R11A) to light the respective decimal point (refer to Service Sheet 20). When the bits are inactive (high), the stored output will be inverted by the associated Frequency Display Decimal Point Driver U21B through U21G. This will cause the associated decimal point control line (U6 through U11-Pin 9) to be pulled low to inhibit the respective decimal point from being lit.

TROUBLESHOOTING

Troubleshooting is done on the circuits of Service Sheet 19 when a malfunction seems to have occurred in the keyboard or display.

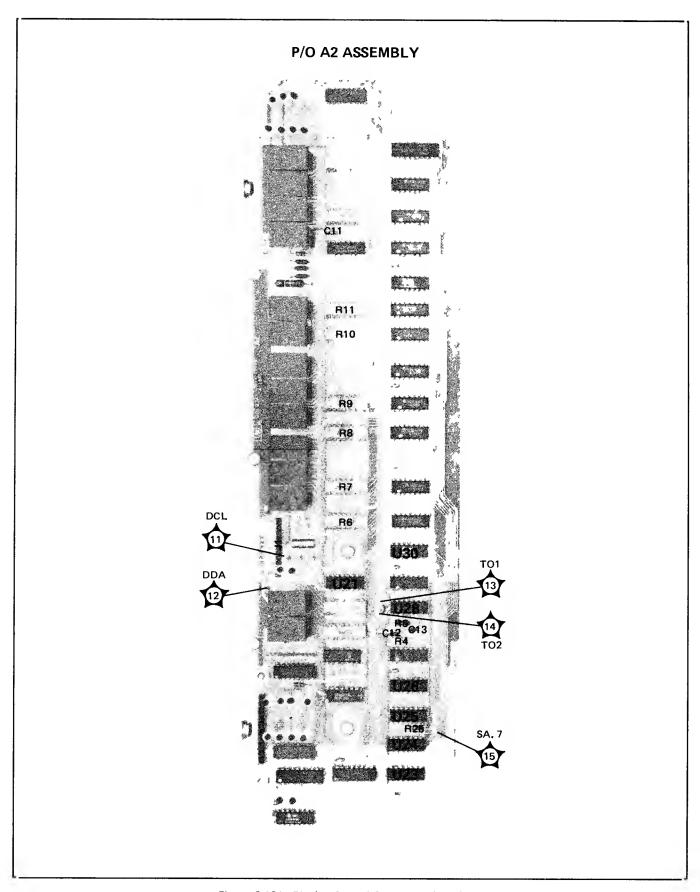


Figure 8-101. Display Control Component Locations

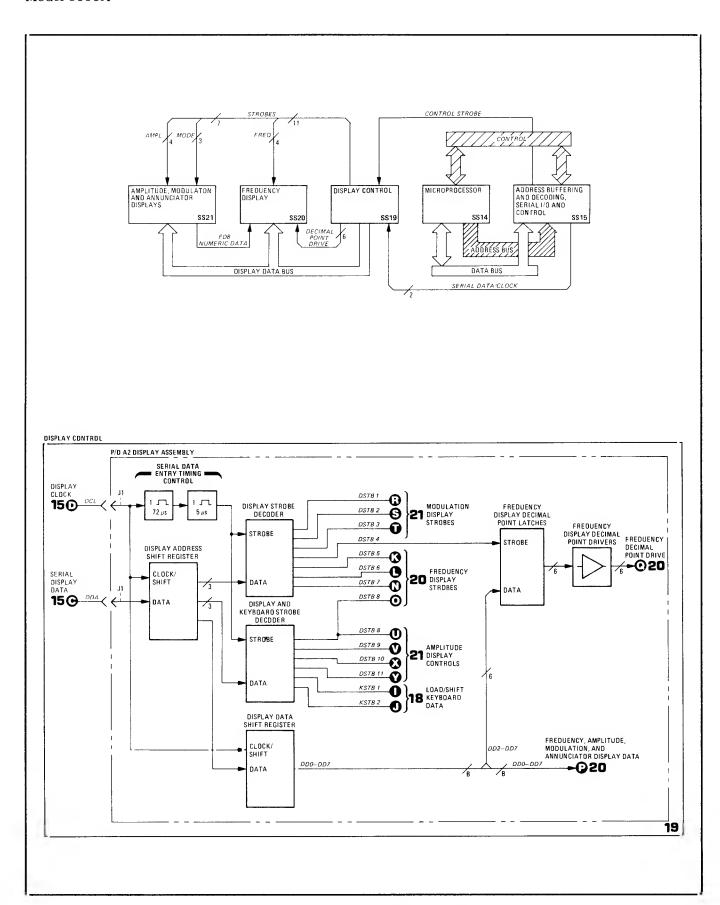
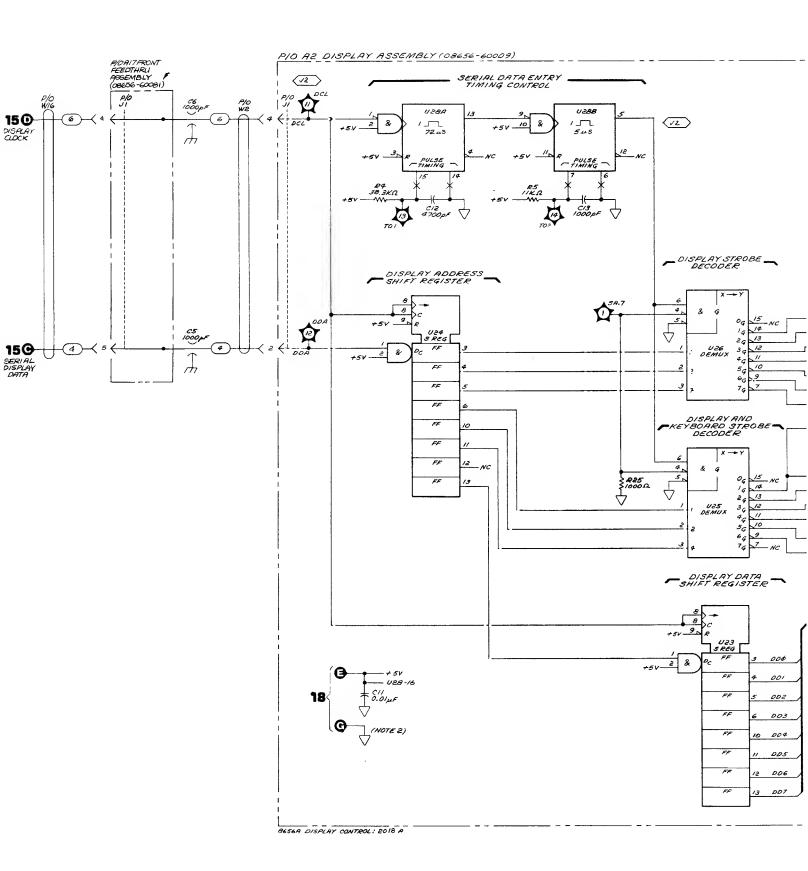
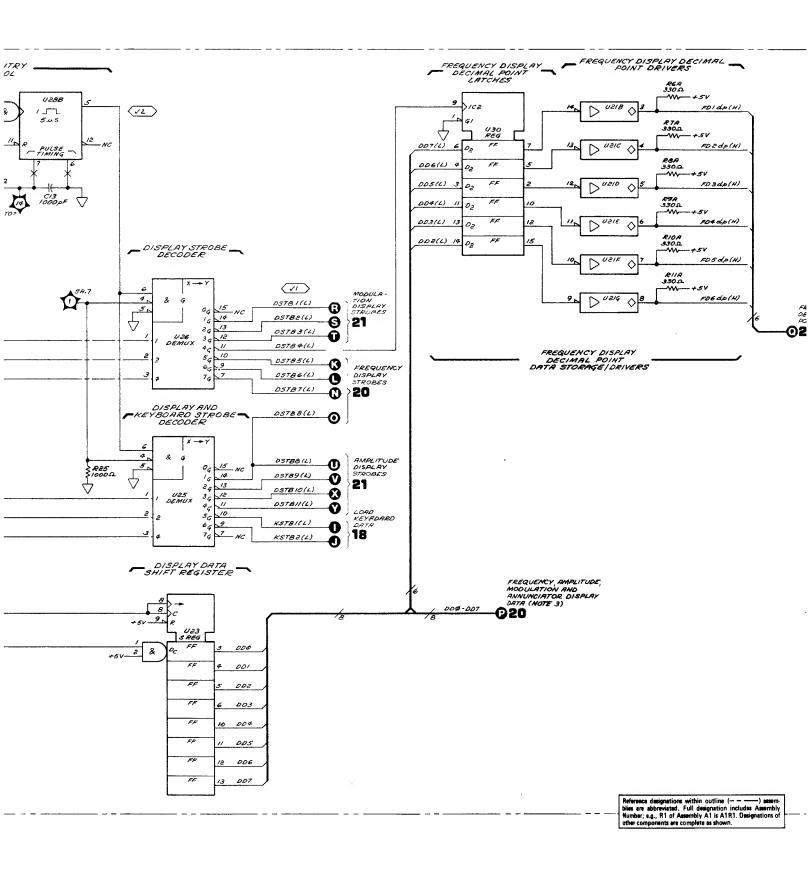


Figure 8-102. Display Control Block Diagrams





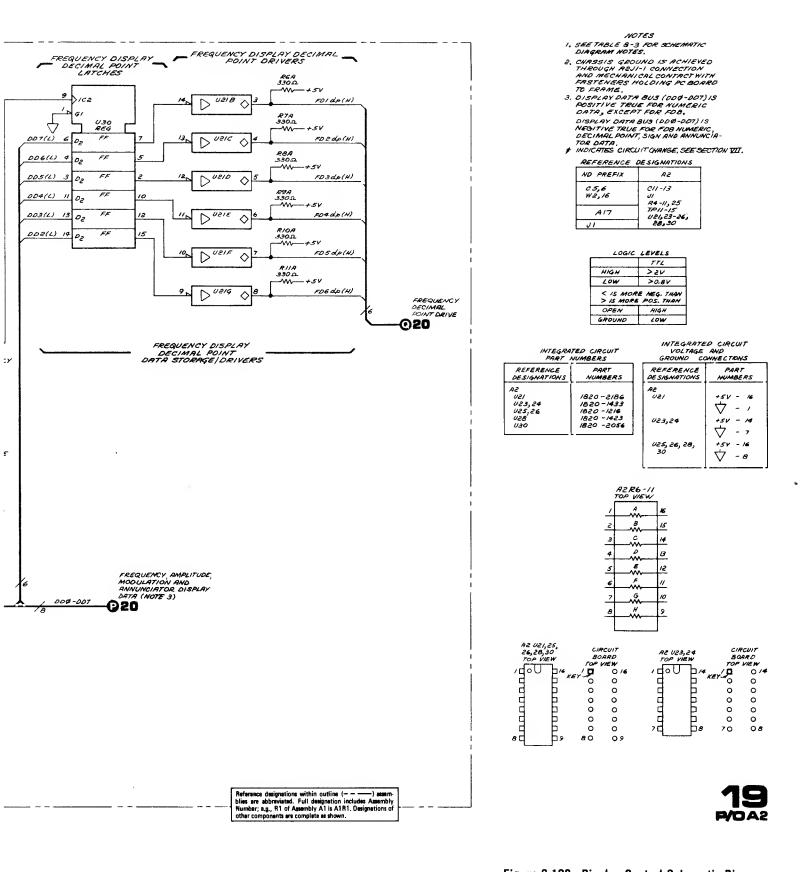


Figure 8-103. Display Control Schematic Diagram

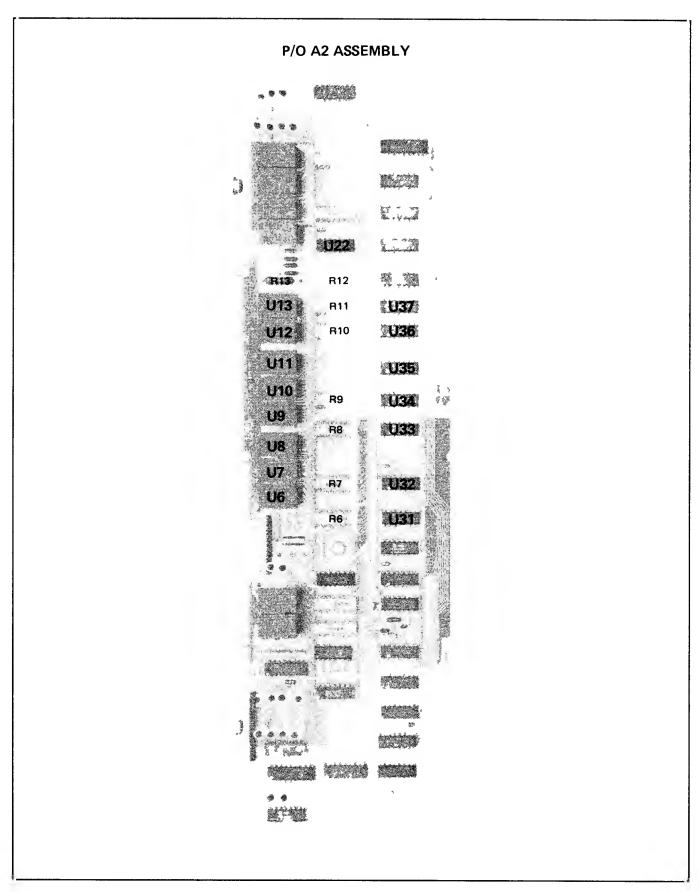


Figure 8-104. Frequency Displays Component Locations

Table 1. Frequency Display Data Signatures (Cont'd)

Node	Correct Signature	Comments
U36 #12	26HP	FR DIG 6
U36 #13	PHP1	(Cont'd)
U36 #14	1U22	
U36 #15	82C0	
+5V	F84P	
U37 #9	9F11	FR DIG 7
U37 #10	1F17	
U37 #11	8582	
U37 #12	PUHF	
U37 #13	HUU9	
U37 #14	A360	
U37 #15	6847	

Remove the jumpers between test points and between test point and ground. Reset the LOGIC/RAM switch to RAM.

If the HP-IB address switch was changed, reset the address switch (Service Sheet 17) to the original address. Set the front panel RESET-STBY-ON switch to RESET and back to ON.



Table 1. Frequency Display Data Signatures

Node	Correct Signature	Comments
+5V	F84P	
U31 #9	54 A 0	FR DIG 1
U31 #10	0H80	
U31 #11	09FF	
U31 #12	1HAA	
U31 #13	01H8	
U31 #14	FU58	
U31 #15	3A9C	
+5V	F84P	
U32 #9	Н9РА	FR DIG 2
U32 #10	1353	
U32 #11	UA1C	
U32 #12	PFF5	
U32 #13	25F6	
U32 #14	4AH1	
U32 #15	5554	
+5V	F84P	, ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
U33 #9	7059	FR DIG 3
U33 #10	3P0P	
U33 #11	13PC	
U33 #12	C4P5	
U33 #13	6PC6	
U33 #14	133P	
U33 #15	CC02	
+5V	F84P	
U34 #9	F3A2	FR DIG 4
U34 #10	C22P	
U34 #11	P8U9	
U34 #12	U339	
U34 #13	U1H0	
U34 #14	9209	
U34 #15	2659	
+5V	F84P	
U35 #9	UH23	FR DIG 5
U35 #10	7880	
U35 #11	4135	
U35 #12	55PC	
U35 #13	A492	
U35 #14	APi1	
U35 #15	8F6F	
+5V	F84P	
U36 #9	2C1A	FR DIG 6
U36 #10	3168	- 10 210 0
U36 #11	UUU9	

Setup. Connect the signature analyzer as follows:

- 1) GND to ground
- 2) START to 'SA5' A11TP9
- 3) STOP to 'SA5' A11TP9
- 4) CLK to 'SA4' A11TP7

Set the signature analyzer controls as follows:

- 1) START-IN
- 2) STOP-OUT
- 3) CLK-IN

Set up the Signal Generator as follows:

- 1) Place the LOGIC/RAM switch A11S1B in the LOGIC position.
- 2) Short A2TP14 'TO2' to 'GND'. This enables data transfer.
- 3) Connect A11TP10 'SA6' to 'SA7' A2TP15

NOTE

If the Signal Generator's address switch has been set to other than '07', the signatures taken in this test will be incorrect. In this case, reset the address switches to A1=1, A2=1, A3=1, A4=0 and A5=0. Then set the front panel RESET-STBY-ON switch to RESET and back to ON.

Initialize. Briefly short A11TP3 'NMI' to ground.

NOTES

With careless probing it is possible to get the Microprocessor into a program sequence other than that portion intended for signature analysis. If the +5V signature is incorrect, this has probably happened. Restart the test by setting the RST/RUN switch to RST and then RUN. Briefly touch the NMI test point to ground.

All LEDs should be cycling rapidly on and off.

Probe. Connect the probe to each node shown in Table 1. Verify that each signature is correct and stable.

14, 15 and 16 as well as the Troubleshooting on Service Sheets 18 and 19 is normally performed before troubleshooting these circuits. However, if the problem seems to be related only to the Frequency Display, you may wish to try to isolate the problem quickly by performing the following procedure first.

Determine if the malfunction occurs in single digits, pairs (such as frequency digits 1 and 2, 3 and 4, and 5 and 6, or multiple digits including the amplitude and/or modulation digits. If multiple digit displays are incorrect, be sure to:

- 1) perform the Troubleshooting Using Signature Analysis on Service Sheets 14, 15 and 16
- 2) then perform the Troubleshooting on Service Sheets 18 and 19.

If pairs of digits are incorrect, suspect the shift registers shown on Service Sheet 19. If single digits are incorrect, continue troubleshooting on this service sheet for amplitude or modulation display problems.

NOTE

This troubleshooting information is to be used instead of Troubleshooting Using Signature Analysis on Signal Generators with serial number prefixes 2009A, 2014A and 2018A. If preferred, this information may be used for all Signal Generators regardless of serial number prefix.

Test Equipment



Frequency Display Digital Drive Levels versus Visual LED Outputs

- 1. Verify that the seven-segment drive levels from the Latch/Decoder/Drivers matches the visual output for the equivalent segment.
- 2. Verify that the decimal point drive from the latch and drivers (refer to Service Sheet 19) matches the visual decimal point output.

TROUBLESHOOTING USING SIGNATURE ANALYSIS

Troubleshooting is done on the circuits of Service Sheet 20 when a defect seems to be related to the RF frequency display. If nothing definite is discovered in performing these signature analyzer checks, consider the other possibilites shown on Service Sheet BD4. If any of the signatures are incorrect, recall that the data passes through circuitry on Service Sheets 15 and 19 before arriving here.

Test Equipment

Purpose. To verify transmission of encoded display data from the Microprocessor to the frequency display drivers.

NOTE

Signatures are not valid for Signal Generators with serial number prefixes of 2018A and below.

SERVICE SHEET 20 P/O A2 DISPLAY ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD4
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

Frequency Display


Eight 7-segment, common-cathode devices U6 through U13 are used to display the frequency in megahertz. They are also used to display the frequency increment value. The decimal points associated with frequency digits 1 through 6 are the only decimal points that can be lit. The frequency display decimal point drive circuitry has been previously discussed (refer to Service Sheet 19). Frequency Digits 7 and 8 have their decimal point control line (U12 and U13-Pin 9) tied low which inhibits them from being lit.

Seven Latch/Decoder/Drivers U31 through U37 decode frequency display data, store the decoded data, and drive the associated frequency display digit. The associated resistor networks R6 through R12 are used to limit the amount of drive current applied to the display digit. As previously mentioned 16 bits of serial display data are sent from the Microprocessor to the display circuitry (refer to Service Sheet 19). After a serial-to-parallel conversion, the eight most-significant bits are stored in the Display Data Shift Register U23 and the eight least-significant bits are stored in the Display Address Shift Register U24. Six of the eight display address bits are decoded to produce eleven display strobes and two keyboard strobes. Display strobes DSTB5 through DSTB8 are used to strobe the frequency display data (DD0 through DD7) into the latch/decoder/ drivers. DSTB8 also strobes the display data for Amplitude Digit 2 at the same time it strobes the display data for Frequency Digit 7 (refer to Service Sheet 21). When a strobe is decoded, it will go low for $5 \mu s$ to latch a half byte (4 bits) of frequency display data into the associated latch/decoder/driver.

Each latch/decoder/driver is hard-wired to decode and drive the associated digit to display numerals 0 through 9, otherwise the digit will remain blanked. Frequency Digit 8 is hard-wired to display only a numeral 5, otherwise it will remain blanked. Drive for this digit is developed when display data bit 2 (DD2) is strobed into the Modulation/HP-IB Annunciator Latches U1 (refer to Service Sheet 21). When DD2 is active (low), the control lines of frequency digit 8 are pulled high through the series resistor R13 to display a numeral 5. When DD2 is inactive (high), the stored output will be inverted by the FD8 Numeral Driver U22A. This will cause the control lines of Frequency Digit 8 to be pulled low to blank the digit.

TROUBLESHOOTING

Troubleshooting is done on the circuits of Service Sheet 20 when a malfunction seems to be associated with the Frequency Display. The Troubleshooting Using Signature Analysis on Service Sheets

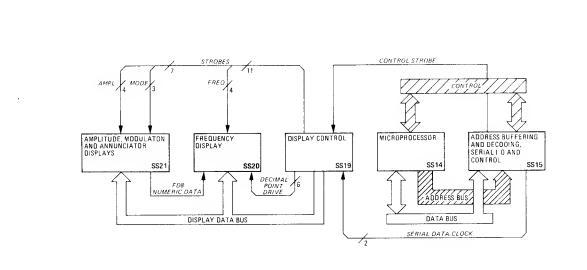




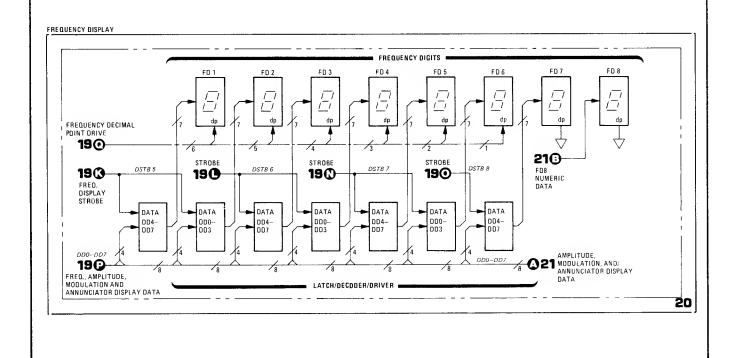


Figure 8-105. Frequency Displays Block Diagrams

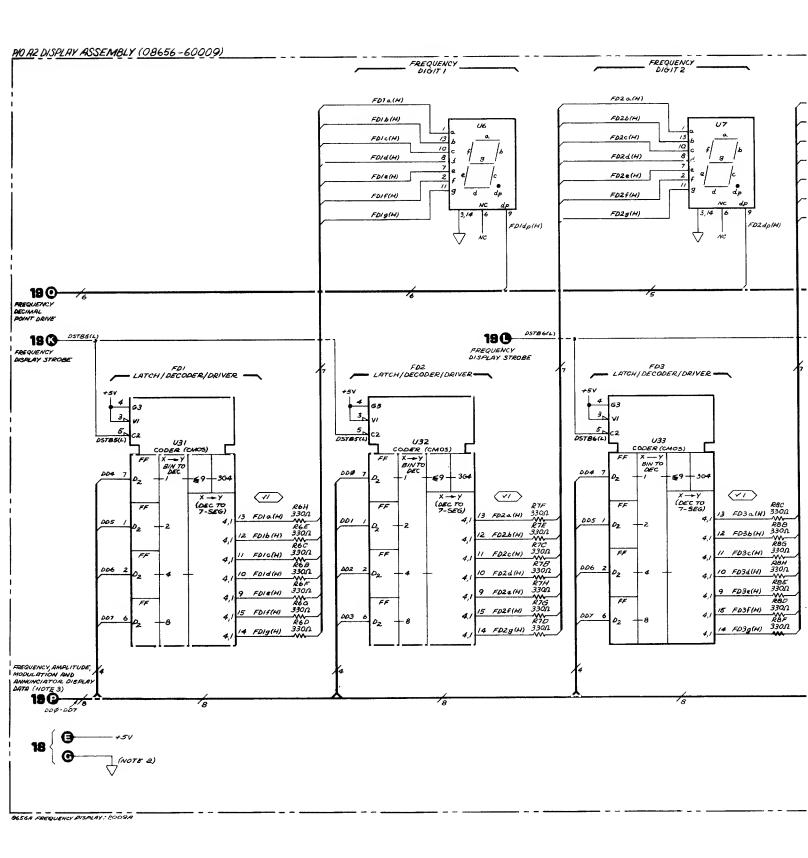

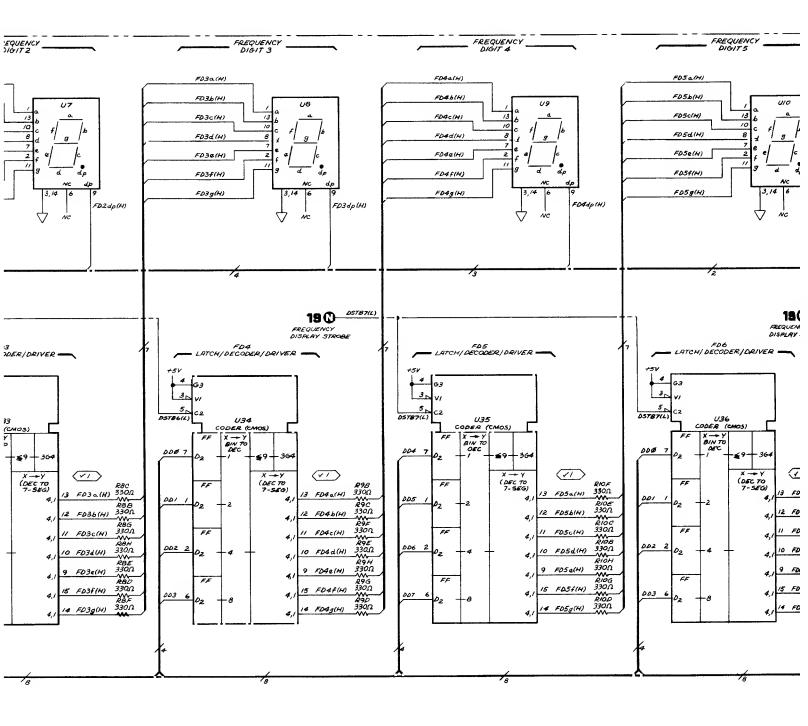

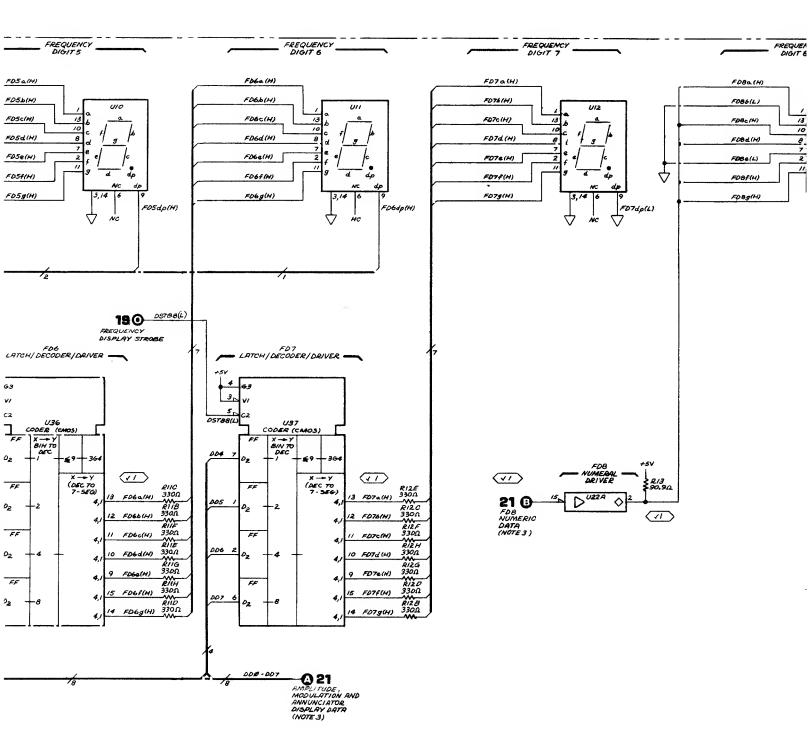

Reference designations within outline (———) assemblies are abbrevisted. Full designation includes Assembly Number; e.g., R1 of Assembly A1 is A1R1. Designations of other components are complete as shown.

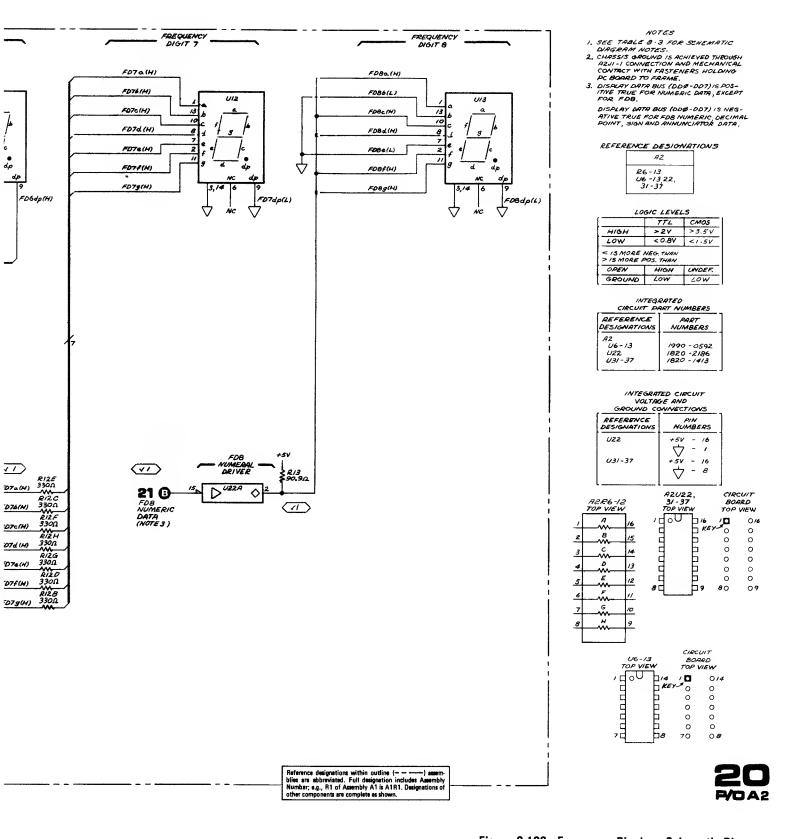


Figure 8-106. Frequency Displays Schematic Diagram

Service Model 8656A

SERVICE SHEET 21 (Cont'd)

Table 1. Decoded Amplitude Signatures

Node	Correct Signature	Comments
+5V	F84P	
U38 #2	P401	AP DIG 1
U38 #5	9CA4	AP ±
U38 #7	2AFA	į
U38 #10	620C	AP DP 1
U38 #12	580P	AP DP 2
U38 #15	22FC	AP DP 3
+5V	F84P	
U39 #9	UP60	AP DIG 2
U39 #10	9P35	
U39 #11	4CH5	
U39 #12	PH98	
U39 #13	AA91	
U39 #14	71F0	:
U39 #15	0276	
+5 V	F84P	
U41 #9	0U7H	AP DIG 4
U41 #10	7P96	
U41 #11	CH03	
U41 #12	8291	
U41 #13	180P	
U41 #14	1732	
U41 #15	19P2	

Table 2. Decoded Annunciator Signatures

	1	ĭ
Node	Correct Signature	Comments
+5V	F84P	
U1 #2	4PF5	MD DP 1
U1 #5	046 A	ADRS
U1 #7	49UH	RMT
U1 #10	27FA	%
U1 #12	C73C	kHz
+5 V	F84P	
U2 #2	FP81	HI EXT
U2 #5	34C1	EXT FM
U2 #6	3U35	LO EXT
U2 #9	352H	EXT AM
U2 #12	8405	1K Hz
U2 #15	AFPC	INT AM
U2 #16	UCFP	INT FM
U2 #19	4489	400 Hz
+5 V	F84P	
U42 #2	3C63	dB
U42 #5	7HC8	dBf
U42 #6	FU7A	EMF
U42 #9	962P	dBm
U42 #12	P54A	RD KY WRD
U42 #15	UCU0	VOLTS
U42 #16	PHCC	mV
U42 #19	8U 6 F	$\mu { m V}$

Table 3. Frequency Digit 8 Signature

Node	Correct Signature	Comments
+5V U1 #15	F84P L1PO	FR DIG 8

Remove the jumpers between test points and between test point and ground. Reset the LOGIC/RAM switch to RAM.

If the HP-IB address switch was changed, reset the address switch (refer to Service Sheet 17) to the original address. Set the front panel RESET-STBY-ON switch to RESET and back to ON.

- 1) GND to ground
- 2) START to 'SA5' A11TP9
- 3) STOP to 'SA5' A11TP9
- 4) CLK to 'SA4' A11TP7

Set the signature analyzer's controls as follows:

- 1) START-IN
- 2) STOP-OUT
- 3) CLK-IN

Set up the Signal Generator as follows:

- $1) \quad Place the LOGIC/RAM \ switch \ A11S1B \ in the \ LOGIC \ postion.$
- 2) Short A2TP14 'TO2' to 'GND'. This enables data transfer.
- 3) Connect A11TP10 'SA6' to 'SA7' A2TP1.

NOTE

If the Signal Generator's address switch has been set to other than '07', the signatures taken in this test will be incorrect. In this case, reset the address switches to A1=1, A2=1, A3=1, A4=0 and A5=0. Then set the front panel RESET-STBY-ON switch to RESET and back to ON.

Initialize. Briefly short A11TP3 NMI to ground.

NOTES

With careless probing it is possible to get the Microprocessor into a program sequence other than that portion intended for signature analysis. If the +5V signature is incorrect, this has probably happened. Restart the test by setting the RST/RUN switch to RST and then RUN. Briefly touch the NMI test point to ground.

All LEDS should be cycling rapidly on and off.

Probe. Connect the probe to each node shown in Tables 1, 2 and 3. Verify that each signature is correct and stable.



2. then perform the Troubleshooting on Service Sheets 18 and 19.

If pairs of digits are incorrect, perform the troubleshooting on Service Sheet 19. If single digit displays are incorrect, continue troubleshooting on this service sheet for amplitude or modulation display problems.

NOTE

This troubleshooting information is to be used instead of Troubleshooting Using Signature Analysis on Signal Generators with serial number prefixes 2009A, 2014A and 2018A. If preferred, this information may be used for all Signal Generators regardless of serial number prefix

Test Equipment



Amplitude and Modulation Display Digital Drive Levels versus Visual LED Output

- 1. Verify that the seven-segment drive level from the Latch/Decoder/Drivers matches the visual output for the equivalent segment.
- 2. Verify that the decimal point drive from the latches and drivers matches the visual decimal point output.



Annunciator's Digital Drive Levels versus Visual LED Outputs

If the digital drive level is low, the LED output should be lit.

TROUBLESHOOTING USING SIGNATURE ANALYSIS

Troubleshooting is done on the circuits of Service Sheet 21 when a defect seems to be related to the modulation, amplitude or annunciator displays. If nothing definite is discovered in performing these signature analyzer checks, consider the other possibilites shown on Service Sheet BD4. If any of the signatures are incorrect, recall that the display and strobe data transfer passes through circuitry on Service Sheets 15 and 19 before arriving here.

Test Equipment

Purpose. To verify transmission of encoded display data from the Microprocessor to the modulation, amplitude and annunciator display drivers.

NOTE

Signatures are not valid for Signal Generators with serial number prefixes of 2018A and below.

Setup. Connect the signature analyzer as follows:

vice Sheet 19), 16 bits of serial display data are sent from the Microprocessor to the display circuitry. After a serial-to-parallel conversion, the eight most-significant bits are stored in the Display Data Shift Register U23 and the eight least-significant bits are stored in the Display Address Shift Register U24. Six of the eight display address bits are decoded to produce eleven display strobes and two keyboard strobes. Display strobes DSTB8 and DSTB9 are used to strobe the amplitude display data (DD0 through DD7) into the three latch/decoder/drivers. When a strobe is decoded, it will go low for 5 µs to latch a half byte (4 bits) of amplitude display data into the associated latch/decoder/driver. Each latch/decoder/driver is hard-wired to decode and drive the associated digit to display numerals 0 through 9, otherwise the digit will remain blanked.

Amplitude Annunciators

There are seven LED annunciators associated with the Amplitude Display. These annunciators light to display amplitude units information. As in the case of the other displays, 16 bits of serial display data are sent from the Microprocessor, parallel converted, stored, and decoded. Amplitude annunciator display data bits are always active low. Display strobe DSTB11 is used to strobe amplitude annunciator display data (DD1 through DD7) into the Amplitude Annunciator Latches U42. When the strobe is decoded, it will go low for 5 μ s to latch the amplitude annunciator display data. When the stored bit is active (low), the associated LED annunciator DS13 through DS19 will light as current is drawn through the associated network resistor R22.

Display strobe DSTB11 is also used to strobe display data bit 0 (DD0) into the Amplitude Annunciator Latches U42 to force all six keyboard column lines low so that the row data can be read (refer to Service Sheet 18). When DD0 is active (high), a signal to read key row data (RKRD) will be issued to the keyboard encoding circuitry. This signal remains stored until the row data has been latched, then it will be cleared by the Microprocessor.

TROUBLESHOOTING

Troubleshooting is done on the circuits of Service Sheet 21 when a malfunction seems to be associated with the Amplitude or Modulation Displays. The Troubleshooting Using Signature Analysis on Service Sheets 14, 15 and 16 as well as the Troubleshooting on Service Sheets 18 and 19 is normally performed before troubleshooting these circuits. If the problem seems to be related only to the Amplitude or Modulation Displays, you may wish to try to isolate the problem quickly by performing the following procedure.

Determine if the malfunction occurs in single digits, pairs (such as amplitude digits 3 and 4, digit 1 and the decimal point, and so forth; refer to Table 1 on Service Sheet 19), or multiple digits including the amplitude and/or modulation digits. If multiple digit displays are incorrect, be sure to:

1. perform the Troubleshooting Using Signature Analysis on Service Sheets 14, 15 and 16

Display strobe DSTB1 is also used to strobe display data bit 2 (DD2) into the Modulation/HP-IB Annunciator Latches U1 to control Frequency Digit 8. When DD2 is active (low), the control lines of Frequency Digit 8 will be pulled high through the series resistor R13 to display a numeral 5 (refer to Service Sheet 20). When DD2 is inactive (high), the stored output will be inverted by the FD8 Numeral Driver U22A. This will cause the control lines of Frequency Digit 8 to be pulled low to blank the digit.

Amplitude Display

One 5-segment, universal +1 device U14 and three 7-segment, common-cathode devices U15 through U17 are used to display the RF output level. They are also used to display the amplitude increment value, as well as the current contents of the internal sequence counter. The decimal points associated with Amplitude Digits 1 through 3 are the only decimal points that can be lit. Amplitude Digit 4 has its decimal point control line (U17-Pin 9) tied low which inhibits it from being lit. Decimal point drive is developed when display data bits 2, 3, and 4 are strobed into the Amplitude Display Latches U38 by DSTB10. The Microprocessor ensures that only one of these bits is active (low) at any given time (except during the power-up subroutine). When one of these bits is active (low), the associated decimal point control line (U14-Pin 8, U15-Pin 9, or U16-Pin 9) will be pulled high through the series resistor R12A, R17A, or R18A to light the respective decimal point. When the bits are inactive (high) the stored output will be inverted by the associated decimal point driver U22D, U22E, or U22F. This will cause the associated decimal point control line (U14-Pin 8, U15-Pin 9, or U16-Pin 9) to be pulled low to inhibit the respective decimal point from being lit.

Plus or minus sign drive is produced in much the same manner as that used to light the amplitude display decimal points. The minus sign, which is part of Amplitude Digit 1, lights when display data bit 6 (DD6) is strobed into U38 by DSTB10. When DD6 is active (low), the minus sign control line (pin 4) is pulled low through the series resistor R19 to light the minus sign. The plus sign requires that display data bits 6 and 7 (DD6 and DD7) both be strobed into U38 by DSTB10. Just as in the case of the minus sign when DD6 is active (low), the horizontal segment of the plus sign will light. In addition, when DD7 is active (low), the two vertical segment control lines (pins 2 and 6) will be pulled high through the series resistor R21 to light the two vertical segments of the plus sign display. When DD7 is inactive (high), the stored output will be inverted by the AD1 Sign Driver U22B. This will cause the two vertical segment control lines (pins 2 and 6) to be pulled low to inhibit the two vertical segments of the plus sign display from being lit.

Three latch/decoder/drivers U39 through U41 are used to decode amplitude display data, store the decoded data, and drive the associated amplitude display digit. The associated resistor networks R17, R18, and R23 are used to limit the amount of drive current applied to the display digit. As previously mentioned (refer to Ser-

SERVICE SHEET 21 P/O A2 DISPLAY ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD4
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

Modulation Display

Two 7-segment, common-cathode devices U4 and U5 are used to display the level of modulation, either the AM depth in percent or the FM peak deviation in kilohertz. They are also used to display the modulation increment value as well as the internally-set decimal HP-IB address. The decimal point associated with Modulation Digit 1 is the only decimal point that can be lit. Modulation Digit 2 has its decimal point control line (U5-Pin 9) tied low which inhibits it from being lit. Decimal point drive is developed when display data bit 5 (DD5) is strobed into the Modulation/HP-IB Annunciator Latches U1 by DSTB1. When DD5 is active (low), the decimal point control line of Modulation Digit 1 (U4-Pin 9) will be pulled high by resistor R14B from the +5V power supply to light the decimal point. When DD5 is inactive (high), the stored output will be inverted by the MD1 dp Driver U21A. This will cause the decimal point control line of Modulation Digit 1 (U4-Pin 9) to be pulled low to inhibit the decimal point from being lit.

Two Latch/Decoder/Drivers U27 and U29 are used to decode modulation display data, store the decoded data, and drive the associated modulation display digit. The associated resistor networks R14 and R16 are used to limit the amount of drive current applied to the display digit. As previously mentioned (refer to Service Sheet 19), 16 bits of serial display data are sent from the Microprocessor to the display circuitry. After a serial-to-parallel conversion, the eight most-significant bits are stored in the Display Data Shift Register U23 and the eight least-significant bits are stored in the Display Address Shift Register U24. Six of the eight display address bits are decoded to produce eleven display strobes and two keyboard strobes. Display strobe DSTB3 is used to strobe the modulation display data (DD0 through DD7) into the two latch/decoder/drivers. When the strobe is decoded, it will go low for 5 μ s to latch a half byte (4 bits) of modulation display data into the associated latch/decoder/driver. Each latch/decoder/driver hard-wired to decode and drive the associated digit to display only numerals 0 through 9 (otherwise the digit will remain blanked).

Modulation/HP-IB Annunciators

There are ten LED annunciators associated with the Modulation Display. These annunciators light to indicate modulation units, source selection, or an external source over or under range condition. In addition, there are two LED annunciators used to indicate remote operation status. As in the case of the other displays, 16 bits of serial display data are sent from the Microprocessor, parallel converted, stored, and decoded. Modulation and HP-IB annunciator display data bits are always active low. Display strobe DSTB1 is used to strobe modulation or HP-IB annunciator display data (DD3 through DD7) into the Modulation/HP-IB Annunciator Latches U1, and DSTB2 is used to strobe modulation annunciator display data (DD0 through DD7) into the Modulation Annunciator Latches U2. When a strobe is decoded, it will go low for 5 μ s to latch the modulation or HP-IB annunciator display data. When the stored bit is active (low), the associated LED annunciator DS1 through DS12 will light as current is drawn through the associated network resistor R15.

Model 8656A Service

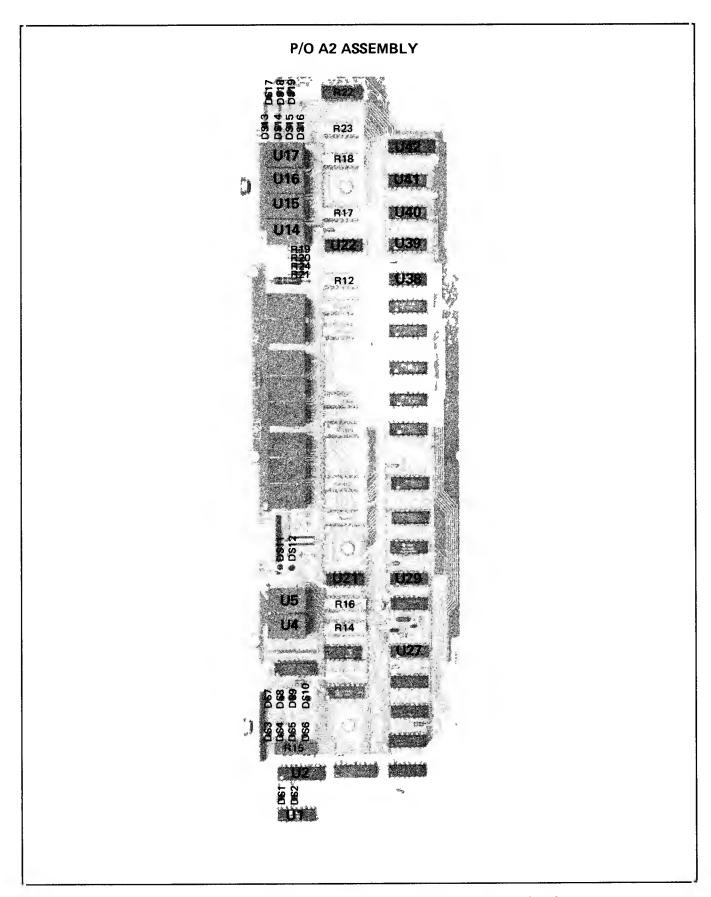
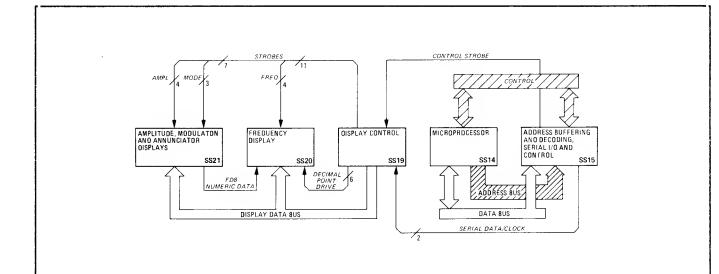


Figure 8-107. Amplitude, Modulation and Annunciator Displays Component Locations



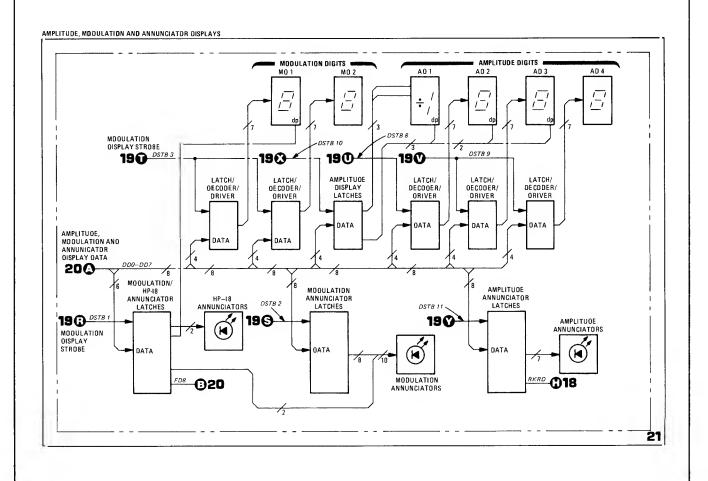
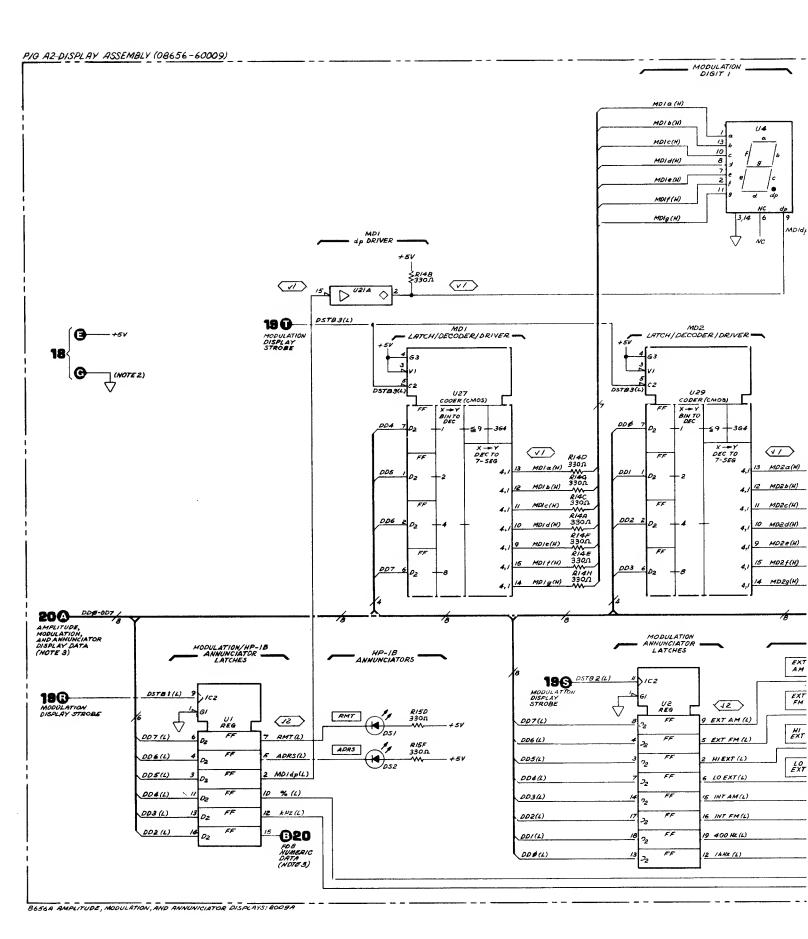
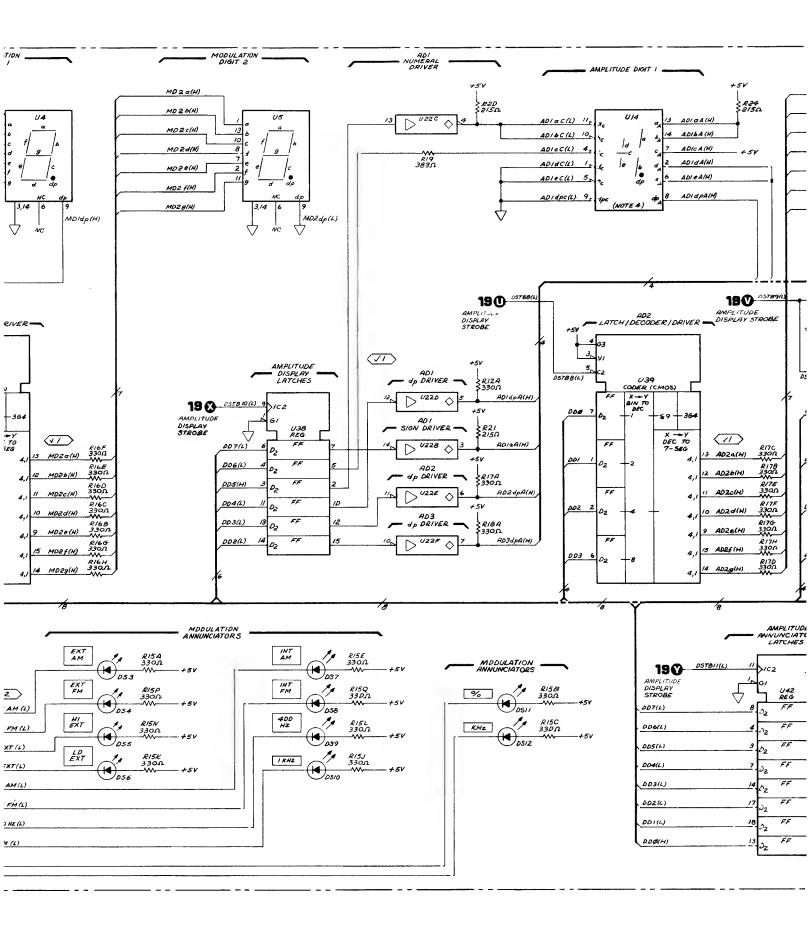
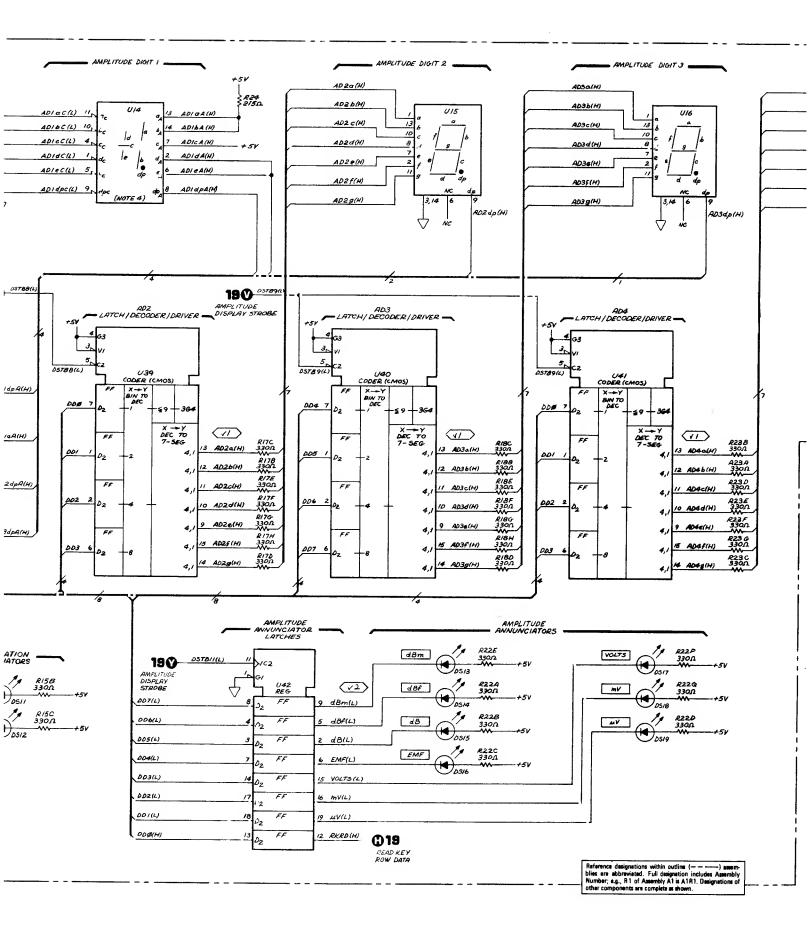


Figure 8-108. Amplitude, Modulation and Annunciator Displays Block Diagrams







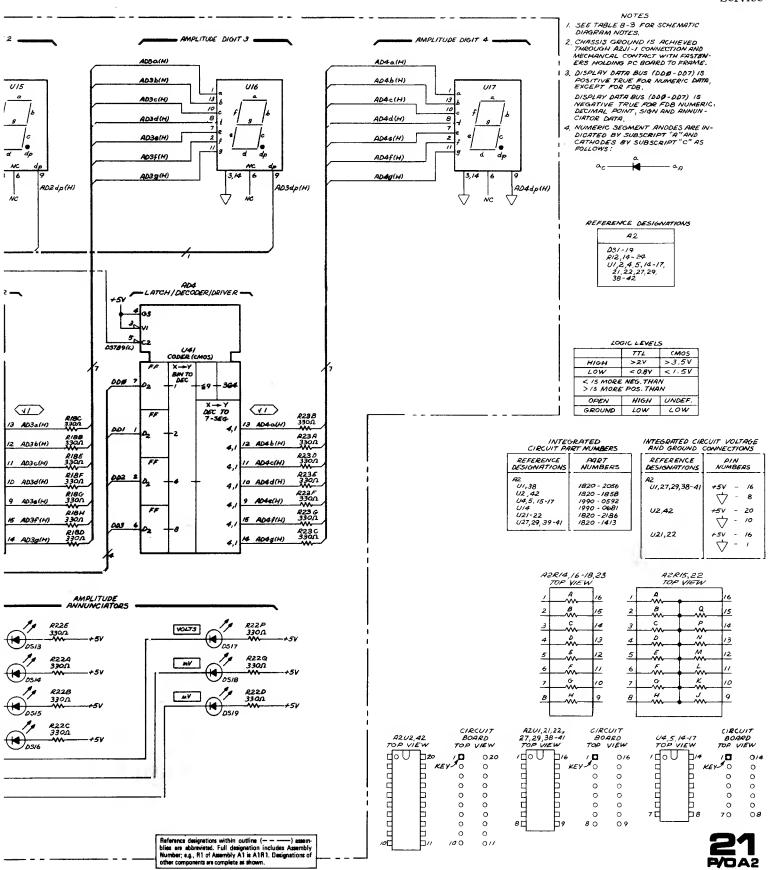


Figure 8-109. Amplitude, Modulation and Annunciator Displays Schematic Diagram

Service Model 8656A

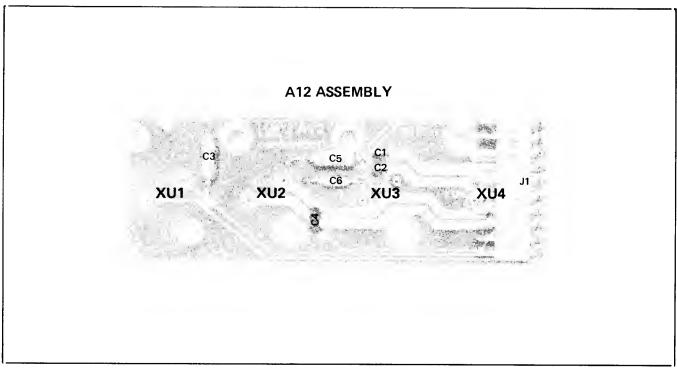


Figure 8-110. Voltage Regulator Component Locations

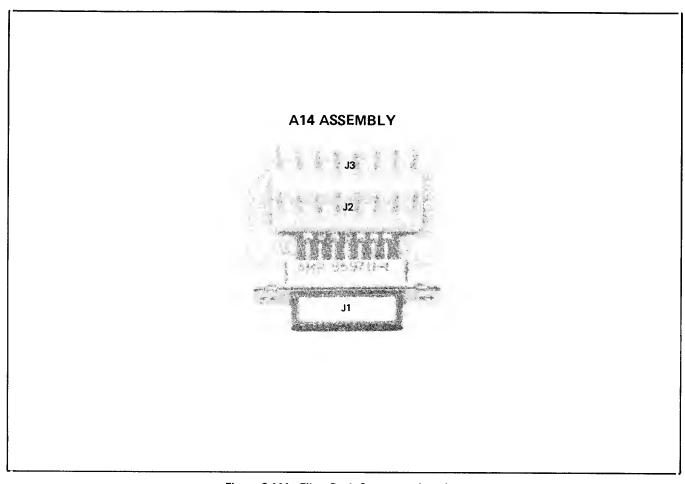


Figure 8-111. Filter Bank Component Locations

SERVICE SHEET 22 (Cont'd)

keeps the regulators from being reverse biased if an output is connected to a higher voltage.

The overvoltage protection circuit at the input of the +15 and -15V power supplies (VR5, R65, C21 and Q12) protects the supplies from excess line voltage. The unregulated voltages for the +15 and -15 Vdc supplies are about +25 and -25 Vdc. The 68.1 volt zener diode VR5 and its accompanying components is connected between the two supplies. The normal voltage across the zener diode is approximately 50 Vdc. When the voltage exceeds the threshold of 68.1 volts, the zener will turn on. Current is drawn through R65 which charges C21 until Q12 fires. Then the line fuse blows.

The +5 Vdc supply's crowbar (overvoltage protection) circuit consists of VR6, R80, R81 and Q3. The circuit protects the +5 volt supply if it is shorted to the +15 Vdc supply or other positive voltage greater than the threshold voltage of VR6 (+8.25 volts). In this situation, VR6 will turn on and draw enough current through R80 to fire Q3. This blows the +5 volt supply fuse.

LEDs DS1,2 and 3 are lit when the power supplies are providing an output voltage. Resistors R82, 83 and 84 set the current through the LEDs. Inductors L1, 2 and 3 and capacitors C17, 18, 19, 23, 24, 25, 26, 27 and 28 isolate and filter the associated supplies.

TROUBLESHOOTING

Procedures for checking the circuits shown on Service Sheet 22 are given below. The area or points to check are marked on the schematic by a hexagon with a check mark and a number inside, e.g. (3). Fixed voltages are shown on the schematic inside a hexagon, e.g. $(2V\pm0.2V)$. Transistor bias voltages are shown without tolerances.

Test Equipment

Digital Multimeter	 	 	 HP 3465A
Oscilloscope	 	 	 HP 1222A



Verify that the voltages shown in Table 1 are correct.

Table 1. Power Supply Measurements

			On te			
Volts	11	13	9	3	10	2
Vdc Vp-p	+25 1.0	+17 to +13 0.01	+11 1.5	+5.6 to +5.2 0.01	-25 1.0	-13 to -17 0.01

SERVICE SHEET 22
P/O A10 AUDIO/POWER SUPPLY ASSEMBLY
P/O A12 VOLTAGE REGULATOR ASSEMBLY
P/O A14 FILTER BANK ASSEMBLY
A15 LINE POWER MODULE
P/O A16 10 MHz REFERENCE OSCILLATOR ASSEMBLY

TROUBLESHOOTING HELP

Service Sheet BD1
Table 4-1. Abbreviated Performance Tests
Table 5-2. Post-Repair Adjustments

PRINCIPLES OF OPERATION

General

The four dc power supplies are ± 24 Vdc unregulated, ± 15 Vdc regulated, ± 5 Vdc regulated and ± 15 Vdc regulated. The Attenuator Current Protection circuit protects against continuing current flow through the A9 Attenuator Assembly's latching relay coils. The switching time is about 60 ms. There are two types of overvoltage protection circuits. The first limits the unregulated voltage input to the ± 15 volt supplies. The second type limits the voltage out of the ± 5 volt supply to the Signal Generator's circuits.

+24V Unregulated Supply and Attenuator Current Protection

The unregulated +24 volts switches the Step Attenuator, the Heterodyne frequency band and supplies current to the crystal oven's heater when the high stability time base, Option 001 is installed. The Attenuator Current Protection circuit will short +24V to ground through Q1 which blows F1. This occurs when attenuator and or heterodyne band switching current is drawn for more than 2.2 seconds.

The comparator, U2's reference voltage is set by the +24 voltage divided by R73 and R74. The step attenuator and heterodyne band switching coils draw current only during the time the switching takes place (about 60 ms). The resulting voltage drop across R75 will cause the voltage at the inverting input to go more negative. This causes the output of U2 to try to switch positive. Capacitor C22 keeps the output from switching immediately. The capacitor charges through R72 which is connected to the +5V supply. When the voltage on C22 nears +1.4 volts, Q2 will conduct enough current to trigger SCR Q1. This shorts the +24 volt supply to ground which blows fuse F1.

Regulated +15, +5, and -15 Volt Supplies

The ac voltages from the secondary of the power transformer are rectified by diodes CR6,7,8 and 9 for the +15 and -15 Vdc unregulated voltages. The +5 volts dc supply's unregulated voltage is from rectifiers located within the rear panel.

Diodes CR12, 13 and 14 protect the series regulators, U1, U2 and U3. If the output voltage of the series regulators goes more positive than the unregulated input voltage the diodes will be turned on. This




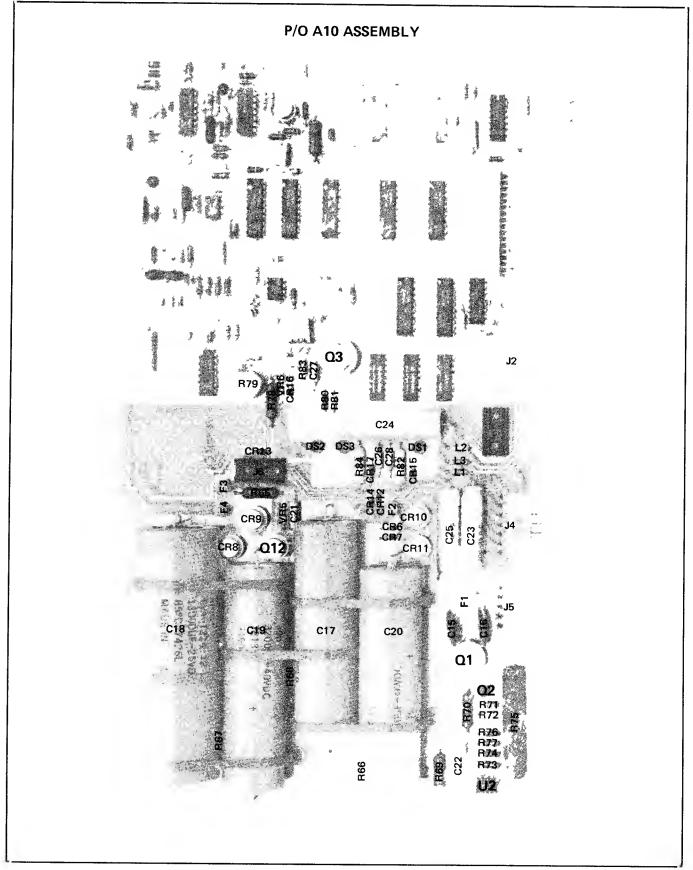


Figure 8-112. Power Supply (A10 Assembly) Component Locations

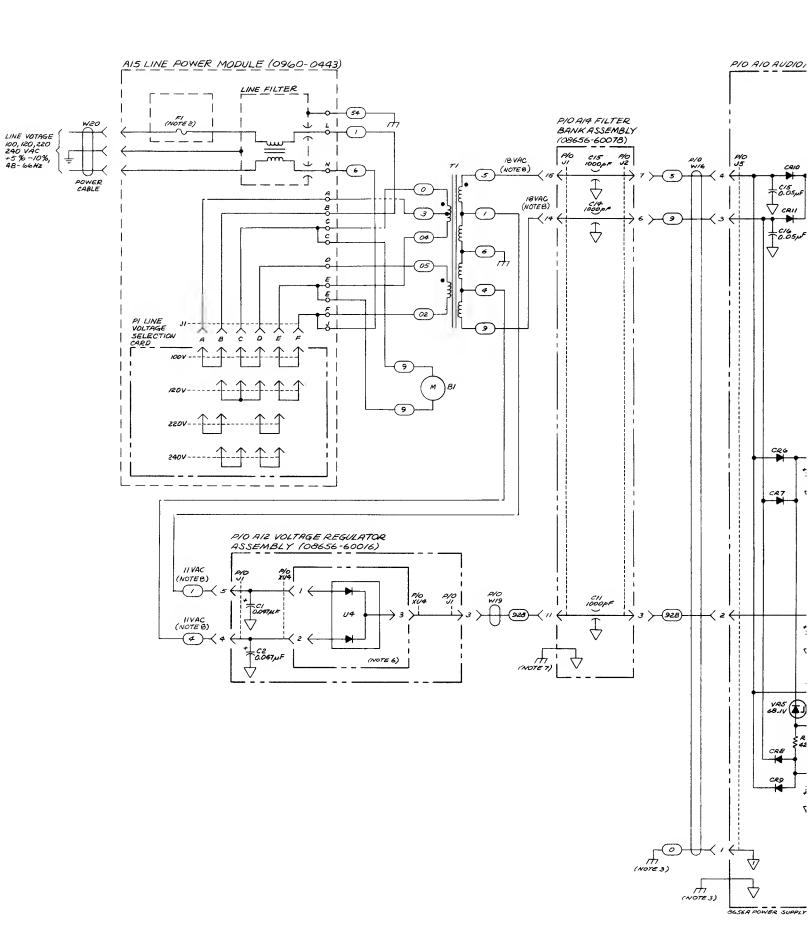

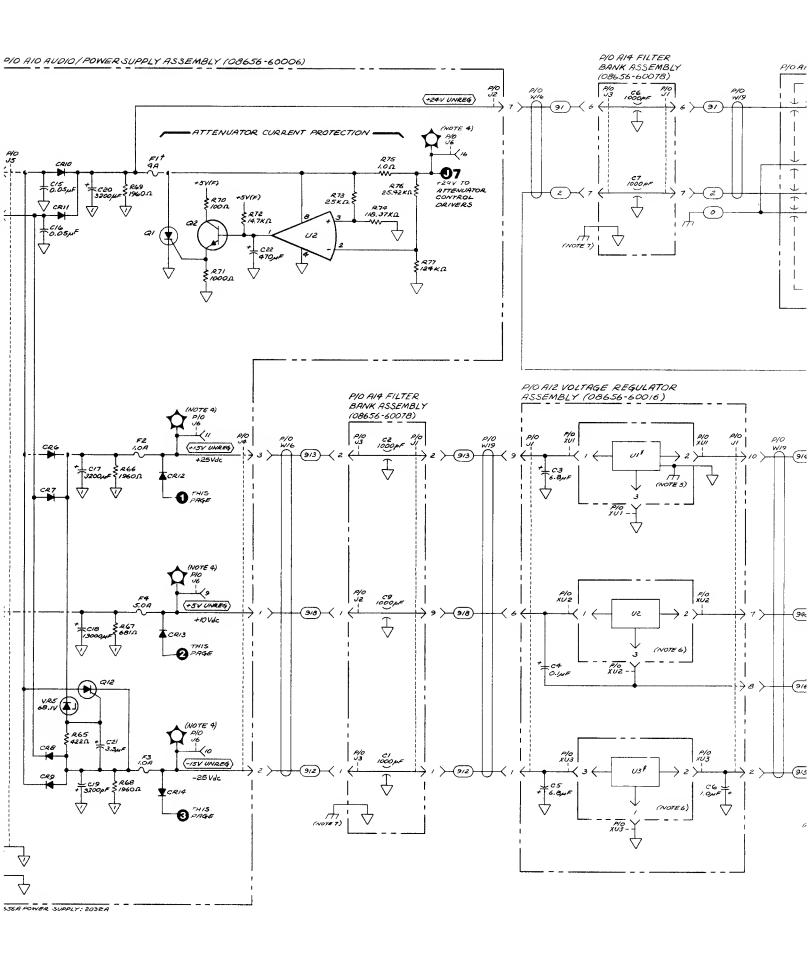

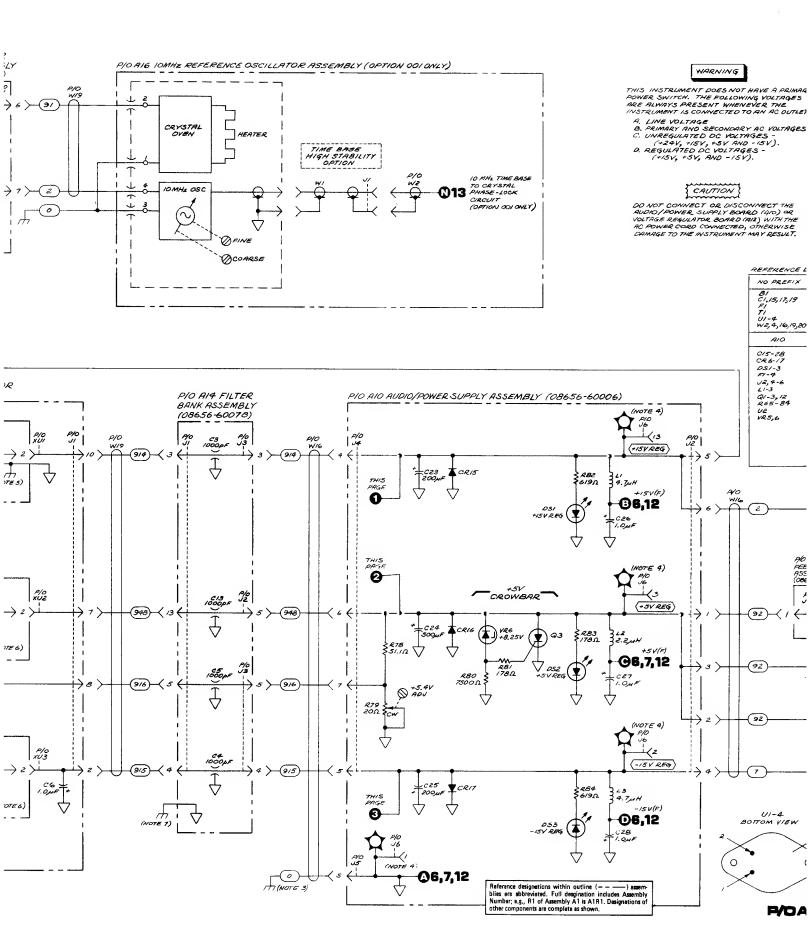

Figu

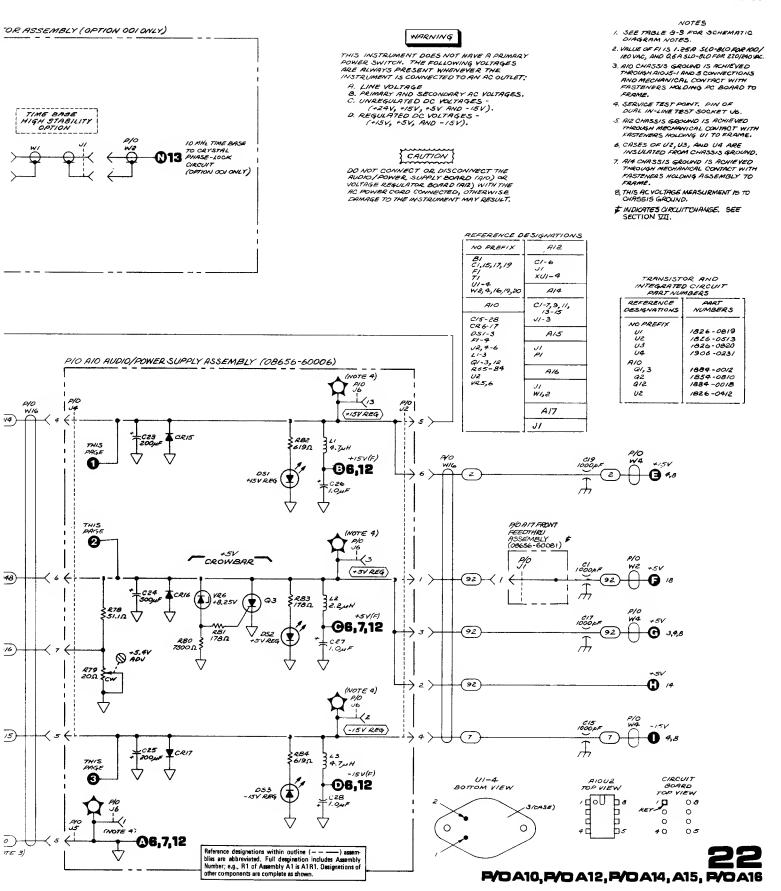


Figure 8-113. Power Supply Schematic Diagram



Arranged alphabetically by country

GUAM

ANGOLA Telectra Empresa Técnica de Equipamentos Eléctricos, 5.A.R.L R. Barbosa Rodrigues, 41-I°0T° Caixa Postal, 6487 Luanda Tel: 35515/6

ARGENTINA Hewlett-Packard Argentina 5.A Santa Fe 2035, Martinez 6140 Buanos Airas Tel: 792-1239, 798-6086 Telex: 122443 AR CIGY Biotron 5.A.C.I.y M. Avda. Paseo Colon 221

9 piso 1399 Buanos Airas Tel: 30-4846/1851/8384 34-9356/0460/4551 Telex: (33) 17595 BIO AR

AUSTRALIA AUSTRALIA CAPITAL TERR.

Hewlett-Packard Australia Ptv

Ltd. 121 Wollongong Street Fyshwick, 2609 Telex: 62650

NEW SOUTH WALES

Hewlett-Packard Australia Pty 31 Bridge Street Pymbla, 2073 Tel: 4496566

OUEENSLAND Hewlett Packard Australia Pty

Ltd Teachers Union Building 495-499 Boundary Street Spring Hill, 4000 Tel: 2291544

SOUTH AUSTRALIA Hewlett-Packard Australia Ptv

153 Greenhill Road Parkalda, 5063 Tel: 2725911 Telex: 82536

VICTORIA Hewlett-Packard Australia Pty.

I td. 31-41 Joseph Street Blackburn, 3130 Tel: 89-6351 Telex: 31024 MELB

WESTERN AUSTRALIA Hewlett-Packard Australia Pty

I td. 141 Stirling Highwa Nadlanda, 6009 Tel: 3865455 Telex: 93B59

AUSTRIA Hewlett-Packard Ges.m.b.H. Wehlistrasse 29 P.O Box 7 A-1205 Vlanna Tel: 35-16-21-0 Telex: 13582/135066

Hewlett-Packard Ges.m b H Wehlistrasse, 29 A-1205 Wian

Telex 135066 RAHRAIN

Wael Pharmacy P O. Box 648 Bahrain Tel: 54886, 56123 Telex: 8550 WAEL GJ

Al Hamidiya Trading and Contracting P.O. Box 20074

Tel: 259978, 259958 Telex: 8895 KALOIA GJ

BANGLADESH The General Electric Co. of Bangladesh Ltd Magnet House 72
Dilkusha Commercial Area
Motijhall, 0acca 2
Tel: 252415, 252419

Telex: 734 BELGIUM Hewlett-Packard Benelux SA/NV Avenue du Coi-Vert, 1, (Groenkraaglaan) B-1170 Brussals Tel (02) 660 50 50

Telex: 23-494 paloben bru

BRAZIL Hewlett-Packard do 8rasil I.e.C Ltda. Alameda Rio Negro, 750

Alphaville 06400 Baruari SP Tel 429-3222 Hewlett-Packard do Brasil

I.e.C. Ltda. Rua Padre Chagas, 32 90000-Pôrto Alagra-R5 Tel: 22-2998, 22-5621 Hewlett-Packard do Brasil

I.e.C Ltda Av Epilacio Pessoa, 4664 22471-Rio da Janairo-RJ Tel: 286-0237 Telex: 021-21905 HPBR-BR

CANADA

ALBERTA Hewlett-Packard (Canada) Ltd 11620A - 168th Street Edmonton T5M 3T9 Tel: (403) 452-3670 TWX: 610-831-2431 Hewlett-Packard (Canada) LId.

210, 7220 Fisher 51, S.E. Calgary T2H 2H8 Tel: (403) 253-2713 TWX: 610-821-6141

BRITISH COLUMBIA Hewlett-Packard (Canada) Ltd. 10691 Shellbridge Way Richmond V6X 2W7 Tel. (604) 270-2277 TWX 610-925-5059

MANITOBA Hewlett-Packard (Canada) Ltd. 380-550 Century 51. St. Jamas, Winnipeg R3H 0Y1 Tel: (204) 786-6701 TWX: 610-671-3531

NOVA SCOTIA Hewlett-Packard (Canada) Ltd. P.O. Box 931 800 Windmill Road Dartmouth B3B 1I 1

Tel: (902) 469-7820 TWX 610-271-4482

ONTARIO lett-Packard (Canada) Ltd 1020 Morrison Or Ottawa K2H BK7 TWX: 610-563-1636

Hewlett-Packard (Canada) Ltd 6877 Goreway Orive Mississauga L4V 1M8 Tel: (416) 678-9430 TWX: 610-492-4246

Hewlett-Packard (Canada) Ltd. 552 Newhold Street Tel: (519) 686-9181 TWX 610-352-1201

OUEBEC Hewlett-Packard (Canada) Ltd. 275 Hymus Blvd.

Pointa Claira H9R 1G7
Tel: (514) 697-4232

TWX: 610-422-3022 FOR CANADIAN AREAS NOT

LISTED: Contact Hewlett-Packard (Canada) Ltd. in Mississauga CHILE

Jorge Calcagni y Cia. Ltda Arturo Burhle 065 Casilla 16475 Correo 9, Santiago Tel: 220222 Telex. JCALCAGNI

COLOMBIA Instrumentación Henrik A. Langebaek & Kier

5.A. Carrera 7 No. 48-75 Apartado Aéreo 6287 Bogotá, 1 D.E. Tel: 269-8B77 Telex: 44400 Instrumentación H.A Langebaek & Kier 5 A Carrera 63 No. 49-A-31 Apartado 54098

Madallin

Tel: 304475

COSTA RICA Cientifica Costarricense 5.A Avenida 2, Calle 5 San Pedro de Montes de Oca Apartado 10159 San José Tel: 24-38-20, 24-08-19 Telex: 2367 GALGUR CR

CYPRUS Kypronics 19 Gregorios Xenopoulos Street P.O Box 1152 Nicoala Tel 45628/29

CZECHOSLOVAKIA Hewlett-Packard Obchodni zastupitelstvi v C55R isemny styk Post schranka 27 C5 118 01 Praha 011

Telex: 3018

Vyvojova a Provozni Zakladna Vyzkumnych Ustavu v Rechavioich

CSSR-25097 Bachovica u Prahy Tel: 89 93 41

Telex: 12133 Institute of Medical Bionics Vyskumny Ustav Lekarskej Bioniky

Jedlova 6 CS-88346 Bratislava-

Kramara Tel: 44-551 Telex: 93229

DENMARK Hewlett-Packard A/5 Datavej 52 0K-3460 Birkarod Tel: (02) 81 66 40 Telex: 37409 hpas dk Hewlett-Packard A/S Naverve_i 1 DK-B600 Slikaborg

Tel: (06) B2 71 66 Telex. 37409 hpas dk **ECUADOR** CYEOE Cia Ltda. P.O. Box 6423 CCI Av Eloy Alfaro 1749 Oulto Tel: 450-975, 243-052 Telex: 2548 CYEDE EO Medical Only

Hospitalar 5.A Casilla 3590 Robles 625 Oulto Tel: 545-250

EGYPT International Engineering Associates 24 Hussein Hegazi Street Kasr-el-Aini Calro

Tel: 23 B29 5AMITRO 5ami Amin Trading Office 18 Abdel Azız Gawish bdina-Calro

Tel: 24932 FL SALVADOR Bulevar de los Heroes 11-48 Edificio Sarah 114B San Salvador Tel: 252787

ETHIOPIA Addis Ababa

FINLAND Hewlett-Packard Oy Revontulentie, 7

SF-02 100 **Espoo** 10 Tel: (90) 455 0211 Telex: 121563 hewpa sf FRANCE

Hewlelt-Packard France Zone d'activites de Courtaboeuf Avenue des Tropiques Boite Postale 6 91401 **Orsay**-Cédex Tel: (1) 907 78 25 TWX: 600048F Hewlett-Packard France Chemin des Mouilles BP 162 69 130 Ecully Tel: (7B) 33 81 25 TWX: 310617F

Hewlett-Packard France 20, Chemin de La Cépière 31081 Toulousa La Mirall-Céde: Tel: (61) 40 11 12

Hewlett-Packard France Le Ligoures Place Romée de Villeneuve 13100 Alx-an-Provanca Tel: (42) 59 41 02 TWX 410770F

Hewlett-Packard France 2, Allee de la 8ourgonette 35100 Rannas Tel· (99) 51 42 44 TWX: 740912F

Hewlett-Packard France 18, rue du Canal de la Marne 67300 Schiltighaim TWX: 890141F

Hewlett-Packard France Immeuble péricentre rue van Gogh 59650 Villanauva O'Ascq Tel: (20) 91 41 25 TWX 160 124F

Hewlett-Packard France Bâtiment Ampère Rue de la Commune de Paris 8.P. 300 93153 La Blanc Maanli-

Cédex Tel: (01) 931 88 50 Telex: 211032F

Hewlett-Packard France Av. du Pdt Kennedy 33700 Marignac Tel: (56) 97 01 81 Hewlett-Packard France Immeuble Lorraine Roulevard de France 91035 Evry-Cédex Tel: 077 96 60

Telex: 692315F Hewlett-Packard France 23 Rue Lothaire 57000 Matz Tel (B7) 65 53 50

GERMAN FEDERAL REPUBLIC
Hewlett-Packard GmbH Vertriebszentrale Frankfurt Berner Strasse 117 Postfach 560 140 0-6000 Frankfurt 56 Telex: 04 13249 hpffm d Hewlett-Packard GmbH

Technisches Bürg Böblingen Herrenberger Strasse 110 0-7030 Böblingan, Würtlemberg Tel. (07031) 667-1 Telex. 07265739 bbn Hewlett-Packard GmbH Technisches Büro Düsseldorf Emanuel-Leutze-Str. 1

0-4000 Duagaldorf Tel. (0211) 5971-1 Telex: 085/86 533 hpdd d Hewlett-Packard GmbH Technisches Büro Hamburg Kapstadtring 5 0-2000 Hamburg 60 Tel: (040) 63804-1 Telex. 21 63 032 hphh d Hewlett-Packard GmbH

Meeakshi Mandiram XXXXV/1379-2 Mahatma Am GrossmarkI 6 Gandhi Rd 0-3000 Hannovar 91 Cochin 682 016 Tel: (0511) 46 60 01 Telex: 092 3259 Tel: 32069 Telex 085-514 Hewlett-Packard GmbH Blue Star Ltd

Technisches Büro Nürnberg 1-1-117/1 Saroiini Devi Road Neumeyerstrasse 90 0-8500 Nürnbarg Tel: (0911) 52 20 B3 Sacundarabad 500 033 Tel: 70126 Telex: 0155-459 Telex: 0623 860 Blue Star Ltd.

133 Kodambakkam High Road Hewlett-Packard GmbH Madras 600 034 Technisches Bilro München Tel: 82057 Eschenstrasse 5 0-8021 Taufkirchan Telex 041-379 ICELAND Tel: (089) 6117-1 Telex: 05249B5 Medical Only Elding Trading Company Inc. Hafnarnvoli - Tryggvagötu P O Box 895 Hewlett-Packard GmbH Technisches Buro Berlin

Tel: (030) 24 90 86 Telex: 01B 3405 hpbin d GREECE Kostas Karayannis 8 Omirou Street Athena 133 Tel: 32 30 303/32/37 731 Telex: 21 59 62 RKAR GR

Kailhstrasse 2-4

0-1000 Barlin 30

Guam Medical Supply, Inc.

Suite C, Airport Plaza P.O 8ox 8947 **Tamuning** 96911 Tel: 646-4513

GUATEMALA IPE5A Avenida Reforma 3-48 Zona 9 Guatamala City

Tel: 316627, 314786, 66471-5, ext. 9 Telex 4192 Teletro Gu

HONG KONG

Hewlett-Packard Hong Kong Ltd. 11th Floor, Four Seas Bidg 212 Nathan Rd. Kowloon Tel. 3-697446 (5 lines) Telex: 36678 HX Medical/Analytical Only Schmidt & Co. (Hong Kong) l td. Wing On Centre, 28th Floor

Connaught Road, C Hong Kong Tel 5-455644 Telex: 74766 5CHMX HX

Blue Star Ltd

Bhavdeep 5ladium Road

Blue Star Lld.

7 Hare 5treet

Blue 5tar Ltd

Bhandari House

91 Nehru Place

Telex 031-2463

Blue Star Ltd.

Maruthankuzhi

Blue 51ar Ltd

Blue 5tar Ltd

11 Magarath Road

Bangaiora 560 025 Tel: 55668 Telex: 0845-430

I5-Raykjavik Tel 1 5B 20/1 63 03

BERCA Indonesia P T P.O Box 496/Jkt.

Tel: 349255, 349BB6 Telex 46748 BERSIL IA

Jin Abdul Muis 62

INDONESIA

Jakarta

Naw Daihi 110 024 Tel: 682547

C. 7/603 'Poornima'

Trivandrum 695 013 Tel: 65799 Telex: 0884-259

Calcutta 700 001

Tel: 23-0131 Telex: 021-7655

INDIA ISRAEL Blue 5lar Ltd Electronics Engineering Oiv of Motorola Israel Ltd. 16, Kremenetski 5treel P.O. Box 25016 5ahas 414/2 Vir Savarkar Marq Prabhadevi Bombay 400 025 Tel: 45 78 87 Tal-Aviv Tel: 38973 Telex. 011-4093 Telex: 33569, 34164 Blue Star Ltd. ITALY Prabhadevi

Hewlett-Packard Italiana S.p.A. Via G. Di Viltorio, 9 20063 Carnuaco Sul Bombay 400 025 Tel: 45 73 01 Naviglio (MI) Tel: (2) 903691 Telex: 334632 HEWPACKIT Telex: 011-3751 Hewlett-Packard Italiana 5.p A Via Turazza 14 **Ahmadabad** 380 014 Tel: 43922 35100 Padova Tel: (49) 664888 Telex: 012-234

Telex 430315 HEWPACKI Hewlett-Packard Italiana 5 n.A. Via G. Armellini 10 1-00143 Roma Tel: (06) 54 69 61

8ERCA Indonesia P T P O Box 174/Sby

Hewlett-Packard Ltd.

Lower Mount Street

Hewlett-Packard Ltd

2C Avongberg Ind. Est Long Mile Road **Dublin** 12 Tel: 514322/514224

Kestrel House Clanwilliam Place

Dublin 2, Eire

Telex 30439

Medical Only

Dublin 5 Fire

Medical Only

Tel. (01) 315820

Cardiac Services Co.

GB-Northern Ireland

Tel: (0232) 625566

95A Finaghy Rd South Balfast BT10 0BY

Artane

Surabaya

Tel 42027

IRELAND

Telex: 610514 Hewlett-Packard Italiana 5 p.A Corso Giovanni Lanza 94 I-10133 **Torino** Tel: (011) 65930B Telex: 221079

Hewlett-Packard Italiana 5.p.A Via Principe Nicola 43 G/C I-95126 Catania Tel: (095) 37 05 04 Telex 970291

Hewlett-Packard Italiana 5.p.A Via Nuova san Rocco A Capadimonte, 62A 80131 Napoll Tel: (081) 710698 Hewlett-Packard Italiana 5.p.A Via Martin Luther King, 38/111 I-40132 Bologna Tel: (051) 402394

Telex 511630 JAPAN Yokogawa-Hewlett-Packard

29-21, Takaido-Higashi 3-chome 3-cnome Suginami-ku, **Tokyo** 168 Tel 03-331-6111 Telex. 232-2024 YHP-Tokyo Yokogawa-Hewlett-Packard Ltd. Chuo Bldg., 4th Floor 4-20, Nishinakajima 5-chome Yodogawa-ku, Osaka-shi Osaka, 532 Tel: 06-304-6021

Telex: 523-3624 Yokogawa-Hewlett-Packard Sunitomo Seimei Nagaya Bldg. 11-2 Shimosasaiima-cho Nakamura-ku, **Nagoya,** 450 Tel 052 571-5171 Yokogawa-Hewlett-Packard Ltd.

Tanigawa Building 2-24-1 Tsuruya-cho Kanagawa-ku Yokohama, 221 Tel: 043-312-1252 Telex: 382-3204 YHP YOK Yokogawa-Hewlett-Packard

Mito Mitsui Building 105, 1-chome, San-no-maru Mito, Ibaragi 310 Tel. 0292-25-7470 Yokogawa-Hewlett-Packard

Ltd Inoue Building 1348-3, Asahi-cho, 1-chome Atsugi, Kanagawa 243 Tel: 0462-24-0452

Yokogawa-Hewlett-Packard Ltd Kumagaya Asahi Hachijuni Building

4th Floor 3-4, Tsukuba Kumagaya, 5aitama 360 Tel: 0485-24-6563 Cardiac Services (Ireland) Ltd Kilmore Road JORDAN

Mouasher Cousins Co P O Box 1387 Amman Tel. 24907/39907 Telex. SABCO JO 1456

KENYA P.O. 8ox 30070 Natrobl Tel: 331955 Telex 22639

Medical Only International Aeradio (E.A.) Ltd. P.O. Box 19012 Nairobi Airport Nalrobi Tel: 336055/56 Telex. 22201/22301

Medical Only International Aeradio (E.A.) Ltd

P.O. Box 95221

KOREA 5amsung Electronics Co., Ltd 4759 Shingil-6-Oong Yeona Deuna POU

Tel: 833-4122, 4121 Telex 5AM5AN 27364 KIIWAIT Al-Khaldiya Trading & Contracting P.O. Box 830-Safat

Kuwait Tel: 42 4910/41 1726 Telex 2481 Areeg kt LUXEMBURG

Hewlett-Packard Beneluz 5 A /N V Avenue du Col-Vert, 1 (Groenkraaglaan) B-1170 **Brussals** Tel· (02) 660 5050 Telex: 23 494

MALAYSIA (Malaysia) 5dn Bhd Suite 2 21/2 22 Bangunan Angkasa Raya Jalan Ampang Kuala Lumpur Tel: 483680, 485653 Protet Engineering P.O. Box 1917 Lot 259, Salok Road

Kuching, Sarawak Tel: 53544 MEXICO Hewlett-Packard Mexicana. 5 A de C V. Av. Periférico Sur No 6501 Tepepan, Xochimilco Maxico 23, 0.F Tel: 905-676-4600 Telex: 017-74-507

Hewlett-Packard Mexicana 5 A de C V Rio Volga #600 Col. Oel Valle Montarray, N.L. Tel. 78-32-10

MOROCCO Oolbeau B1 rue Karatchi Casablanca Tel: 3041 82 Telex: 23051/22822 Gerep 2, rue d'Agadir Boite Postal 156 Casablanca Tei 272093/5 Telex 23 739

A.N. Goncalves, Lid. 162, 1° Apt. 14 Av [Caixa Postal 107 Maputo Tel 27091 27114 Telex. 6-203 NEGON NETHERLANDS Hewlett-Packard Sene Van Heuven Goedharti P.O. Box 667

MOZAMBIOUE

1181KK Amatalyaar Tel (20) 47 20 21 Telex 13 216 **NEW ZEALAND** Hewlett-Packard (N Z.) 4-12 Cruckshank 5tre Kilbirnie, Wellington 3 P.O. Box 9443 Courtney Place Wallington Tel 877-199 Hewiett-Packard (N Z P O Box 26-189 169 Manukau Road

Epsom, Auckland Tel: 687-159 Analytical/Medical Only Northrop Instruments & Systems Ltd., 5turdee House B5-87 Ghuznee Street P.O. Box 2406 Wailington Tel: 850-091 Telex: NZ 31291 Northrup Instruments &

Systems Ltd. Eden House, 44 Khybi Rd. P.O. Box 9682, Newm Auckland 1 Tel: 794-091 Northrup Instruments &

5ystems Ltd. Terrace House, 4 Oxfo Terrace P O Box B3B8

Christchurch Tel: 64-165 NIGERIA

The Electronics Instrumentations Ltd N6B/770 Ovo Road Oluseun House P.M.B. 5402 Ibadan Tel: 461577 Telex 31231 TEIL NG

The Electronics Instrumentations Ltd 144 Agege Motor Road P.O. Box 481 Mushin, Lagos NORWAY

Hewlett-Packard Norg Ostendalen 18 P O Box 34 1345 Onterna Tel. (02) 1711 80 Telex: 16621 hpnas i Hewlett-Packard Norg Nygaardsgaten 114 P.O Box 4210 5013 Nygaardsgaten Bargan Tel: (05) 21 97 33

PANAMA Electrónico Balboa, S Aparatado 4929 Panama 5 Calle Samuel Lewis Edificio "Alfa." No 2 Cludad da Panam Tel 64-2700 Telex 3483103 Curui

PERU Compañía Electro Méi Los Flamencos 145 San Isidro Casilla 103 lima 1 Tel 41-4325 Telex Pub Booth 25 SISIORO

PAKISTAN Mushko & Company Oosman Chambers Abdullah Haroon Roal Karachi-3 Tel: 511027, 512927 Telex. 2894

M SALES OFFICES

Arranged alphabetically by country (cont.)

Mushko & Company, Ltd 10, Bazar Rd Sector G-6/4 Tel: 28264

PHILIPPINES The Online Advanced Systems Corporation Rico House Amorsolo cor Herrera Str Legaspi Village, Makati P 0 8ox 1510 Metro Manila Tel: 85-35-81, 85-34-91,

85-32-21 Telex: 3274 ONLINE RHODESIA Field Technical Sales 45 Kelvin Road North 0. Box 3458

Sailabury Tel: 705231 (5 lines) Telex RH 4122 **POLAND**

Siuro Informacii Techniczne Hewlett-Packard Ut Stawki 2, 6P PLOO-950 Warszaw Tel: 39 59 62, 39 51 87 Telex 81 24 53

PORTUGAL Telectra-Empresa Técnica de Equipamentos Eléctricos

Rua Rodrigo da Fonseca 103 P.O. Box 2531 P-Liabon 1 Tet: (19) 68 60 72 Telex: 12598 Medical Only

Mundinter Intercambio Mundial de Comércio S.a.r.l P 0 Box 2761 Avenida Antonio Augusto de Aguiar 138 P. Liabon Tel: (19) 53 21 31/7

Telex: 16691 munter p PUERTO RICO Hewlett-Packard Inter Americas

Puerto Rico Branch Office Calle 272. #203 Lifth Country Club Carolina 00630 Tet: (809) 762-7255 Telex 345 0514

OATAR Nasser Trading & Contracting P.0 Box 1563 Doha Tel: 22170

Telex: 4439 NASSER ROMANIA Hewlett Packard Reprezentanta Bd.n. Balcescu 16

Bucureati Tel: 15 80 23/13 88 85 Telex 10440 SAUDI ARABIA

Modern Electronic Establishment (Head Office) Box 1228, Baghdadial Street Jeddeh Tel: 27 798 Telex: 40035 Cable: ELECTA JEODAH Modern Electronic

Establishment (Branch) P.0 8ox 2728 Rivadh Tel: 62596/66232 Telex: 202049

Modern Electronic Establishment (Branch) P.O. Box 193 Al-Khobar Tel: 44678-44813 Telex: 670136 Cable: ELECTA AL-KHOBAR

SINGAPORE Hewlett-Packard Singapore (Pte.) Ltd. 6th Floor, Inchcape House 450-452 Alexandra Road P O 8ox 58 Alexandra Post Office Singepore 9115 Tel. 631788

Telex. HPSG RS 21486

SOUTH AFRICA Hewlett-Packard South Africa

(Pty.), Ltd. Private Bag Wendywood, Sandton, Transvaal, 2144 Hewlett-Packard Centre Oaphne Street, Wendywood, Sandton, 2144 Tel 802-5111/25 Telex 8-4782 Hewlett-Packard South Africa

(Pty.), Ltd P O Box 120 Howard Place Cape Province, 7450
Pine Park Centre, Forest Orive,

Pinelanda, Cape Province, 7405 Tel 53-7955 thru 9 Telex: 57-0006 **SPAIN**

vlett-Packard Española

Catte Jerez 3 E-**Madrid** 16 Tet (1) 458 26 00 (10 lines) Telex=23515 hpe Hewlett-Packard Española S.A Colonia Mirasierra c/o Costa 8rava, 13 Madrld 34

Hewlett-Packard Española Milanesado 21 23 E-Barcelona 17

Tel: (3) 203 6200 (5 lines) Telex: 52603 hpbe e Hewlett-Packard Española

Av Ramón y Cajal, 1 Edificio Sevilla, planta 9° E-Sevilla 5 Tel: 64 44 54/58

Hewlett-Packard Española S A Edificio Albia tt 7 ° 8 E-Bilbao 1 Tel: 23 83 06/23 82 06 Hewlett-Packard Española S.A.

(Entlo.) E Valancia 10 Tel: 96-361.13 54/361.13 58

SRI LANKA Metropolitan Agencies Ltd 209/9 Union Place Colombo 2 Tel: 35947

Telex 1377METROLTO CE SUDAN

Radison Trade P 0. Box 921 Khartou Tet: 44048 Telex 375

SURINAM Surtel Radio Holland N.V. Grote Hofstr 3-5 P.O. Box 155 Paramaribo Tel: 72118, 77880

SWEDEN Hewlett-Packard Sverige A8 Enighetsvägen 3, Fack S 161 **Bromma** 20 Tet: (08) 730 05 50 Telex: 10721 Cable: MEASUREMENTS Stockholm

Hewlett-Packard Sverige AB Frötallsgatan 30 S-421 32 V#atre

Frölunda Tel: (031) 49 09 50 : 10721 via Bromma

SWITZERLAND Hewlett-Packard (Schweiz) AG Zurcherstrasse 20 P.O Box 307 CH-8952 Schlieren-Zürlch Tel: (01) 7305240 Telex. 53933 hpag ch Cable HPAG CH

Hewlett-Packard (Schweiz) AG Château 8loc 19 CH-1219 Le Lignon-Geneva Tel. (022) 96 03 22

UNITED ARAB Telex 27333 hpag ch Cable HEWPACKAG Geneva

SYRIA General Electronic Inc Nuri Basha-Ahnaf Ebn Kavs

P.O Box 5781 Damaacua Tet 33 24 87 Tetex 11215 ITIKAL Cable ELECTROSOR DAMASCUS

Medical only Place Azmé B P 2308 Damaacua Tel: 16 367-19 697-14 268 Telex: 11304 SATACO SY Cable SAWAH, OAMASCUS Suleiman Hilat FI Mlawi 0 Box 2528 Mamoun Bitar Street, 56-58

Damaacua Tel 11 46 63 Telex: 11270 Cable: HILAL OAMASCUS TAIWAN Hewlett Packard Far East Ltd. Taiwan 8ranch 8ank Tower, 5th Floor

205 Tun Hau North Road Tel: (02) 751-0404 (15 lines) Hewlett-Packard Far East Ltd Taiwan 8ranch 68-2, Chung Cheng 3rd. Road

Kaohalung Tel. (07) 242318-Kaohsiung Analytical Only San Kwang Instruments Co., Ltd. 20 Yung Sui Road

Talpei Tel: 3615446-9 (4 lines) Telex 22894 SANKWANG

TANZANIA Medical Only International Aeradio (E.A.), Ltd P.0 Box 861 Dar ea Salaam Tel 21251 Ext. 265 Tetex 41030

THAILAND UNIMESA Co Ltd. Elcom Research Building 2538 Sukumvit Ave Bangchak, Bangkok Tel: 39-32-387, 39-30-338

TRINIDAD & CARTEL Caribbean Telecoms Ltd. P 0 8ox 732 69 Frederick Street Port-of-Spain

Tel 62-53068 TUNISIA Tunisie Electronique 31 Avenue de la Liberte Tunia Tel: 280 144

Corema ter. Av. de Carthage Tunia Tel: 253 821 Telex. 12319 CABAM TN TURKEY
TEKNIM Company Ltd.

Biza Sah Pehley Caddesi No. 7 Kavaklidere, Ankara Tel: 275800 Telex: 42155 Teknim Com., Ltd. Barbaros Bulvari 55/12

Besikyas, latanbul Tel- 613 546 Telex. 23540 Muhendislik Kollektif Sirketi Mediha Eldem Sokak 41/6 Yüksel Caddesi Ankera Tel: 17 56 22

Yilmaz Ozvurek Milli Mudafaa Cad 16/6 Kizilay Ankara Tel: 25 03 09 · 17 80 26 Telex: 42576 OZEK TR

EMIRATES
Emitac Ltd. (Head Office)
P.O. Box 1641 Tetex: 8136

Emitac Ltd (Branch Office) P.0 Box 2711 Abu Dhabi Tel. 331370/1

UNITED KINGDOM Hewlett-Packard Ltd. King Street Lane Winnarah, Wokingham Berkshire RG11 5AR GB-England Tet (0734) 784774 Telex 84 71 78/9 Hewlett-Packard Ltd. Fourier House, 257-263 High Street London Colney St. Albena, Heris G8-England Tel: (0727) 24400 Tetex 1-8952716 Hewlett-Packard Ltd. Trafaloar House Navigation Road Altrincham Cheshire WA14 1NII

GB-England Tel: (061) 928 6422 Telex: 668068 Hewlett-Packard Ltd Lygon Court Hereward Rise

Dudley Road Haleaowen, West Midlands, B62 8S0 GB-England Tel: (021) 501 1221 Telex: 339105

Hewlett-Packard Ltd Wedge House 799, London Road Thornton Heath Surrey, CR4 6XL GB-England Tel: (01) 684-0103/8 Telex. 946825 Hewlett-Packard Ltd.

14 Wesley St Caatleford Yorks WF 10 1AE Tet (0977) 550016 TWX: 5557335 Hewlett-Packard Ltd.

Tradax House St. Marv's Walk Maidenhead 8erkshire, SL6 1ST GB-England Hewlett-Packard Ltd

Morley Road Staplehill Bristol, 8S 16 4QT GB-England Hewlett-Packard I td South Oueenaferry West Lothian, EH30 9TG GB-Scotland

Tel: (031) 331 1188 Telex 72682 UNITED STATES

ALABAMA Park South 700 Century

Suite 128 Birmingham 35226 Tel: (205) 822-8802 P.O. Box 4207

8290 Whitesburg Or Huntaville 35802 Tel: (205) 881-4591 ARIZONA 2336 E. Magnolia St Phoenix 85034 Tel: (602) 273-8000

2424 East Aragon Rd. Tucaon 85706 Tel: (602) 273-8000

'ARKANSAS Medical Service Only P.O. Box 5646 Brady Station Little Rock 72215 Tel: (501) 376-1844 CALIFORNIA

1579 W. Shaw Ave Freano 93771 Tel: (209) 224-0582 1430 East Orangethorpe Ave Fullerton 92631

Tel: (714) 870-1000 5400 West Rosecrans Rivel P.O. 8ox 92 105 World Way Postat Cente Loe Angelea 90009 Tet: (213) 970-7500 TWX: 910-325-6608

3939 Lankershim 8oulevard North Hollywood 91604 Tel (213) 877-1282 TWX. 910-499-2671

3200 Hillview Av Palo Alto, CA 94304 Tel (408) 988-7000 646 W North Market Blvd Sacramento 95834 Tel· (916) 929-7222

9606 Aero Orive P.O. Box 23333 Sen Diego 92123 Tel. (714) 279-3200 363 Brookhollow Or Santa Ana, CA 92705 Tel: (714) 641-0977 3003 Scott Boulevard

Santa Clara 95050 Tel: (408) 988-7000 TWX. 910-338-0518 454 Carlton Court So. San Franciaco 94080 Tel: (415) 877-0772

*Tarzana Tel: (213) 705-3344

COLORADO 5600 0TC Parkway Englewood 80110 Tel: (303) 771-3455

CONNECTICUT 47 Barnes Industrial Road 8arnes Park South Wallingford 06492 Tel: (203) 265-7801

FLORIDA P.O. 80x 24210 2727 N.W 62nd Street Ft. Leuderdala 33309 Tel: (305) 973-2600 4080 Woodcock Orive #132 Brownett Building
Jacksonvilla 32207 Tet: (904) 398-0663 P 0. Box 13910 6177 Lake Ellenor Or

Tal: (305) 859-2900 P.O. Box 12826 Suite 5, Bldg. 1 Office Park North Penaacola 32575 Tel: (904) 476-8422 10 South Hoover 8lvd. Suite 120

Tampa 33609 Tel: (813) 872-0900 GEORGIA

P.O. Box 105005 450 Interstate North Parkway Atlanta 30348 Tet. (404) 955-1500 TWX: 810-766-4890 Medical Service Only *Augusta 30903 Tel: (404) 736-0592

P.O. Box 2103 1172 N. Oavis Orive Warner Robina 31098 Tel: (912) 922-0449

HAWAII 2875 So. King Street Honolulu 96826

Tel: (808) 955-4455 ILLINOIS 211 Prospect Rd. Bloomington 61701 Tel: (309) 663-0383

5201 Tollview 0r. Rolling Meadows 60008 Tal: (312) 255-9800 TWX: 910-687-2260

INDIANA 7301 North Shadeland Ave Indianapolle 46250 Tel: (317) 842: 1000 TWX: 810-260-1797

2415 Heinz Road lowa City 52240 Tel: (319) 351-1020

KENTUCKY 10170 Linn Station Road Suite 525 Louisville 40223 Tel: (502) 426-0100

LOUISIANA P.O 8ox 1449 3229-39 Williams Boulevard Kenner 70062 Tel: (504) 443-6201

MARYLAND 7121 Slandard Orive Parkway Industrial Center Hanovar 21076 Tel (301) 796-7700

TWX. 710-862-1943 2 Choke Cherry Road Rockville 20850 Tel· (301) 948-6370 TWX: 710-828-9684

MASSACHUSETTS 32 Hartwell Ave 32 Hartwell Ave Lexington 02173 Tel: (617) 861-8960 TWX, 710-326-6904 MICHIGAN

23855 Research Orive Farmington Hilla 48024 Tel (313) 476-6400 724 West Centre Ave Kalamazoo 49002 Tel (616) 323-8362

MINNESOTA 2400 N Prior Ave Tel: (612) 636-0700

MISSISSIPPI 322 N. Mart Plaza Jackaon 39206 Tet (601) 982-9363

MISSOURI 11131 Colorado Ave Kanaaa City 64 137 Tel (816) 763-8000 TWX: 910-771-2087

1024 Executive Parkway St. Louia 63141 Tel (314) 878-0200

NEBRASKA Medical Only 7101 Mercy Road Suite 101 Omaha 68106 Tel (402) 392-0948

NEVADA Las Vegas Tel (702) 736-6610 NEW JERSEY

Crystal Brook Professional 8uilding Eatontown 07724 Tel: (201) 542-1384

W 120 Century Rd Paramua 07652 Tet. (201) 265-5000 TWX: 710-990-4951 NEW MEXICO P.O. Box 11634 Station E

11300 Lomas Blvd., N.E. **Albuquerque** 87123 Tel: (505) 292-1330 TWX: 910-989-1185 156 Wyatt Orive Laa Crucea 88001 Tel: (505) 526-2484

TWX. 910-9983-0550 NEW YORK 6 Automation Lane Computer Park Albany 12205 Tal: (518) 458-1550

TWX: 710-444-4961 650 Perinton Hill Office Park Felrport 14450 Tel: (716) 223-9950 TWX: 510-253-0092

No. 1 Pennsylvania Plaza 55th Floor 34th Street & 8th Avenue New York 10001 Tel: (212) 971-0800 5858 Fast Mollov Road Syracuse 13211 Tel: (315) 455-2486

1 Crossways Park Wast Tel: (516) 921-0300 TWX: 510-221-2183 Tel: (513) 671-7400

NORTH CAROLINA 5605 Roanne Way Greenaboro 27409 Tel (919) 852-1800

оню Medical/Computer Only 9920 Carver Road Cincinnati 45242 Tel: (513) 891-9870 16500 Sprague Road Cleveland 44130 Tel: (216) 243-7300 TWX: 810-423-9430

962 Crupper Ave. Columbua 43229 Tel: (614) 436-1041

330 Progress Rd Dayton 45449 Tel (513) 859-8202

OKLAHOMA P.O. 80x 32008 6301 N. Meridan Avenue Oklahoma City 73112 Tel: (405) 721-0200 9920 E. 42nd Street Suite 121 Tulan 74145 Tel (918) 665-3300

OREGON 17890 S.W. Lower Boones Ferry Road Tualatin 97062 Tel. (503) 620-3350

PENNSYLVANIA 1021 8th Avenue King of Prussia 19406 Tel: (215) 265-7000 TWX 510-660-2670

111 Zeta Orive Pittaburgh 15238 Tel: (412) 782-0400 SOUTH CAROLINA P 0 Box 6442 6941-0 N. Trenholm Road Columbia 29206 Tel: (803) 782-6493

TENNESSEE 8906 Kingston Pike Knoxville 37919 Tel: (615) 691-2371 3070 Oirectors Row Orrectors Square

Memphia 38131
Tel: (901) 346-8370 'Naahville

Medical Service Only Tel: (615) 244-5448

TEXAS 4 17 1 North Mesa Suite C110 El Paso 79902 Tel: (915) 533-3555 P 0. Box 42816 10535 Harwin St Houaton 77036 Tet (713) 776-6400

'Lubbock Medical Service Only Tet: (806) 799-4472 P.O. Box 1270 201 E. Arapaho Rd Richardson 7508 Tel· (214) 231-6101 205 Billy Mitchell Road San Antonio 78226 Tel: (512) 434-8241

UTAH 2160 South 3270 West Street Salt Lake City 84119 Tel: (801) 972-4711

VIRGINIA P.O. Box 9669 2914 Hungary Spring Road Richmond 23228 Tel: (804) 285-3431

Computer Systems/Medical Only Airport Executive Center Suite 302 5700 Thurston Avenue Virginia Beach 23455 Tet: (804) 460-247

WASHINGTON Bellefield Office Pk 1203 - 114th Ave. S.E. Bellevue 98004 Tel: (206) 454-3971 TWX. 910-443-2446 P.O. Box 4010 Spokane 99202 Tel: (509) 535-0864

WEST VIRGINIA Medical/Analytical Only 4604 Mac Corkle Ave., S E Charleston 25304 Tel: (304) 925-0492

WISCONSIN 150 South Sunny Stope Road Brookfield 53005 Tel: (414) 784-8800 FOR U.S. AREAS Contact the regional office nearest you Atlanta, Georgia No Holly-wood, California Rockville, Maryland Rolling Maadowa, Ilinois Their complete addresses are listed above

USSR Hewlett Packard Representative Office USSR

Pokrovsky 8oulevard 4/17-kw 12 Moacow 101000 Tel 294.20 24

YUGOSLAVIA Iskra Commerce, n.sot o. Zastopstvo Hewlett-Packard Obilicev Venac 26 YU 11000 Beograd Tel 636-955 Telex 11530

tskra Commerce, n.soi.o. Zastopstvo Hewlett-Packard Miklosiceva 38/VII YU-61000 Ljubljana Tel: 321-674, 315-879 Telex: 31583

URUGUAY Pablo Ferrando S A C.el. Avenida Italia 2877 Casilla de Correo 370 Montevideo Tel 40-3102 Telex. 702 Public Booth

Para Pablo Ferrando VENEZUELA Hewlett-Packard de Venezuela C.A.

P O. Box 50933 Caracas 105 Los Buces Norte Edificio Segre Caracaa 107
Tel. 239-4133 (20 lines)
Tetex: 25146 HEWPACK

ZAMBIA R.J Tilbury (Zambia) Ltd P.O. 8ox 2792

Luaaka Tel: 73793 MEDITERRANEAN AND MIDDLE EAST **COUNTRIES NOT** SHOWN, PLEASE CONTACT: Hewlett-Packard S A Mediterranean and Middle East Operations 35, Kolokotroni Street

Platra Kefaltariou GR-Kifissia-Athena, Greece Tel: 8080359/429 Telex: 21-6588 Cable: HEWPACKSA Alhens SOCIALIST

COUNTRIES NOT SHOWN, PLEASE CONTACT: Hewlett-Packard Ges.m.b.H. Hewell-Packard Ges.m.o.H. Handelskai 52 P O Box 7 A-1205 Vienna, Austria Tet: (0222) 35 16 21 to 27 Cable: HEWPAK Vienna Telax. 75923 hewpak a

OTHER AREAS LISTED, CONTACT: NOT Hewlett-Packard Intercontinenta

3495 Deer Creek Road Palo Alto, California 94304 Tel: (415) 856-1501 TWX. 910-373-1267 Cable: HEWPACK Palo Alto Telex: 034-8300 034-8493 Hewlett-Packard S.A.

rue du Bois du Lan P.O. Box CH-1217 Meyrin 2 - Geneve Switzertand Tel: (022) 82 70 00 Cable HEWPACKSA Geneva Telex. 2 24 86

Service Only 2-15-80



HP Part No. 08656-90107 Printed in U.S.A.

SIGNAL GENERATOR OPERATING MANUAL

MANUAL IDENTIFICATION

Model Number: 8656A Date Printed: May 1981 Part Number: 08656-90108

This supplement contains important information for correcting manual errors and for adapting the manual to instruments containing improvements made after printing the manual.

To use this supplement, first, make all ERRATA corrections and then all appropriate serial number related changes indicated in the tables below.

SERIAL PREFIX OR NUMBER	MAKE MANUAL CHANGES	SERIAL PREFIX OR NUMBER	MAKE MANUAL CHANGES
2107A, 2111A	Errata Only		
2115A, 2117A	Errata Only		
2124A, 2127A	Errata Only		
2128A, 2131A	Errata Only		
2132A, 2135A	Errata Only		
2136A, 2141A	Errata Only		
2142A, 2146A	Errata Only		
2148A, 2150A	Errata Only		
2151A, 2208A	Errata Only		
2214A, 2228A	Errata Only		
2232A, 2233A	Errata Only		
2245A, 2312A	Errata Only]	
2326A, 2341A	Errata Only]	
>> 2352A, 2402A	Errata Only		
, – –			
	Į.	1	
	ł		
	1		
<u> </u>			
		ļ	

>> NEW ITEM

NOTE:

Manual change supplements are revised as often as necessary to keep manuals as current and accurate as possible. Hewlett-Packard recommends that you periodically request the latest edition of this supplement. Free copies are available from all HP offices. When requesting copies, quote the manual identification information from your supplement or the model number and print date from the title page of the manual.

Printed in U.S.A.



MANUAL IDENTIFICATION

SIGNAL GENERATOR OPERATING MANUAL

Model Number: 8656A

Date Printed: May 1981

Part Number: 08656-90108

plement contains important information for correcting manual errors and for the manual to instruments containing improvements made after printing the

his supplement, first, make all ERRATA corrections and then all appropriate umber related changes indicated in the tables below.

	* ''	· XII	1
X OR NUMBER	MAKE MANUAL CHANGES	SERIAL PREFIX OR NUMBER	MAKE MANUAL CHANGES
'A, 2111A iA, 2117A iA, 2127A iA, 2131A !A, 2135A iA, 2141A !A, 2146A iA, 2150A A, 2208A iA, 2228A !A, 2233A iA, 2312A iA, 2341A !A, 2402A iA	Errata Only		

NOTE: change supplements are revised as often as necessary to keep manuals as and accurate as possible Hewlett-Packard recommends that you periy request the latest edition of this supplement. Free copies are availom all HP offices. When requesting copies, quote the manual identificatormation from your supplement or the model number and print date from le page of the manual.

22 Table 1

* **



SIGNAL GENERATOR OEPERATING AND SERVICE MANUAL

MANUAL IDENTIFICATION

Model Number: 8656A

Date Printed: May 1981

Part Number: 08656-90107

This supplement contains important information for correcting manual errors and for adapting the manual to instruments containing improvements made after printing the manual.

To use this supplement, first, make all ERRATA corrections and then all appropriate serial number related changes indicated in the tables below.

SERIAL PREFIX OR NUMBER	MAKE MANUAL CHANGES	SERIAL PREFIX OR NUMBER	MAKE MANUAL CHANGES
2107 A	1	2228A	1-17
2111A	1-2	2232A	1-18
211 5A	1-3	2233A	1-19
2117A	1-4	22 45 A	1-20
2124A	1-5	2312A	1-21
2127A	1-6	2326A	1-22
2128A	1-6, 11	>> 2341A	1-23
2131A	1 - 7	>> 2352A	1-24
2132A	1-7, 11	>> 2402A	1-25
2135A	1-8		
2136A	1-8, 11		
2141A	1-9		
2142A	1-9, 11	1	
21 4 6A	1-11		
2148A	1-12	J	
2150A	1-13	1	
2151A	1-14		
2208A	1-15		
221 4A	1-16		

>> NEW ITEM

Manual change supplements are revised as often as necessary to keep manuals as current and accurate as possible. Hewlett-Packard recommends that you periodically request the latest edition of this supplement. Free copies are available from all HP offices. When requesting copies, quote the manual identification information from your supplement or the model number and print date from the title page of the manual.

Printed in U.S.A.



²⁵ Pages Text

²⁰ Illustrations

ERRATA

Page 1-4, Table 1-1:

Under SPECTRAL PURITY, change the performance limit for Harmonics to <- 25 dBc.

>> Page 1-7, Table 1-2:

In the "Supplemental Characteristics" under "Modulation" change "Modulating Signal Output: " to read:

Internal modulating signal is provided at the front-panel BNC connector: nominally 1V peak into a 600 ohm resistive load.

Page 1-10, Table 1-3:

Change RF Cable, BNC(f) to BNC(f) 08662-60080, to RF Cable, BNC(m) to SMC(f), 08662-60075.

Page 2-1, paragraph 2-4:

In the first sentence following the first WARNING, change "115 (90 to 126) Vac or 230 (198 to 252) Vac" to "100, 120, 220, or 240 Vac, +5%, -10%.

Page 2-2, paragraph 2-7:

In this section any information referring to an inductive-jumper should be changed to read resistive-jumper.

Page 2-7/2-8, Section 2-13 Rack Mounting (Cont'd):

Delete: Standard Tilt Slide Kit for HP rack enclosures.....HP 1494-0025 Add: Special Tilt Slide Kit for HP rack enclosures......HP 08656-82001 Page 3-4, paragraph 3-11:

In this section any information referring to an inductive-jumper should be changed to read resistive-jumper.

> Page 3-8, Figure 3-4:

Under "MOD INPUT/OUTPUT Connector" in the fifth sentence delete "+5% minimum".

Page 3-23, paragraph 3-18:

In the sixth sentence change SH1 to SH0.

Page 4-3, paragraph 4-7:

In the Specification table under SPURIOUS SIGNALS, change the performance limit for Harmonics to <-25 dBc.

Page 4-4, paragraph 4-7:

In step 3 (in the instruction and in the record table) change <-30 dBc to <-25 dBc.

Page 4-20:

In the table under step 23, change "500 kHz" to "10 MHz".

Page 4-23, Table 4-2:

Under SPURIOUS SIGNALS, change the maximum limit for harmonics to -25 dBc.

Page 5-1, Table 5-1:

Replace the table with the attached Table 5-1. Factory Selected Components (P/O ERRATA).

Page 5-13:

In the DESCRIPTION, delete "at A3J5". In the PROCEDURE, step 1, delete the first sentence, and change A3J5 to J4 in the second sentence. Page 5-14:

Under EQUIPMENT: change HP 08662-60080 to HP 08662-60075.

Page 5-15:

Under EQUIPMENT: change HP 08662-60080 to HP 08662-60075.

ERRATA (cont'd)

Page 6-33, Table 6-3:

Add MP139 08656-00008 (CD2) QTY 4 FRONT PANEL, REAR BRACKET, Mfr. Code 28480, Mfr. Part Number 08656-00008.

Change W2 to 08656-60089 Wiring Harness and Front (F) Feedthru Assembly Service Kit.

>>r Change U1 to 1826-1181 (CD3) IC V RGLTR-FXD-POS 14.7/15.3V TO-3 PKG.

>>r Change U3 to 1826-1157 (CD3) IC V RGLTR-14.7/15.3V TO-3 PKG.

>> Page 6-36, Figure 6-2:

Change MP47 to MP108 and MP109.

Page 8-42, check 7, step 3:

Change the last two sentences to read, "Disconnect the wire from capacitor C44 to U5A pin 5. Verify that the voltage at C44 is 0.00 ± 0.010 Vdc. Reconnect the wire."

Page 8-47, Service Sheet 1 (schematic):

A4C22: Delete the asterisk (*). A4C22 is not a factory selected component

A5C15: Add an asterisk (*) to indicate a factory selected component.

Page 8-48, Figure 1:

Replace Figure 1 with the attached Figure 1. Unlocked High Frequency Loop Waveforms (P/O ERRATA).

Page 8-53, Figure 8-46, Service Sheet 3 (schematic):

A8C40: Add an asterisk (*) to indicate a factory selected component.

A8C5: Add an asterisk (*) to indicate a factory selected component.

A8C19: Add an asterisk (*) to indicate a factory selected component.

Page 8-56, (component locations):

Add component location identification for C62 which is located directly below (with normal page orientation) silkscreened "A6" and "HP" logo.

>>r Page 8-57, Service Sheet 4:

In the TRANSISTOR AND INTEGRATED CIRCUIT PART NUMBERS table change U2 to 1820-3485.

Page 8-59/8-60, (component locations):

Add component location identification for L53 which is located directly below (with normal page orientation) L50, R60, R65 and R69.

Page 8-61, Figure 8-61, Service Sheet 5 (schematic):

In the upper left corner of the schematic add an asterisk (*) to R57 to indicate a factory selected value.

Page 8-67, Figure 8-57, Service Sheet 6 (schematic):

Change the schematic as shown in the attached figure, P/O Figure 8-57. Modulation and RF Amplitude Control Schematic Diagram (P/O ERRATA).

Page 8-71, Figure 8-63, Service Sheet 7 (schematic):

In instruments with Serial Prefix 2214A and below, the timing for one-shot multivibrators U3A and U3B is 44 ms. In these units, attenuator switching reliability can be improved by changing R52 and R53 to 178k ohms, with 60 ms timing. The two resistors are independent, and either or both can be changed.

In Figure 8-62 the timing shown should be either 44 or 60 ms depending on the resistance values of R52 and R53.

>>r Page 8-83, Service Sheet 9:

In the TRANSISTOR AND INTEGRATED CIRCUIT PART NUMBERS table change U23 to 1820-3102.

Model 8656A

CHANGE 1

r Page 6-14, Table 6-3:

Change A4C67 to 0160-4389 CD6 CAPACITOR-FXD 100 PF + 5 PF 200 VDC CER.

r Page 6-17, Table 6-3:

Change A5CRl and CR2 to 0122-0329 CD6 DIODE VCC 2.2 PF 5% C3/C25-MIN=4.5 28480 0122-0329.

Page 6-29, Table 6-3:

Under AllUl3 and AllUl9, add 1200-0654 CD7 SOCKET-IC 40-CONT DIP-SLDR 28480 1200-0654.

Page 8-47, Figure 8-40, Service Sheet 1 (schematic): Change the value of A4C67 to 100 pF.

CHANGE 2

Page 6-32, Table 6-3:

MP38: If replacement is needed, use the part shown in CHANGE 13, and discard the flat and lock washers.

Change MP39 to 2150-0193 CD7 SCREW-MACH 8-32 .375-IN-LG PAN-HD-POZI 28480 2510-0193.

Page 6-33, Table 6-3:

Add MP138 2515-0017 CD4 SCREW-MACH 8-32 .25 IN-LG PAN-HD-PHL 00000 ORDER BY DESCRIPTION.

CHANGE 3

Page 6-9, Table 6-3:

Delete A3C82.

Page 6-23, Table 6-3:

Add A8C58 0160-3878 CD6 CAPACITOR-FXD 1000 PF +20% 100 VDC CER 28480 0160-3878.

Add A8MP5 0360-0124 CD3 QTY 2 CONNECTOR-SGL CONT PIN .04-IN-BSC-SZ RND 28480 0360-0124.

Add A8MP6 08656-00099 MULTIPLIER BOARD GROUND TAB 28480 08656-00099.

Page 6-24, Table 6-3:

Add A8R39 0757-0278 CD9 RESISTOR 1.78K 1% .125W F TC=0+100.

Page 8-53, Figure 8-46, Service Sheet 3 (schematic):

In the X2 400 to 800 MHz circuit, add R39 1780 ohms connected in parallel with L27.

In the Buffer Amplifier No.1 circuit, add C58, 1000 pF connected in parallel with C20.

Page 8-99, Figure 8-82, Service Sheet 13 (schematic):
 Delete C82 at U32A pin 4.

CHANGE 4

Page 5-1, Table 5-1:

Delete all information pertaining to A6R4.

Page 5-17:

Add the attached RF Divider Bias Adjustment Procedure, 5-18A. RF DIVIDER BIAS ADJUSTMENT (P/O CHANGE 4).

CHANGE 4 (cont'd)

<u>Page 8-58, Service Sheet 5, Table 2:</u>
Change the table as follows:

								_
1	500	-	+0.2		+14.8	-	+14.8	1
	300	-	+14.8		+0.2		+14.8	ĺ
	200	-	+14.8	-1	+14.8	1	+0.2	Ī
		:						_

Page 8-61, Figure 8-54, Service Sheet 5 (schematic):

Change the A6 circuit board part number to 08656-60118.

In the Low Band Output Amplifier, change C52 and C59 to 1.0 uF.

Change the Output Section Data Storage/Driver as shown in the attached figure, P/O Figure 8-54. Heterodyne and Output Control Schematic Diagram (P/O CHANGE 4).

Page 8-62, Service Sheet 6, Tables 2, 3, and 4:

Replace the Tables with the attached tables, Table 2. Level Control Voltage Levels Versus Frequency (P/O CHANGE 4), Table 3. Level Control Voltage Levels Versus Front Panel Amplitude (P/O CHANGE 4), and Table 4. AM% Control Voltage Levels (P/O CHANGE 4).

Page 8-71, Figure 8-63, Service Sheet 7 (schematic):

Change the A6 circuit board part number to 08656-60118.

Page 8-73, Figure 8-66, Service Sheet 8 (schematic):

Change the value of A3R4 and R7 to 287 ohms.

Change the value of A3R5 to 17.8 ohms.

Page 8-93, Figure 8-75, Service Sheet 11 (schematic):

Change the value of A3C64 to 910 pF.

Page 8-105, Figure 8-86, Service Sheet 14 (schematic):

Change the All circuit board part number to 08656-60121.

Page 8-107, Figure 8-89, Service Sheet 15 (schematic):

Change the All circuit board part number to 08656-60121.

Page 8-108, Service Sheet 16, Table 2:

Change ROM6 to 08656-80012.

Page 8-108. Service Sheet 16, Tables 3 and 4:

Change the signatures to those in the following tables.

Table 3. ROM Generated Data Bus Signatures (P/O CHANGE 4).

ļ	Node	Correct Signature
١		
1	+5V	1817
Ì	DO	93FA
1	Dl	8169
1	D2	FUlA
1	D3	9 F 30
1	D4	PC89
1	D5	6P97
1	D6	U31C
1	D7	23FP

CHANGE 7

Page 6-25, Table 6-3:

AloC18: In some instruments this capacitor is HP 0180-3141 (13500 uF). However, if this part fails, replace it with the part shown in CHANGE 16.

Page 6-33, Table 6-3:

Delete MP130, MP131, MP132.

Page 6-37, Figure 6-3:

Delete MP130, MP131, and MP132 between the fan and power module. This is now a direct connection.

Page 8-127/128, Figure 8-113, Service Sheet 22 (schematic):

AloCl8: In some instruments this part is a 13500 uF capacitor. However, if this part fails, replace it with the part shown in CHANGE 16.

CHANGE 8

Page 6-18, Table 6-3:

Change A6C26 to 0160-2208 CD4 CAPACITOR-FXD 330 PF +5% 300 VDC MICA.

Page 6-31, Table 6-3:

Change Bl to 3160-0383 CD5 FAN-TUBAXIAL 36-CFM 115V 50/60 HZ (DOES NOT INCLUDE W21).

Page 6-34, Table 6-3:

Add W21 8120-1478 CD2 CABLE ASSY FAN WITH MIN. CONNECTOR.

Page 6-37, Figure 6-3:

Add W21 in place of existing fan cable and connectors.

Page 8-57, Figure 8-50, Service Sheet 4 (schematic):

Change the value of A6C26 to 330 pF.

Page 8-127/128, Figure 8-113, Service Sheet 22 (schematic):

Add reference designator W21 to wires connecting fan B1 to line power module A15. Change wire color to (0) (black).

CHANGE 9

Page 6-10, Table 6-3:

A3MP6: Change the quantity to 4.

A3MP13: Change to 08656-00091 CD3 same description.

Page 6-18, Table 6-3:

Change A6C16 to 0180-0228 CD6 CAPACITOR-FXD 22UF +10% 15 VDC TA.

Page 6-19, Table 6-3:

Change A6L11 to 9100-1622 CD7 INDUCTOR RF-CH MLD 24 UH 5% .166D X .385LG.

Page 6-42, Figure 6-8:

A3MP6: Change quantity to 4.

NOTE

The new cover is thicker and therefore 2 additional washers are needed to avoid distorting the grounding contact.

CHANGE 12 (cont'd)

Page 8-115, Figure 8-100, Service Sheet 18 (schematic):

Replace the upper center portion of the schematic between C3 and P/O W2 (feedthru assembly) with the attached partial schematic,

P/O Figure 8-100. Keyboard and Encoder Schematic Diagram (P/O CHANGE 12).

Replace the lower center portion of the schematic between Al Keyboard Assembly and P/O W2 with the attached partial schematic,

P/O Figure 8-100. Keyboard and Encoder Schematic Diagram (P/O CHANGE 12).

Replace the right side of the schematic between P/O W2 and C2, C7, C8, and C4 with the attached partial schematic, P/O Figure 8-100. Keyboard and Encoder Schematic Diagram. (P/O CHANGE 12).

Page 8-119, Figure 8-103, Service Sheet 19 (schematic):

Replace the upper left portion of the schematic between C5 and C6 and P/O W2 with the attached partial schematic, P/O Figure 8-103. Display Control Schematic Diagram (P/O CHANGE 12).

CHANGE 13

Page 6-32, Table 6-3:

Change MP38 to 08656-00101 CD6 SHIELD-PIN MODULATOR.

CHANGE 14

Page 6-30, Table 6-3:

Add Al9, 08656-60122 CD7 REAR FEEDTHRU ASSEMBLY.

Page 6-34, Table 6-3:

Change W16 to 08656-60087 CD3 WIRING HARNESS MAIN (EXCEPT OPT 002). Change W16 to 08656-60091 CD9 WIRING HARNESS MAIN (OPT 002 ONLY). Add the following replacement parts for W16:

HP Part Number	Check Digit	Quantity	Description
1251-0512	3	1	Connector Body, 5-pin
1251-4968	1	2	Connector Body, 7-pin
1251-3278	4	2	Connector Body, 8-pin
1251-3411	7	6	Pins for above, for 18 ga wire
1251-3966	7	26	Pins for above, for 24 ga wire
1251-4741	8	1	Connector Body, 9-pin
1251-5260	8	1	Connector Body, 14-pin
1251-5207	3	1	Connector Body, 16-pin
1251-4182	1	37	Pins for above
1251-3808	6	1	Polarizing key for 14-pin connector
0362-0227	1	4	Single push-on pins for wires 90, 91, 3, and 97
0890-0983	5	100 mm	Heat-shrink tubing for above
1251-3720	1	2	Single push-on pins for wires 903 and 905
5020-0176	9	2	Insulator for above pins
0890-0312	4	150mm	Heat-shrink tubing for cable to 9-pin connector
0360-0001	5	1	Terminal lug, #6

CHANGE 16

r Page 6-9, Table 6-3:

Change A3CR1 to 0122-0152 CD3 DIODE VVC 7.5 PF AT 15V.

r Page 6-10, Table 6-3:

Change A3CR33 to 0122-0152 CD3 DIODE VVC 7.5 PF AT 15V.

r Page 6-17, Table 6-3:

Change A5R9 to 0698-7220 CD9 RESISTOR 215 1% .05W F TC=0+100.

r Page 6-19, Table 6-3:

Change A6CR26, 27, 29, and 30 to 0122-0152 CD3 DIODE VVC 7.5 PF AT 15V.

r <u>Page 6-25, Table 6-3</u>:

Change AloC18 to 0180-3209 CD9 CAPACITOR-FXD 24000 UF 20V.

Page 8-127/128, Figure 8-113, Service Sheet 22(schematic):

Change the value of AlOC18 to 24000 uF.

CHANGE 17

Page 6-24, Table 6-3:

r Change A9MP3 to 08656-40014 CD4.

Add A9MP6 1410-0226 CD4 QTY 21 BALL-BRG TYPE 0.09375 DIA GRADE-50 SST.

r Page 6-27, Table 6-3:

Change AloR52 and R53 to 0698-3243 CD8 RESISTOR 178K 1% .125W F TC=0+100.

Page $6-\overline{4}3$, Figure 6-9:

Replace the appropriate portion of Figure 6-9 with the attached drawing, P/O Figure 6-9. Attenuator Assembly - A9 Parts Identification (P/O CHANGE 17).

Page 8-71, Figure 8-63, Service Sheet 7 (schematic):
 Change the value of AlOR52 and R53 to 178k ohms.

CHANGE 18

r Page 6-10, Table 6-3:

Change A3L21 to 9100-3922 CD4 INDUCTOR-TORRIOD 1uH.

Page 6-16, Table 6-3:

Change A4R63 to 0757-0440 CD7 RESISTOR 7.5K 1% .125W F TC=0+100. Change A4R65 to 0698-3153 CD9 RESISTOR 3.83K 1% .125W F TC=0+100. Add A4R76 0757-0280 CD3 RESISTOR 1K 1% .125W F TC=0+100.

Page 8-51, Figure 8-43, Service Sheet 2 (schematic):

Replace the appropriate part of the schematic with the attached partial schematic, P/O Figure 8-43. High Frequency Loop Amplifier and Control Schematic Diagram. (P/O CHANGE 18).

Page 8-99, Figure 8-22, Service Sheet 13 (schematic): Change the value of A3L21 to luH.

CHANGE 19

r Page 6-11, Table 6-3:

Change A3R73 to 0698-3152 CD8 RESISTOR 3.48K 1% .125W F TC=0+100.

Page 6-25, Table 6-3:

Change AlO to 08656-60124 CD9, same description.

Add A10C30, C31, C32 0160-4084 CD8 CAPACITOR-FXD .1 UF +20% 50 VDC CER.

Add AloC33, 0160-0127 (CD2) CAPACITOR-FXD 1 UF +20% 25 VDC.

Add A10C34 0160-3490 CD8 CAPACITOR-FXD 1 UF +20% 50 VDC CER.

Change Alocke, CR7 to 1901-0200 CD5 DIODE-PWR RECT 100V 1.5A.

CHANGE 20 (cont'd)

Page 8-51, Figure 8-43, Service Sheet 2 (schematic) [(see note 1)]:

Replace the appropriate part of the schematic with the attached partial schematic, P/O Figure 8-43. High Frequency Loop Amplifier and Control Schematic Diagram (P/O CHANGE 20).

In the TRANSISTOR AND INTEGRATED CIRCUIT PART NUMBERS table change the part number of Q10 to 1855-0423.

Page 8-67, Figure 8-57, Service Sheet 6 (schematic):

Add L3, 143 uH, in series with J1, MOD INPUT/OUTPUT.

Add L4, 143 uH, in series with J6, MOD INPUT/OUTPUT.

Page 8-127/128, Figure 8-113, Service Sheet 22 (schematic)[(see note 1)]:
 In the middle left side of the schematic add safety ground wire, green/
 yellow (54), to Bl(motor) indicating a chassis ground to the fan
 casing.

NOTE 1:

Instruments with the following serial numbers are not affected by this change:

2245A04132-04150 04152-04157 04159-04161 04164-04168 04171 04175 04177-04178 04180 04198-04199 04201 04203-04204 04226 04239 04244

CHANGE 21

r Page 6-33, Table 6-3:

Change U2 to 1813-0361 (CD2) IC V RGLTR SXD-POS 4.85/5.25V TO3-PKG. Page 8-127/128, Service Sheet 22 (Figure 8-113):

In Transistor and Integrated Circuit Part Number table change U2 to 1813-0361.

CHANGE 22

r Page 6-26, Table 6-3:

Change AlOQ1 and AlOQ3 to 1884-0244 (CD5) THYRISTOR-SCR VRRM=400. (Use Heat Sink AlOMP4 with AlOQ3)

Page 6-26, Table 6-3:

Add Alomp4 1205-0361 (CD3) HEAT SINK SGL TO-5/TO-39-CS.

CHANGE 23

>> Page 6-24, Table 6-3:

Delete A9AlLl from the table.

Table 5-1. Factory Selected Components (1 of 2)

Reference Designator	Service Range of Sheet Values		Basis of Selection					
A4R6,7,10		See table under "Basis of Selection"	Attenuator pad selected for -8 dBm input to mixer A4Ul. Measure power level at RF Test Point A4TP3 with A4R6 and A4R7 disconnected. Select pad values for -8 dBm to mixer. Level must be checked whenever the A3, A4, A8, or FL1 assemblies are replaced.					
Attenuati (dB)		6, R10 (ohms)	HP Part No. (Check Digit)	R7 (ohms)	HP Part No. (Check Digit)			
3 4 5 6 7 8 9		287 215 178 147 133 121 110	0698-7223 (2) 0698-7220 (9) 0698-7218 (5) 0698-7216 (3) 0698-7215 (2) 0698-7214 (1) 0698-7213 (0) 0698-7212 (9)	17.8 23.7 31.6 38.3 46.4 51.1 61.9 75.0	0698-7194 (6) 0698-7197 (9) 0698-7200 (5) 0698-7202 (7) 0698-7204 (9) 0698-7205 (0) 0698-7207 (2) 0698-7209 (4)			
Reference Designator	Service Sheet	Range of Values	Basis of Selection					
A5C22	1	0 or 1 pF	Selected to 6		ourious signals			
A6R4 	4	75 ohms to 147 ohms	Selected to bias Ul so noise and harmonics are as low as possible in both the divide-by-2 and divide-by-4 bands. Refer to Specifications and Supplemental Characteristics tables in Section I.					
A8C40	4	0 or 1000 pF	Selected to e		spurious			
A5C15 	1	10 to 33 pF	990MHz oscill 494 MHz only.	lator fails Increase C esent at 1/2	5 if the 494- to oscillate at 15's value if the fundamen- o 990 MHz.			
A6R57 	5 	237 to 348 ohms	Selected to o of C56 in the 123 MHz).		djustment range band (.1 to			

Table 2. Level Control Voltage Levels Versus Frequency (P/O CHANGE 4)

Measure the Voltage* as Indicated Front Panel |---Frequency | Test Point J6-pin 12 (MHz) | 2 | 5 | 6 | 9 | 12 | 15 | 16 | 19 | 2 | 5 | (VDC) - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - - | - - | - - | - - | - - | - - | - - | - - | - - | - - | - - | - - | - - | - - | - - | - - | - - | - - | - - | - - | - - | - - | - - | - - | - - | - | - - | - | - | - - | - | - - | - | - | - | - | - | - | - | - | - | - | - | - | 0.100 | L | H | H | L | L 0.488 | H | L | H | L | L | 100 | L | H | H | L | L 0.488 200 0.513 300 | L | H | H | 0.506 400 | L | H | H | L | H 0.512 800 0.483 990 0.467 * Low is <+0.8 Vdc; High is >+2.0 Vdc.

Table 3. Level Control Voltage Levels Versus Front Panel Amplitude (P/O CHANGE 4)

Measure the Voltage* as Indicated Front Panel |-----U5 Amplitude | Test Point | 2 | 5 | 6 | 9 | 12 | 15 | 16 | 19 | 2 | 5 | (MHz) J6-pin 12 (VDC) --|---|---|---|----| 0.500 0.0 | L | H | H | L | L | H | H | H | H | L | +5.0 0.8**9**0 +10.0 1.577 +13.0 * Low is <+0.8 Vdc; High is >+2.0 Vdc.

Table 4. AM% Control Voltage Levels
(P/O CHANGE 4)

Front Panel AM%			U	9			l <u></u>	U.	13		Test Point
	 6 	 9 	 12 	 15 	 16 	 19 	 2 	 5 	6	 9	J6-pin 12 (Vac)
1	L	L	L	L	L	L	L	H			0.0033
5	L	L	L	L	L) H	L	H	L	j H j	0.018
10	L	L	L	L] H	L	H	L	L	і ні	0.035
20	L	L	L	H	L	H	LÌ	L	Н	іні	0.072
50	L	L	H	H	L	L	H	H	H	Н	0.180
7 0	L	H	L	L	H	L	Lj	L	L	Н	0.251
99	L	H	H	L	L	H	H	L	L	H	0.3 5 6

ADJUSTMENTS

	1200011111111
=======================================	
PROCEDURE (contin	nued)
6.	Readjust A6R101 ccw until the correct display just reappears. Measure and record the dc voltage present at U1-pin 3.
	Vdc
7.	Continue to turn A6R101 ccw until the incorrect display as stated in step 5 appears.
8.	Turn the adjustment cw until the correct display just reappears. Measure and record the dc voltage present at U1-pin 3.
	Vdc


9. Adjust A6R101 to the average voltage calculated from the voltages measured in steps 6 and 8.

ADJUSTMENTS

5-19. LEVEL AND ALC LOOP DETECTOR ADJUSTMENTS (P/O CHANGE 4) (Cont'd)

PROCEDURE: (Cont'd)

- 5. Wait for the power meter zero LED to go out, then set the RESET/STBY/ON switch to the ON position.
- 6. Measure the dc voltage between AlOJ6 pin 12 and ground. Adjust AlOR33 (LEVEL ADJ) for a reading of 1.09 Vdc +/-0.001 V.
- 7. Physically adjust the inductors A6L33 and A6L36 for a vertical position and for parallelism with respect to the right side cavity wall. Physically adjust A6L36 and A6C37 closer together or farther apart in order to set the HP 8656A output power to +7.00 dBm.
- 8. Set the Signal Generator frequency to 820 MHz.
- 9. Adjust AlOR33 (LEVEL) for a reading of +7.00 dBm +/-0.02 dB on the power meter.
- 10. Step the Signal Generator amplitude down to -4 dBm.
- 11. Adjust A6R35 (DET ADJ) for a reading of -4.00 dBm +/-0.02 dB on the power meter.
- 12. Repeat steps 9, 10 and 11 until both readings are within the required tolerance.

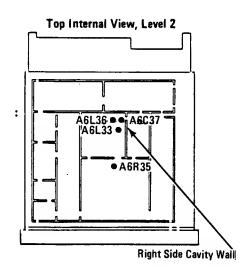



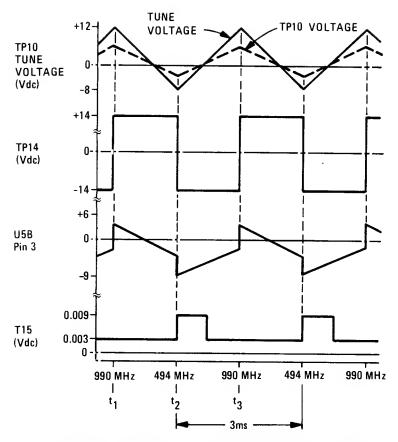



Figure 1. Unlocked High Frequency Loop Waveforms (P/O ERRATA)

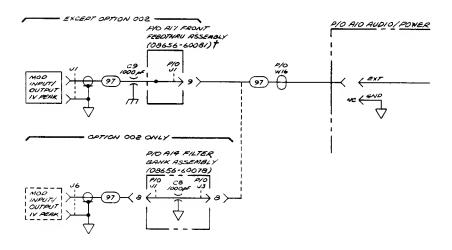


P/O Figure 8-57. Modulation and RF Amplitude Control Schematic Diagram (P/O ERRATA)

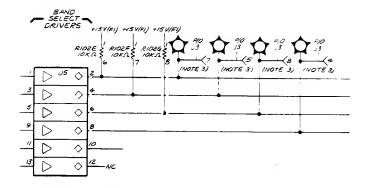


P/O Figure 8-54. Heterodyne and Output Control Schematic Diagram (P/O CHANGE 4)

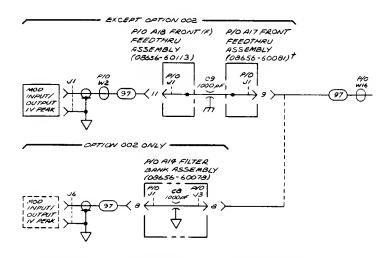


P/O Figure 8-57. Modulation and RF Amplitude Control Shematic Diagram P/O CHANGE 12)

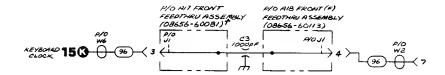


P/O Figure 8-100. Keyboard and Encoder Schematic Diagram (P/O CHANGE 12)

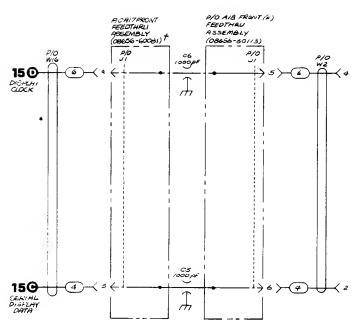


P/O Figure 8-103. Oisplay Control Schematic Diagram (P/O CHANGE 12)

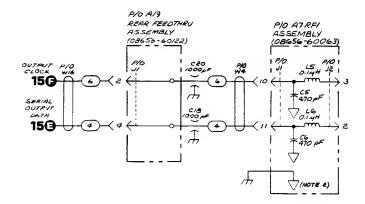


P/O Figure 8-54. Heterodyne and Output Control Schematic Oiagram (P/O CHANGE 14)

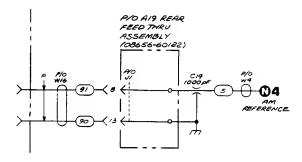


P/O Figure 8-57. Modulation and RF Amplitude Control Schematic Diagram (P/O CHANGE 14)

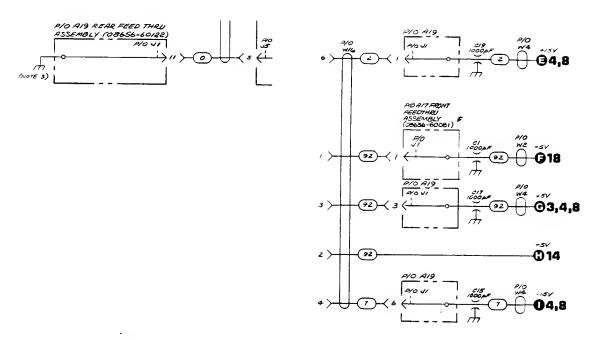

P/O Figure 8-113. Power Supply Schematic Oiagram (P/O CHANGE 14)

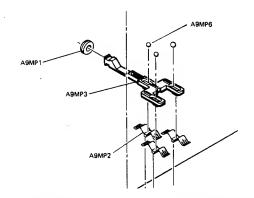

P/O Figure 6-9. Attenuator Assembly — A9 Parts Identification (P/O CHANGE 17)

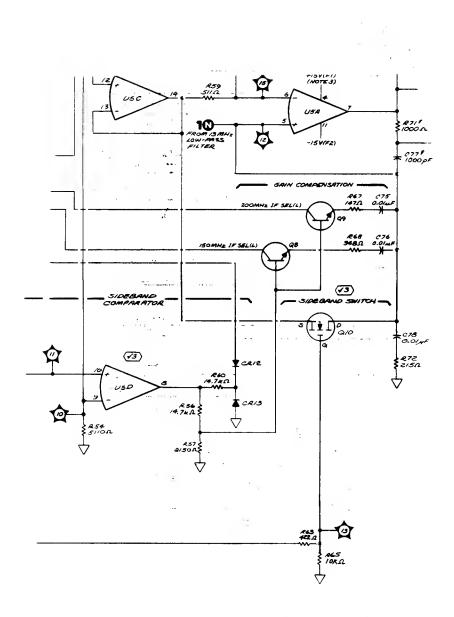

P/O Figure 8-43. High Frequency Loop Amplifier and Control Schematic Diagram (P/O Change 20)

ERRATA

Page 1-4. Table 1-1:

Under SPECTRAL PURITY, change the performance limit for Harmonics to < -25dBc.

Page 1-7, Table 1-2:

In the "Supplemental Characteristics" under "Modulation" change "Modulating Signal Output: " to read:

Internal modulating signal is provided at the front-panel BNC connector: nominally 1V peak into a 600 ohm resistive load.

Page 1-10, Table 1-3:

Change RF Cable, BNC(f) to BNC(f), 08662-60080, to RF Cable, BNC(m) to SMC(f), 08662-60075.

Page 2-1, paragraph 2-4:

In the first sentence following the first warning, change "115 (90 to 126) Vac or 230 (198 to 252) Vac" to "100, 120, 220, or 240 Vac, +5%, -10%".

Page 2-2, paragraph 2-7:

In this section any information referring to an inductive-jumper should be changed to read resistive-jumper.

Page 2-7/2-8, Section 2-13 Rack Mounting (Cont'd):

Delete: Standard Tilt Slide Kit for HP rack enclosures......HP 1494-0025 Add: Special Tilt Slide Kit for HP rack enclosures......HP 08656-82001

Page 3-4, paragraph 3-11:

In this section any information referring to an inductive-jumper should be changed to read resistive-jumper.

Page 3-8, Figure 3-4:

Under "MOD INPUT/OUTPUT Connector" in the fifth sentence delete "+5% minimum".

Page 3-23, paragraph 3-18:

In the sixth sentence change SH1 to SH0.

ERRATA

Page 1-4. Table 1-1:

Under SPECTRAL PURITY, change the performance limit for Harmonics to < -25dBc.

>> Page 1-7, Table 1-2:

In the "Supplemental Characteristics" under "Modulation" change "Modulating Signal Output:" to read:

Internal modulating signal is provided at the front-panel BNC connector: nominally 1V peak into a 600 ohm resistive load.

Page 1-10, Table 1-3:

Change RF Cable, BNC(f) to BNC(f), 08662-60080, to RF Cable, BNC(m) to SMC(f), 08662-60075.

Page 2-1, paragraph 2-4:

In the first sentence following the first warning, change "115 (90 to 126) Vac or 230 (198 to 252) Vac" to "100, 120, 220, or 240 Vac, +5%, -10%".

Page 2-2, paragraph 2-7:

In this section any information referring to an inductive-jumper should be changed to read resistive-jumper.

Page 2-7/2-8, Section 2-13 Rack Mounting (Cont'd):

Delete: Standard Tilt Slide Kit for HP rack enclosures.....HP 1494-0025 Add: Special Tilt Slide Kit for HP rack enclosures......HP 08656-82001

Page 3-4, paragraph 3-11:


In this section any information referring to an inductive-jumper should be changed to read resistive-jumper.

>> Page 3-8, Figure 3-4:


Under "MOD INPUT/OUTPUT Connector" in the fifth sentence delete "+5% minimum".

Page 3-23, paragraph 3-18:


In the sixth sentence change SH1 to SH0.

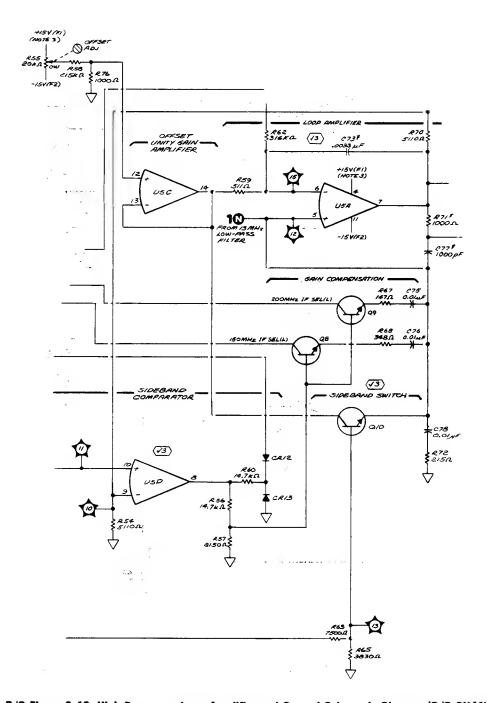


P/O Figure 8-43. High Frequency Loop Amplifier and Control Schematic Oiagram (P/O CHANGE 18)

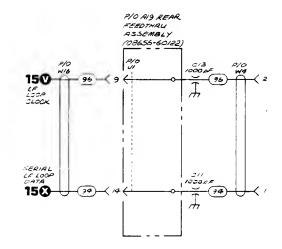


P/O Figure 8-69. LF Loop Data and Timing Control Schematic Diagram (P/O CHANGE 14)

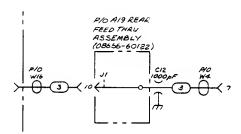


P/O Figure 8-79. LF Loop FM System Control and Calibrater Schematic Diagram (P/O CHANGE 14)

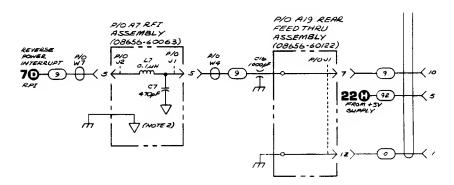


P/O Figure 8-86. Microprocessor, Interrupt Processing and Restart Schematic Diagram (P/O CHANGE 14)

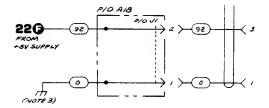


P/O Figure 8-100. Keyboard and Encoder Schematic Diagram (P/O CHANGE 12)

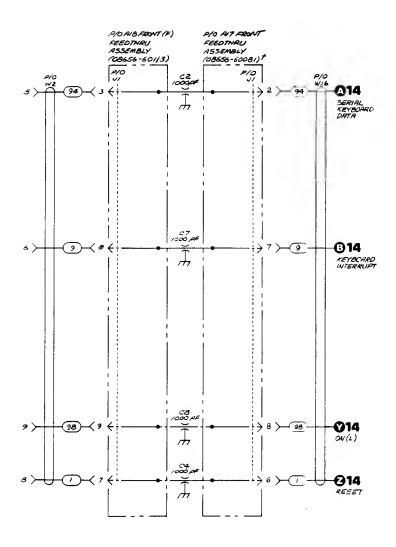


P/O Figure 8-100. Keyboard and Encoder Schematic Diagram (P/O CHANGE 12)

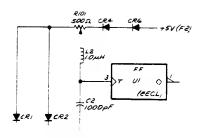

P/O Figure 8-50. Output Section Schematic Diagram (P/O CHANGE 4)

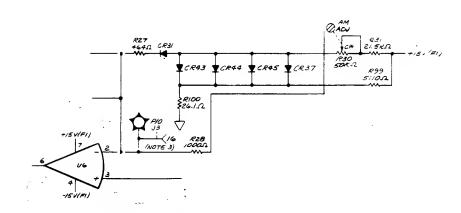

P/O Figure 8-50. Output Section Schematic Oiagram (P/O CHANGE 4)

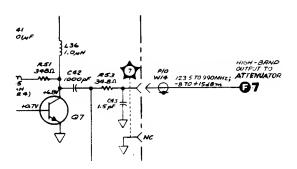

P/O Figure 8-50. Output Section Schematic Diagram (P/O CHANGE 4)

ADJUSTMENTS

5-19. LEVEL AND ALC LOOP DETECTOR ADJUSTMENTS (P/O CHANGE 4)

REFERENCE: Service Sheets 4 and 6.

DESCRIPTION: First, the reference level to the Level Digital to Analog

Converter (DAC) is adjusted to +7.00 dBm +/-0.02 dB. Then the detector bias reference level to the ALC Amplifier is adjusted

to -4.00 dBm +/-0.02 dB.

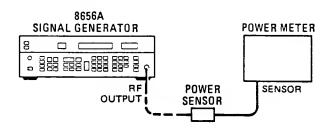


Figure 5-14. Level and ALC Loop Detector Adjustment Setup

EQUIPMENT:

Power Meter HP 436A
Power Sensor HP 8482A

PROCEDURE:

1. Set the power meter with power sensor connected as follows:

Mode dBm

2. Set the Signal Generator as follows:

 Frequency
 990 MHz

 Amplitude
 +7 dBm

 Modulation
 Off

 Amplitude Increment
 11 dB

NOTE

Before making the adjustment, all internal RF covers must be installed and the instrument must be warmed up for a minimum of 2 hours. (The internal RF top cover is removed to permit access).

- Connect the power sensor to the RF OUTPUT connector on the Signal Generator.
- 4. Set the Signal Generator RESET/STBY/ON switch to STBY and zero the power meter.

Bottom Internal View, Level 4

A10R33

ADJUSTMENTS

5-18A. RF DIVIDER BIAS ADJUSTMENT (P/O CHANGE 4)

REFERENCE:

Service Sheet 4.

DESCRIPTION:

The RF Divider Divide-by-2 circuit is adjusted for correct bias at Ul-pin 3 using a digital multimeter and spectrum analyzer.

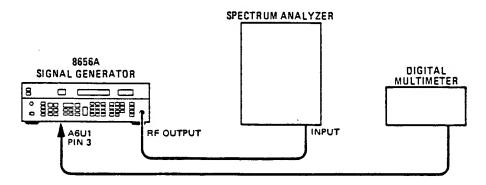


Figure 5-13A. RF Divider Bias Adjustment Setup

EQUIPMENT: Digital Multimeter HP 3465A Spectrum Analyzer HP 8558B

PROCEDURE:

1. Set the digital multimeter as follows:

Function Vdc Range 20V

2. Set the spectrum analyzer as follows:

Reference Level 0 dBm Frequency Span/Div 100 MHz

3. Set the Signal Generator as follows:

Frequency 246 MHz Amplitude 0 dBm Modulation Off

- 4. Adjust A6R101 until the output signal is at the correct frequency and the noise floor is flat and at a minimum level.
- 5. Adjust A6R101 cw until the noise floor just begins to rise, the noise on the carrier skirt begins to increase or the frequency changes.

Top Internal View, Level 2

A6R101
A6U1

Table 5-1. Factory Selected Components (2 of 2)

	Reference Designator		Range of Values	Basis of Selection			
	A8C5	3	47pf - 82pf	Select A8C5 to maximize DC voltage measured at J2 pin 4.			
	A8C19	3	20pf - 39pf	Select A8C19 to maximize DC voltage measured at J2 pin 6.			

CHANGE 23 (cont'd)

>>r Page 6-25, Table 6-3:

Add A9AlR17 0689-8816 (CD2) (QTY1) RESISTOR 2.15 1% .12W.

>>r Page 8-71, Service Sheet 7 (schematic):

Delete A9AlL1 and add in its place A9AlR17 2.15 ohms.
In the REFERENCE DESIGNATIONS table, under A9Al, delete L1 and add R17.

CHANGE 24

>>r Page 6-24, Table 6-3:

Change A9MP1 to 0400-0270 (CD6) GROMMET-RND 3.18-MM-ID 6.34-MM-GRV-OD.

CHANGE 25

>> Page 6-24, Table 6-3:

Change A9 to 08656-60164 (CD7).

>> Page 6-32, Table 6-3:

Delete MP20 and MP48.

Change MP17 to 08656-00135 (CD6).

Change MP59 to 08656-00134 (CD5).

 \rightarrow Page 6-35, Figure 6-1:

Delete MP20 and MP48.

CHANGE 19 (cont'd)

Page 6-25, Table 6-3 (cont'd):

Change AlOF1 to 2110-0055 CD2 FUSE 4A 250V NTD 1.25X .25 UL.

Change AlOF2, F3 to 2110-0001 CD8 FUSE 1A 250V NTD 1.25X .25 UL.

Under the entries for F1, F2, F3, Delete 1251-1998 and add 2110-0643 CD4 FUSEHOLDER-CLIP TYPE 15A 240V.

Page 6-26, Table 6-3:

Change AlOF4 to 2110-0010 CD9 FUSE 5A 250V NTD 1.25X .25 UL. Under the entry for F4, delete 1251-1998 and add 2110-0643 CD4 FUSEHOLDER-CLIP TYPE 15A 240V.

Page 6-27, Table 6-3:

Change AlOR65 to 0757-0280 CD3 RESISTOR 1K 1% .125W F TC=0+100. Add AlOR85 0698-3405 CD4 RESISTOR 422 1% .125W F TC=0+100.

Page 8-67, Figure 8-57, Service Sheet 6 (schematic):

Change AlO AUDIO/POWER SUPPLY ASSEMBLY (upper left corner) to 08656-60124.

Add AlOC30, 0.1 uF, connected from +15V (F) to ground.

Add AlOC31, 0.1 uF, connected from +5V (F) to ground.

Add AlOC32, 0.1 uF, connected from -15V (F) to ground.

Page 8-71, Figure 8-63, Service Sheet 7 (schematic):

Change AlO AUDIO/POWER SUPPLY ASSEMBLY (upper left corner) to 08656-60124.

Page 8-93, Figure 8-75, Service Sheet 11 (schematic):

Change the value of A3R73 to 3480 ohms.

Page 8-97, Figure 8-79, Service Sheet 12 (schematic):

Change Alo AUDIO/POWER SUPPLY ASSEMBLY (upper left corner) to 08656-60124.

Page 8-127/128, Figure 8-113, Service Sheet 22(schematic):

Change AlO AUDIO/POWER SUPPLY ASSEMBLY (upper left corner) to 08656-60124.

Delete the line connecting the cathode of AlOCR7 to the cathode of VR5, and in its place add AlOR85, 422 ohms.

Change the value of AlOR65 to 1000 ohms.

Add AlOC33, 1.0 uF, in parallel with AlOR71.

Add AloC34, 1.0 uF, in parallel with AloR69.

CHANGE 20

Page 6-15, Table 6-3, (see note 1):

Change A4Q10 to 1855-0423 (CD5) TRANSISTOR MOSFET N-CHAN E-MODE.

Page 6-16, Table 6-3, (see note 1):

Change A4R65 to 0757-0442 (CD9) RESISTOR 10K 1% .125W F TC=0+-100.

Change A4R63 to 0698-3447 (CD4) RESISTOR 422 1% .125W F TC=0+-100.

Page 6-17, Table 6-3:

Change A5C9 to 0160-4491 CD1 CAPACITOR-FXD 8.2 PF 200 VDC CER.

Page 6-24, Table 6-3, (see note 1):

Change A9MP6 to 1410-1122 BALL-BRG .0984 DIA.

Page 6-31, Table 6-3:

Add L3, L4 9135-0095 CD9 INDUCTOR RF-CH-MLD 143 UH 5% .102 DX .26 LG.

Page 8-47, Figure 8-40, Service Sheet 1 (schematic):

Change the value of A5C9 to 8.2 pF.

CHANGE 14 (cont'd)

Page 8-61, Figure 8-54, Service Sheet 5 (schematic):

Replace the appropriate part of the left hand portion of the schematic with the attached partial schematic, P/O Figure 8-54. Heterodyne and Output Control Schematic Diagram (P/O CHANGE 14).

Page 8-67, Figure 8-57, Service Sheet 6 (schematic):

Replace the appropriate part of the right hand portion of the schematic with the attached partial schematic, P/O Figure 8-57. Modulation and RF Amplitude Control Schematic Diagram. (P/O CHANGE 14).

Page 8-83, Figure 8-69, Service Sheet 9 (schematic):

Replace the appropriate part of the left hand portion of the schematic with the attached partial schematic, P/O Figure 8-60. LF Loop Data and Timing Control Schematic Diagram (P/O CHANGE 14).

Page 8-97, Figure 8-79, Service Sheet 12 (schematic):

Replace the appropriate part of the center portion of the schematic with the attached partial schematic, P/O Figure 8-79. LF Loop FM System Control and Calibrator Schematic Diagram (P/O CHANGE 14).

Page 8-105, Figure 8-86, Service Sheet 14 (schematic):

Replace the left hand portion of the schematic between C16 and W16 with the attached partial schematic, P/O Figure 8-86. Microprocessor, Interrupt Processing and Restart Schematic Diagram (P/O CHANGE 14).

Page 8-127/128, Figure 8-113, Service Sheet 22(schematic):

Replace the lower right portion, and the appropriate part of the right hand portion of the schematic with the attached partial portions of the schematic titled, P/O Figure 8-113. Power Supply Schematic Diagram (P/O CHANGE 14).

CHANGE 15

r

Page 6-24, Table 6-3:

Change A9AlMP5 to 08656-00110 CD7 SHIELD-ATTENUATOR WALL.

Page 6-32, Table 6-3:

Change MP17 to 08656-00107 CD2 ATTENUATOR COVER PLATE.

Change the description for MP20 to "GASKET-ATTENUATOR, SCREEN".

Change MP23 to 08656-00109 CD4.

Delete MP35.

MP36: Change quantity to 4.

MP37: Change quantity to 2.

Change MP48 to 08656-20123 CD4 GASKET-ATTENUATOR, RUBBER COMPRESSION. Add MP59 08656-00108 CD3 GASKET-ATTENUATOR, WAFFLE.

Page 6-33, Table 6-3:

Add MP139 2360-0119 CD8 Qty 12 SCREW-MACH 6-32 0.438-IN-LG PAN-HD-POZI.

Page 6-35, Figure 6-1:

Delete MP 17 and MP48. Between MP20, attenuator screen gasket, and MP23, Internal RF Bottom Cover, are the following parts:

MP59 Attenuator Waffle Gasket

MP48 Rubber Compression Gasket

MP17 Attenuator Cover Plate

In the top center portion of the figure, replace the 5 attenuator covers with the above gaskets and cover plate.

r Page 6-43, Figure 6-9:

A9AlMP5 is approximately 50% higher than shown.

CHANGE 9 (cont'd) Page 8-57, Figure 8-50, Service Sheet 4 (schematic): Change the value of A6C16 to 22 uF. Change the value of A6L11 to 24 uH. CHANGE 10 Page 6-16, Table 6-3: Change A4U5 to 1826-0522 CD4, same description. Page 6-27, Table 6-3: Change AlOU18 to 1826-0522 CD4, same description. Page 6-32, Table 6-3: MP13, MP16: Change to 08656-00100 CD5, same description. MP14: Change to 2360-0113 CD2 .25-IN-LG. Page 8-51, Figure 8-43, Service Sheet 2 (schematic): Change A4U5 to 1826-0522. Page 8-67, Figure 8-57, Service Sheet 6 (schematic): Change A10U18 to 1826-0522. CHANGE 11 Page 6-28, Table 6-3: Delete AllC5. Change AllClO to 0180-0229 CD7 CAPACITOR-FXD 33 UF +10% 10 VDC TA. Delete AllCR1. Change AllR4 to 0757-0280 CD3 RESISTOR 1K 1% .125W TC=0+100. Change AllR6 to 0698-3150 CD6 RESISTOR 2.37K 1% .125W TC=0+100. Page 6-29, Table 6-3: Change AllVR1 to 1901-0983 CD3 DIODE-ZNR 1N4621 3.6V 5% DO-14 PD=.25W. Page 8-105, Figure 8-86, Service Sheet 14 (schematic): Delete AllC5. Change the value of AllClO to 33 uF. Delete AllCR1. Change the value of AllR4 to 1000 ohms. Change the value of AllR6 to 2370 ohms. Change AllVR1 to 3.6V. CHANGE 12 Page 6-30, Table 6-3: Add Al8 08656-60113 CD6 Front (F) Feedthru Assembly. Page 6-33, Table 6-3: Change W2 to 08656-60085 CD1. Page 8-67, Figure 8-5, Service Sheet 6 (schematic): Replace the part of the schematic (upper left) between J1 MOD INPUT/OUTPUT and C9 with the attached partial schematic, P/O Figure 8-57. Modulation and RF Amplitide Control Schematic Diagram. (P/O CHANGE 12).

CHANGE 4 (cont'd)

P/O Table 4. (P/O CHANGE 4)

Node	Correct Signature	Comments
+5₹	826F	
j DO	886U	ROM6
Dl	5677	์ ชร i
D2	HA39	ĺ
D3	6275	ĺ
D4	84P4	ĺ
D5	A838	l [
D6	9PA3	l [
D7	P3A6	l I

Page 8-111, Figure 8-92, Service Sheet 16 (schematic):

Change the All circuit board part number to 08656-60121.

In the Integrated Circuit Part Number Table, change U5 to 08656-80012.

Page 8-113, Figure 8-96, Service Sheet 17 (schematic):

Change the All circuit board part number to 08656-60121.

CHANGE 5

Page 6-7, Table 6-3:

Change A2R1 to 1810-0273 CD9 NETWORK-RES 10-SIP 470.0 OHM X9.

Change A2R2 to 1810-0204 CD6 NETWORK-RES 8-SIP 1.0K OHM X7.

Add A2R26 0698-3438 CD3 RESISTOR 147 1% .125W F TC=0+100.

Change A2U3 to 1820-1975 CD1 IC SHF-RGTR TTL LS NEG-EDGE-TRIG PRL-IN.

Page 6-8, Table 6-3:

Change A2U18 to 1820-1975 CD1 IC SHF-RGTR TTL LS NEG-EDGE-TRIG PRL-IN.

Page 8-115, Figure 8-100, Service Sheet 18 (schematic):

Change the value of A2RlB-H and A2RlJ to 470 ohms.

Change the value of A2R2A-F to 1000 ohms.

On A2U18, delete +5V at pin 10; then connect pin 10 to pin 11.

Add A2R26, 147 ohms, between A2U3 pin 9 and A2TP9.

In the table of integrated circuit part numbers, change U3 and U18 to 1820-1975.

CHANGE 6

Page 6-25, Table 6-3:

Add A10C29 0160-4386 CD3 CAPACITOR-FXD 33 PF +5% 200 VDC CER 0+30.

Page 8-97, Figure 8-79, Service Sheet 12 (schematic):

Add a 33 pF capacitor, AlOC29, between pins 6 and 7 of AlOU17B (that is parallel to AlOR63 and R64).

CHANGE 4 (cont'd)

Page 5-18/19:

Change the Level and ALC Loop Detector Adjustments by replacing it with the attached, "5-19. LEVEL AND ALC LOOP DETECTOR ADJUSTMENTS (P/O CHANGE 4)."

r Page 6-9, Table 6-3:

Change A3C64 to 0160-0945 CD2 CAPACITOR-FXD 910 PF +5% 100 VDC MICA 28480 0160-0945.

Change A3CR2 and CR3 to 1901-0050 CD3 DIODE-SWITCHING 80V 200 MA 2NS D0-35 28480 1901-0050.

Page 6-11, Table 6-3:

Change A3R4 and R7 to 0698-3443 CD4 RESISTOR 287 1% .125W F TC=0+100. Change A3R5 to 0757-0294 CD9 RESISTOR 17.8 1% .125W F TC=0+100.

Page 6-16, Table 6-3:

Change A4R63 to 0757-0441 CD8 RESISTOR 8.25K 1% .125W F TC=0+100. Change A4R65 to 0698-3154 CD0 RESISTOR 4.22K 1% .125W F TC=0+100.

Page 6-17, Table 6-3:

Change A6 to 08656-60118.

Page 6-18, Table 6-3:

Change A6C52 and A6C59 to 0160-3490 CD8 CAPACITOR-FXD 1 UF $\pm 20\%$ 50 VDC CER 28480 0160-3490.

Page 6-19, Table 6-3:

Add A6CR43, A6CR44, and A6CR45 1901-0050 CD3 DIODE-SWITCHING 80V 200 MA 2NS D0-35 28480 1901-0050.

Page 6-20, Table 6-3:

Delete A6R3 and A6R4.

Page 6-21, Table 6-3:

Change A6R50 to 0699-0838 CD3 RESISTOR 82.5 1% .05W F TC=0+100 28480 0699-0838.

Add A6R99 0757-0438 CD3 RESISTOR 5.11K 1% .125W F TC=0+100.

Add A6R100 0698-3432 CD7 RESISTOR 26.1 1% .125W F TC=0+100.

Add A6R101 2100-1788 CD9 RESISTOR-TRMR 500 10% C TOP-ADJ 1-TRN.

Add A6R102 1810-0206 CD8 NETWORK-RES 8 SIP 10.0K OHM X7.

Page 6-27, Table 6-3:

Change All to 08656-60121.

Page 6-29, Table 6-3:

Change AllU5 to 08656-80012 CD6 ROM #6 28480 08656-80012.

Page 8-51, Figure 8-43, Service Sheet 2 (schematic):

Change the value of A4R63 to 8250 ohms.

Change the value of A4R65 to 4220 ohms.

Page 8-57, Figure 8-50, Service Sheet 4 (schematic):

Change the A6 circuit board part number to 08656-60118.

Change the Divide-by-two Circuit as shown in the attached figure,

P/O Figure 8-50. Output Section Schematic Diagram (P/O CHANGE 4).

Change the ALC Amplifier circuit as shown in the attached figure,

P/O Figure 8-50. Output Section Schematic Diagram (P/O CHANGE 4).

Change the High Band Output Amplifier to add TP7 (Qty 2) as shown in the attached figure, P/O figure 8-50. Output Section Schematic Diagram (P/O CHANGE 4).

In the Output Detector, change R50 to 82.5 ohms.

ERRATA (cont'd)

Page 8-99, Figure 8-82, Service Sheet 13 (notes):

Change NOTE 4 to read: 4. PC BOARD SHIPPED WITH RESISTIVE JUMPER INSTALLED IN 10 MHZ POSITION.

In the TRANSISTOR AND INTEGRATED CIRCUIT PART NUMBERS table change U22 to 1826-0785.

Page 8-102, Service Sheet 14, Table 2:

In the first group of signatures, change 52U5 to 52U2.

In the second group of signatures, change 4U4A to 76F4.

In the footnote, change A2TP15 to A2TP1.

Page 8-105, Figure 8-86, Service Sheet 14, (schematic):

In the upper left hand corner of the schematic change AllR7 to 3160 ohms.

Change the pulse timing width written on U28 to 150ms.

Page 8-106, Service Sheet 15, Principles of Operation:

Under Address Decoder the second paragraph, change the fourth sentence to read: Address A3 determines which of Ul or U24 is active at a given time.

Page 8-109, Service Sheet 16, Table 6:

In the comments, change RAM1 (U2) to RAM1 (U4).

Page 8-114, Service Sheet 16, Table 3:

Change the signature for +5V to 1817.

Page 8-120, Service Sheet 20, (Troubleshooting Using Signature Analysis):

In the setup for the Signal Generator, change A2TP15 to A2TP1.

Page 8-122, Service Sheet 21, Table 3:

Change L1PO to 61PO.

Page 8-127/128, Service Sheet 22 (schematic):

Change AlOC19 to 3200uf.

>> Page 8-127/128, Service Sheet 22:

In the "TRANSISTOR AND INTEGRATED CIRCUIT PART NUMBERS" table change U1 to 1826-1181 and U3 to 1826-1157.

ERRATA (cont'd) Page 5-16: Under EQUIPMENT: change HP 08662-60080 to HP 08662-60075. Page 5-17: Under EQUIPMENT: change HP 08662-60080 to HP 08662-60075. Page 5-21, NOTE 2: Add the following text: A6R57 can be changed if the adjustment range of A6C56 is not centered in the .1 to 123 MHz band. See Table 5-1 for the correct resistance value range. Page 6-7, Table 6-3: Delete A2MP1 08656-00008 (CD2) (QTY 4) FRONT PANEL, REAR BRACKET. Page 6-8, Table 6-3: Change A3C16 to 0160-3878 CD6 CAPACITOR-FXD 1000 PF +10% 100 VDC CER. Page 6-13, Table 6-3: A4C22: Delete the asterisk (*). A4C22 is not a factory selected component. Change A3U22 to 1826-0785 (CD1) IC OP AMP LOW-BIAS-H-IMPD DUAL 8-DIP-C. Change A3U23 to 1820-3102 (CDO) IC CNTR ECL/10KH BIN SYNCHRO 4-BIT. r Page 6-15, Table 6-3: Change A4MP4 to 08656-00133 (CD4) (QTY11). Page 6-16, Table 6-3: Change A4Tl to 11661-60087 (CD7) Transformer-RF, Yellow. Page 6-17, Table 6-3: A5Cl5: Add an asterisk (*) to A5Cl5 to indicate a factory selected component. Change A5R10, R11 to 0699-0983 CD4, same description. r Page 6-20, Table 6-3: Change A6MP2 to 08656-00133 (CD4) (QTY7). Page 6-21, Table 6-3: A6R57: Add an asterisk (*) to indicate a factory selected component. Change A6U2 to 1820-3485 (CD2) IC FF ECL B-M/S. Page 6-22, Table 6-3: A8C40: Add an asterisk (*) to indicate a factory selected component. A8C5: Add an asterisk (*) to indicate a factory selected component. A8C19: Add an asterisk (*) to indicate a factory selected component. r Page 6-23, Table 6-3: Change A8MP4 to 08656-00133 (CD4) (QTY13). Page 6-24, Table 6-3: Change A9AlC5 to 0160-5217 (CD1) Capacitor-FXD .0luf +-20% 100vDC Cer. Change A9AlMP4 to 08656-00133 (CD4) (QTY4). Page 6-29, Table 6-3: Add Al4Cl-15 P/O Al4Jl, NOT SEPARATELY REPLACEABLE. Page 6-31, Table 6-3: Bl: If your instrument has Serial Prefix 2131A or below and the fan fails, replace with the fan and cable assembly listed in CHANGE 8. >> Page 6-32, Table 6-3: Change the quantity of MP47 from 29 to 18. Add MP108 2740-0001 (CD1) (QTY11) NUT-HEX-DBL-CHAM 10-32-THD r .109-IN-THK. Add MP109 2190-0034 (CD5) (QTY15) WASHER-LK HL-CL NO. 10

.194-IN-ID.

The following table lists all components affected by this Manual Changes supplement.

In the change column:

- 1. "E" indicates Errata information.
- 2. Numeric value is the manual change number.
- 3. "(r)" indicates the change describing the recommended replacement for that component.

SUMMARY OF CHANGES BY COMPONENT

Assy	Component	Change	Assy	Component	Change	Assy	Component	Change
A1 A2	A2MP1 A2R1	 E 5	A6	(Cont'd) A6R100 A6R101 A6R102	4 4 4	A11	A11C5 A11C10 A11CR1	4 11 11
	A2R2 A2R26 A2U3 A2U18	5 5 5 5	A7	A6R57 A6U2	E E(r)		A11R4 A11R6 A11 ROM6	11 11 4
A3	A3C16 A3C64 A3C82	E 4(r) 3	A8	A8C5 A8C19 A8C40	E E E	A12	A11U5 A11U13,19 A11VR1	4 1 11
	A3CR1 A3CR2,3 A3CR33 A3L21	16(r) 4 16(r) 18(r)		A8C58 A8MP4 A8MP5	3 E(r) 3	A13 A14	 A14C1-15	 E
	A3MP6 A3MP13 A3R4,7 A3R5	9 9 4 4 4	A9	A8MP6 A8R39 A9MP3	3 3 25 17(r)	A15	A14J1	E
	A3R73 A3U22 A3U23	19(r) E(r) E(r)		A9MP6 A9A1C5 A9A1L1	20 E 23	A16 A17 A18		12
A4	A4C22 A4C67 A4MP4 A4Q10	E 1(r) E(r) 20		A9MP1 A9A1MP4 A9A1MP5 A9A1R17	24(r) E(r) 15(r) 23(r)	A19 No		14
	A4R63 A4R65 A4R76 A4T1 A4U5	4,18,19 4,18,19 18 E 10(r)	A10	A10C18 A10C29 A10C30-32 A10C33	19(r) 7,16(r) 6 19	Prefix	B1 L3,4 MP13,14,16 MP17 MP20 MP23	E,8 20 10(r) 15,25 25 15(r)
A 5	A5C9 A5C15 A5CR1,2 A5R9 A5R10,11	20(r) E 1(r) 16(r) E		A10C34 A10CR6,7 A10F1-4 A10MP4 A10Q1	19 19 19 22 22(r)		MP35 MP36 MP37 MP38 MP39	15 15 15 2,13 2
A6	A6C16 A6C26 A6C52,59 A6C56 A6CR26,27,29,30	4 9 8 4 E 16(r)		A10Q5 A10R52,53 A10R65 A10R85 A10U18	22(r) 17(r) 19 19 10(r)		MP48 MP59 MP108 MP109 MP130-132 MP138	15,25 15,25 E(r) E(r) 7
	A6CR43,44,45 A6L11 A6MP2 A6R3 A6R4 A6R50 A6R99	16(r) 4 9 E(r) 4 4					MP139 U2 W2 W16 W21	E,15 21(r) E,12 14(r) 8